



## Service Information

### Seal Kits for ZF 6HP Automatic Transmissions

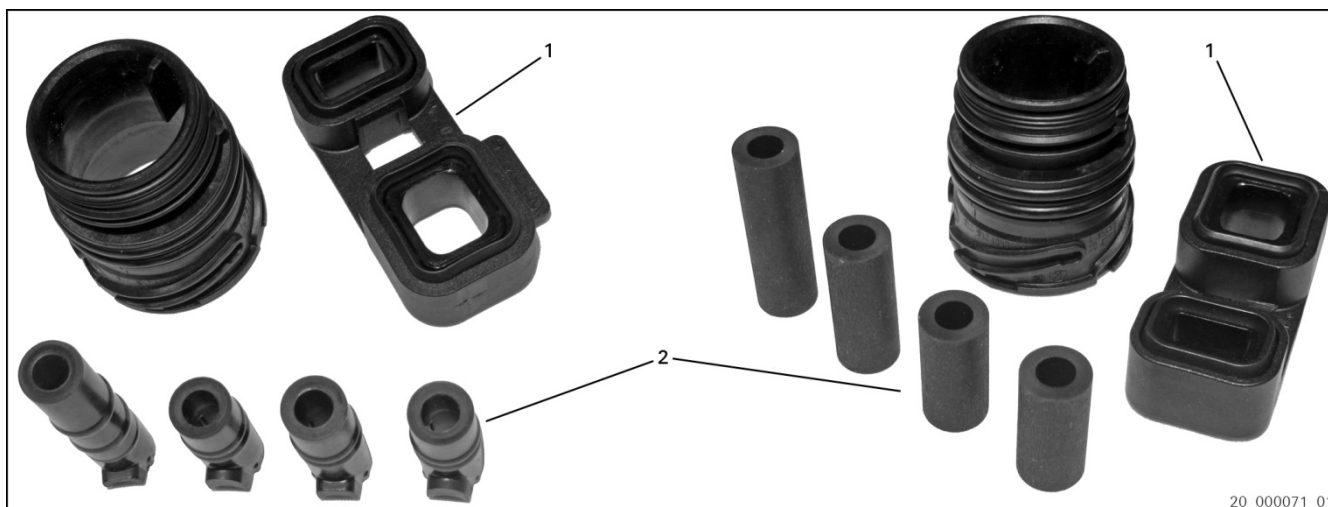


Fig. 1: Seal kits (examples)

The seal kit is required when the mechatronics are replaced or removed for changing the transmission oil. When the mechatronics are removed, the oil quantity required for filling changes. It may be necessary when using an oil change kit to add additional oil.

- Install sealing gland (1) in the correct position.
- Carefully remove tubes (2). Avoid damaging the transmission housing during disassembly.

| Article no.  | Transmission |
|--------------|--------------|
| 1068.298.090 | 6HP 26       |
|              | 6HP 26 A 61  |
|              | 6HP 26 X     |
|              | 6HP 28       |
|              | 6HP 28 A 61  |
|              | 6HP 28 AF    |
|              | 6HP 28 X     |
|              | 6HP 32       |
|              | 6HP 32 A     |
| 1071.298.041 | 6HP 19       |
|              | 6HP 19 X     |
|              | 6HP 21       |
|              | 6HP 21 X     |
| 1071.298.042 | 6HP 19 A     |

Table 1



Observe service information: Oil change kit for ZF 5HP/6HP automatic transmission (50145 EN)  
Observe service information: Guide sleeve mechatronics for ZF automatic transmission 6HP (50324 EN)



[www.aftermarket.zf.com/serviceinformation](http://www.aftermarket.zf.com/serviceinformation)