

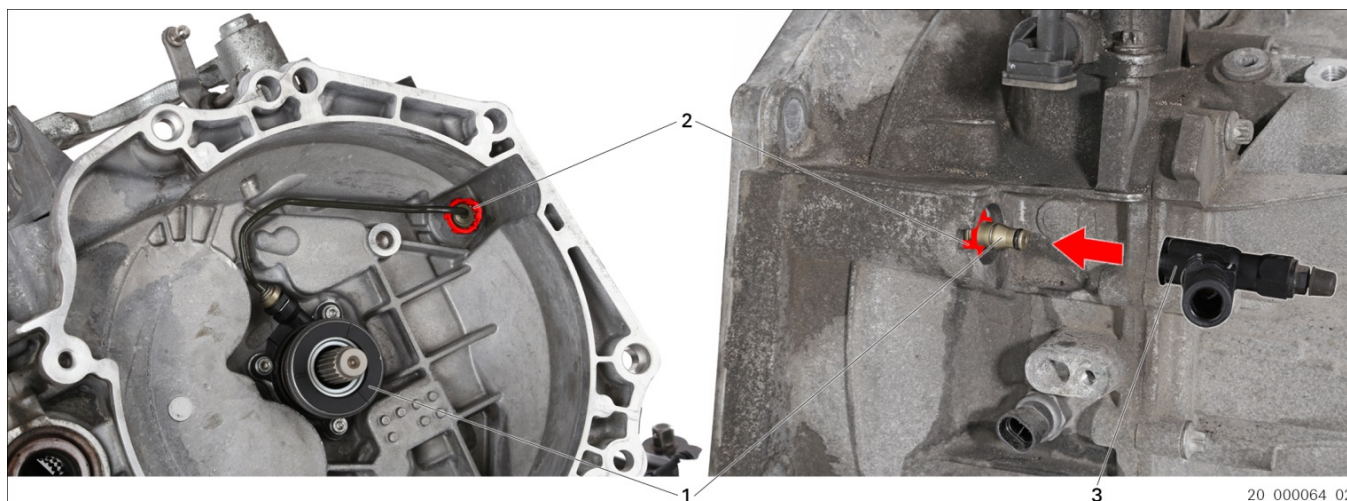


Fig. 1: CSC

- | | | | |
|---|---------------------------------|---|------|
| 1 | Concentric slave cylinder (CSC) | 2 | Clip |
| 3 | Breather | | |

Check the plug connection and adapt if necessary

1. Remove and dispose of the old CSC, clips and adapter pieces (if available).
2. Install the new CSC (1) and tighten to the specified tightening torque. Observe the vehicle manufacturer specifications. Make sure that the clip (2) snaps into position.
3. **Directly** connect the breather (3) to the new CSC (1).
4. Vent the clutch release system. Observe the vehicle manufacturer specifications.



www.aftermarket.zf.com/serviceinformation