



OPEL ANTARA



**WARNING**

**Health risk!**

**Inhalation of brake dusts may result in serious damage to the respiratory organs!**

**Do not clean brake components with compressed air.**

**Use brake cleaner fluid.**

**General reference notes**


The control unit with the parking brake servomotor is located on the underbody.

The switch for the parking brake is located in the center console.

**(1)**

**(see figure 1)**

**Figure 1**

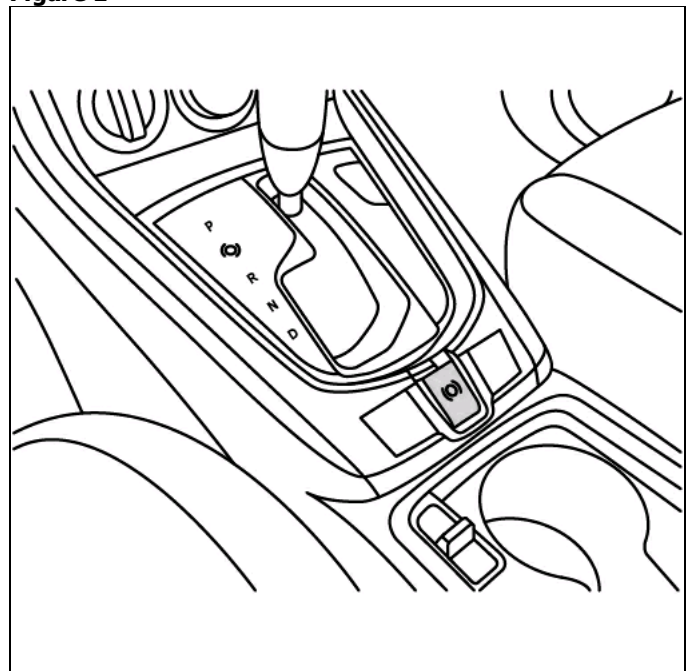

**1 Parking brake switch**

## Display/operation

### Engage parking brake

*Pull parking brake switch.*

### Disengage parking brake

Switch on ignition.

*Press parking brake switch and simultaneously operate brake pedal.*


The yellow indicator light goes on when errors occur that impair operating or traffic safety.

Read off error code on display. **(3)**

**(see figure 2)**

**For further details and information, please refer to the operating manual!**

Figure 2

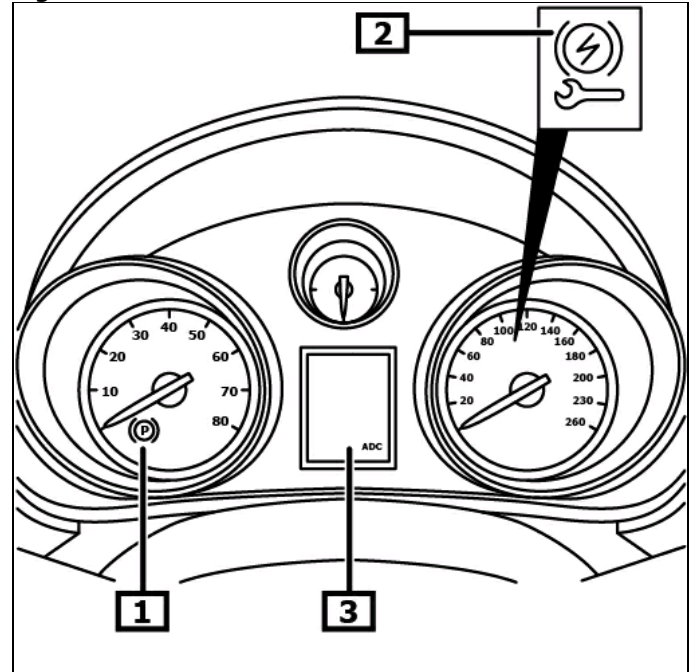

1 Indicator light

2 Fault indicator light

3 Instrument cluster display