



OPEL MERIVA B, VAUXHALL MERIVA Mk II (B)



WARNING

Health risk!

Inhalation of brake dusts may result in serious damage to the respiratory organs!

Do not clean brake components with compressed air.

Use brake cleaner fluid.

General reference notes


The control unit with the parking brake servomotor is located on the underbody.

The switch for the parking brake is located in the center console.

(1)

(see figure 1)

Figure 1

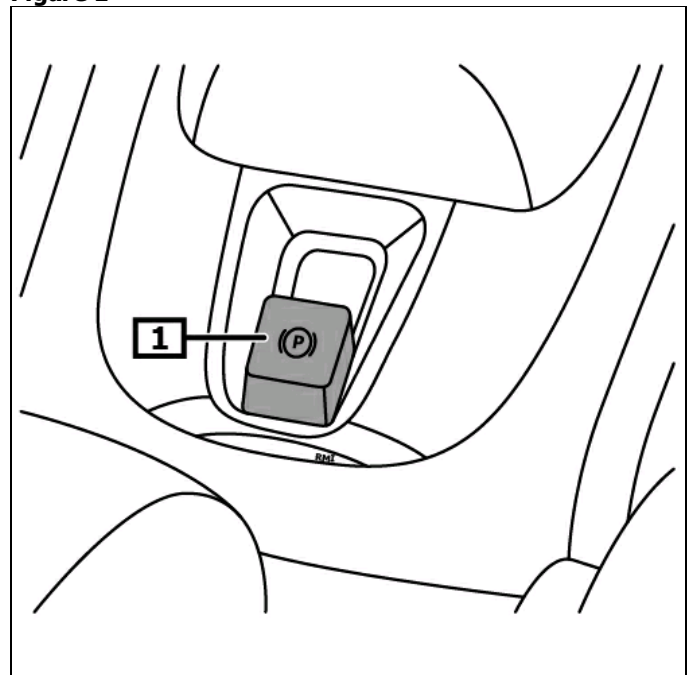

1 Parking brake switch

Display/operation

Engage parking brake

Pull parking brake switch. **(1)**
(see figure 1)

Disengage parking brake

Switch on ignition.
Press parking brake switch and simultaneously operate brake pedal. **(1)**
(see figure 1)

Emergency braking with parking brake

Pull parking brake switch and hold.
(see figure 1)

The parking brake releases automatically as soon as the vehicle is being driven in the 1st gear or when reversing.

Parking brake indicator light **(1)**


The yellow indicator light goes on when errors occur that impair operating or traffic safety. **(2)**

Read off error code on display. **(3)**

(see figure 2)

For further details and information, please refer to the operating manual!

Figure 2

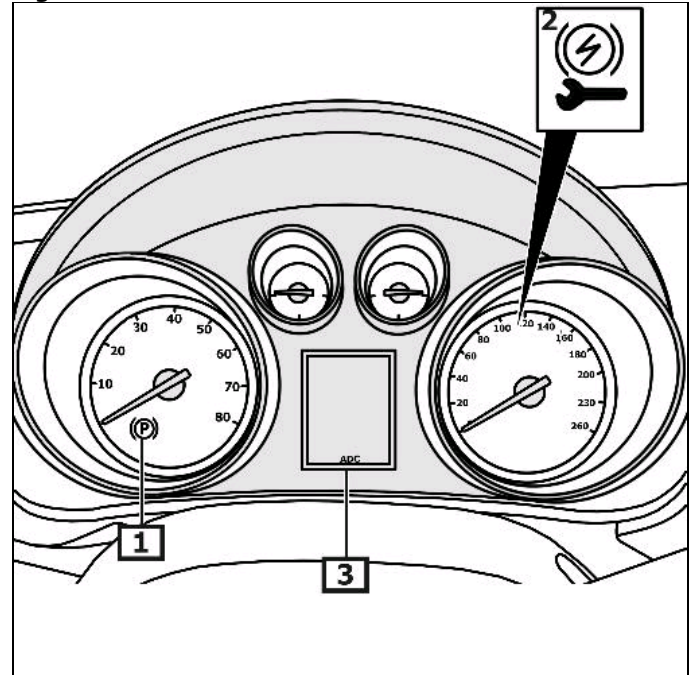

1 Indicator light

2 Fault indicator light

3 Instrument cluster display

After repair work

Adjust parking brake

The parking brake is automatically adjusting.

Perform readjustment manually if automatic parking brake readjustment should not function.

Secure vehicle against rolling away.

Actuate parking brake several times and release it again.

Switch on ignition.

Parking brake red warning light must not light up.

Switch off ignition.

Lift vehicle

Operate parking brake deflection lever on brake caliper 3 times up to 5 times.

Rear wheels must not allow being turned.

Loosen parking brake deflection lever.

Wheels must turn freely.