



RENAULT LAGUNA III, LAGUNA III Grandtour, LAGUNA Coupe



WARNING

Health risk!

Inhalation of brake dusts may result in serious damage to the respiratory organs!

Do not clean brake components with compressed air.

Use brake cleaner fluid.

NOTE

Move back brake piston using the diagnostic unit prior to any work on the brake system.

Emergency actuation may only be used when the red warning light is on.

The illustrations of these installation instructions are exemplary and are only intended for better understanding.

General reference notes


The control unit with the parking brake servomotor is located on the underbody.

The switch for the parking brake is located in the center console.

(1)

(see figure 1)

Figure 1

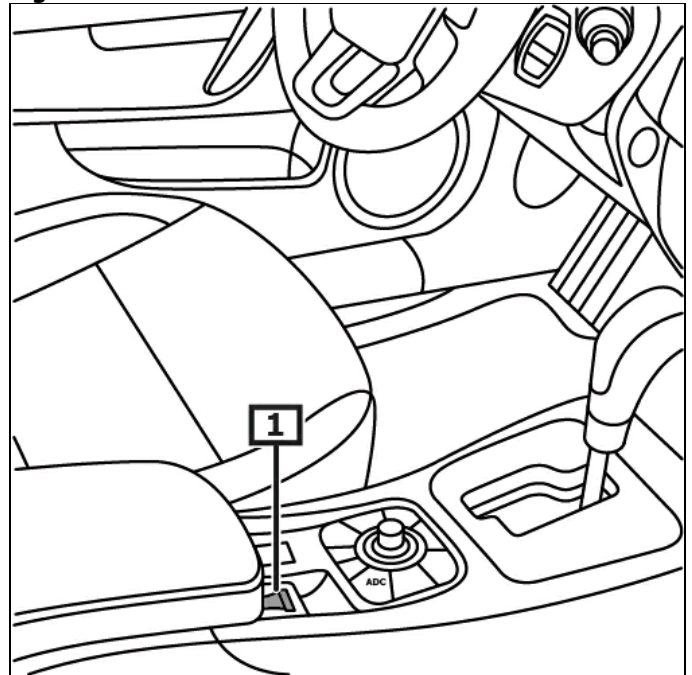

1 Parking brake switch

Display/operation

Automatic mode

Parking brake closes automatically once the engine is cut through the start/stop tip switch.

Electromechanical parking brake indicator light is permanently on. (3)

Parking brake will automatically disengage when accelerator pedal is being actuated.

Engage parking brake

Pull parking brake switch.

Disengage parking brake

Press parking brake switch and simultaneously apply accelerator pedal or brake pedal.

The red warning light goes on when errors occur that greatly impair operating or traffic safety. (1)

The display will show a message when an error has been detected by the control unit. (2)

(see figure 2)

For further details and information, please refer to the operating manual!

Move back brake piston using a diagnostic unit prior to any work on the brake system.

Note position of EOBD connection.

Connect diagnostic unit to diagnostic connection.

Switch on ignition.

Disengage parking brake

Follow the instructions of the diagnostic unit.


After repair work

Follow the instructions of the diagnostic unit.

Carry out basic adjustments using suitable diagnostic unit.

Check fault memory, and delete fault if necessary.

Figure 2

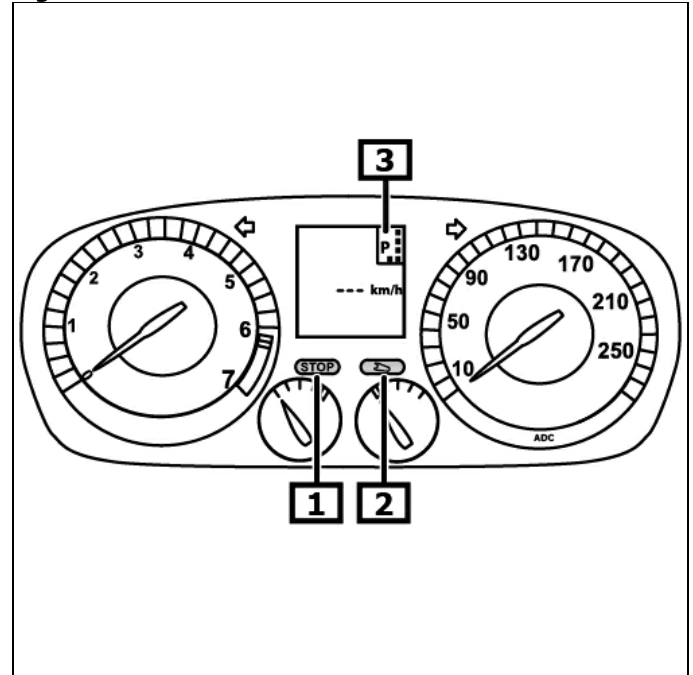

1 Warning light

Not possible to continue driving.

3 Indicator light

2 Electrical interference

Parking brake emergency unlocking device

Emergency actuation may only be used when the red warning light is on.


Lift vehicle.

Remove rear wheels.

Demount cap(s). **(2)**

Pull the Bowden cable to unlock the parking brake. **(3)**
(see figure 3)

Figure 3

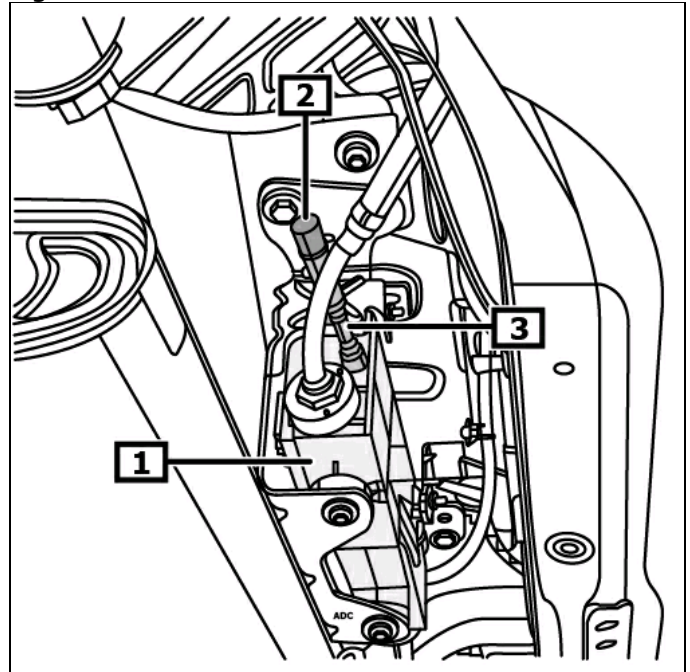

1 Park brake control unit

2 Cap(s)

3 Parking brake cable