



TOYOTA AVENSIS (ZRT27, ADT27)



### **WARNING**

**Health risk!**

**Inhalation of brake dusts may result in serious damage to the respiratory organs!**

**Do not clean brake components with compressed air.**

**Use brake cleaner fluid.**

### **NOTE**

**Activate the parking brake service mode before starting to work on the brake system.**


**The illustrations of these installation instructions are exemplary and are only intended for better understanding.**

### **General reference notes**

The control unit with the parking brake servomotor is located on the underbody.

The parking brake switch is located in the dashboard. **(1)**  
**(see figure 1)**

**Figure 1**

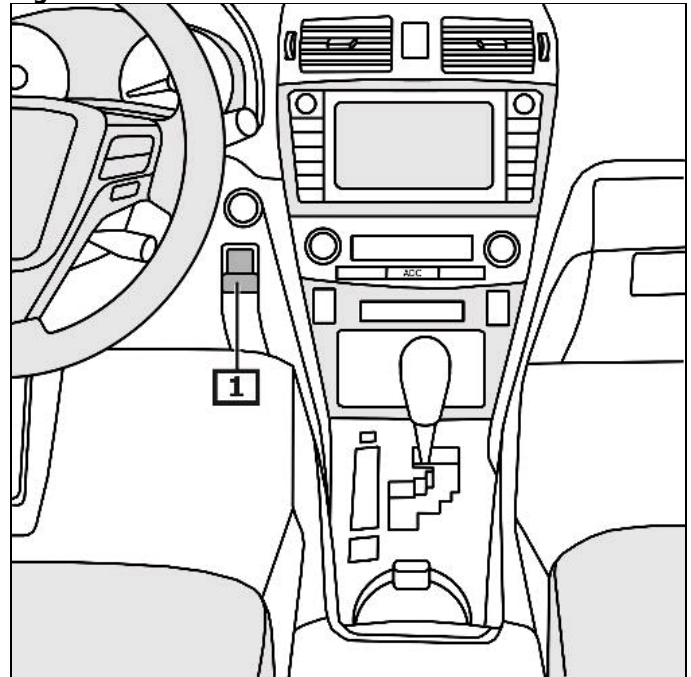

**1 Parking brake switch**

## **Display/operation**

### **Engage parking brake**

*Press switch backward*


### **Disengage parking brake**

*Pull parking brake switch.*

The yellow indicator light goes on when errors occur that impair operating or traffic safety. **(2) (3)**  
Read off error code on display. **(4)**  
**(see figure 2)**

**For further details and information, please refer to the operating manual!**

**Figure 2**

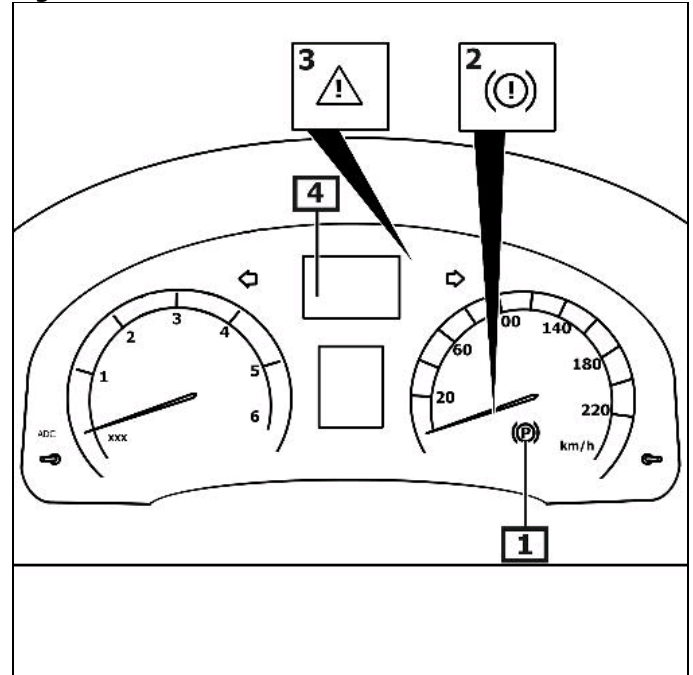

**1** Indicator light

**2** Fault indicator light

**3** Indicator light

**4** Multi-function display

**Activate the parking brake service mode before starting to work on the brake system.**

### **Note position of EOBD connection.**

Connect diagnostic unit to diagnostic connection.  
Switch on ignition.  
Disengage parking brake

**Follow the instructions of the diagnostic unit.**

### **After repair work**

#### **Follow the instructions of the diagnostic unit.**

Carry out basic adjustments using suitable diagnostic unit.  
Check fault memory, and delete fault if necessary.

## **Parking brake emergency unlocking device**

Use on-board tools.  
Secure vehicle with wheel chocks against rolling away.  
Lift the carpeting.  
Remove plastic cap(s).  
Rotate tool clockwise up to the stop.  
**(see figure 3)**

**Figure 3**

