

Assembly Instructions CH36

In order to prevent the adjusting mechanism on CH36 housings from being damaged the following precautions must be applied before replacing brake pads or housing:

1. Measure the total thickness of brake pad and brake disc.
2. Add 0.6 mm.
3. Wind back the piston until this measurement is reached between piston and brake pad contact.
4. After bleeding operate the brake pedal approx. 40 times.

The brake is now adjusted.

