


## Sealed housing

### Pre-filled Housing

TRW housings with hand brake mechanism are pre-filled with brake fluid to make it easier to bleed the brake system. These housings are sealed with a metal screw.


**This screw has to be removed with an allen key.**

Remove this screw only when you are ready to attach the brake pipe or hose.

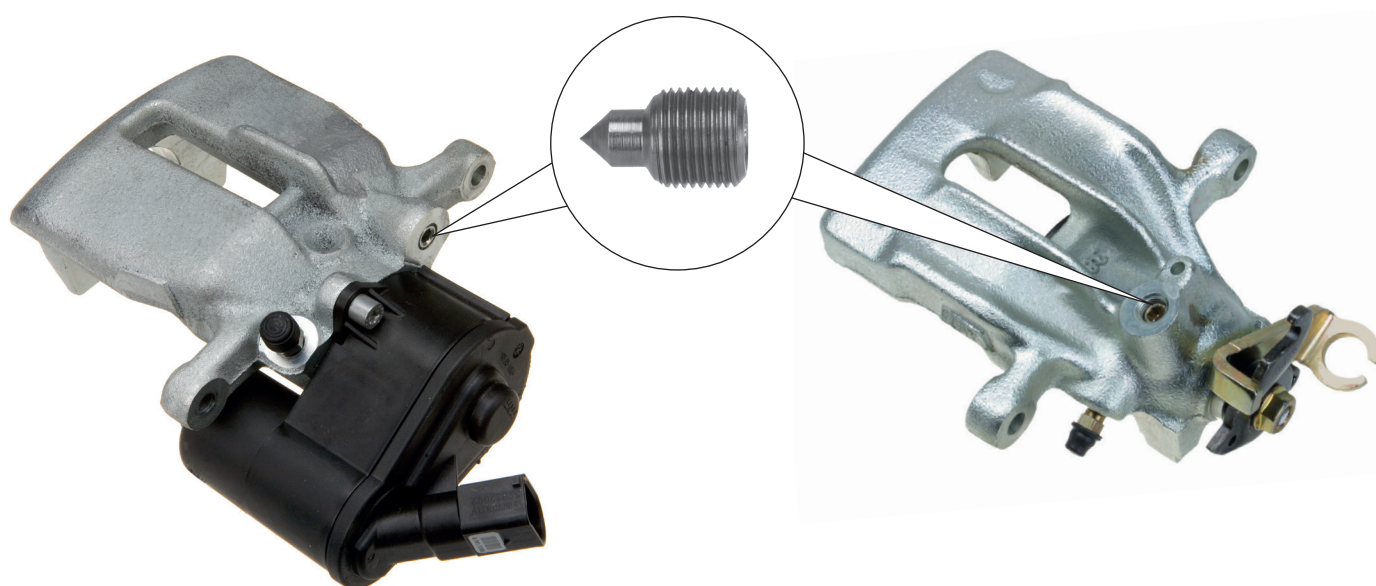

### Standard-Housings

All other housings have an end plug without a thread. This plug can be removed with a standard screw driver.

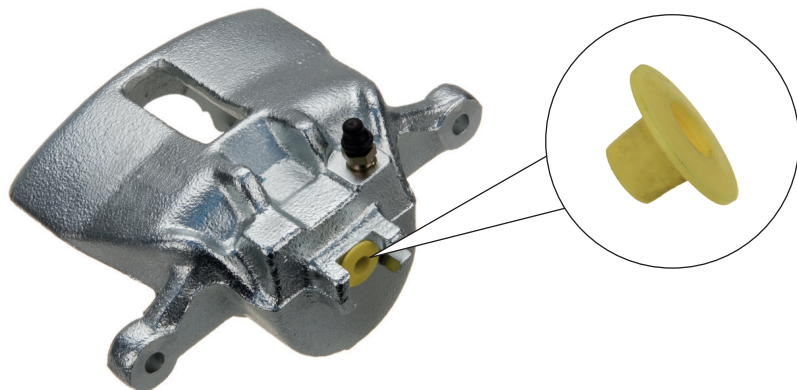

### Attention!

**Take care that the threads are not damaged.**

