


Bellow Fitting Kit for Steering Gear



Leaky, or incorrectly installed bellows, lead to corrosion and thus to the premature wear of the rack of the steering gear. Leakages in the steering system can cause the total failure of the system itself! To prevent dust and moisture from penetrating the system, the provided kit must be installed with the exchange of the steering gear!

- Make sure, that the bellows are in correct position at the steering gear and at the tie rods.

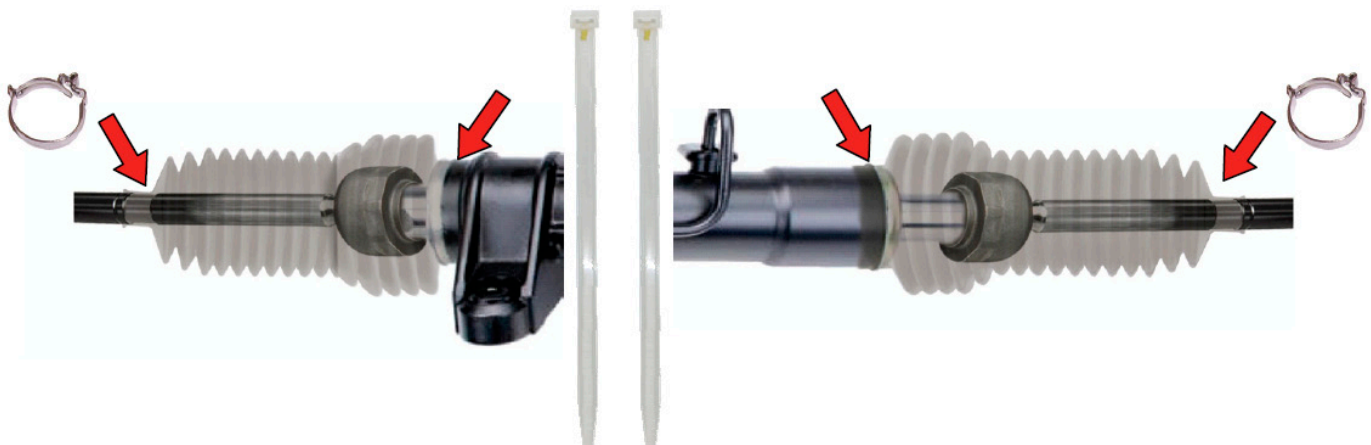

- Secure the bellows on the axial pivots with the provided metal clips (15 resp.16 mm - depending upon axial pivot).

In order to secure the clips, appropriate special pliers must be used!

- To fix the bellows onto the steering gear, use the assembly strips provided in the fitting kit.

In order to secure the strips, appropriate special pliers must be used!

After the exchange of the steering gear, the hydraulic fluid must be renewed and the system must be bled..

Follow the vehicle manufacturer's guidelines for these actions!

Warranty and/or guarantee completion: A warranty and/or a case of guarantee can be made only if the dismantled bellows, metal clips and assembly strips are submitted together with the steering gear!

