

SEAT Cordoba (6L2) / Ibiza IV (6L1)

Skoda Fabia (6Y2, 6Y3, 6Y5)

Volkswagen Fox (5Z1, 5Z3) / Polo (9N)

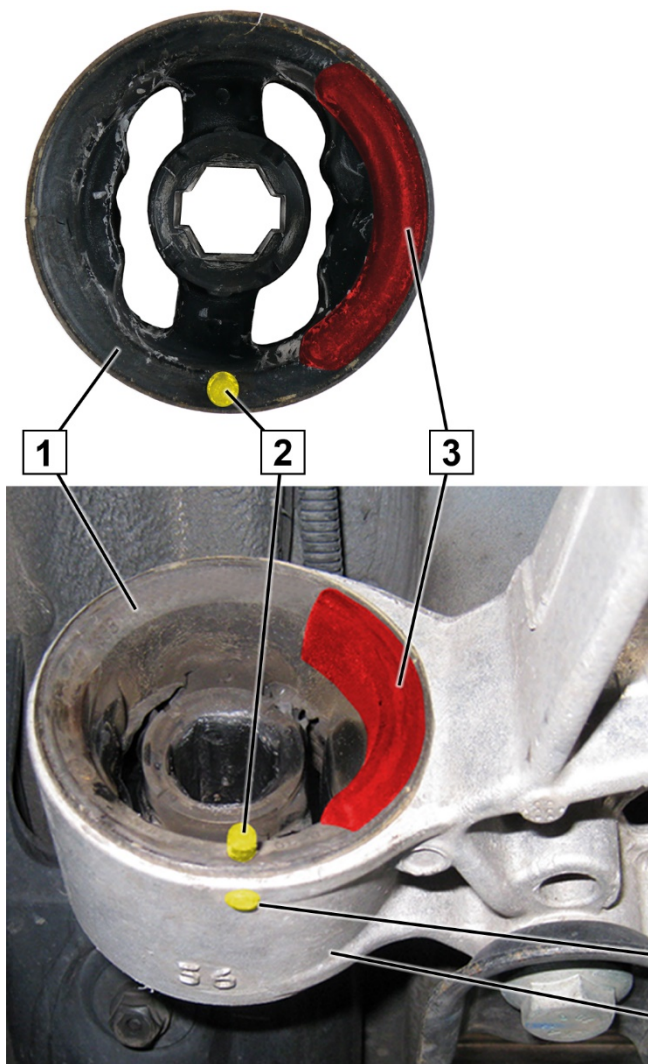


Fig. 1: GMT 29710 01

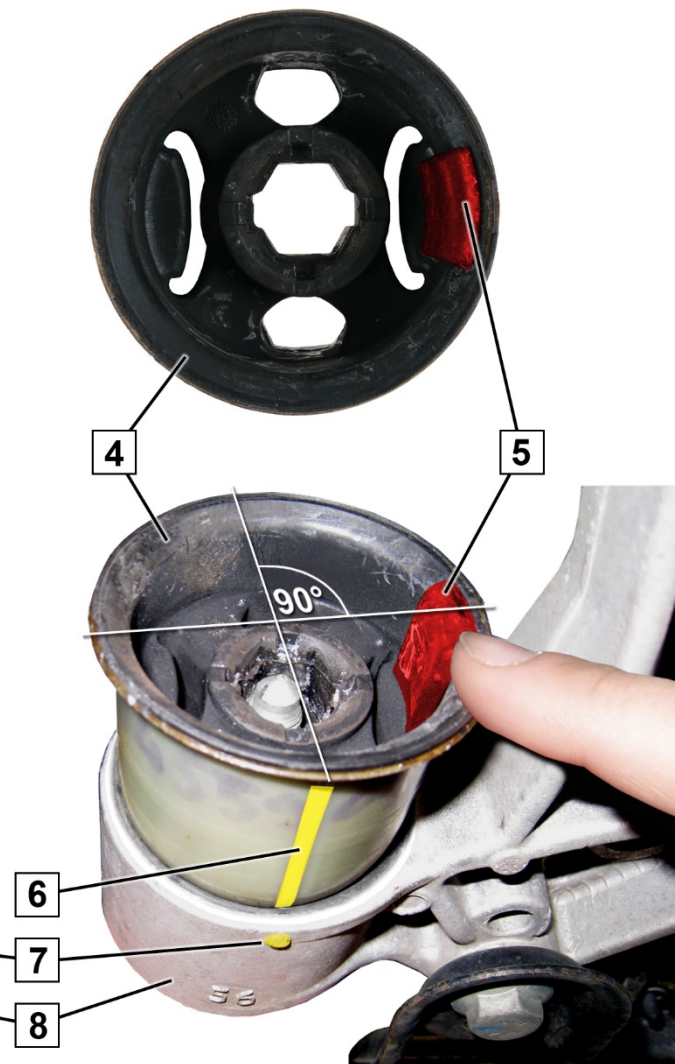


Fig. 2: GMT 34559 01

- 1 GMT 29710 01
- 3 Transverse control arm contact surface
- 5 Transverse control arm contact surface
- 7 Mark on axle support

- 2 Rubber plug
- 4 GMT 34559 01
- 6 Mark on GMT
- 8 Front axle support



Always replace rubber-to-metal components (GMT) in pairs.
The modified GMT (4) replaces GMT (1).

Installing the GMT

1. Mark the GMT (4), as shown in Fig. 2 (6).
2. The contact surface for the control arm (5) must point to the axle support (8) or towards the center of the vehicle
3. The mark (6) must align with the mark on the axle support (7).
4. In this position, press the GMT (4) into the axle support (8) using a suitable tool.

The mark on the axle support (7) is cast below on the right side of the vehicle (Fig. 1, 2) and above on the left side of the vehicle.



www.aftermarket.zf.com/serviceinformation