



BMW E30 / E36 / E46 / Z1 / Z3

Art. No. 87-115-A / 88-651-A

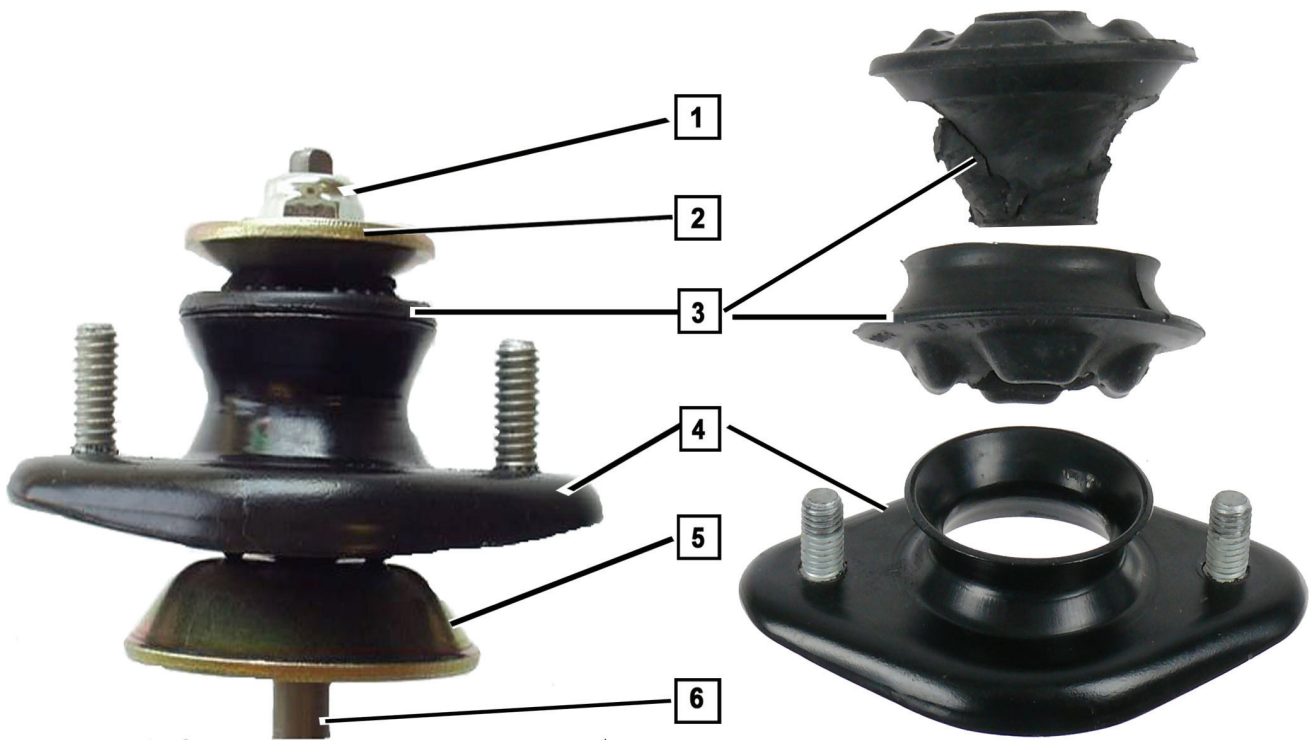


Fig. 1: Intact suspension strut mount with fittings

Fig. 2: Destroyed suspension strut mount

- 1 Nut - piston rod
- 2 Cup washer, small
- 3 Rubber element - suspension strut mount

- 4 Metal element - suspension strut mount
- 5 Cup washer, large
- 6 Piston rod

Assemble the fittings in the order shown: Fig. 1 (1 - 6)



NOTE

Make sure you observe the assembly order to prevent damage to the suspension strut mount.

Secure the suspension strut with the specified tightening torque.

Possible consequences of an incorrectly assembled suspension strut:

- The rubber element (3) could be torn from the metal element (4), causing it to be destroyed (Fig. 2).
- The affected shock absorber will then have no effect.
- Clearly audible noises at the rear axle.