



Opel / Vauxhall: Astra G / Combo C / Corsa C / Meriva A / Tigra B / Vectra B / Zafira A

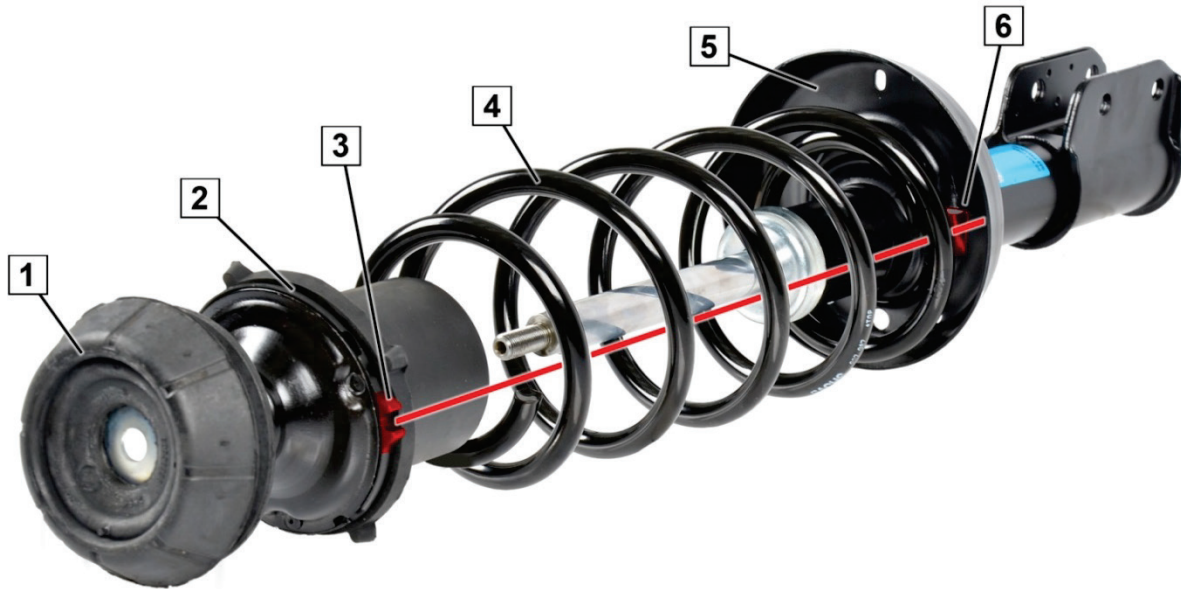


Fig. 1: Correctly positioned suspension strut mount

1 Rubber-metal joint	4 Suspension spring
2 Suspension strut mount	5 Spring plate
3 Top position pin	6 Stop for the suspension spring

! WARNING

The suspension spring is under significant tension. Use the spring compressor special tool.

When assembling the suspension strut note the following:

- Position the end of the suspension spring (4) approx. 5 mm away from the stop (6) of the spring plate (5).
- Position the suspension strut mount (2) so that the top position pin (3) aligns with the stop for the suspension spring (6).
- Use new nut to fix the piston rod. Tighten with the prescribed tightening torque.
- Note the details of the vehicle manufacturer.

Check whether the components align correctly.



www.zf.com/serviceinformation