



Item no.: 36-A27-B, 36-A27-C, 36-A29-B,  
36-A29-C

Item no.: 32-H60-0, 32-H61-0, 32-H62-0,  
32-H63-0, 32-G71-0, 32-H81-0



Fig. 1: Front axle

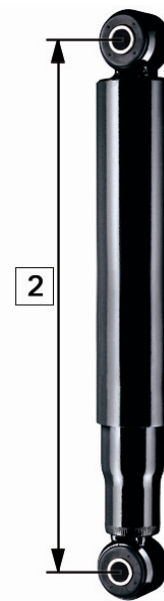


Fig. 2: Rear axle

Length (1) in mm	Part number*
388	36-A29-B 36-A29-C HD
355	36-A27-B 36-A27-C HD

Length (2) in mm		Part number*
extended	compressed	
515	325	32-B71-0 32-B81-0 HD
524	324	32-H60-0 32-H61-0 HD 32-H63-0 HD
549	349	32-H62-0

Table 1: Assignment of the measured length of the shock absorber (1) or (2) in mm to the part numbers  
HD: heavy duty

\* You can find information and data on the assignment of the shock absorbers to the vehicle in our latest catalogs.

**! WARNING**

If the wrong shock absorbers are installed, they may not function properly or fail completely. This will cause unstable driving characteristics and the driver can easily lose control of the vehicle. Always install shock absorbers which meet the specifications of the vehicle manufacturer.



Vehicles in these series have shock absorbers of different lengths. The shock absorbers are marked with the spare part number. If this number is no longer legible, the shock absorber can still be identified. To do this, measure the length of the shock absorber (Fig. 1, Fig. 2).



[www.zf.com/serviceinformation](http://www.zf.com/serviceinformation)