



Ford C-Max, Focus II / Mazda 3 / Volvo C30, C70 II, S40 II, V50

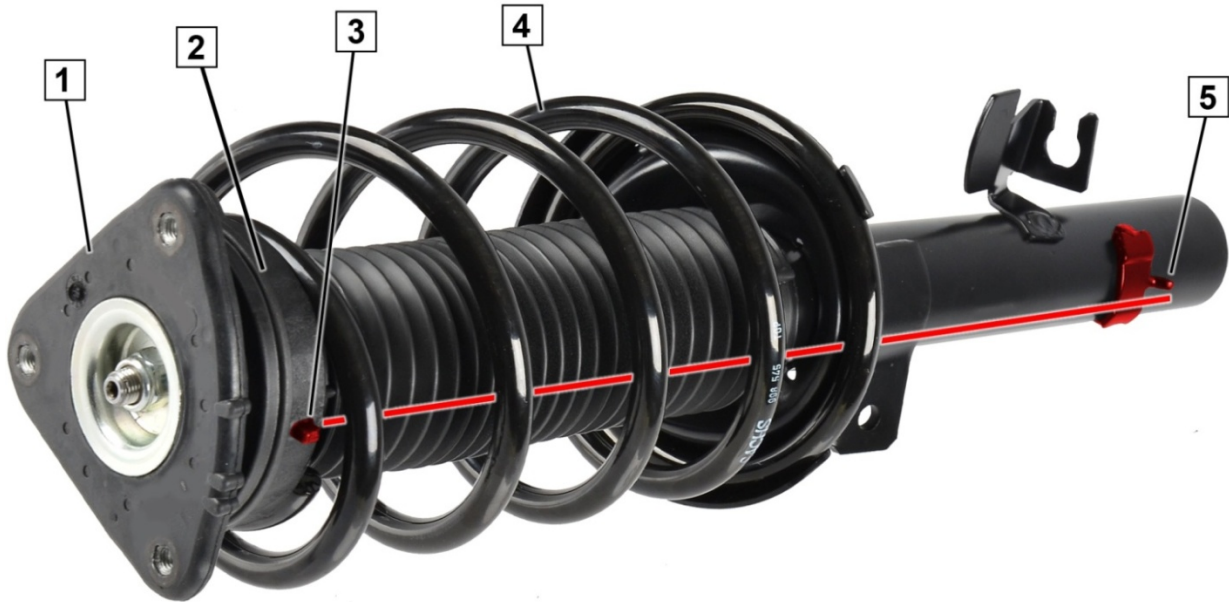


Fig. 1: Correctly positioned suspension strut mount

1 Rubber-metal joint	4 Suspension spring
2 Suspension strut mount	5 Bottom position pin
3 Top position pin	

! WARNING

The suspension spring is under significant tension.
Use the spring compressor special tool.

When assembling the suspension strut note the following:

- Position the suspension strut mount (2) so that the top position pin (3) aligns with the bottom position pin (5).
- Use new nut to fix the piston rod. Tighten with the prescribed tightening torque.
- Note the details of the vehicle manufacturer.

Check whether the components align correctly.



www.zf.com/serviceinformation