



Renault Mégane III / Scénic III BZO_ / DZO/1 / KZO/1 / JZO/1 / ...

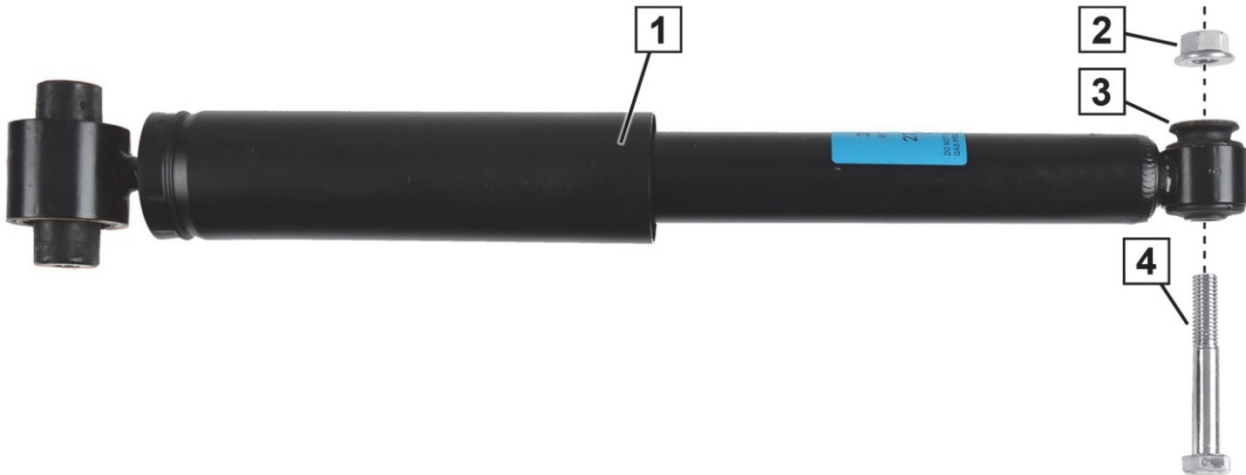


Fig. 1: Shock Absorber with nut and bolt

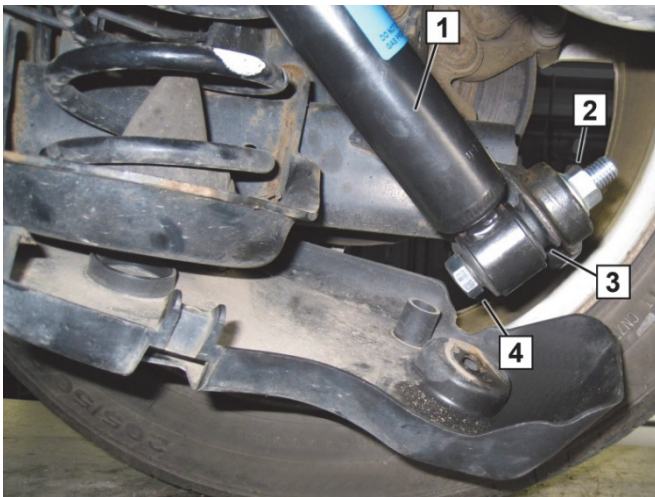


Fig 2: Shock Absorber installed

- | | |
|------------------|------------------------|
| 1 Shock Absorber | 3 Rubber-metal bearing |
| 2 Nut | 4 Bolt |

NOTICE

Use the included bolt (4) and nut (2) for assembly.

1. During assembly, note the installation position of the rubber-metal bearing (3).
2. Install the shock absorber (1).
3. Tighten the nut (2) in the installed position with the specified tightening torque. Follow the instructions issued by the vehicle manufacturer.

How to correctly assemble shock absorbers in the design position

1. Check vehicle for accident damage and other damages.
2. Install shock absorbers in the raised vehicle and screw in manually.
3. Lower the vehicle so that it is resting on its wheels (design position).
4. Tighten the screws to the tightening torque recommended by the vehicle manufacturer.



Incorrect assembly results in the shock absorbers malfunctioning pre-maturely, resulting in leaks, poor responsiveness, and loud noises.



www.zf.com/serviceinformation