

ZF Aftermarket Service Information

Tightening Specifications 8HP | 8P Automatic Transmission

Product	Automatic Transmission 8HP 8HP 4 MH 8HP PH ...
---------	---

Document number	1087.754.106c
-----------------	---------------



AFTERMARKET

ZF Aftermarket Service Information

1	Foreword	6
1.1	Validity and field of application	6
2	Differential Cover Tightening Specifications	7
2.1	1091.700.xxx	7
2.1.1	1091.700.114 – differential cover	7
2.1.2	1091.700.123 – differential cover	9
2.2	1104.700.038 – differential cover	11
3	Torque Converter Tightening Specifications	13
3.1	1103.700.197 – converter	13
4	Guide Plate Tightening Specifications	14
4.1	1087.700.205 – guide plate variant A	14
4.2	1087.700.205 – guide plate variant B	15
5	Hybrid Drive Tightening Specifications	16
5.1	1087.700.xxx	16
5.1.1	1087.700.215 – hybrid drive	16
5.1.2	1087.700.218 – hybrid drive	17
5.1.3	1087.700.706 – hybrid drive	18
5.2	1103.700.xxx	19
5.2.1	1103.700.158 – hybrid drive 8HP65APH 8HP65AXPH 8HP95AXPH	19
5.2.2	1103.700.158 – hybrid drive 8HP66APH	20
6	Power Connection Tightening Specifications	21
6.1	1087.700.612 – power connection	21
6.2	1102.700.167 – power connection	22
6.3	1116.700.231 – electric pins power connection	23
6.4	1116.700.232 – bus bar screw connection power connection MHEV	24
6.5	1116.700.232 – bus bar screw connection power connection PHEV	24
7	Power Electronics Tightening Specifications	25
7.1	1116.700.xxx	25
7.1.1	1116.700.117 – power electronics	25
7.1.2	1116.700.147 – power electronics	26
7.1.3	1116.700.210 – power electronics	27
7.2	1126.700.121 – power electronics	28
8	Mechatronic Tightening Specifications	29
8.1	1087.700.xxx	29
8.1.1	1087.700.079 – standard mechatronic, M/E	29
8.1.2	1087.700.079 - Mechatronic Standard, M/E, HIS	30



ZF Aftermarket

Service Information

8.1.3	1087.700.079 – all-wheel mechatronic, M/E	31
8.1.4	1087.700.079 – all-wheel mechatronic, M/E, HIS	32
8.1.5	1087.700.079 – standard mechatronic, M/E shifting hybrid	33
8.1.6	1087.700.079 – all-wheel mechatronic, M/E shifting hybrid	34
8.2	1102.700.xxx	35
8.2.1	1102.700.034 – standard mechatronic	35
8.2.2	1102.700.034 – all-wheel mechatronic	36
8.2.3	1102.700.035 – standard mechatronic, HIS	37
8.2.4	1102.700.035 – all-wheel mechatronic, HIS	38
8.2.5	1102.700.035 – Gen3 IEP standard	39
8.2.6	1102.700.035 – all-wheel mechatronic, IEP	40
8.3	1124.700.xxx	41
8.3.1	1124.700.036 – mechatronic, variant with 6 valves	41
8.3.2	1124.700.036 – mechatronic, variant with 7 valves	41
9	Oil Tank Cover Tightening Specifications	42
9.1	1116.700.130 – oil tank cover	42
10	Oil Tray Tightening Specifications	43
10.1	1124.700.196 – oil tray	43
11	Oil Pump Tightening Specifications	44
11.1	1087.700.732 – oil pump	44
12	Oil Baffle Plate Tightening Specifications	45
12.1	1103.700.132 – oil baffle plate	45
13	Oil Supply Tightening Specifications	46
13.1	1087.700.xxx	46
13.1.1	1087.700.163 – 8HP65APH/AXPH, 8HP66APH, 8P70H, 8HP70/X/H, 8HP75/X, 8HP76/X, 8HP90, 8HP95/X/AXPH	46
13.1.2	1087.700.163 – 8HP45/X, 8HP50/X, 8HP51/X	48
13.2	1090.700.133 – oil supply	49
13.3	1124.700.024 – oil supply	50
14	Oil Pan Tightening Specifications	52
14.1	1087.700.xxx	52
14.1.1	1087.700.136 – oil pan	52
14.1.2	1087.700.272 – oil pan	53
14.2	1090.700.035 – oil pan	55
14.3	1091.700.xxx	56
14.3.1	1091.700.027 – oil pan	56
14.3.2	1091.700.115 – oil pan	57
14.4	1102.700.xxx	58



ZF Aftermarket Service Information

14.4.1	1102.700.113 – oil pan	58
14.4.2	1102.700.192 – oil pan	59
14.5	1103.700.xxx	60
14.5.1	1103.700.010 – oil pan	60
14.5.2	1103.700.053 – oil pan	61
14.6	1104.700.043 – oil pan	62
14.7	1122.700.003 – oil pan	63
14.8	1124.700.028 – oil pan	64
14.9	1126.700.103 – oil pan	65
15	Parking Lock Magnet Tightening Specifications	66
15.1	1124.700.090 – parking lock magnet	66
16	Rotor Position Sensor Tightening Specifications	67
16.1	1102.700.021 – rotor position sensor	67
17	Extension Tightening Specifications	69
17.1	1090.700.141 – extension	69
18	Torque Converter Bell Housing Tightening Specifications	70
18.1	1087.700.081 – torque converter bell housing	70
18.2	1091.700.018 – torque converter bell housing	71
19	Centering Plate Tightening Specifications	72
19.1	1124.700.023 – centering plate	72
20	Intermediate Housing Tightening Specifications	73
20.1	1091.700.117 – intermediate housing	73
20.2	1103.700.033 – intermediate housing	75
20.3	1104.700.084 – intermediate housing	76
21	Intermediate Plate Tightening Specifications	78
21.1	1087.700.133 – intermediate plate	78
21.2	1091.700.118 – intermediate plate	80
21.3	1102.700.xxx	82
21.3.1	1102.700.067 – intermediate plate	82
21.3.2	1102.700.067 – all-wheel intermediate plate	84
22	Allocation	85
22.1	Information on the allocation	85
22.2	Model 1087	86
22.3	Model 1090	119
22.4	Model 1091	137
22.5	Model 1101	143



ZF Aftermarket Service Information

22.6	Model 1102	177
22.7	Model 1103	198
22.8	Model 1104	231
22.9	Model 1105	246
22.10	Model 1109	248
22.11	Model 1111	255
22.12	Model 1116	272
22.13	Model 1122	283
22.14	Model 1124	287
22.15	Model 1126	300
23	Annex	312
23.1	Overview of revisions	312



ZF Aftermarket Service Information

1 Foreword

1.1 Validity and field of application

This documentation applies to the following ZF products, respectively for the rear-wheel drive and the all-wheel drive:

- 8HP automatic transmission
- 8P hybrid automatic transmission



The precise allocation of tightening specifications to the relevant transmission must always be made based on the master parts list (information on the type plate). In each case, the respective designation of the following specifications was created without considering a specific model. The model number alone cannot be used to draw any conclusions with regard to applicability.




The graphics included in this document serve to illustrate the respective tightening instructions. It is not possible to draw any conclusions about specific parts lists, transmission versions or customer variants only using these graphics.



2 Differential Cover Tightening Specifications

2.1 1091.700.xxx

2.1.1 1091.700.114 – differential cover

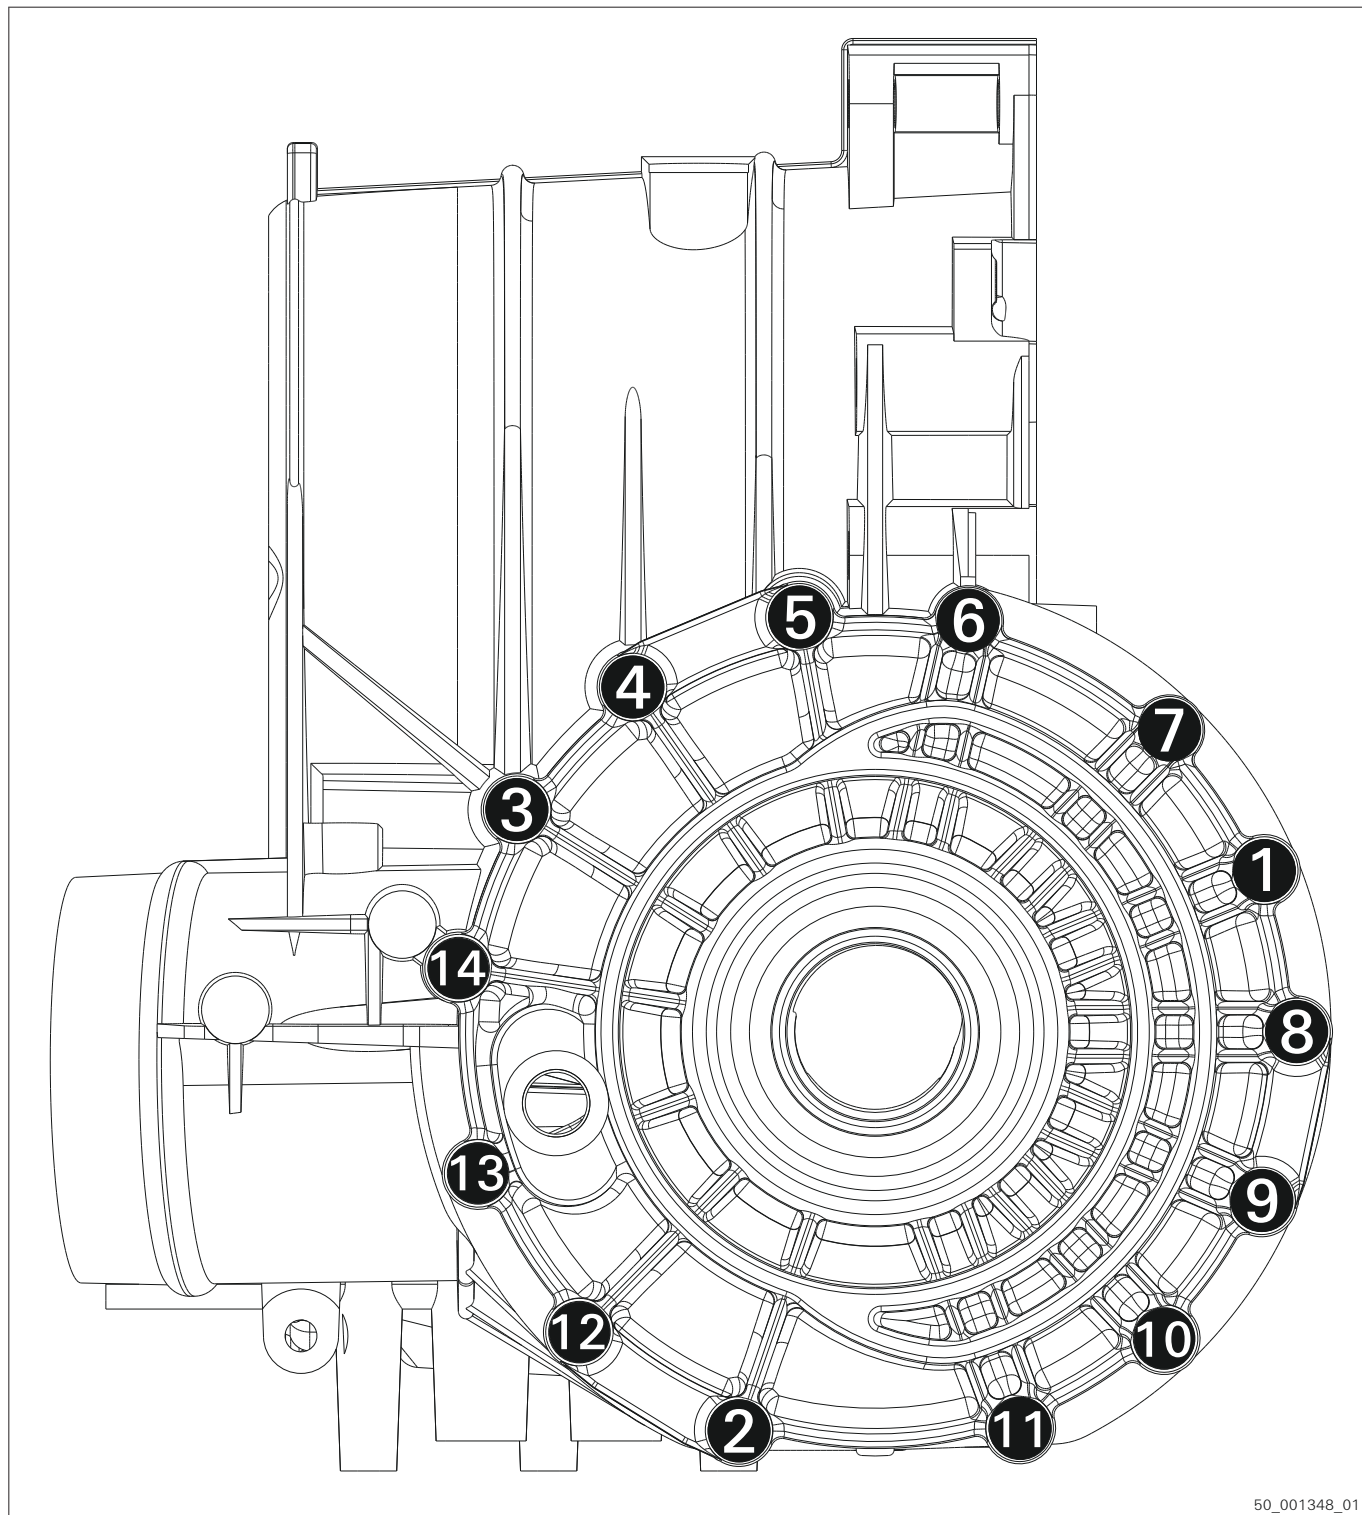

50_001348_01

Fig. 1 1091.700.114


ZF Aftermarket Service Information

Sequence	Screw position	Torque
1	1, 2	5 Nm (± 1 Nm)
2	1-14	Torque according to the parts list entry

Tab. 1 Tightening sequence



2.1.2 1091.700.123 – differential cover

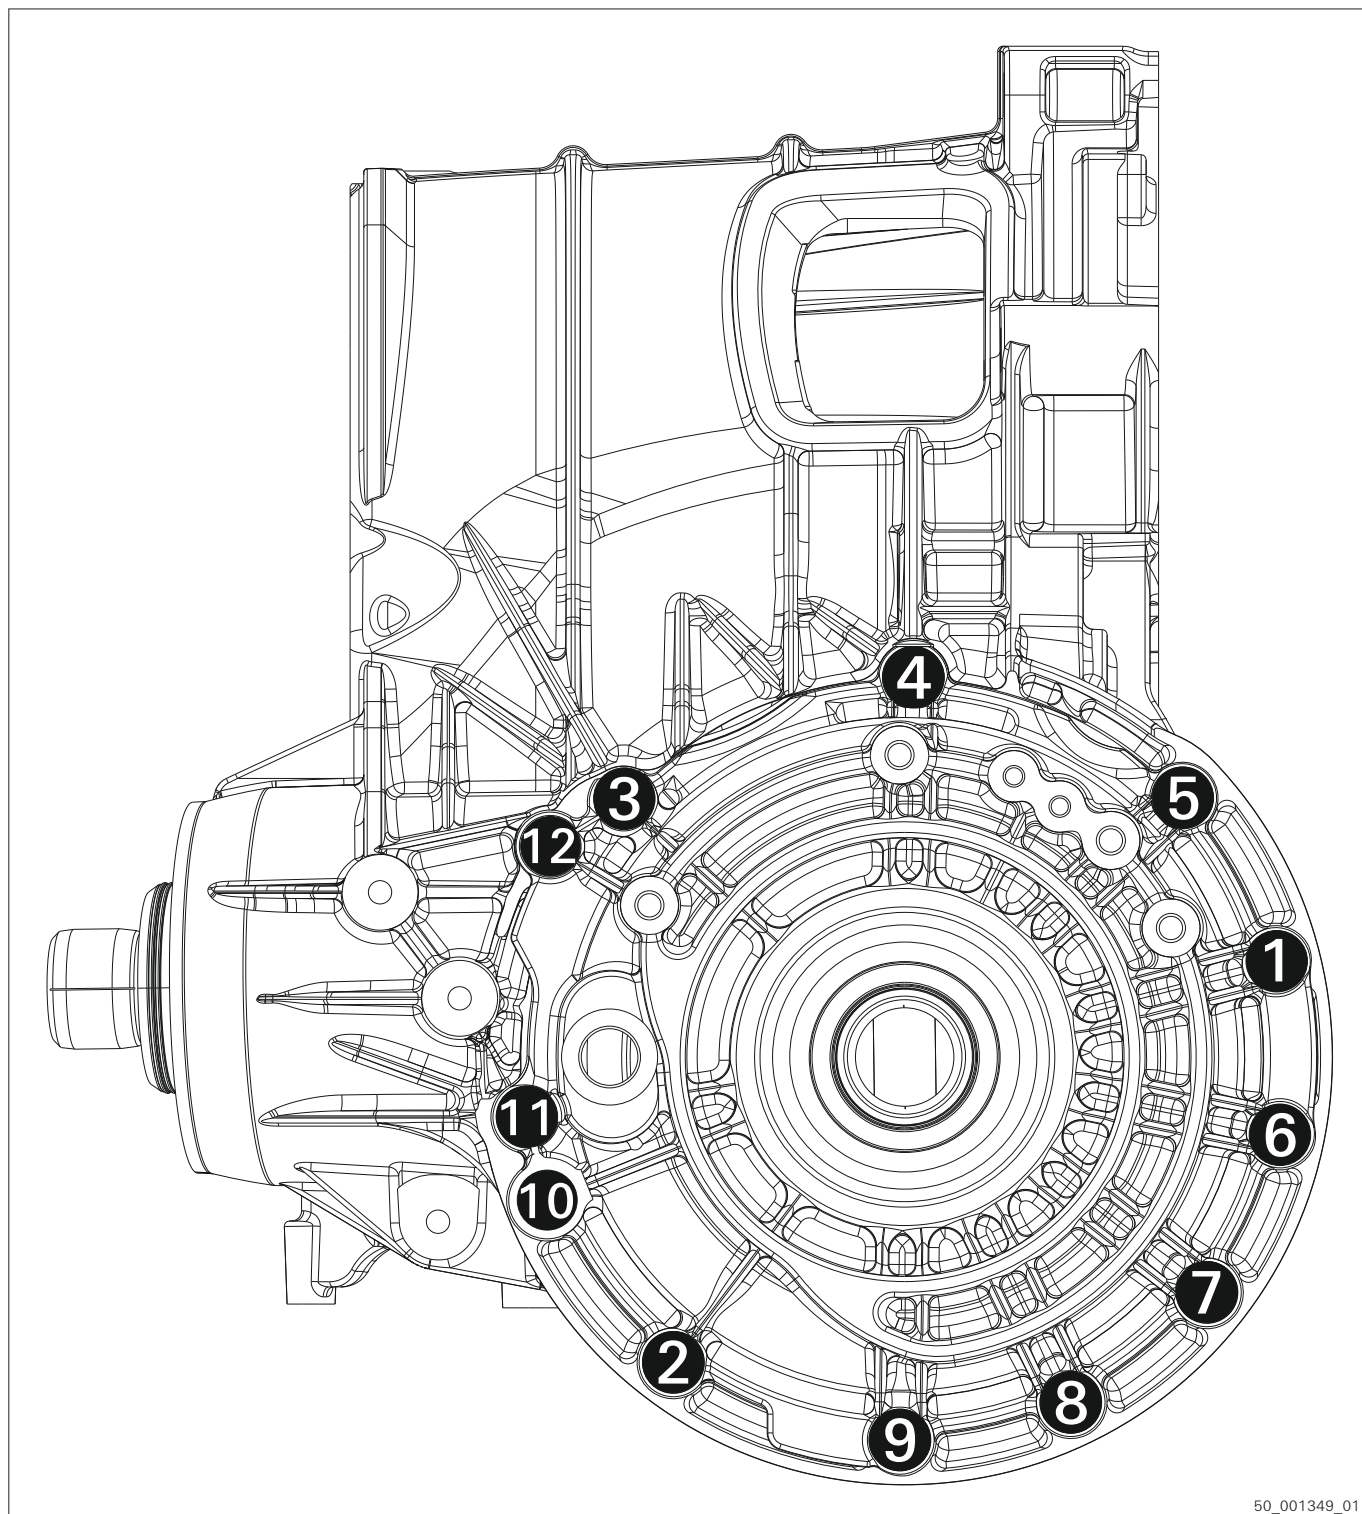

50_001349_01

Fig. 2 1091.700.123


ZF Aftermarket Service Information

Sequence	Screw position	Torque
1	1, 2	5 Nm (± 1 Nm)
2	1-12	Torque according to the parts list entry

Tab. 2 Tightening sequence



2.2 1104.700.038 – differential cover

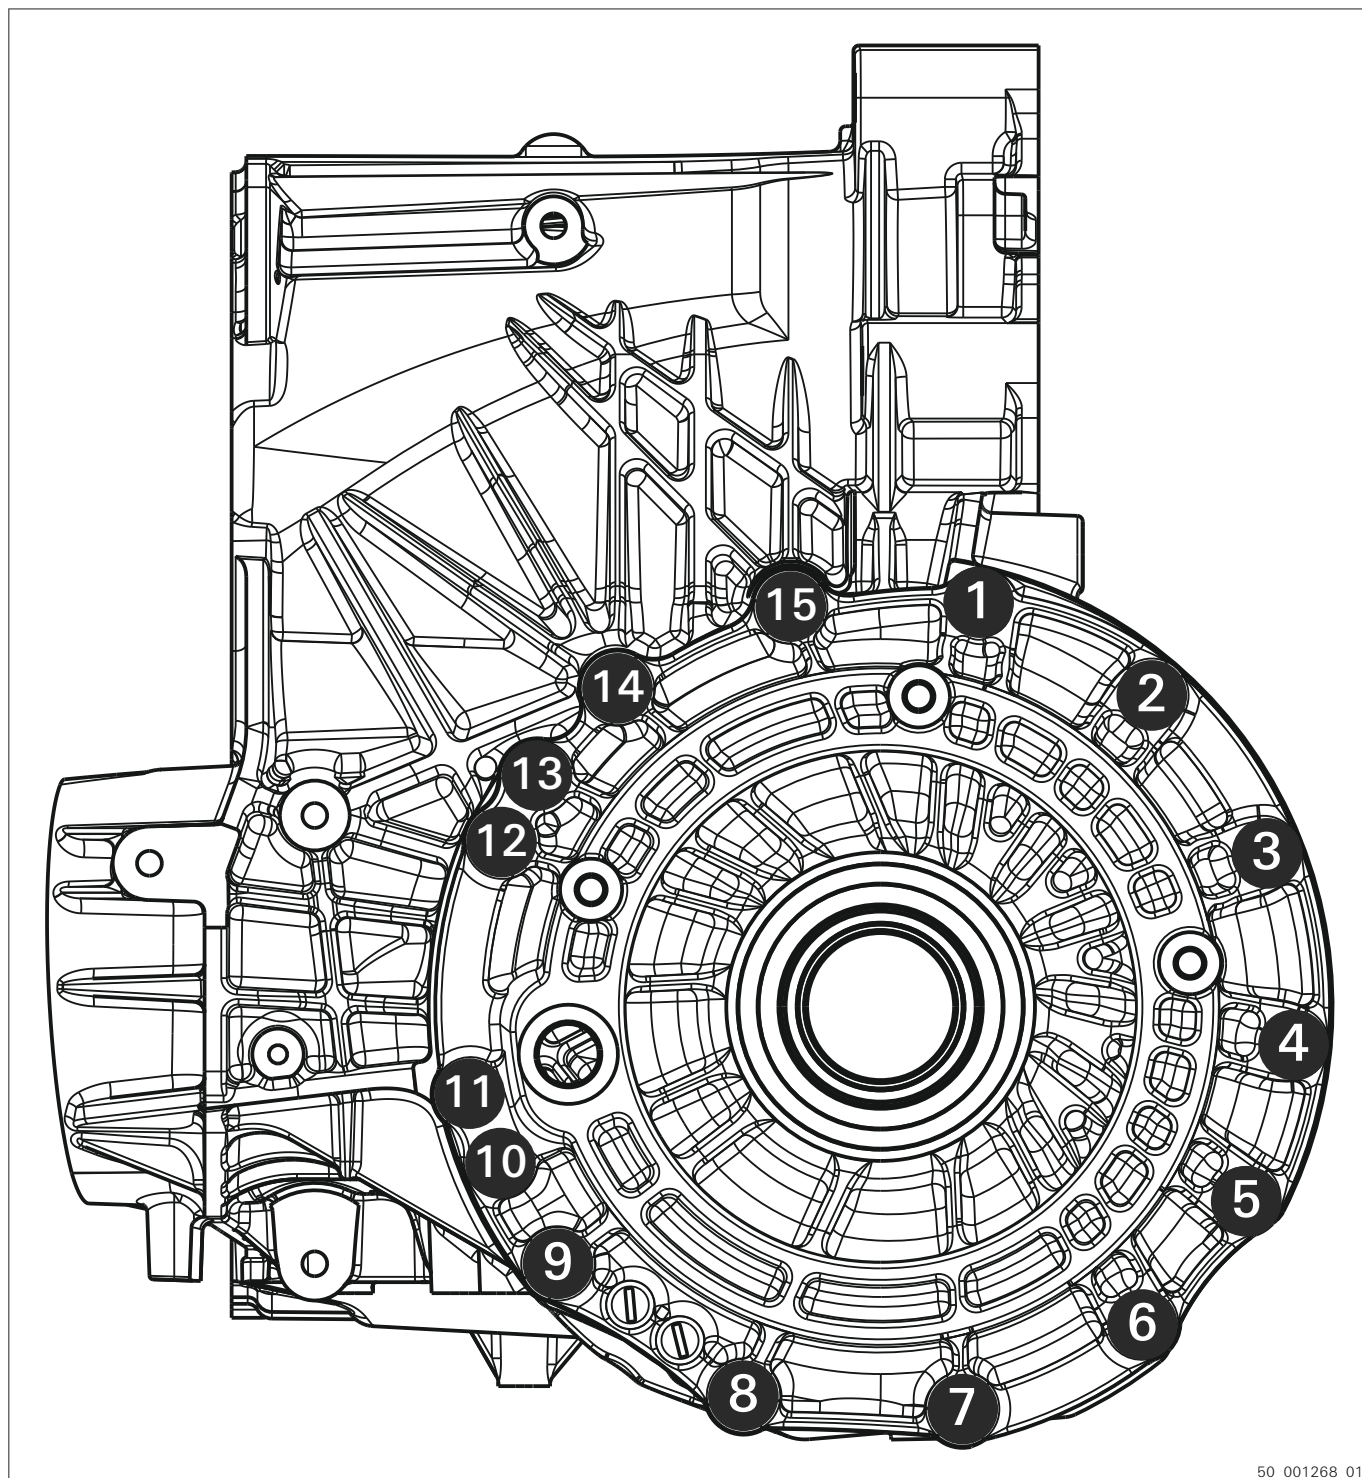

50_001268_01

Fig. 3 1104.700.038

ZF Aftermarket

Service Information


Sequence	Screw position	Torque
1	4, 9, 14	5 Nm (± 1 Nm)
2	1-15	Torque according to the parts list entry

Tab. 3 Tightening sequence



3 Torque Converter Tightening Specifications

3.1 1103.700.197 – converter

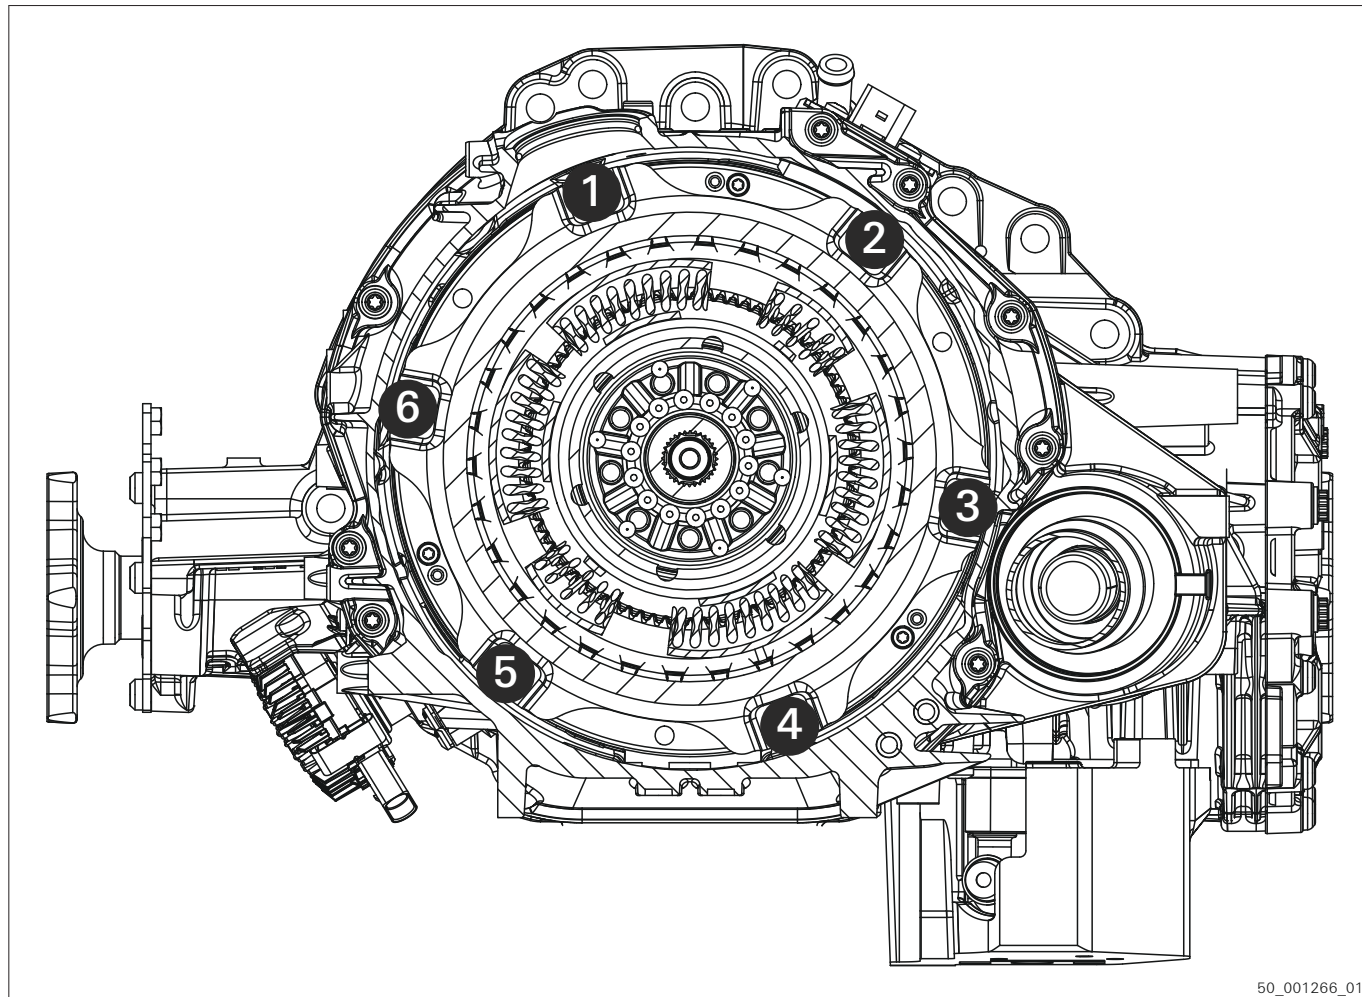

50_001266_01


Fig. 4 1103.700.197

Starting point for tightening/loosening is always the bore with the "X" marking!

Subsequently, tightening/loosening clockwise or counterclockwise is permissible!

4 Guide Plate Tightening Specifications

4.1 1087.700.205 – guide plate variant A

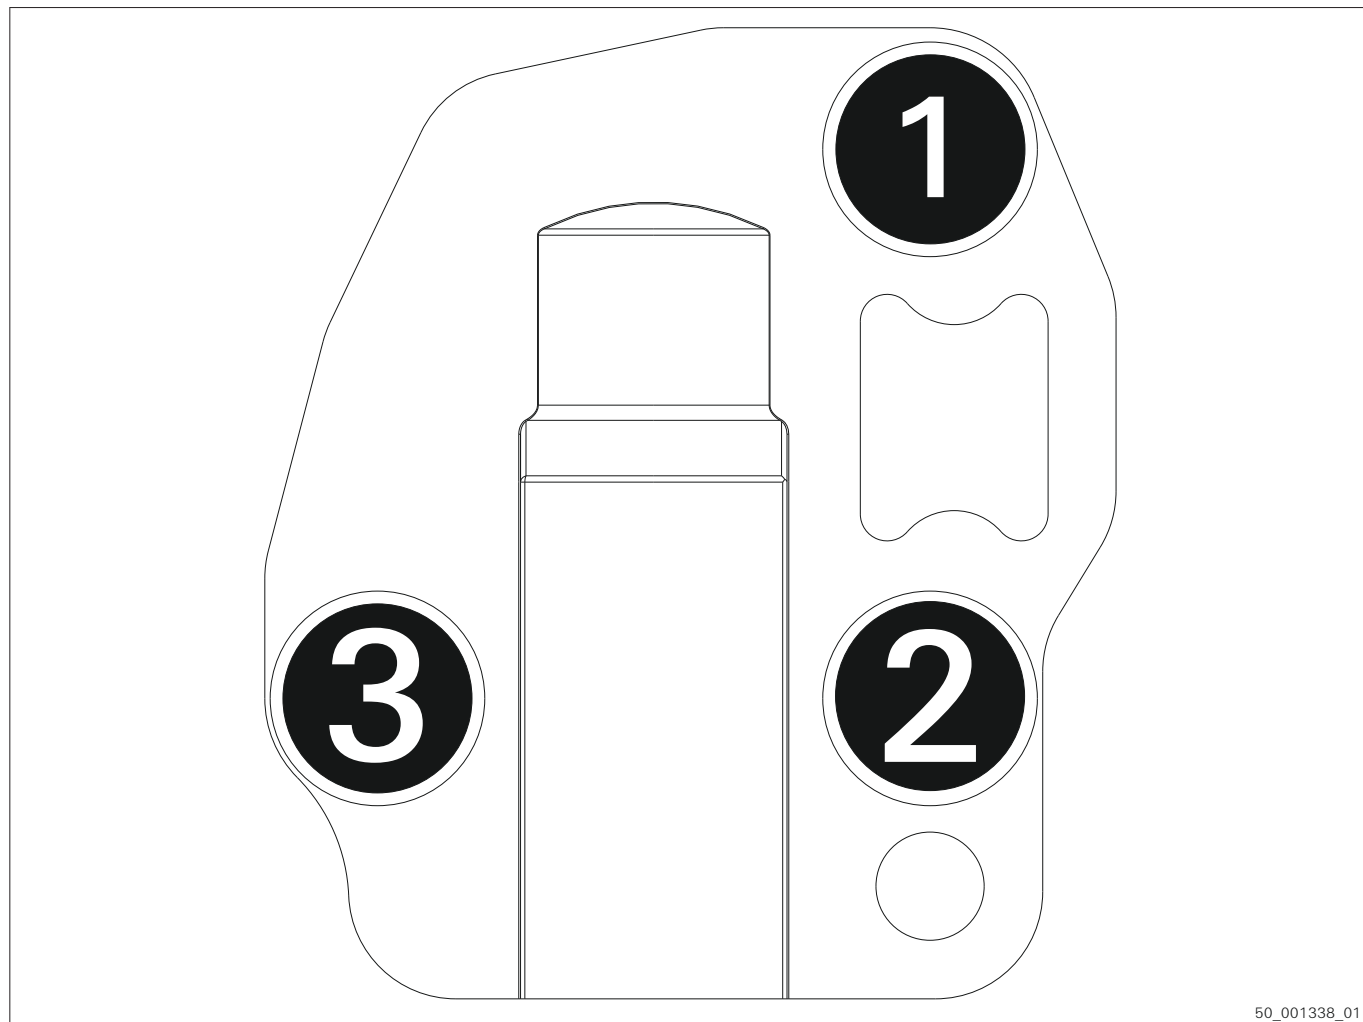

50_001338_01

Fig. 5 1087.700.205

4.2 1087.700.205 – guide plate variant B

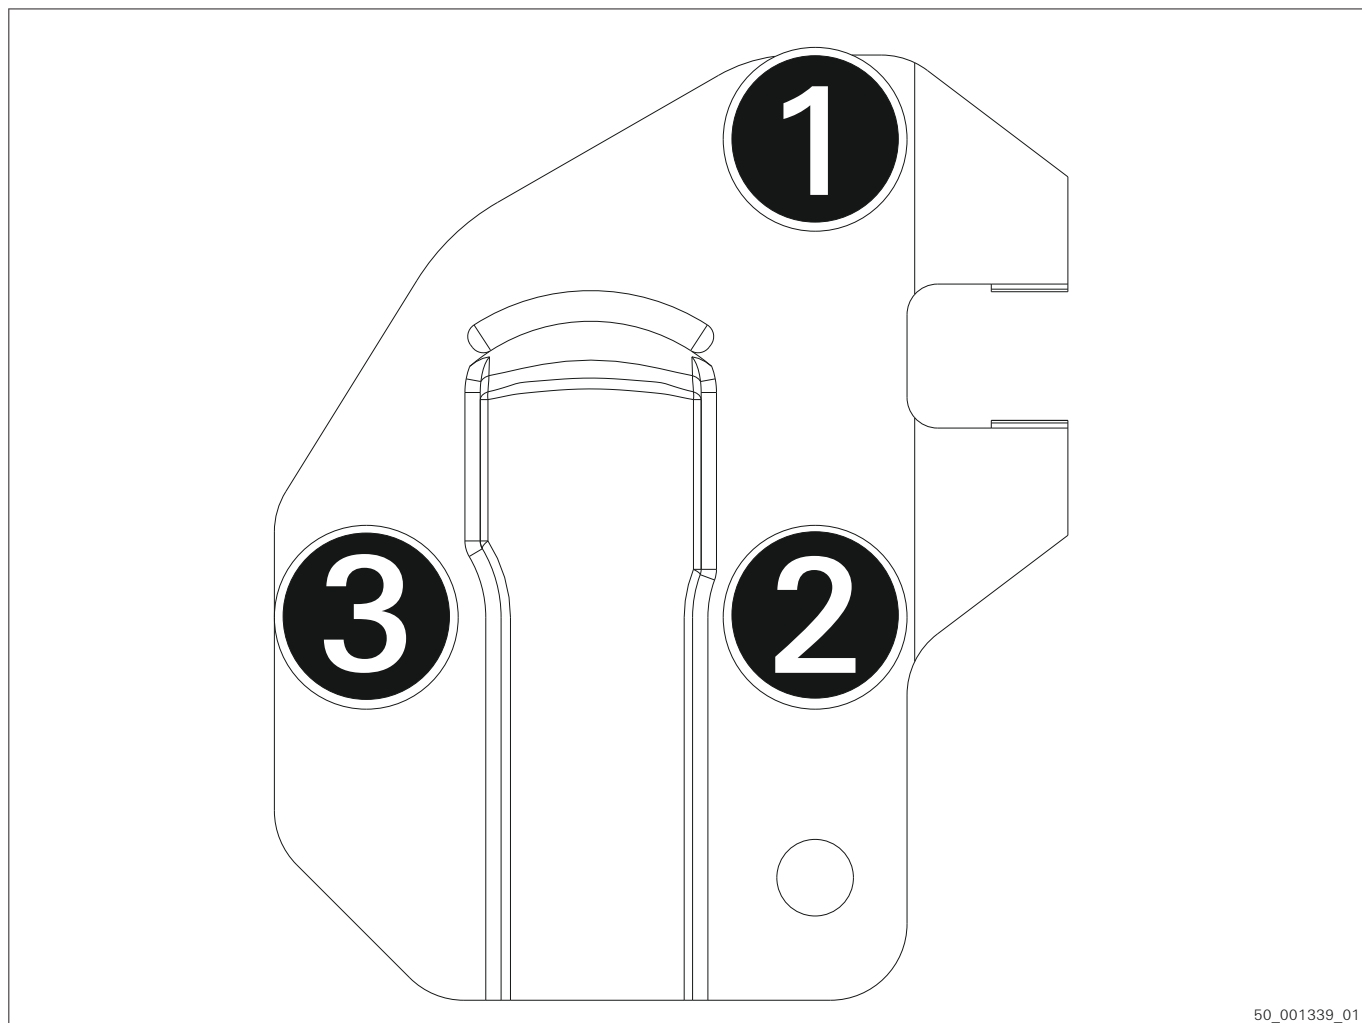


Fig. 6 1087.700.205

5 Hybrid Drive Tightening Specifications

5.1 1087.700.xxx

5.1.1 1087.700.215 – hybrid drive

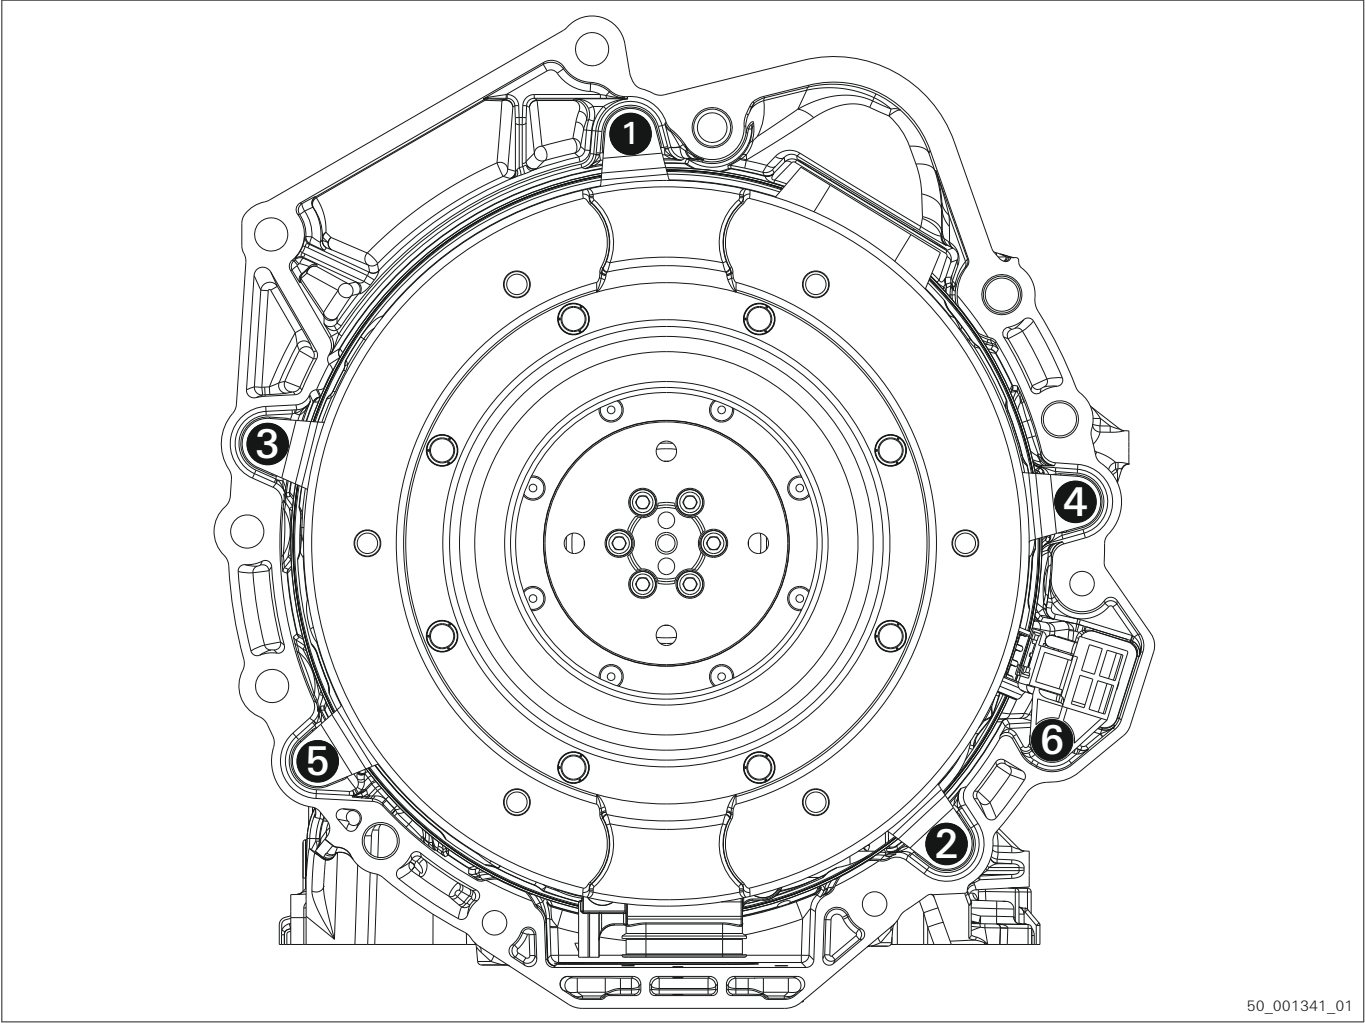


Fig. 7 1087.700.215

Sequence	Screw position	Torque
1	1, 2	5 Nm (± 1 Nm)
2	1-6	Torque according to the parts list entry

Tab. 4 Tightening sequence

5.1.2 1087.700.218 – hybrid drive

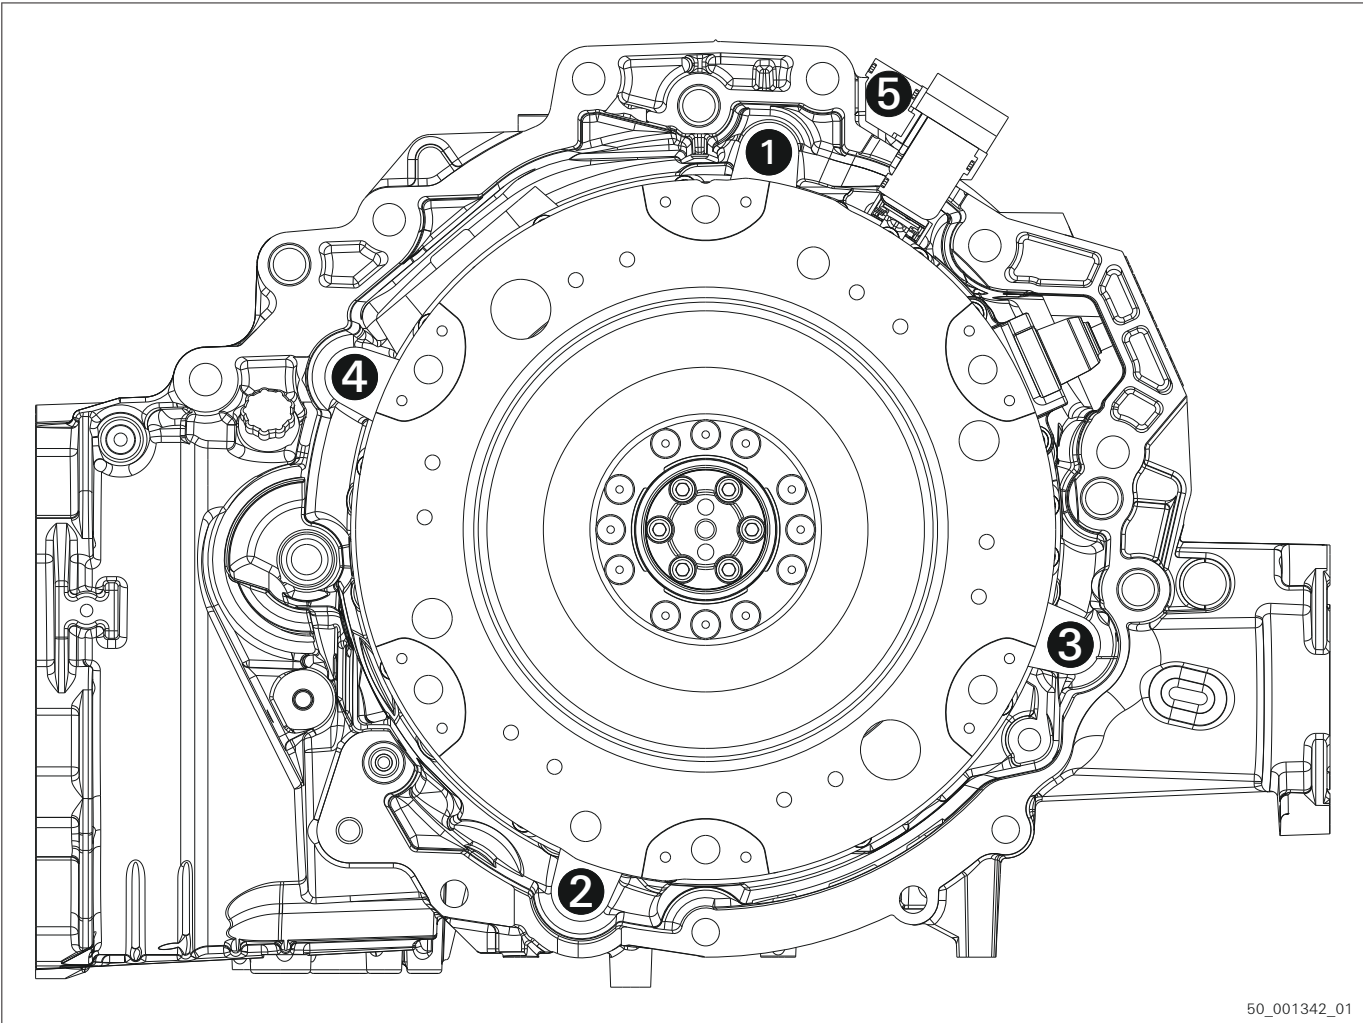


Fig. 8 1087.700.218

Sequence	Screw position	Torque
1	1, 2	10 Nm ($\pm$ 1 Nm)
2	1-5	Torque according to the parts list entry

Tab. 5 Tightening sequence

5.1.3 1087.700.706 – hybrid drive

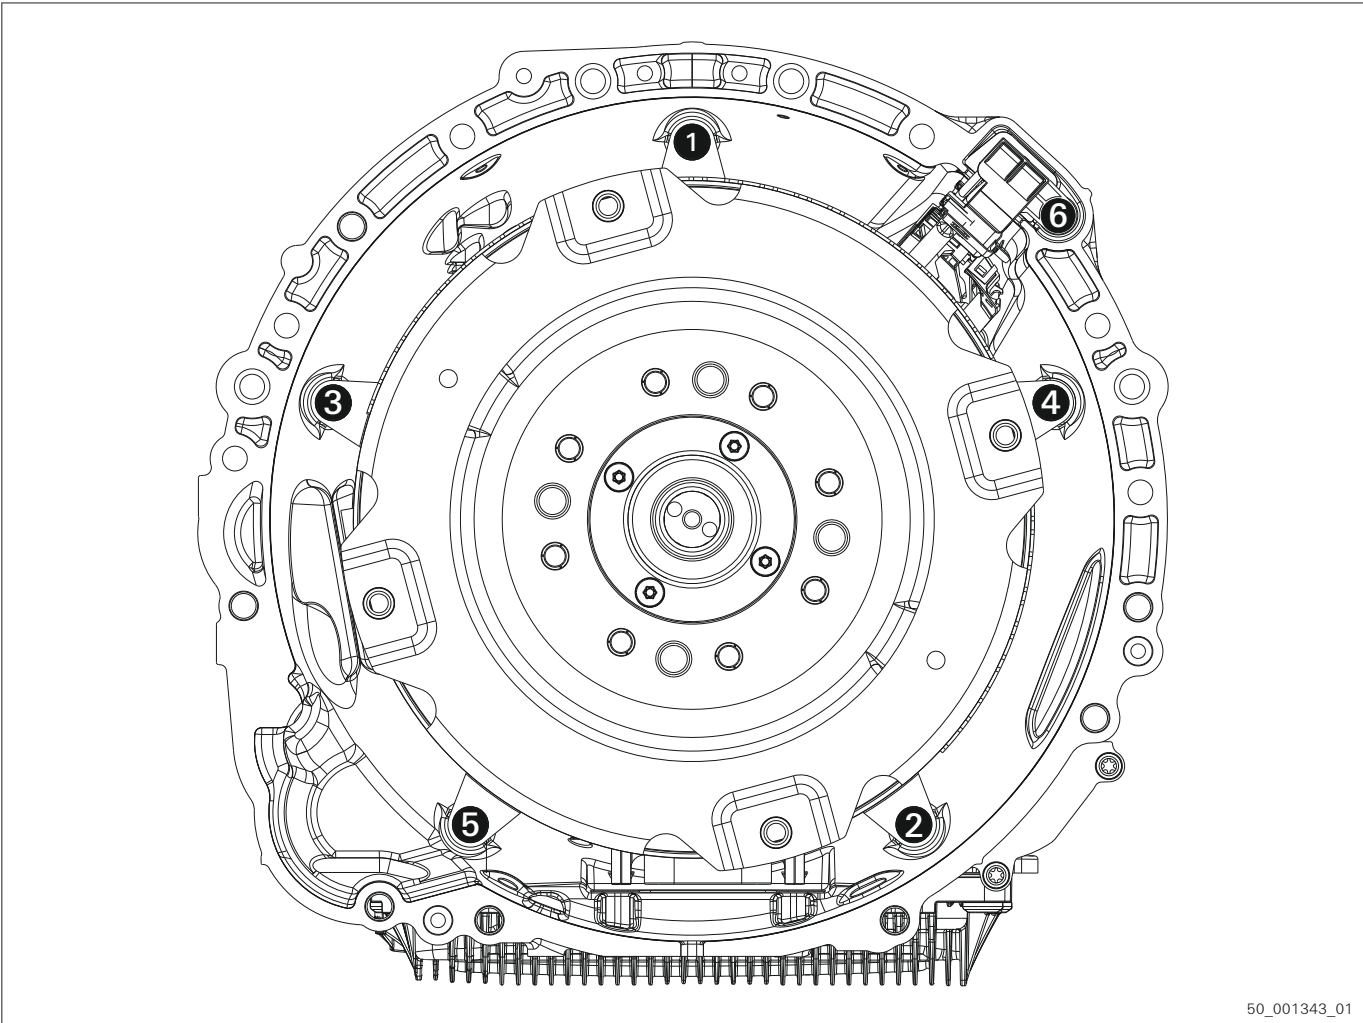


Fig. 9 1087.700.706

Sequence	Screw position	Torque
1	1, 2	5 Nm (± 1 Nm)
2	1-6	Torque according to the parts list entry

Tab. 6 Tightening sequence

ZF Aftermarket Service Information

5.2 1103.700.xxx

5.2.1 1103.700.158 – hybrid drive 8HP65APH | 8HP65AXPH | 8HP95AXPH

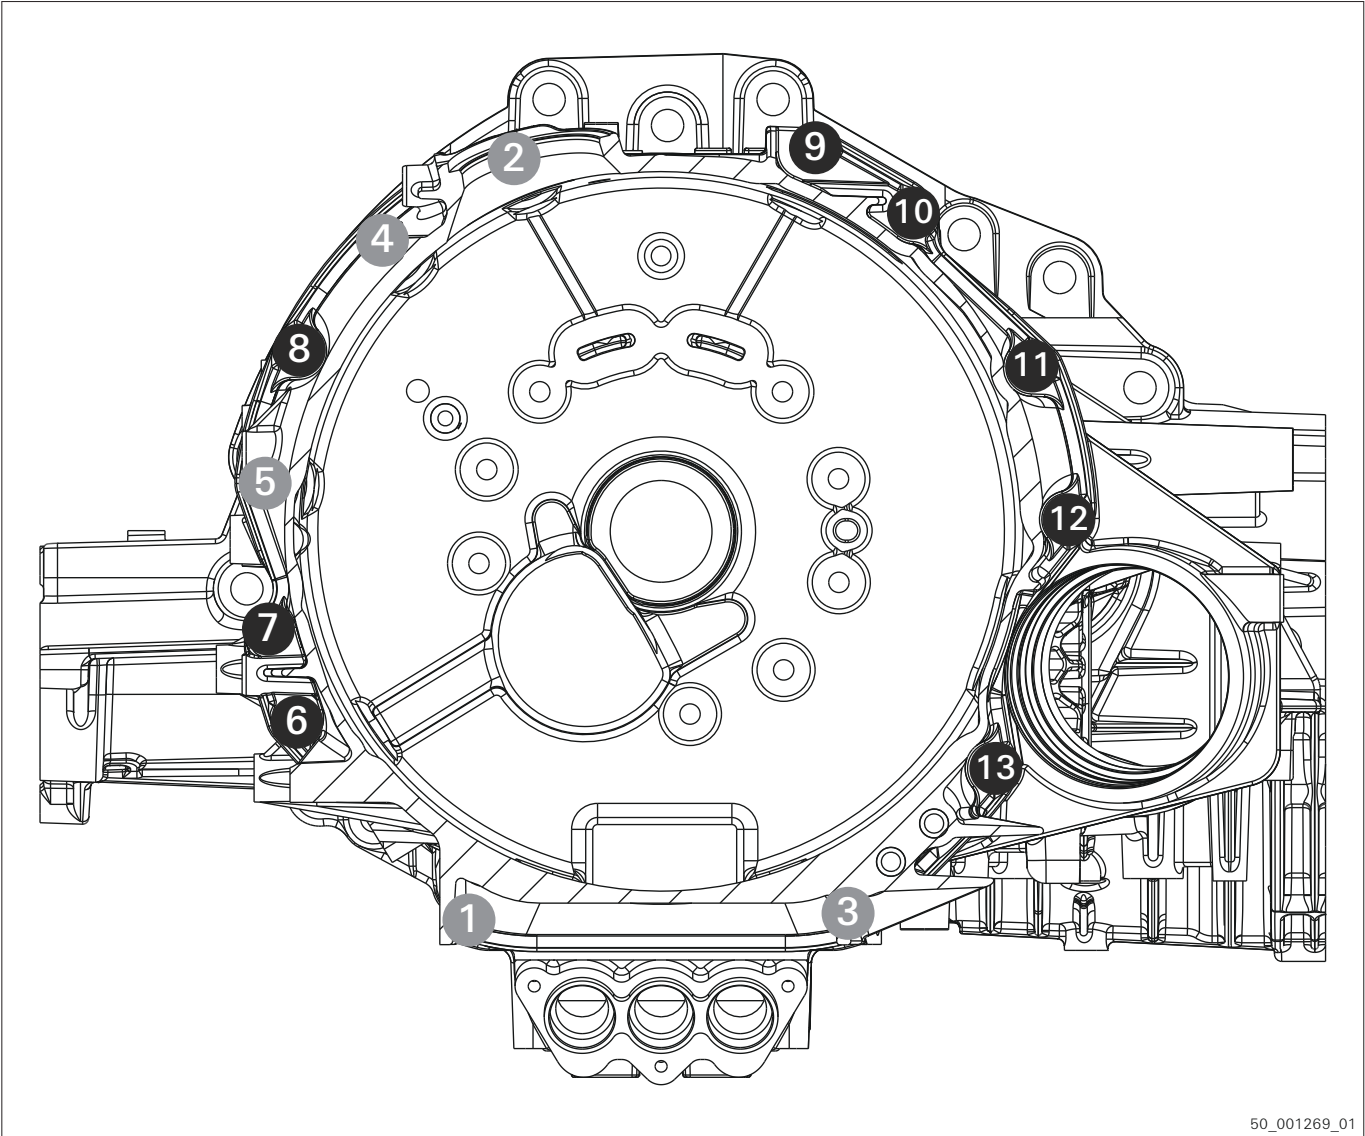


Fig. 10 1103.700.158

Transmission in vertical position, hybrid drive mounted on top!

Sequence	Screw position	Torque
1	1, 2	5 Nm (± 1 Nm)
2	1-13	Torque according to the parts list entry

Tab. 7 Tightening sequence for 8HP65APH | 8HP65AXPH



ZF Aftermarket Service Information

Sequence	Screw position	Torque
1	1, 4	5 Nm (± 1 Nm)
2	1-13	Torque according to the parts list entry

Tab. 8 Tightening sequence for 8HP95AXPH

5.2.2 1103.700.158 – hybrid drive 8HP66APH

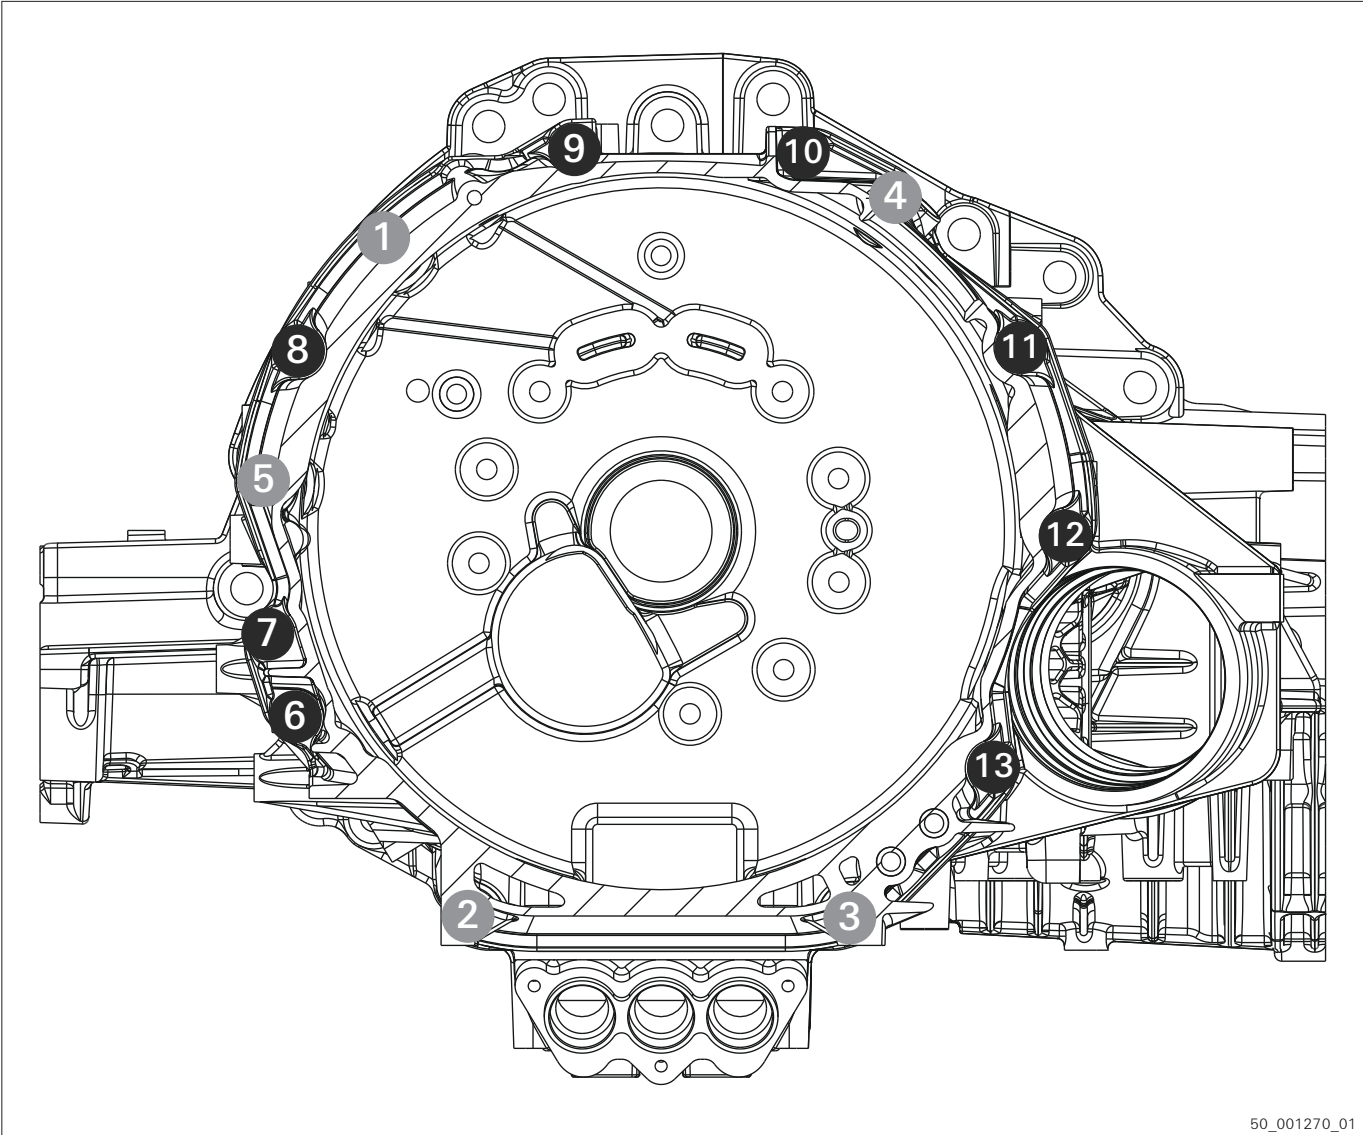


Fig. 11 1103.700.158

Transmission in vertical position, hybrid drive mounted on top!

Sequence	Screw position	Torque
1	2, 4	5 Nm (± 1 Nm)
2	1-13	Torque according to the parts list entry

Tab. 9 Tightening sequence



6 Power Connection Tightening Specifications

6.1 1087.700.612 – power connection

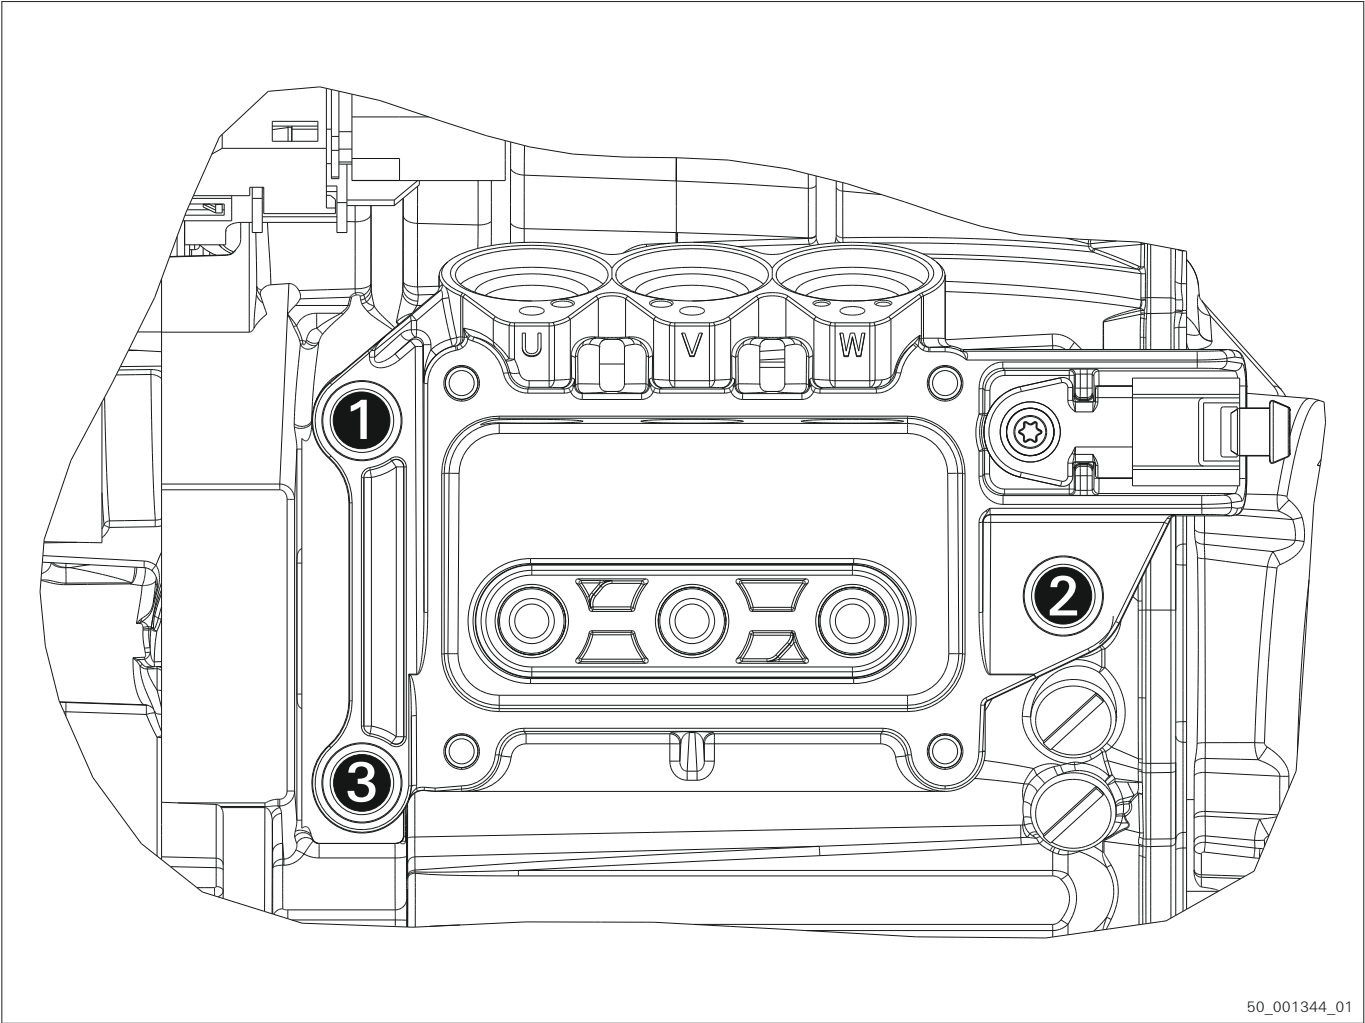


Fig. 12 1087.700.612

Sequence	Screw position	Torque
1	1, 2	10 Nm (± 1 Nm)
2	1-3	Torque according to the parts list entry

Tab. 10 Tightening sequence

6.2 1102.700.167 – power connection

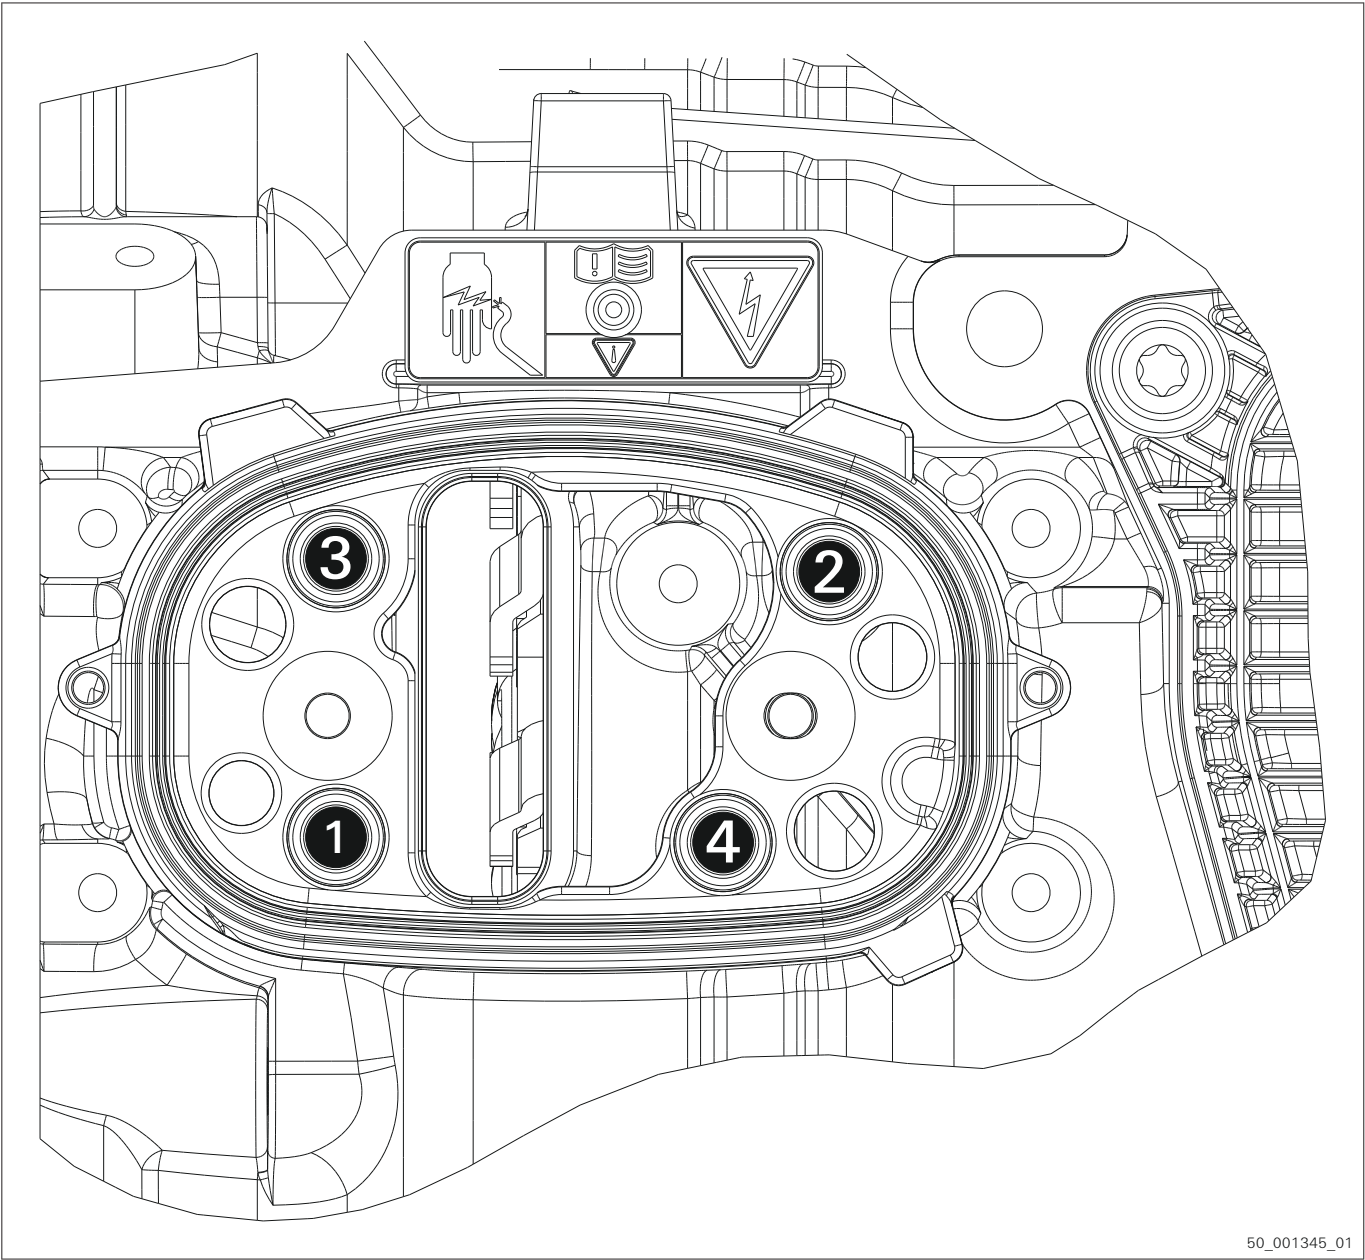


Fig. 13 1102.700.167

Sequence	Screw position	Torque
1	1-3	3 Nm (± 0.5 Nm)
2	1-4	4 Nm (+90°)

Tab. 11 Tightening sequence

6.3 1116.700.231 – electric pins | power connection

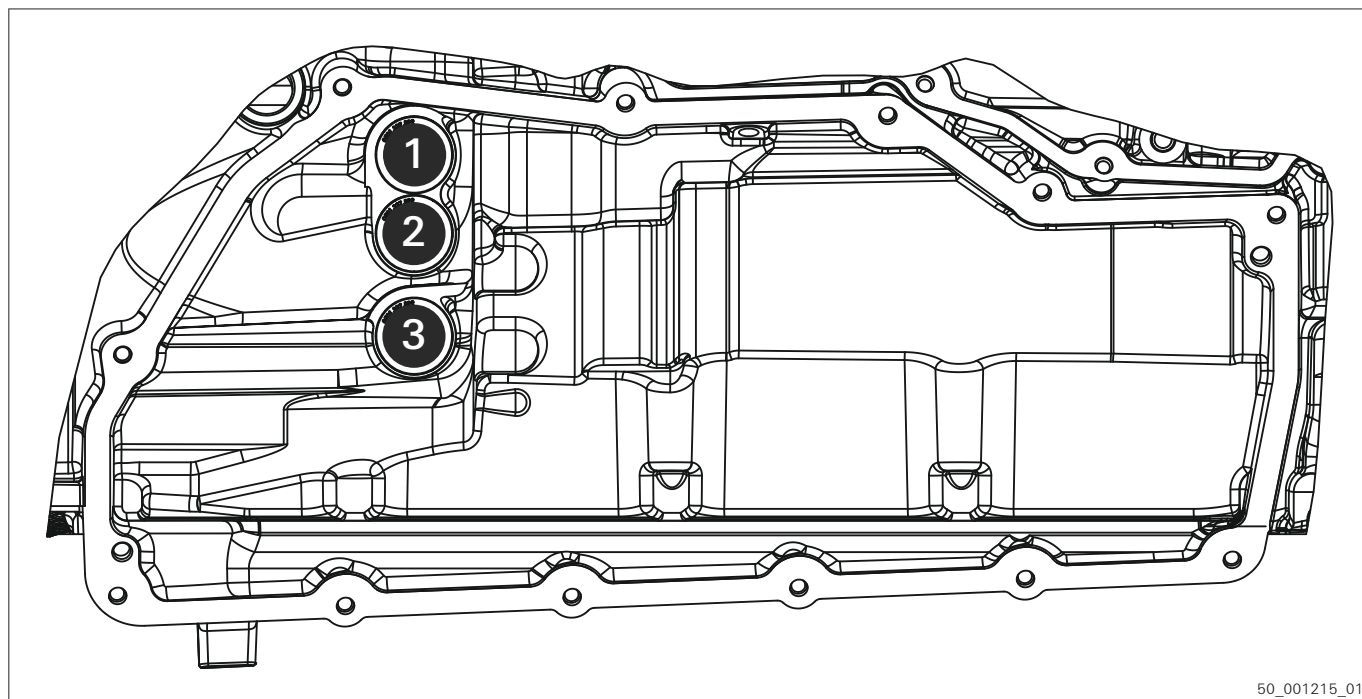


Fig. 14 1116.700.231

A maximum of 3 screwing processes in the internal thread of the electric pin are permissible per electric pin!

ZF Aftermarket Service Information

6.4 1116.700.232 – bus bar screw connection | power connection MHEV

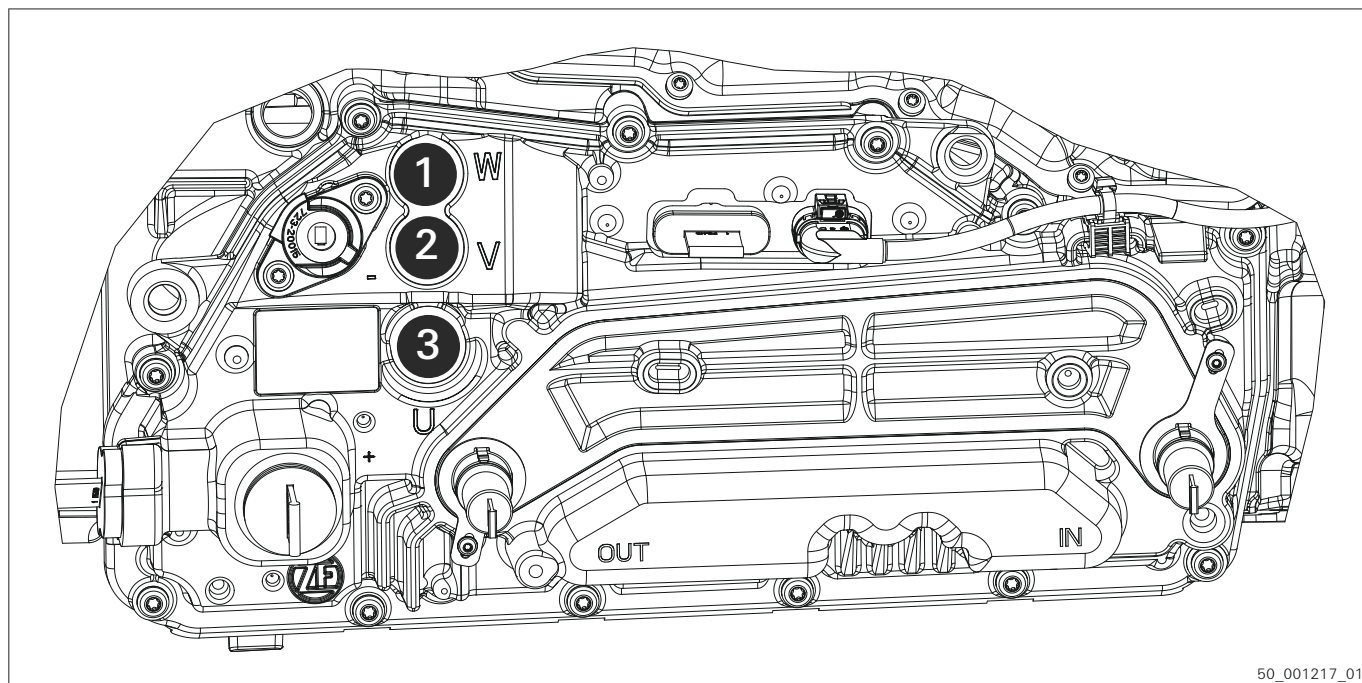


Fig. 15 MHEV

6.5 1116.700.232 – bus bar screw connection | power connection PHEV

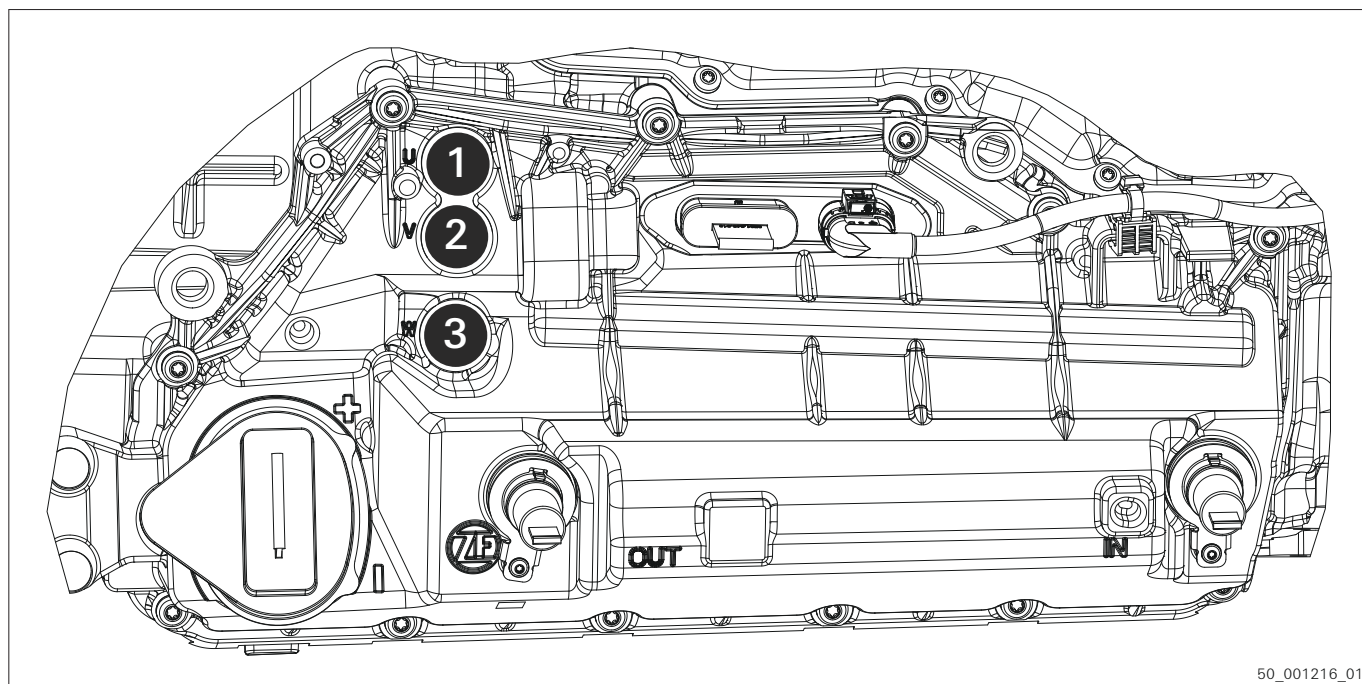


Fig. 16 PHEV

ZF Aftermarket Service Information

7 Power Electronics Tightening Specifications

7.1 1116.700.xxx

7.1.1 1116.700.117 – power electronics

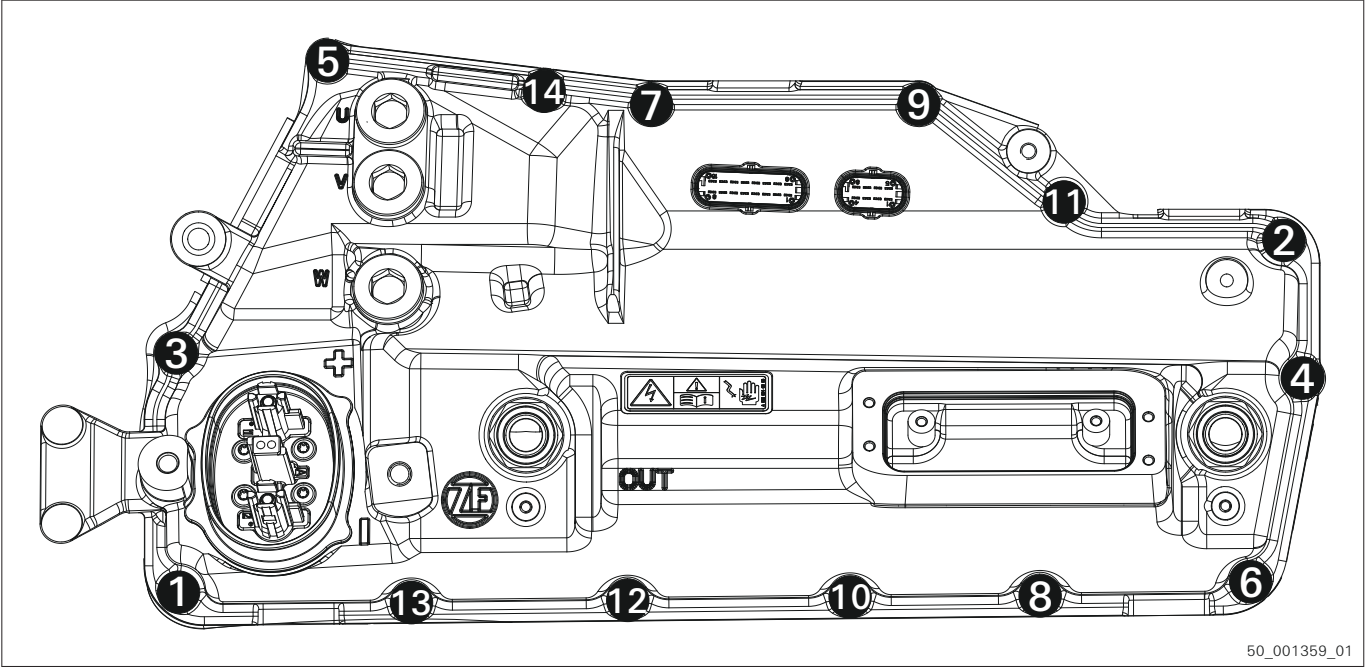


Fig. 17 1116.700.117

Sequence	Screw position	Torque
1	3, 6, 11, 13	2 Nm ($\pm 10\%$)
2	1-14	8 Nm (± 0.8 Nm)

Tab. 12

ZF Aftermarket

Service Information

7.1.2 1116.700.147 – power electronics

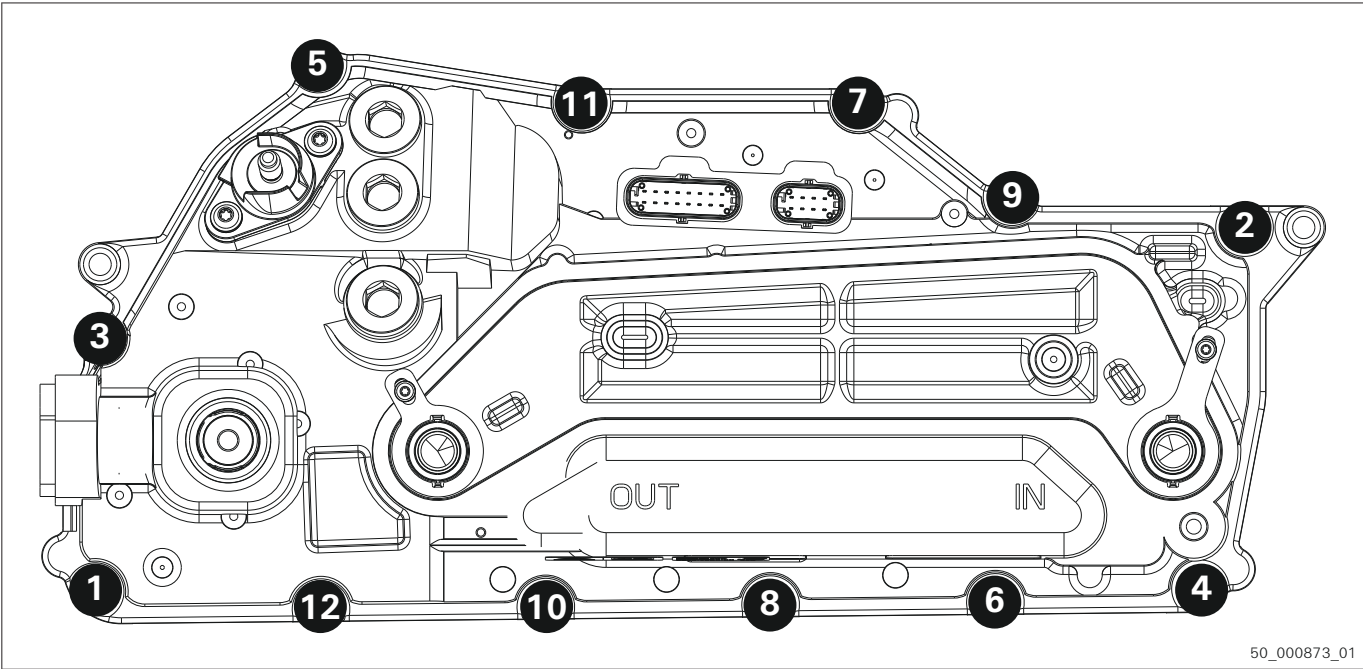


Fig. 18 1116.700.147

Sequence	Screw position	Torque
1	3, 4, 9, 12	2 Nm ($\pm 10\%$)
2	1-12	8 Nm (± 0.8 Nm)

Tab. 13

ZF Aftermarket Service Information

7.1.3 1116.700.210 – power electronics

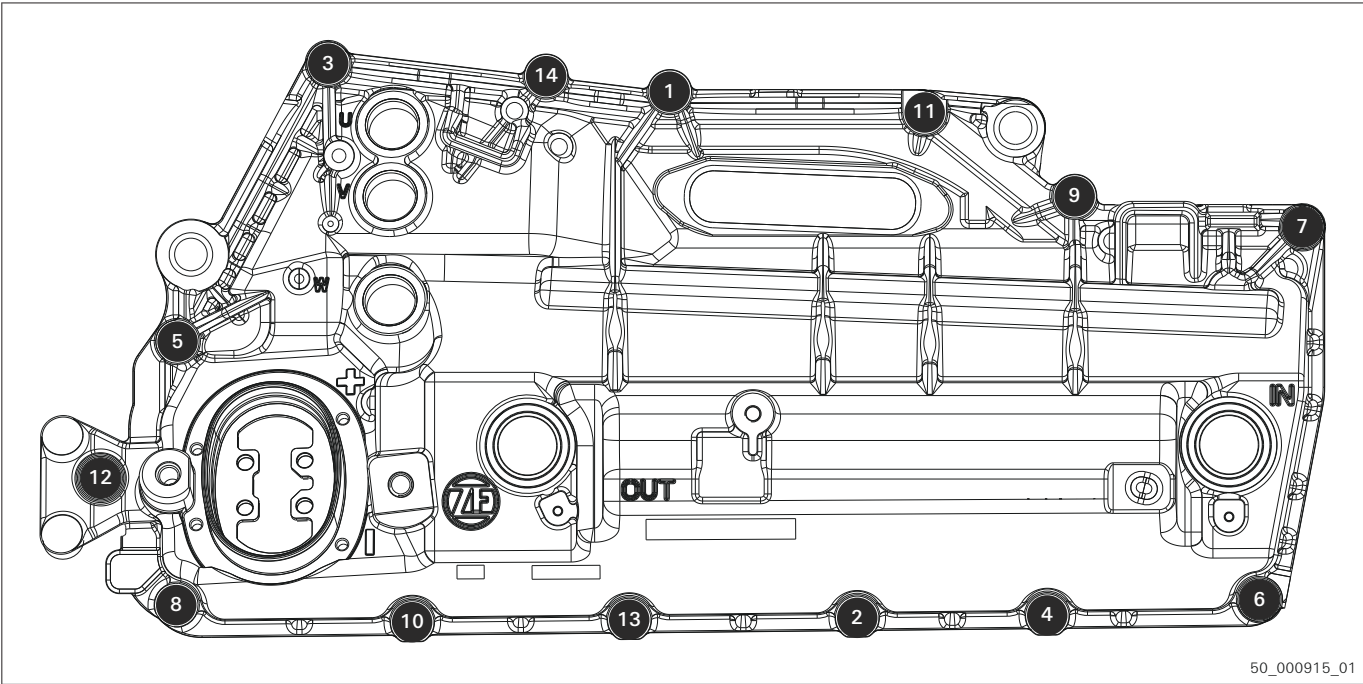


Fig. 19 1116.700.210

Sequence	Screw position	Torque
1	7, 8	2 Nm ($\pm 10\%$)
2	1-14	8 Nm (± 0.8 Nm)

Tab. 14 Tightening sequence 1116.700.210

7.2 1126.700.121 – power electronics

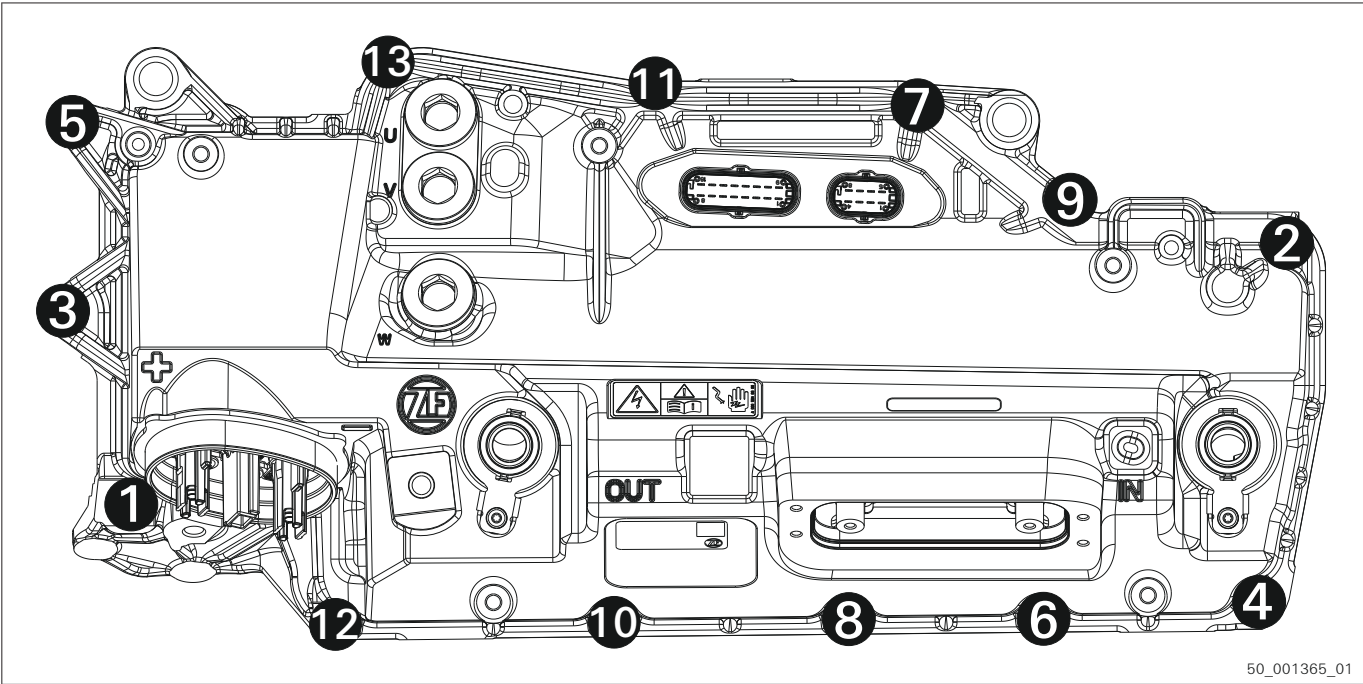


Fig. 20 1126.700.121

Sequence	Screw position	Torque
1	1, 2	4 Nm (± 0.4 Nm)
2	1-13	Torque according to the parts list entry


Tab. 15 Tightening sequence

ZF Aftermarket Service Information

8 Mechatronic Tightening Specifications

8.1 1087.700.xxx

8.1.1 1087.700.079 – standard mechatronic, M/E

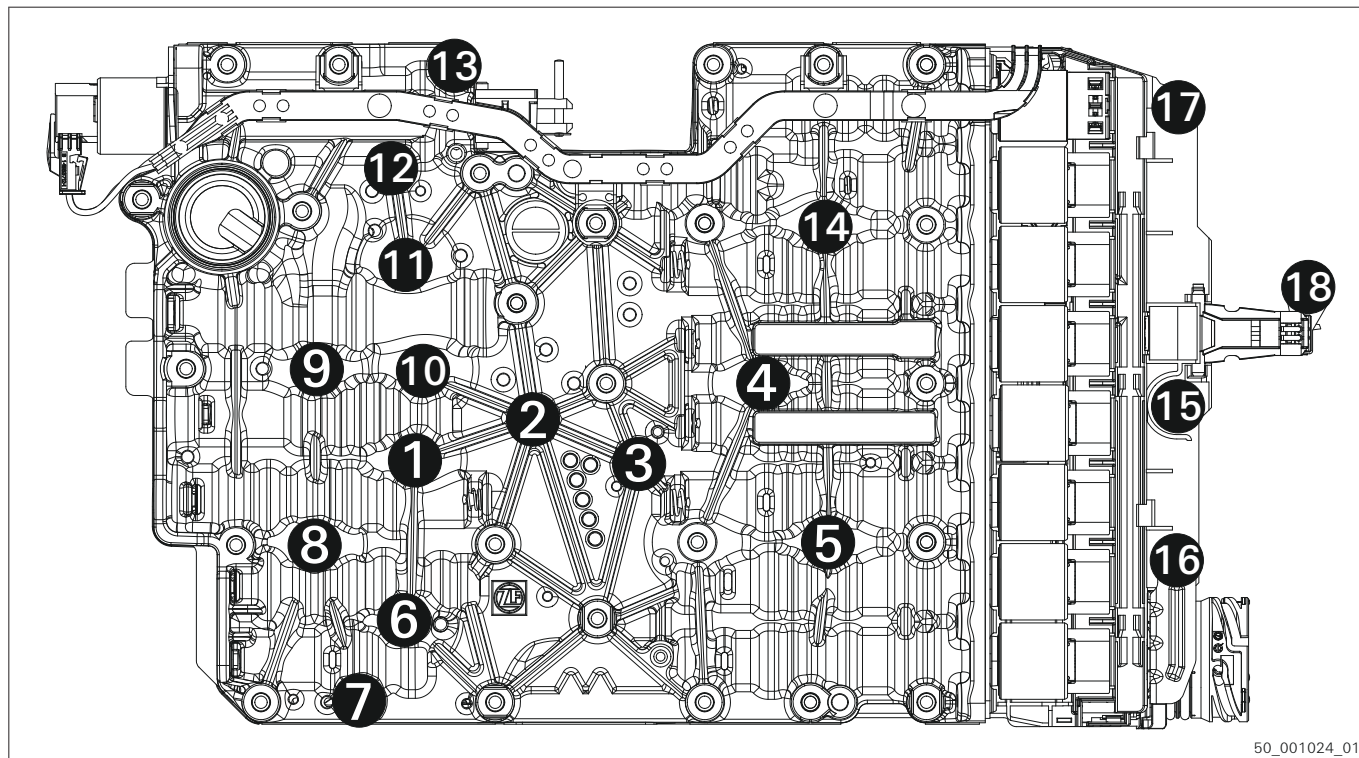

50_001024_01

Fig. 21



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
29/312

ZF Aftermarket Service Information

8.1.2 1087.700.079 - Mechatronik Standard, M/E, HIS

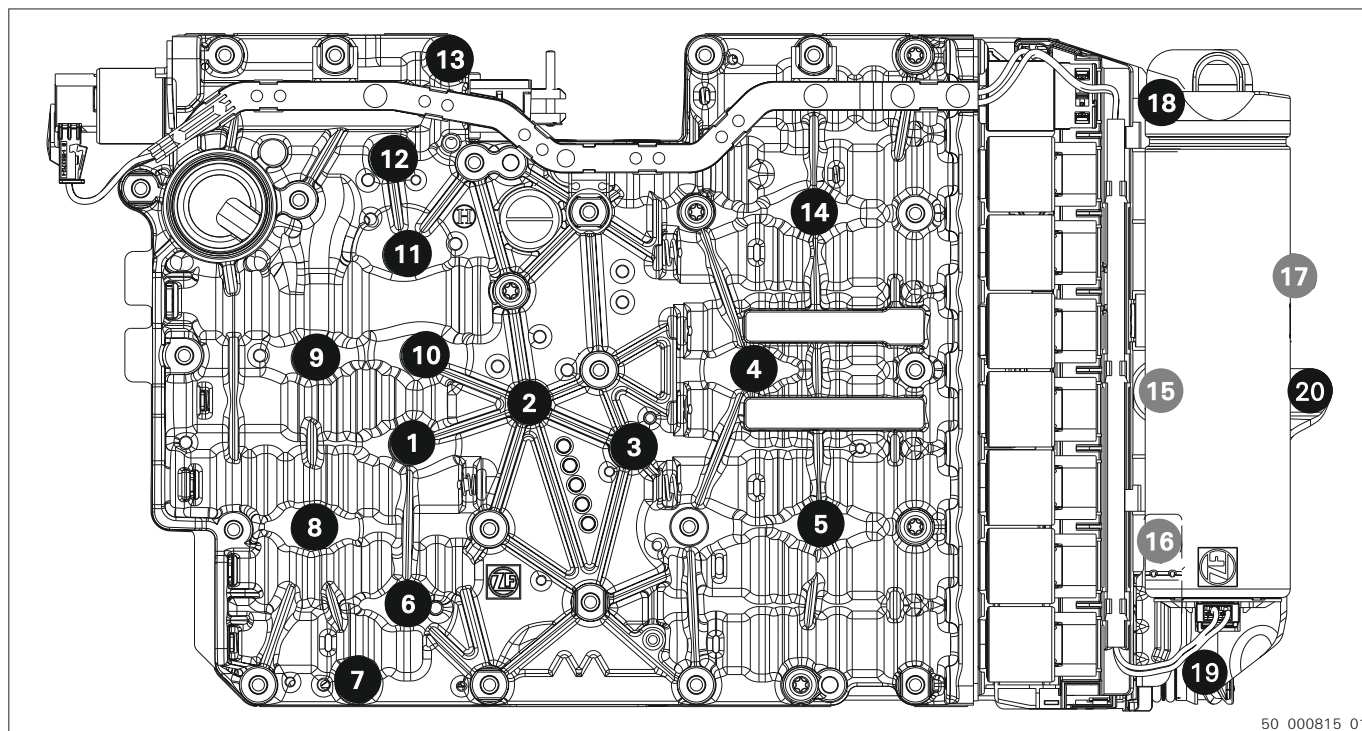


Fig. 22

ZF Aftermarket Service Information

8.1.3 1087.700.079 – all-wheel mechatronic, M/E

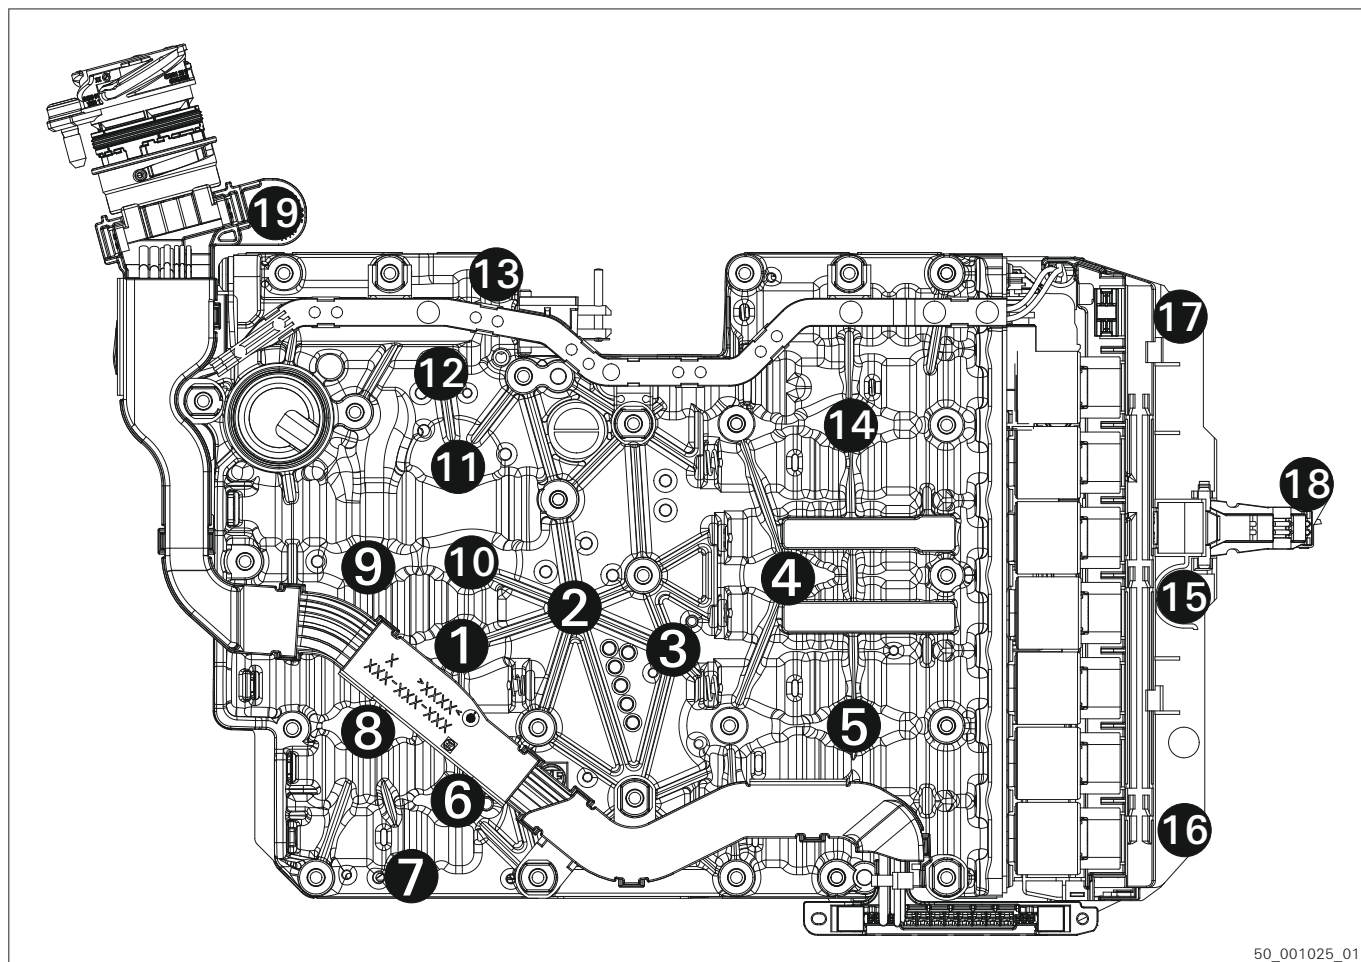


Fig. 23

ZF Aftermarket Service Information

8.1.4 1087.700.079 – all-wheel mechatronic, M/E, HIS

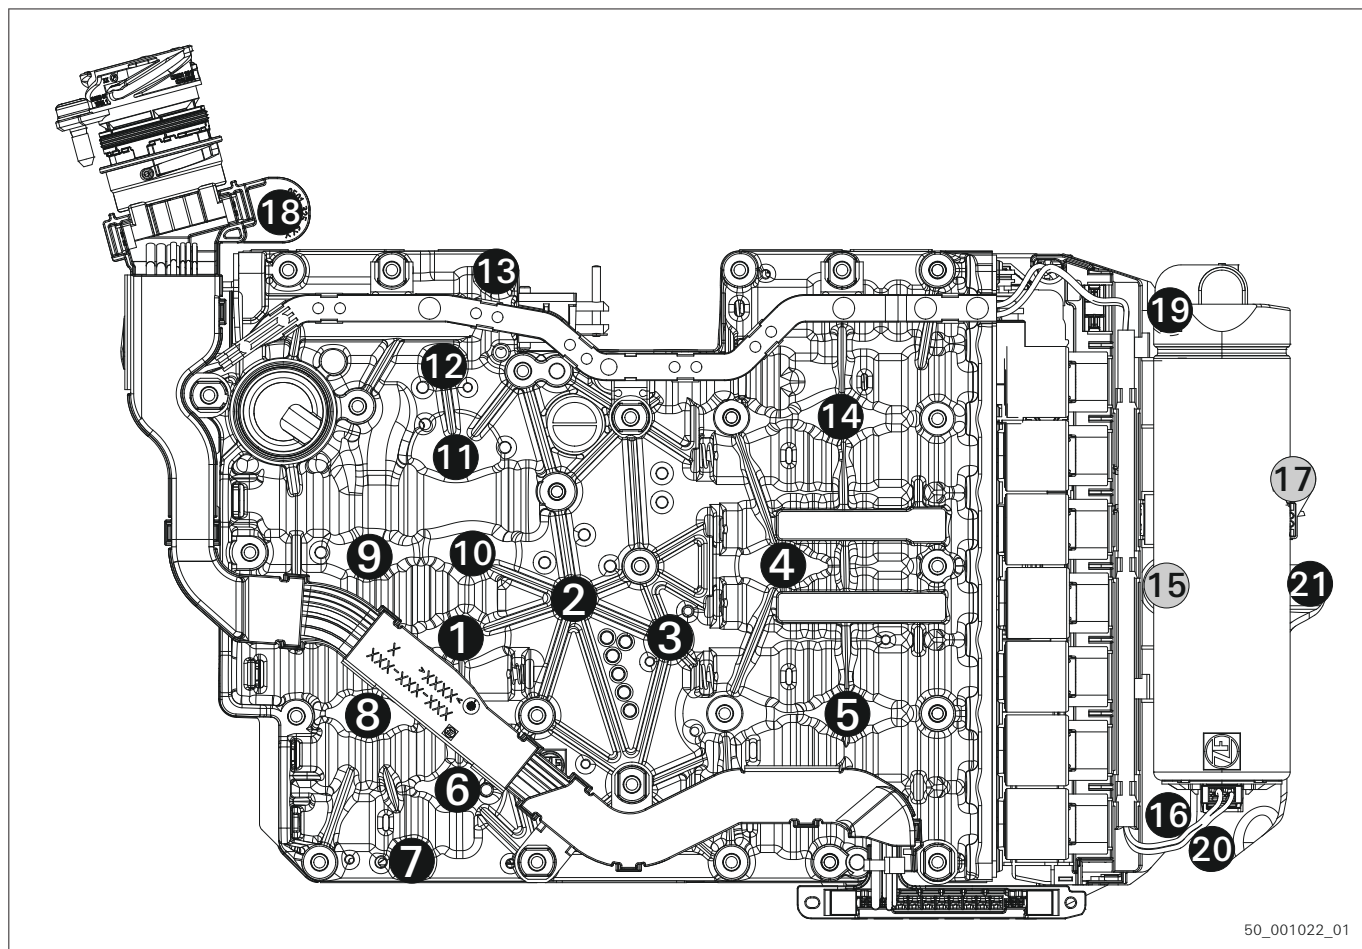


Fig. 24

ZF Aftermarket Service Information

8.1.5 1087.700.079 – standard mechatronic, M/E shifting hybrid


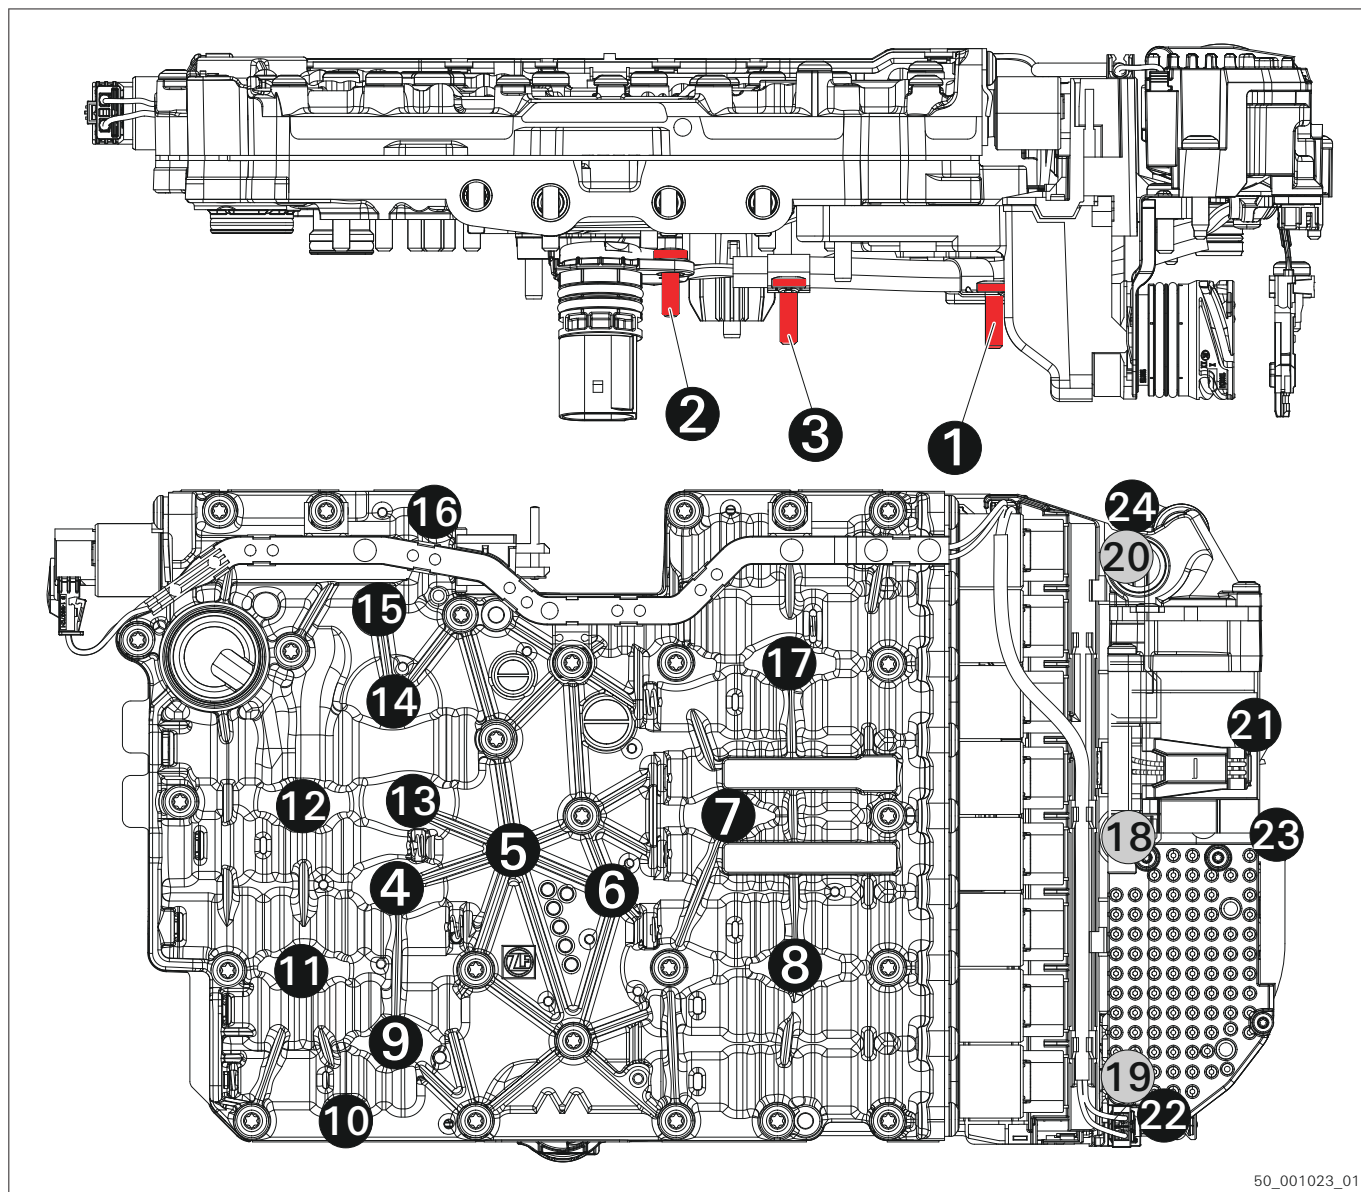


Fig. 25

8.1.6 1087.700.079 – all-wheel mechatronic, M/E shifting hybrid

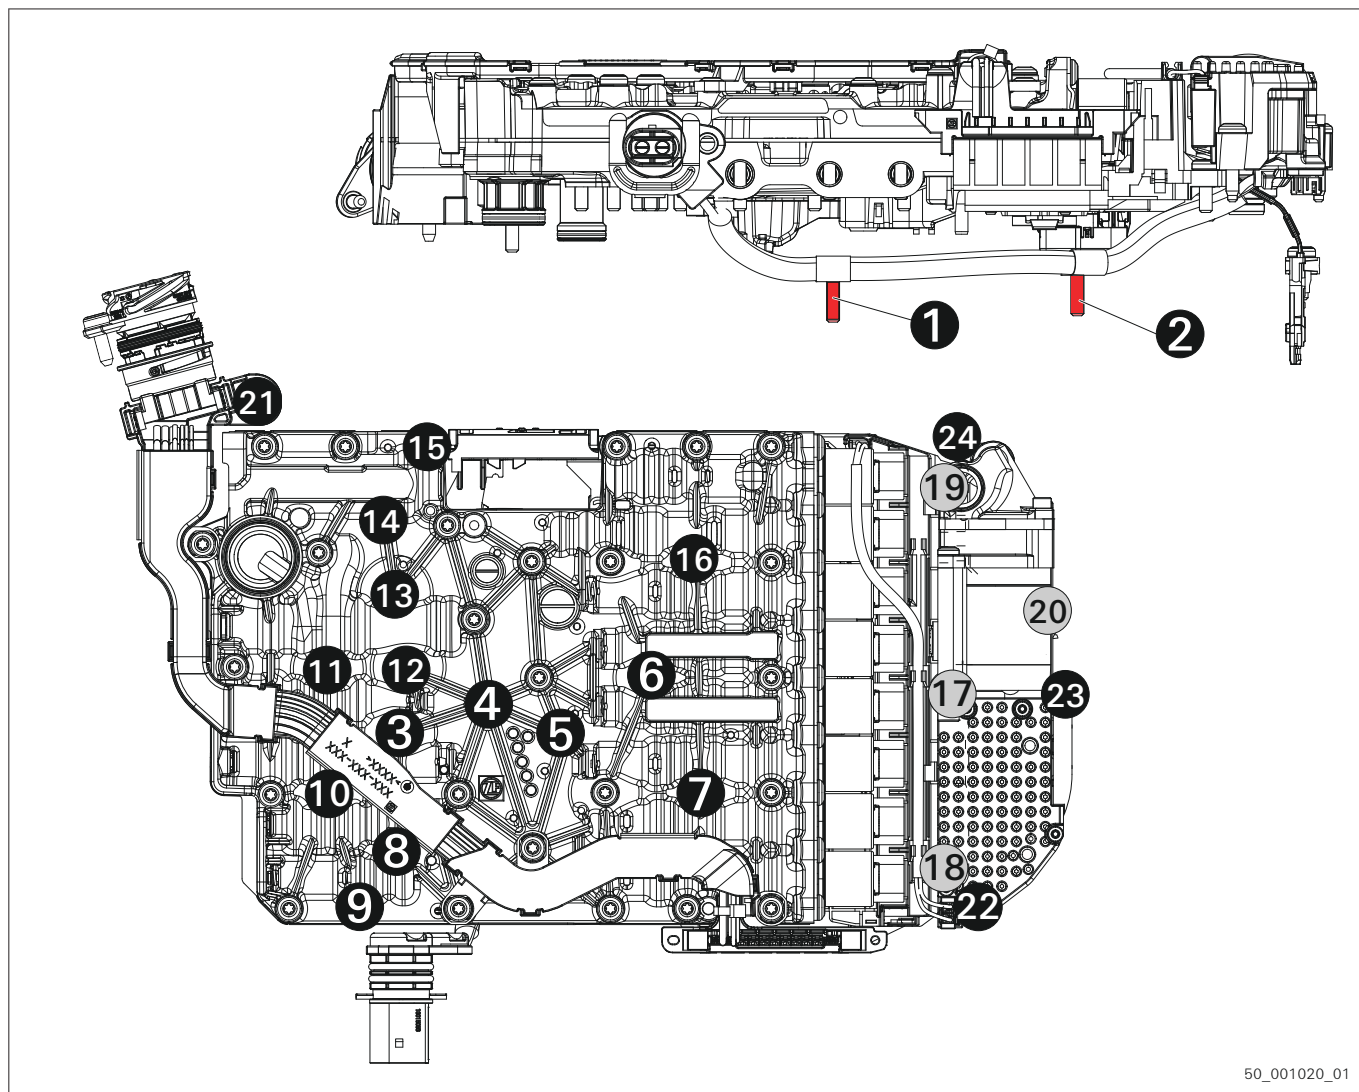


50_001020_01

Fig. 26

ZF Aftermarket Service Information

8.2 1102.700.xxx

8.2.1 1102.700.034 – standard mechatronic

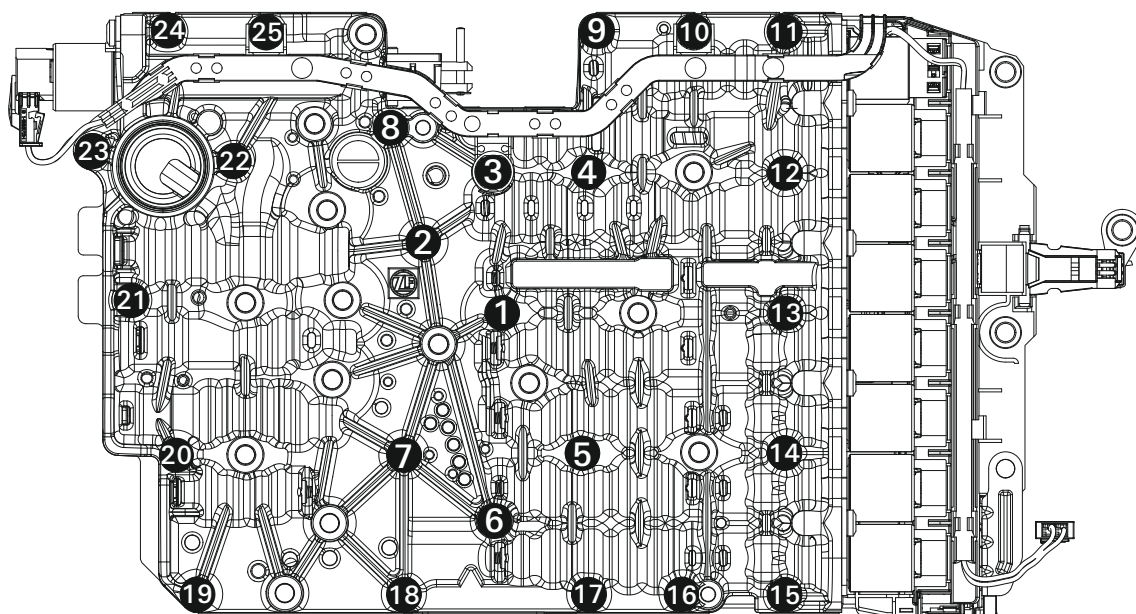

50_001366_01

Fig. 27 1102.700.034



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
35/312

8.2.2 1102.700.034 – all-wheel mechatronic

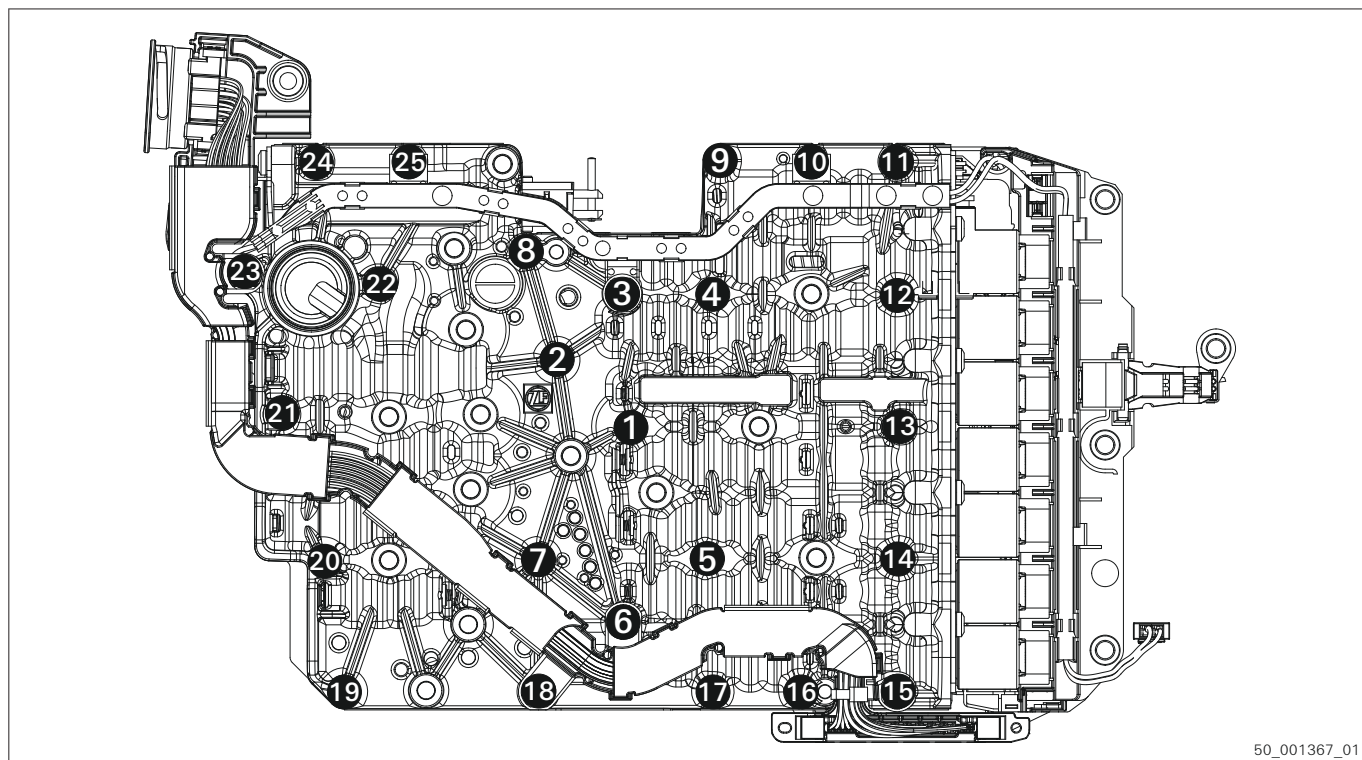


Fig. 28 1102.700.034

ZF Aftermarket Service Information

8.2.3 1102.700.035 – standard mechatronic, HIS

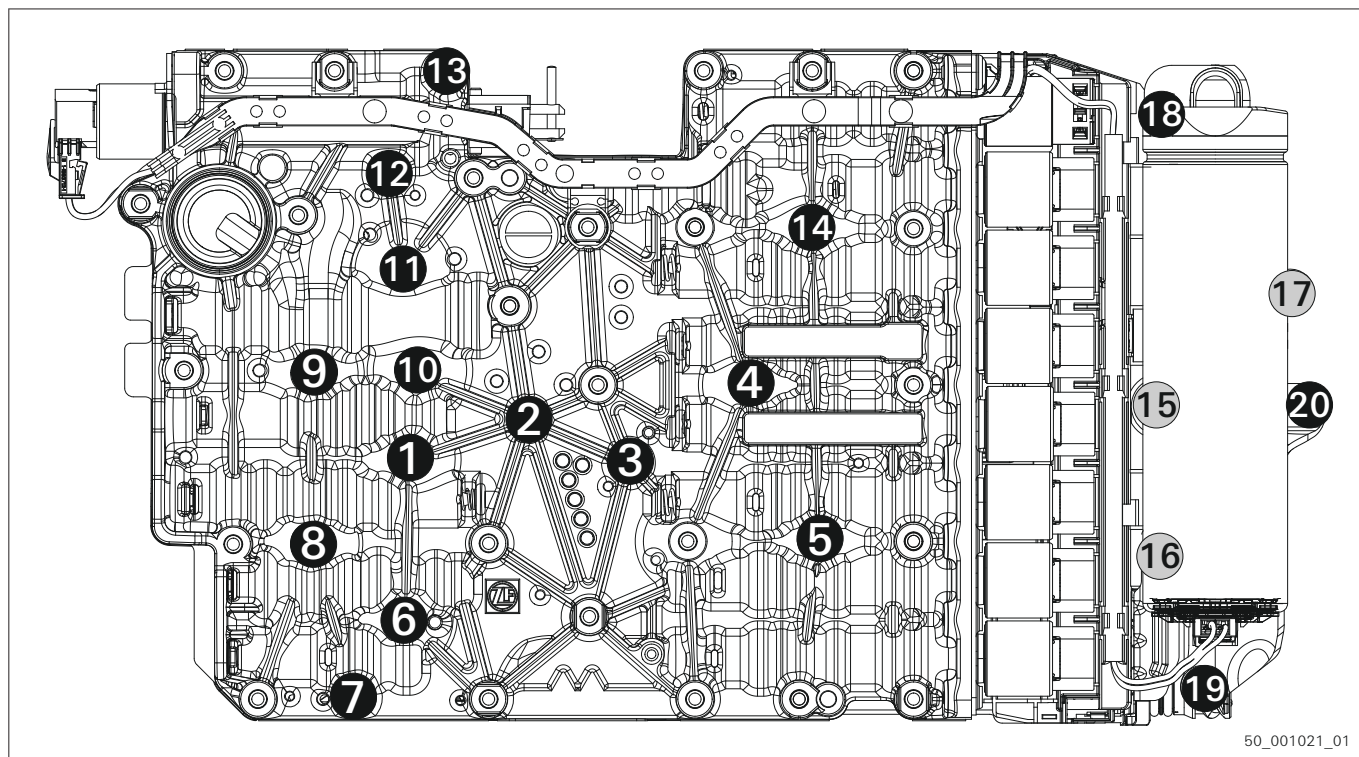


Fig. 29



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
37/312

ZF Aftermarket Service Information

8.2.4 1102.700.035 – all-wheel mechatronic, HIS


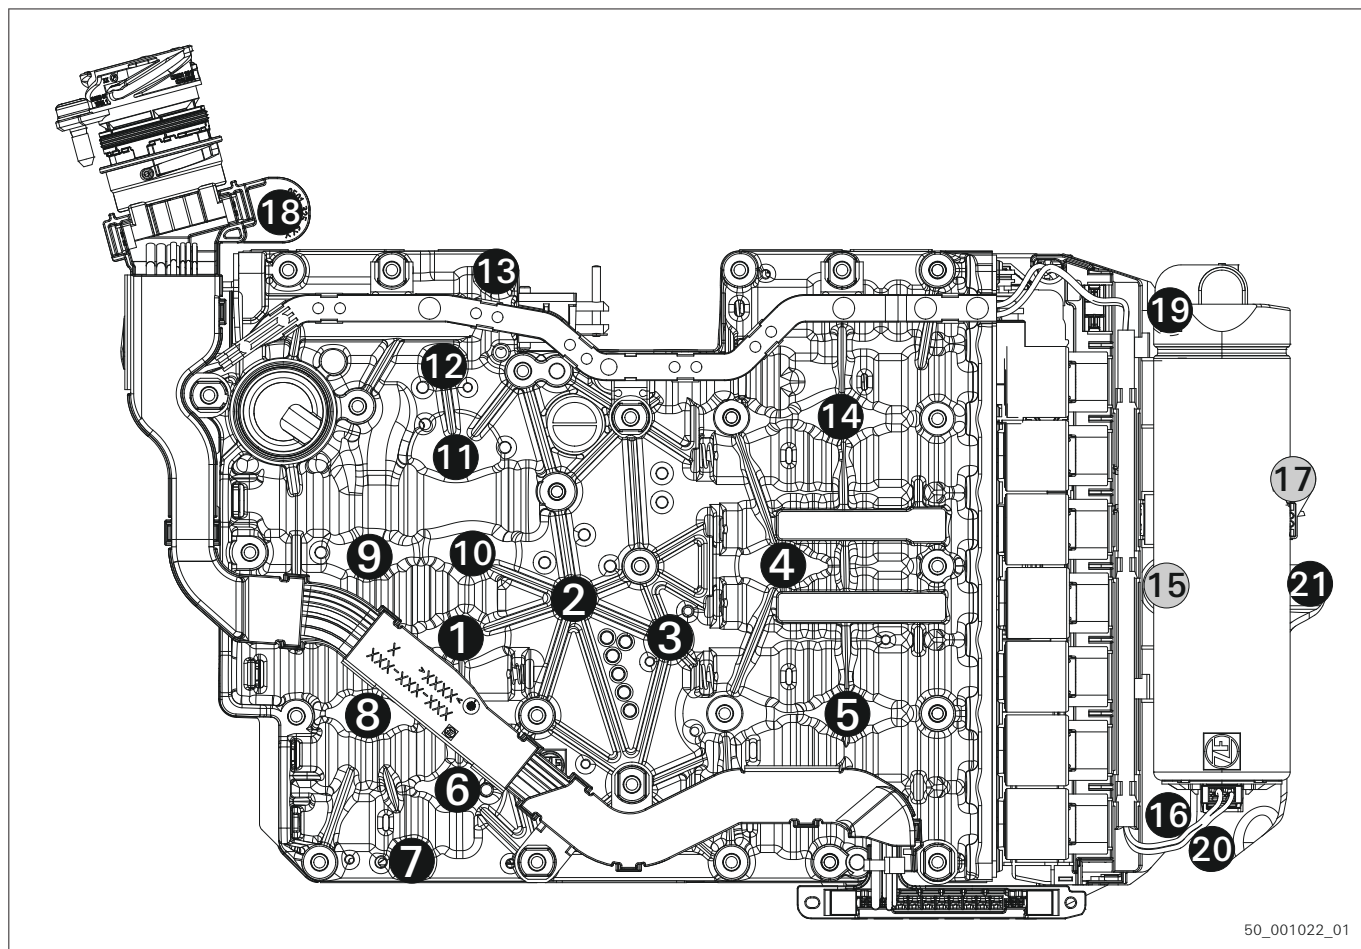


Fig. 30


8.2.5 1102.700.035 – Gen3 IEP standard

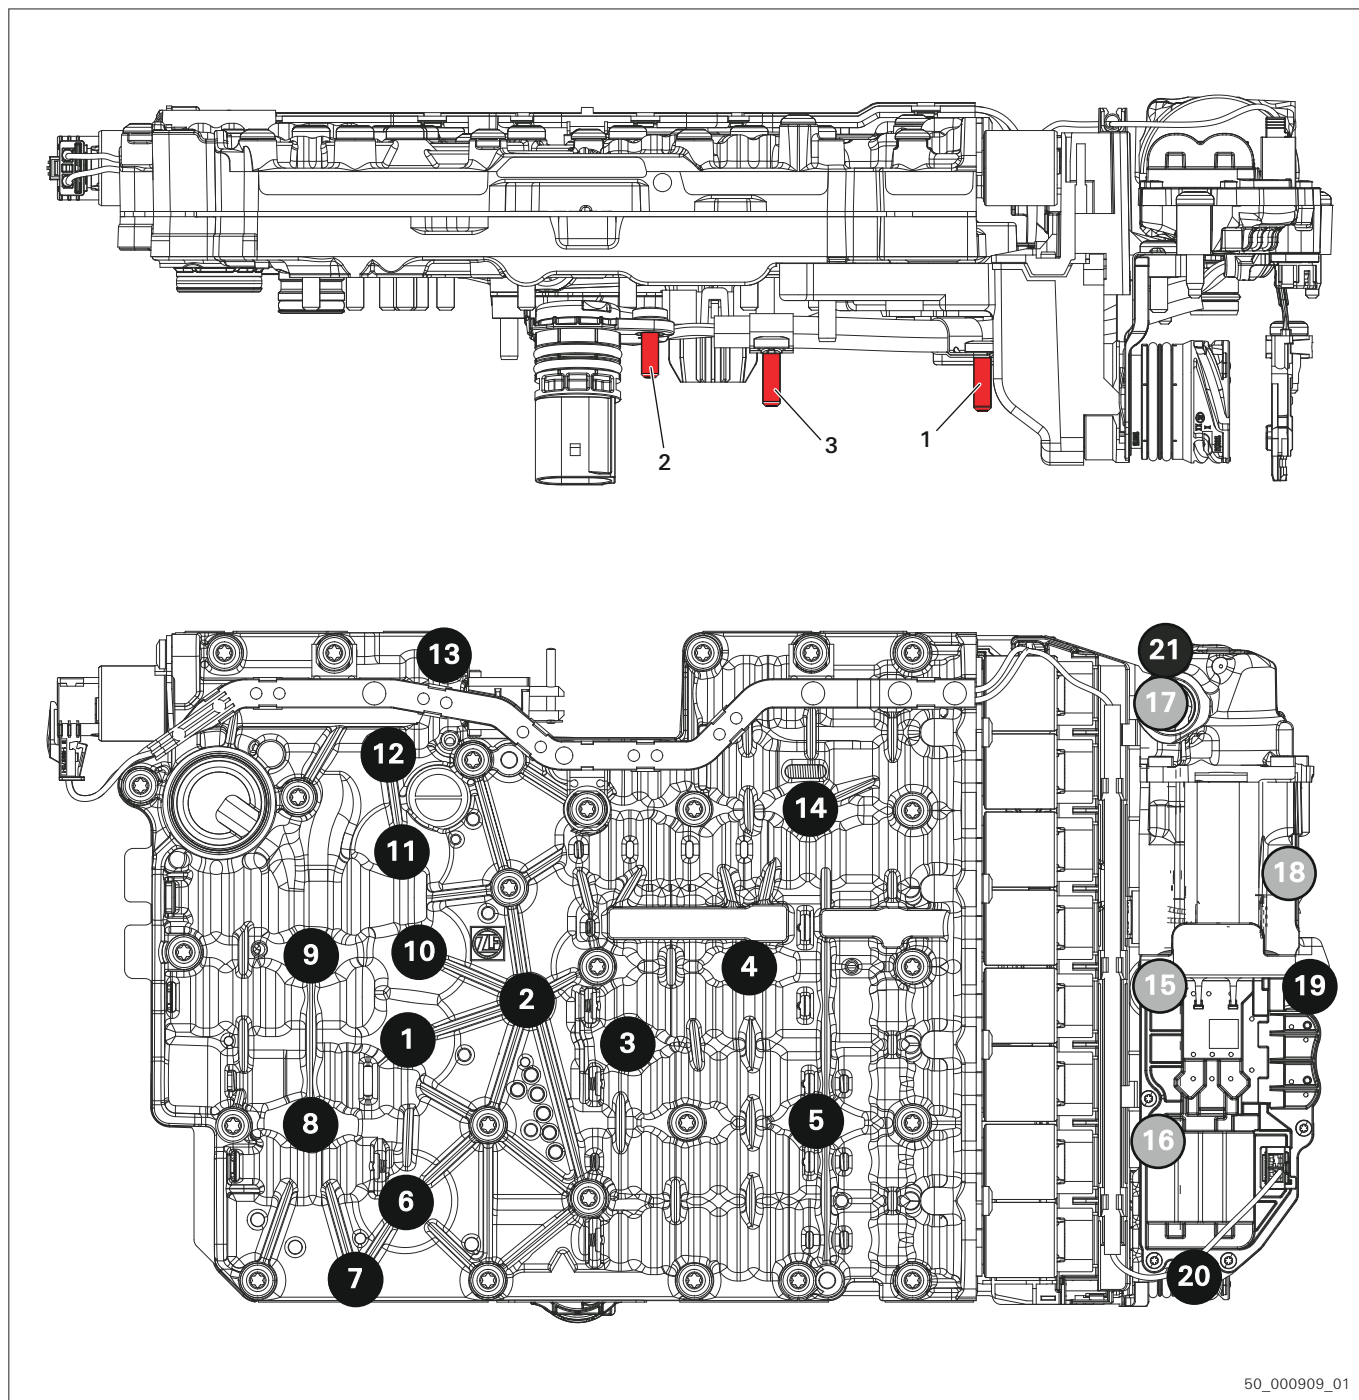

50_000909_01

Fig. 31 1087.700.136

8.2.6 1102.700.035 – all-wheel mechatronic, IEP

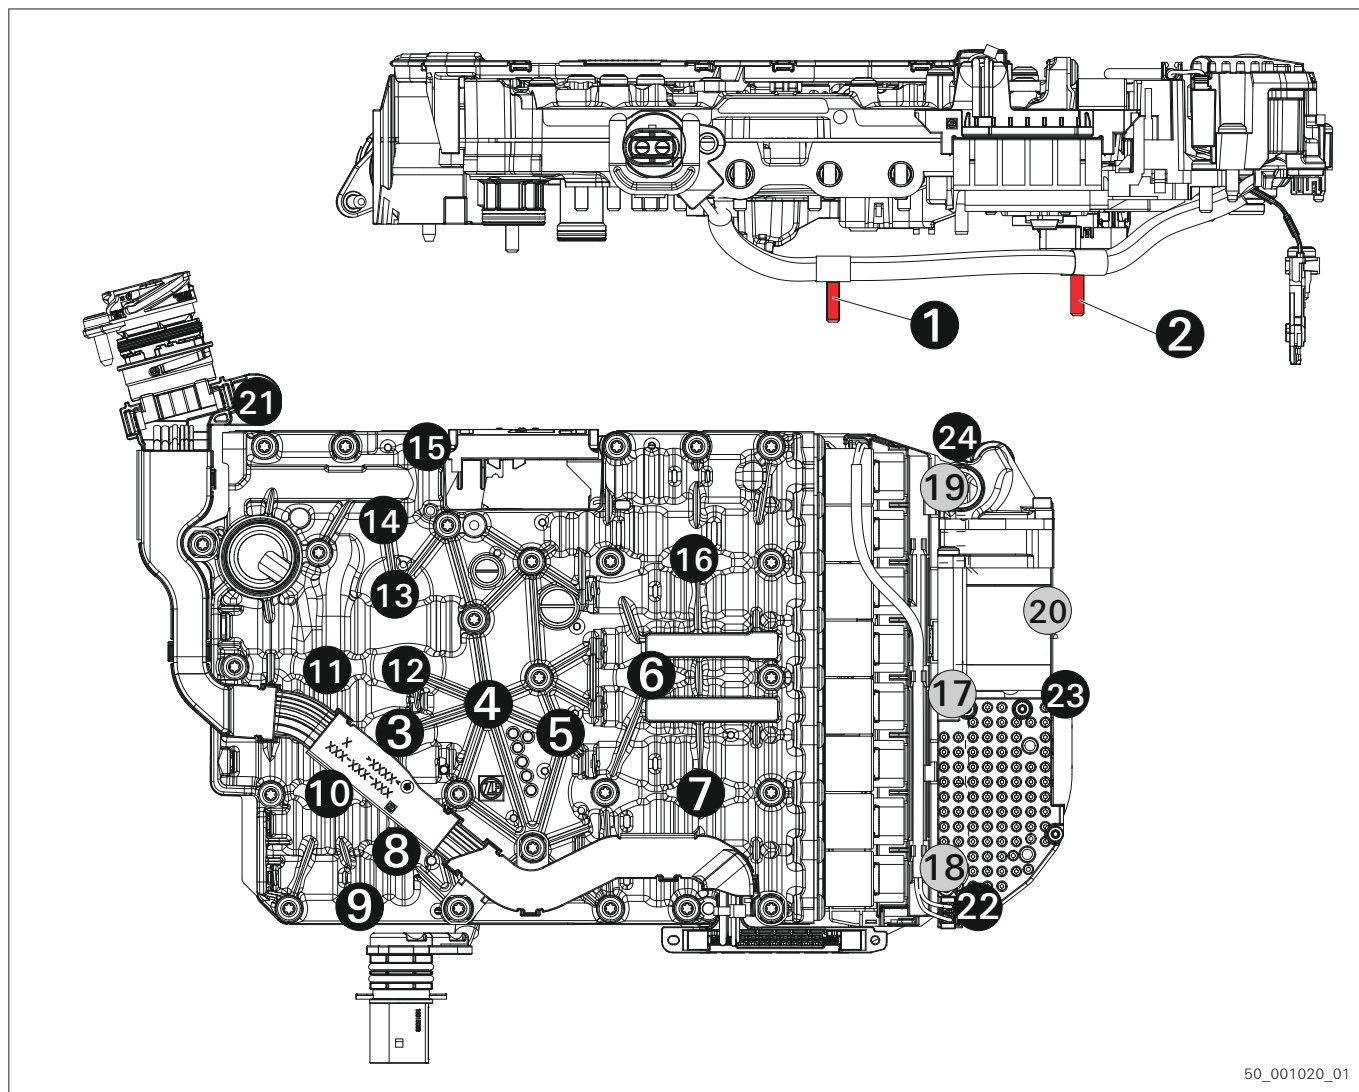

50_001020_01

Fig. 32

ZF Aftermarket Service Information

8.3 1124.700.xxx

8.3.1 1124.700.036 – mechatronic, variant with 6 valves

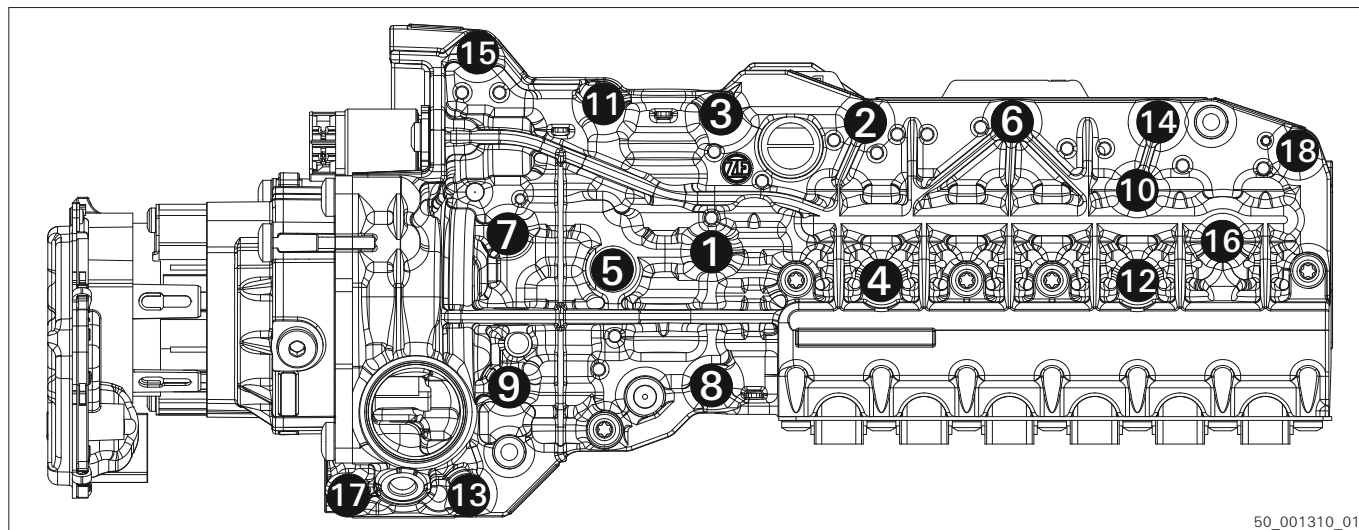


Fig. 33 1124.700.036

8.3.2 1124.700.036 – mechatronic, variant with 7 valves

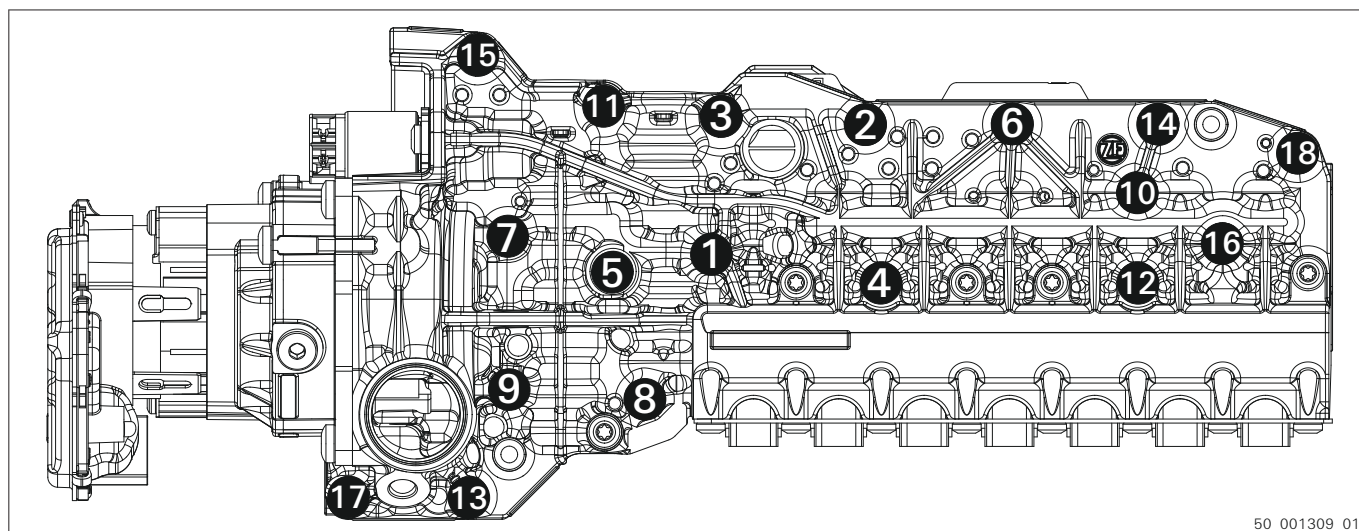


Fig. 34 1124.700.036



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
41/312

ZF Aftermarket Service Information

9 Oil Tank Cover Tightening Specifications

9.1 1116.700.130 – oil tank cover


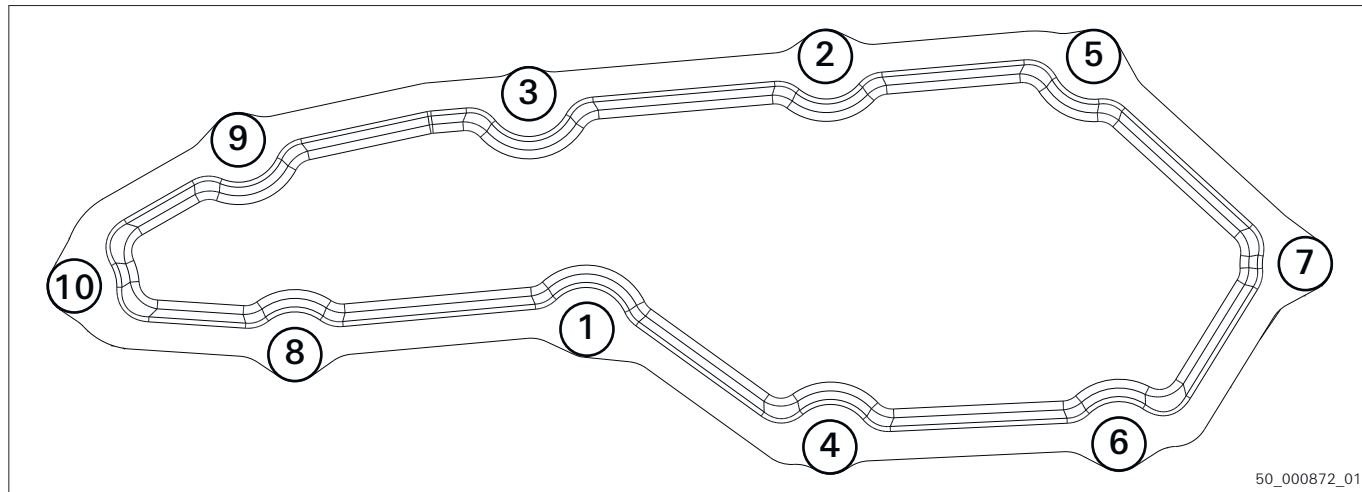


Fig. 35 1116.700.130

10 Oil Tray Tightening Specifications

10.1 1124.700.196 – oil tray

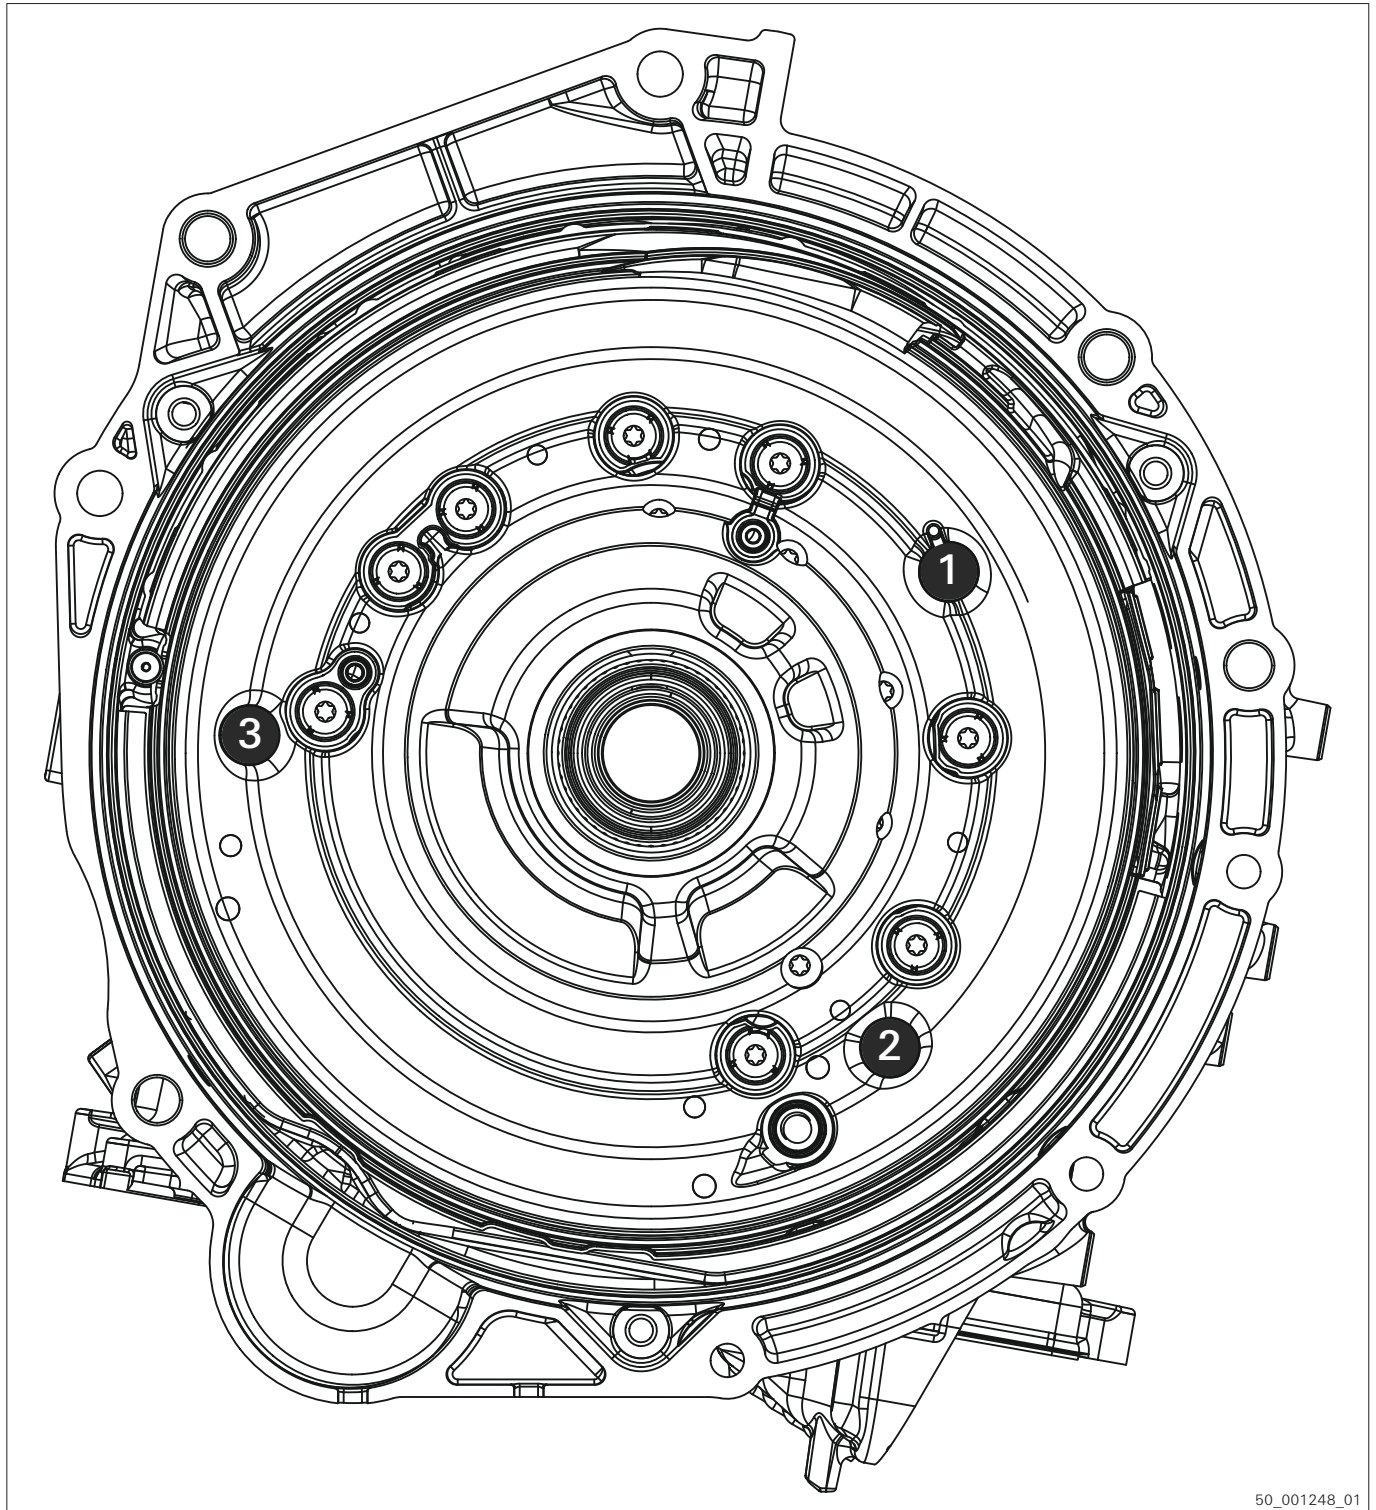

50_001248_01

Fig. 36 1124.700.196

11 Oil Pump Tightening Specifications

11.1 1087.700.732 – oil pump

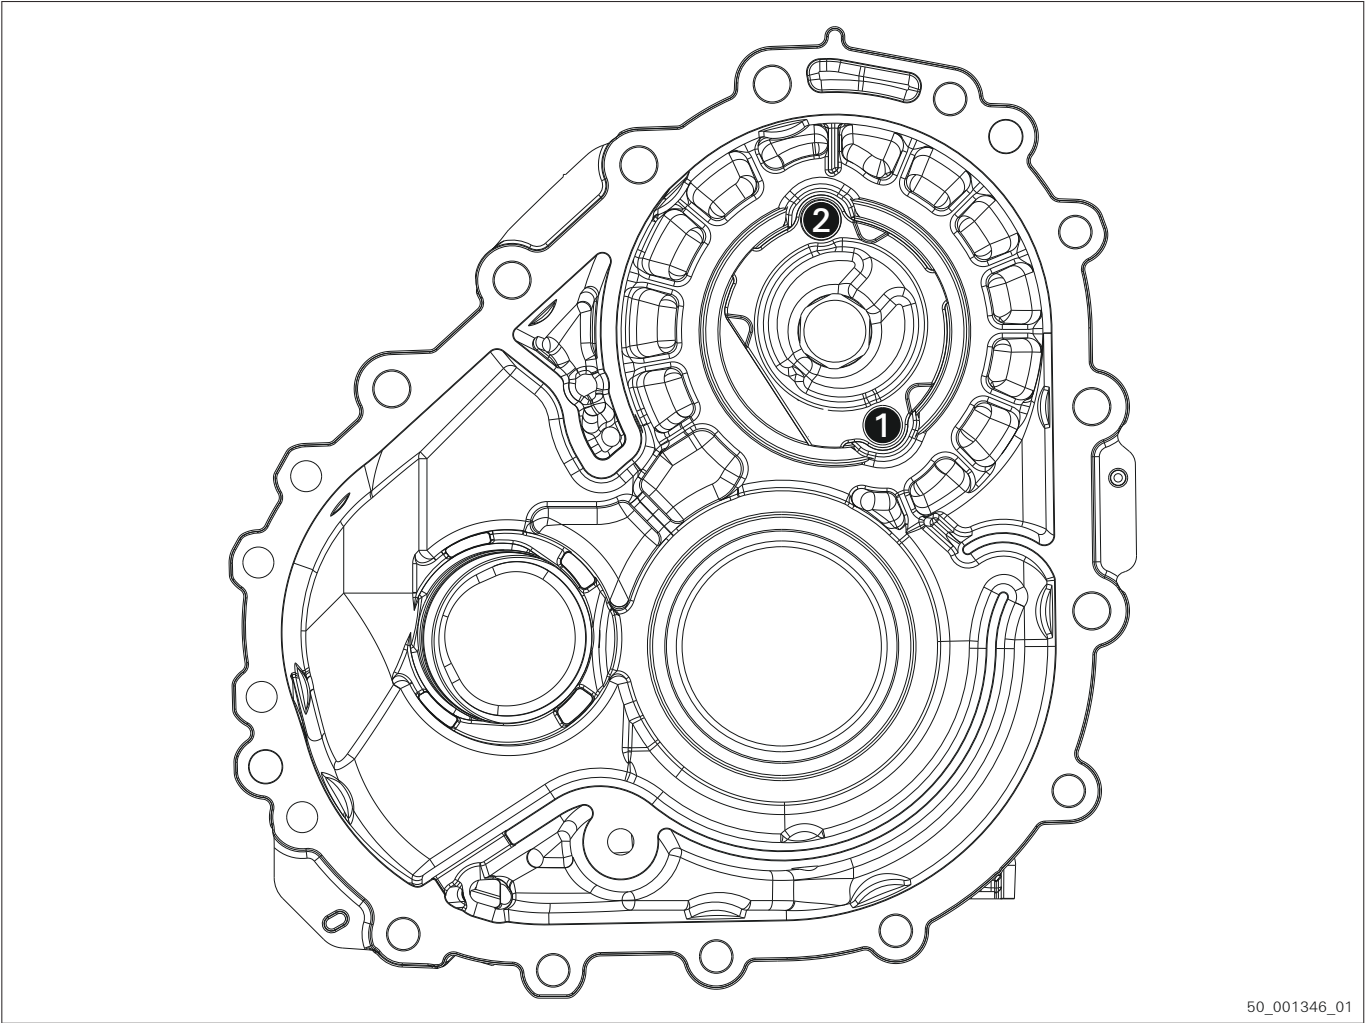


Fig. 37 1087.700.732

Sequence	Screw position	Torque
1	1	1 Nm
2	1-2	Torque according to the parts list entry

Tab. 16 Tightening sequence

12 Oil Baffle Plate Tightening Specifications

12.1 1103.700.132 – oil baffle plate

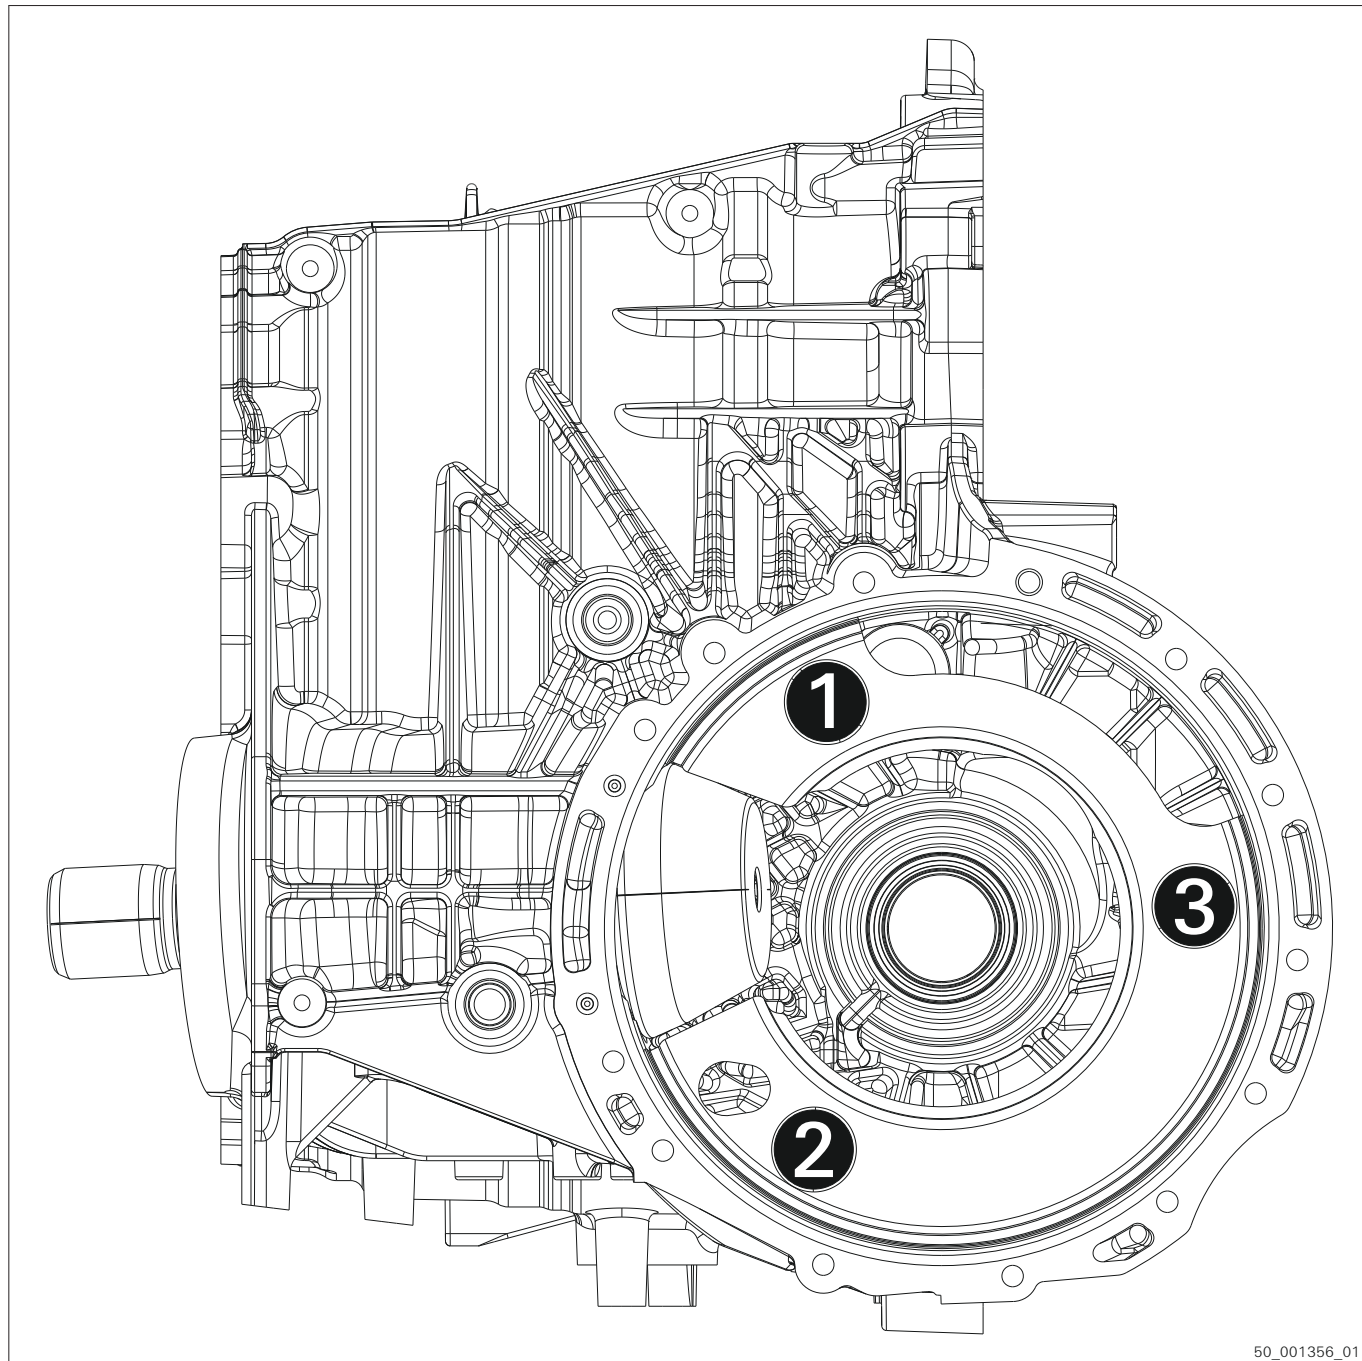


Fig. 38 1103.700.132

ZF Aftermarket Service Information

13 Oil Supply Tightening Specifications

13.1 1087.700.xxx

13.1.1 1087.700.163 – 8HP65APH/AXPH, 8HP66APH, 8P70H, 8HP70/X/H, 8HP75/X, 8HP76/X, 8HP90, 8HP95/X/AXPH

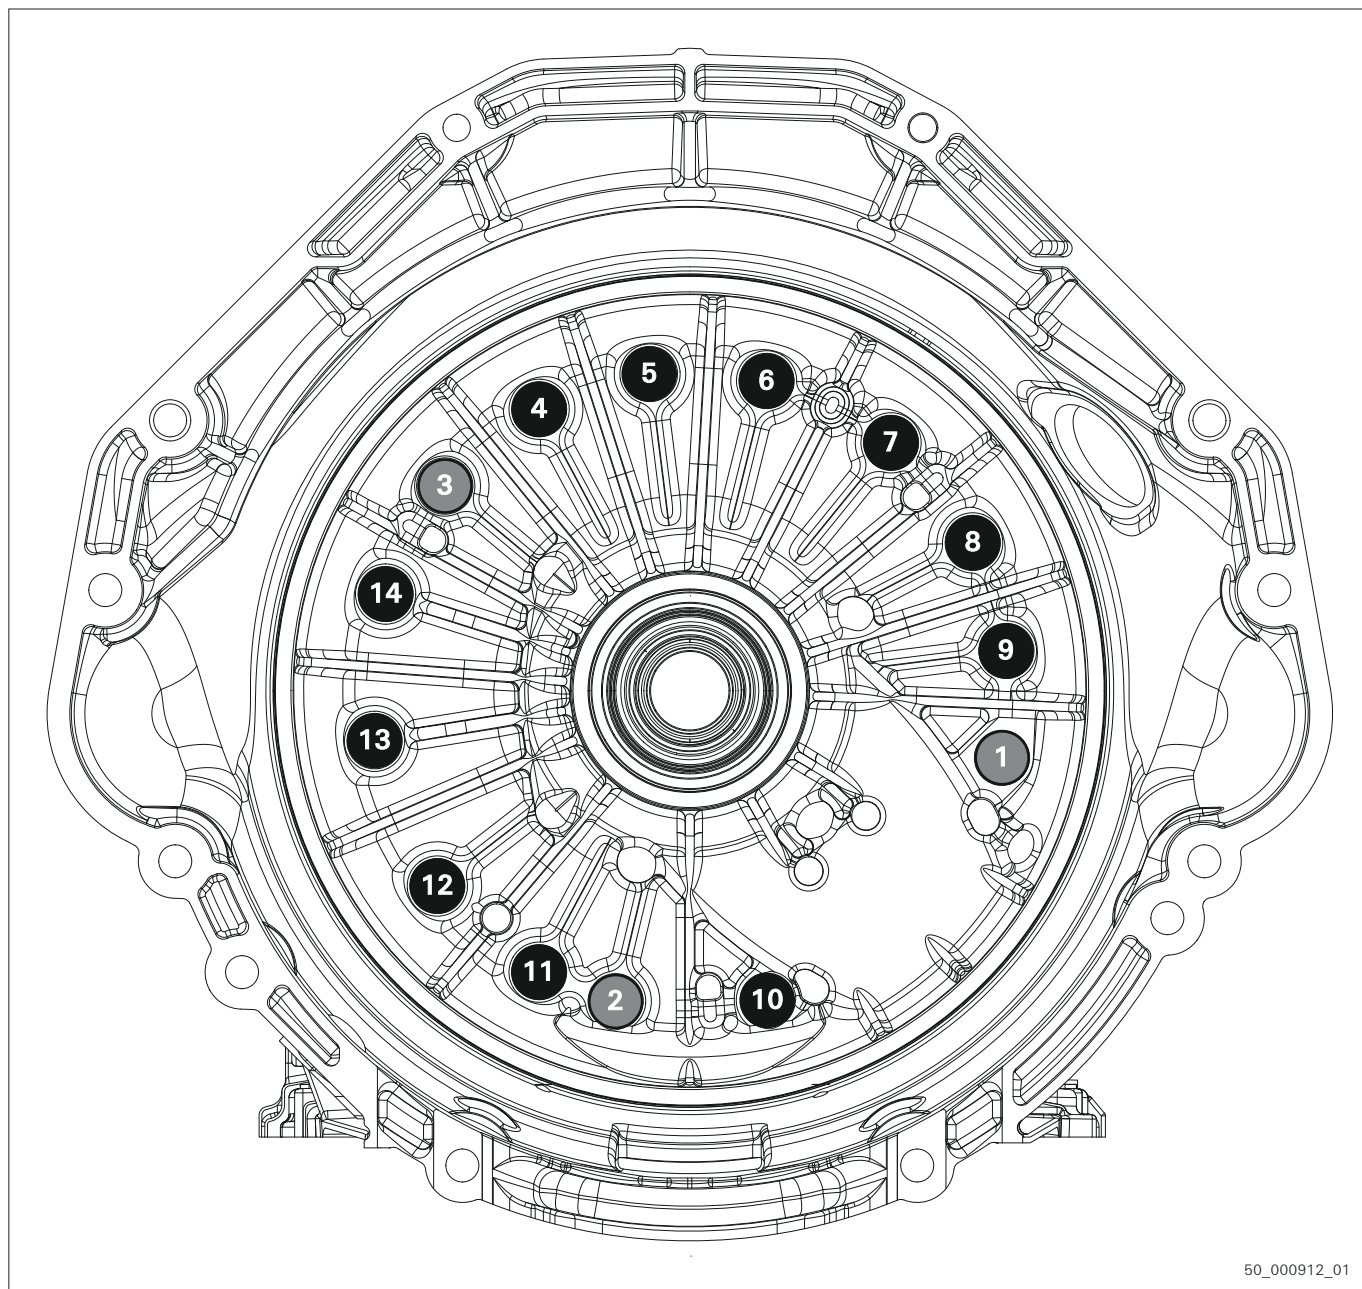


Fig. 39 1087.700.163



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
46/312

ZF Aftermarket

Service Information

Sequence	Screw position	Torque
1	1-3	6 Nm (± 1 Nm)
2	3-9	Torque according to the parts list entry
3	1	Torque according to the parts list entry
4	10	Torque according to the parts list entry
5	2	Torque according to the parts list entry
6	11-14	Torque according to the parts list entry

Tab. 17 1087.700.163 – 8HP65APH/AXPH, 8HP66APH, 8P70H, 8HP70/X/H, 8HP75/X, 8HP76/X, 8HP90, 8HP95/X/AXPH



ZF Aftermarket Service Information

13.1.2 1087.700.163 – 8HP45/X, 8HP50/X, 8HP51/X

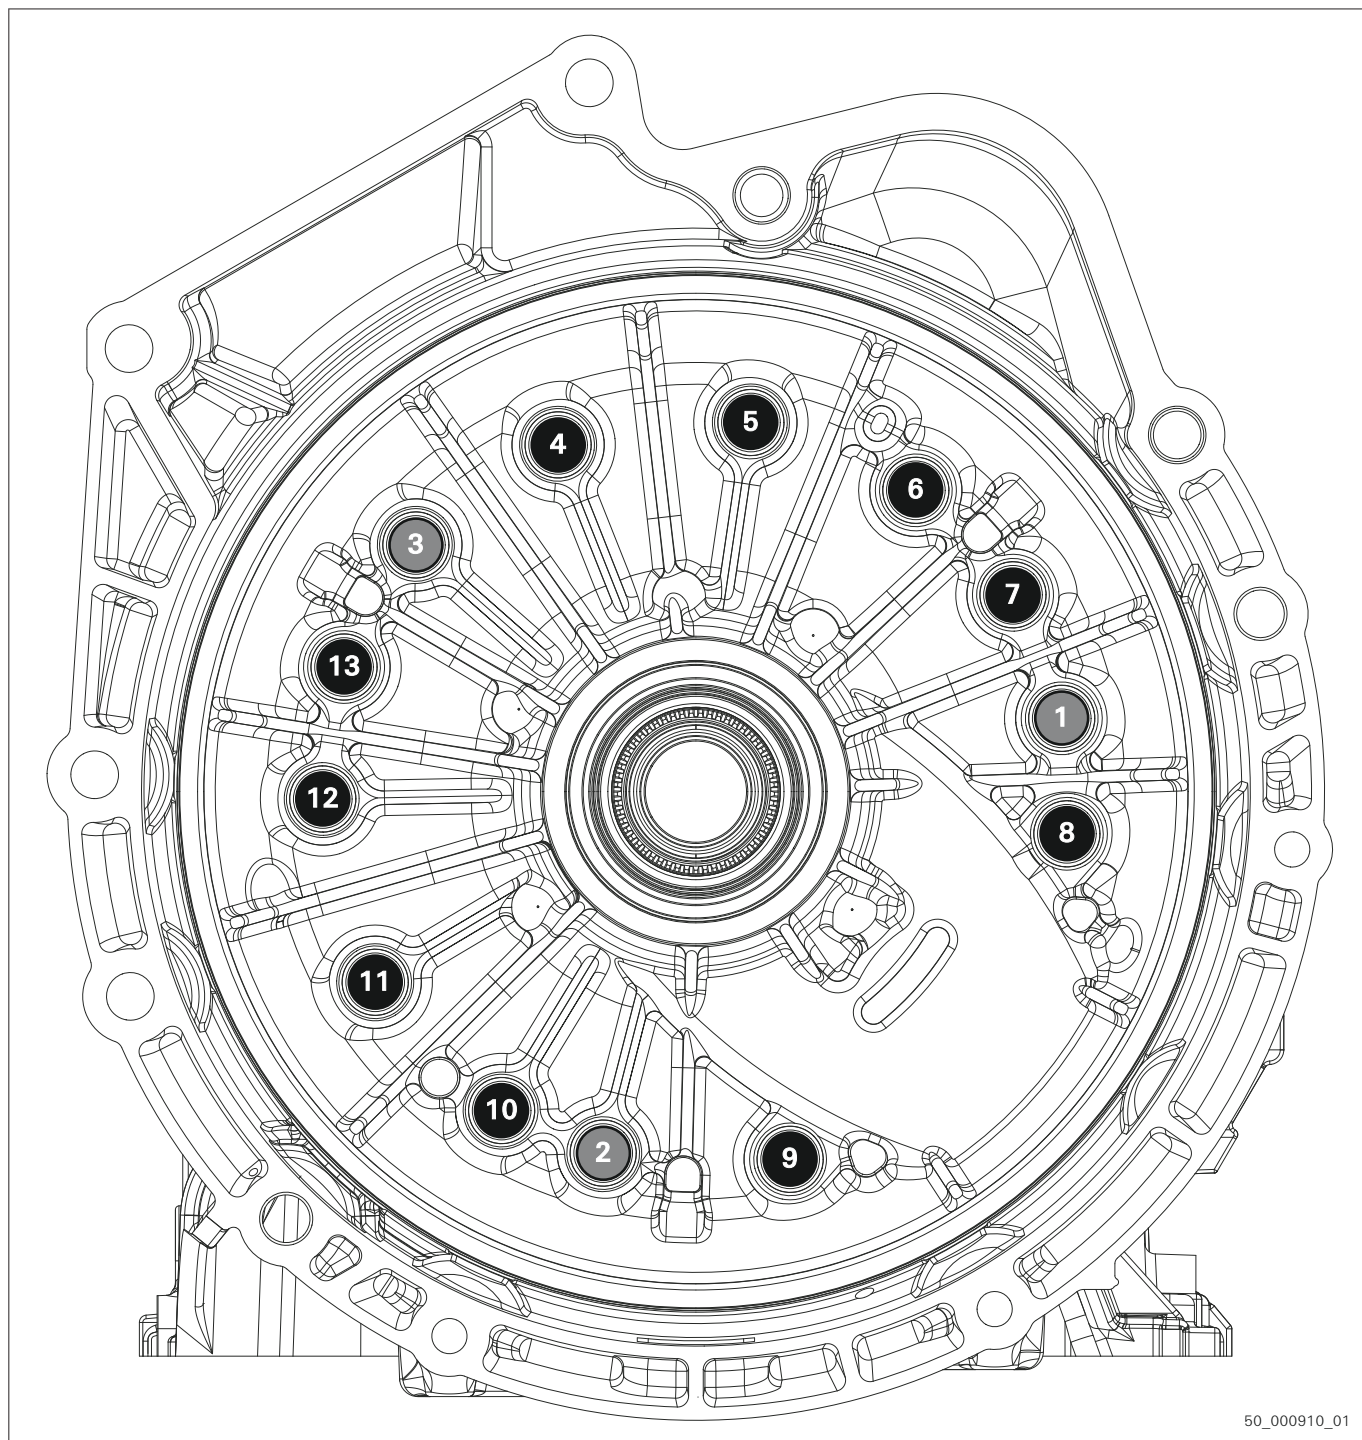


Fig. 40 1087.700.163



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c


18.03.2026
48/312

ZF Aftermarket Service Information

Sequence	Screw position	Torque
1	1-3	6 Nm (± 1 Nm)
2	3-7	Torque according to the parts list entry
3	1	Torque according to the parts list entry
4	8-9	Torque according to the parts list entry
5	2	Torque according to the parts list entry
6	10-13	Torque according to the parts list entry

Tab. 18 1087.700.163 – 8HP45/X, 8HP50/X, 8HP51/X

13.2 1090.700.133 – oil supply

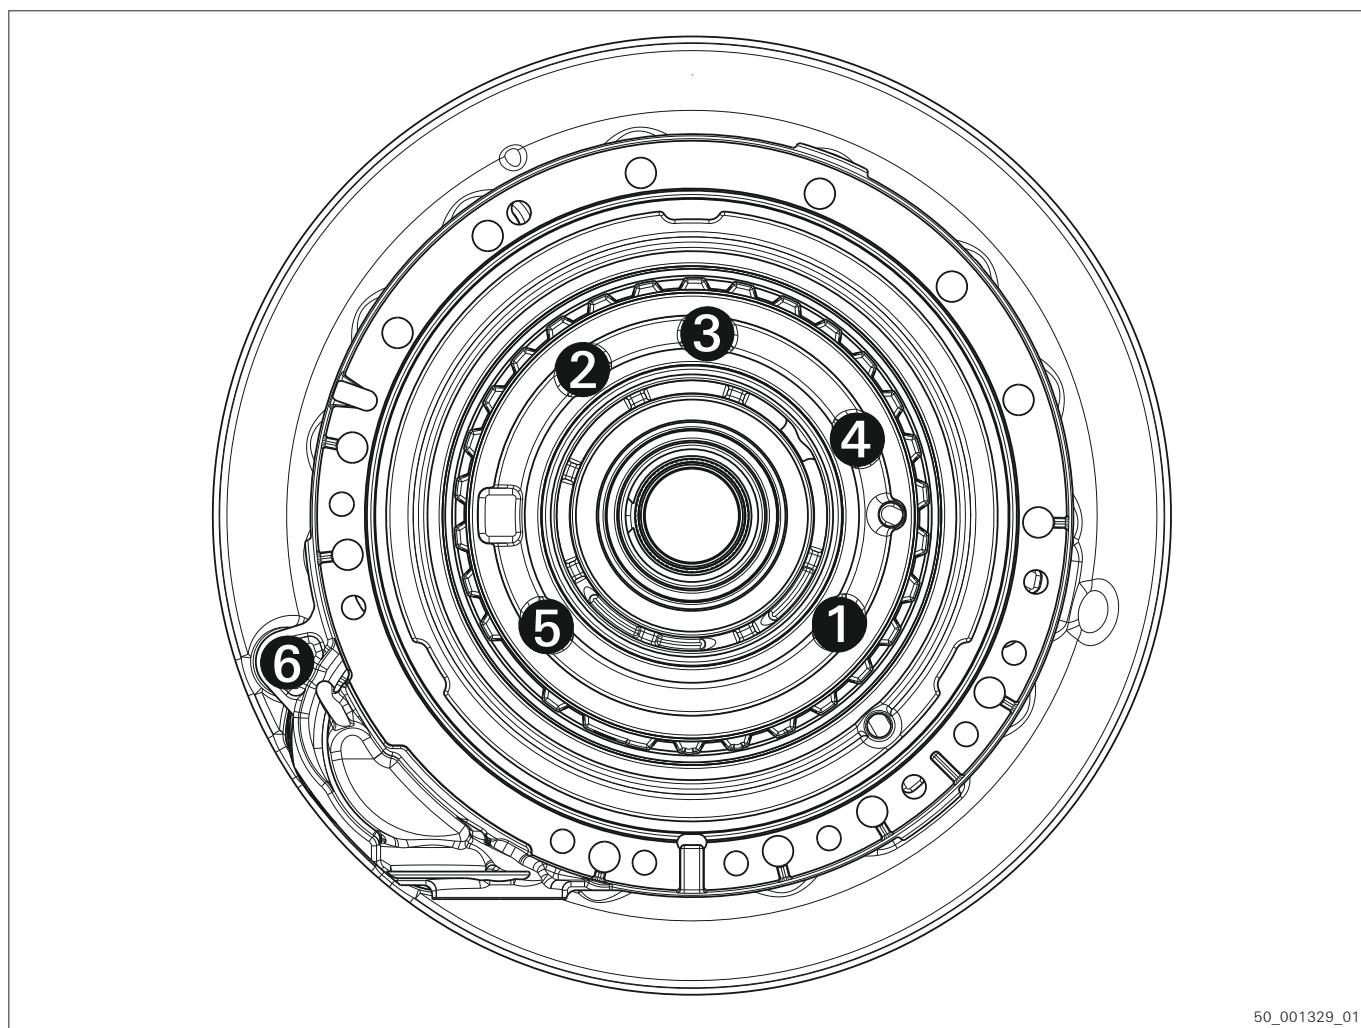

50_001329_01

Fig. 41 1090.700.133



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
49/312




Fig. 42 1124.700.024

ZF Aftermarket Service Information

Sequence	Screw position	Torque
1	7, 15	6 Nm (± 1 Nm)
2	1-15	Torque according to the parts list entry

Tab. 19 Tightening sequence




ZF Aftermarket Service Information

14 Oil Pan Tightening Specifications

14.1 1087.700.xxx

14.1.1 1087.700.136 – oil pan

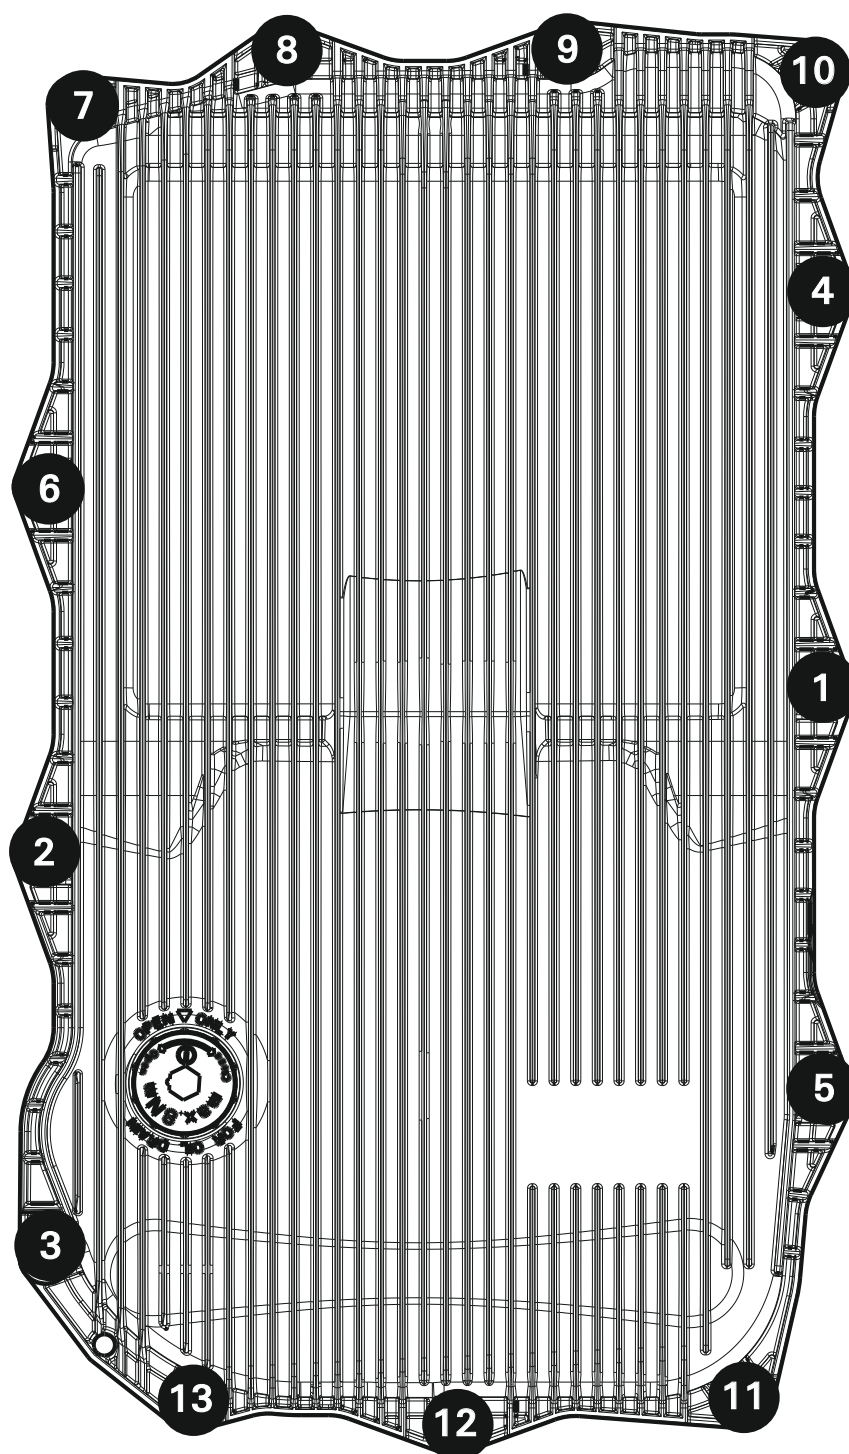

50_000808_01

Fig. 43 1087.700.136



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken


Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
52/312

ZF Aftermarket Service Information

14.1.2 1087.700.272 – oil pan

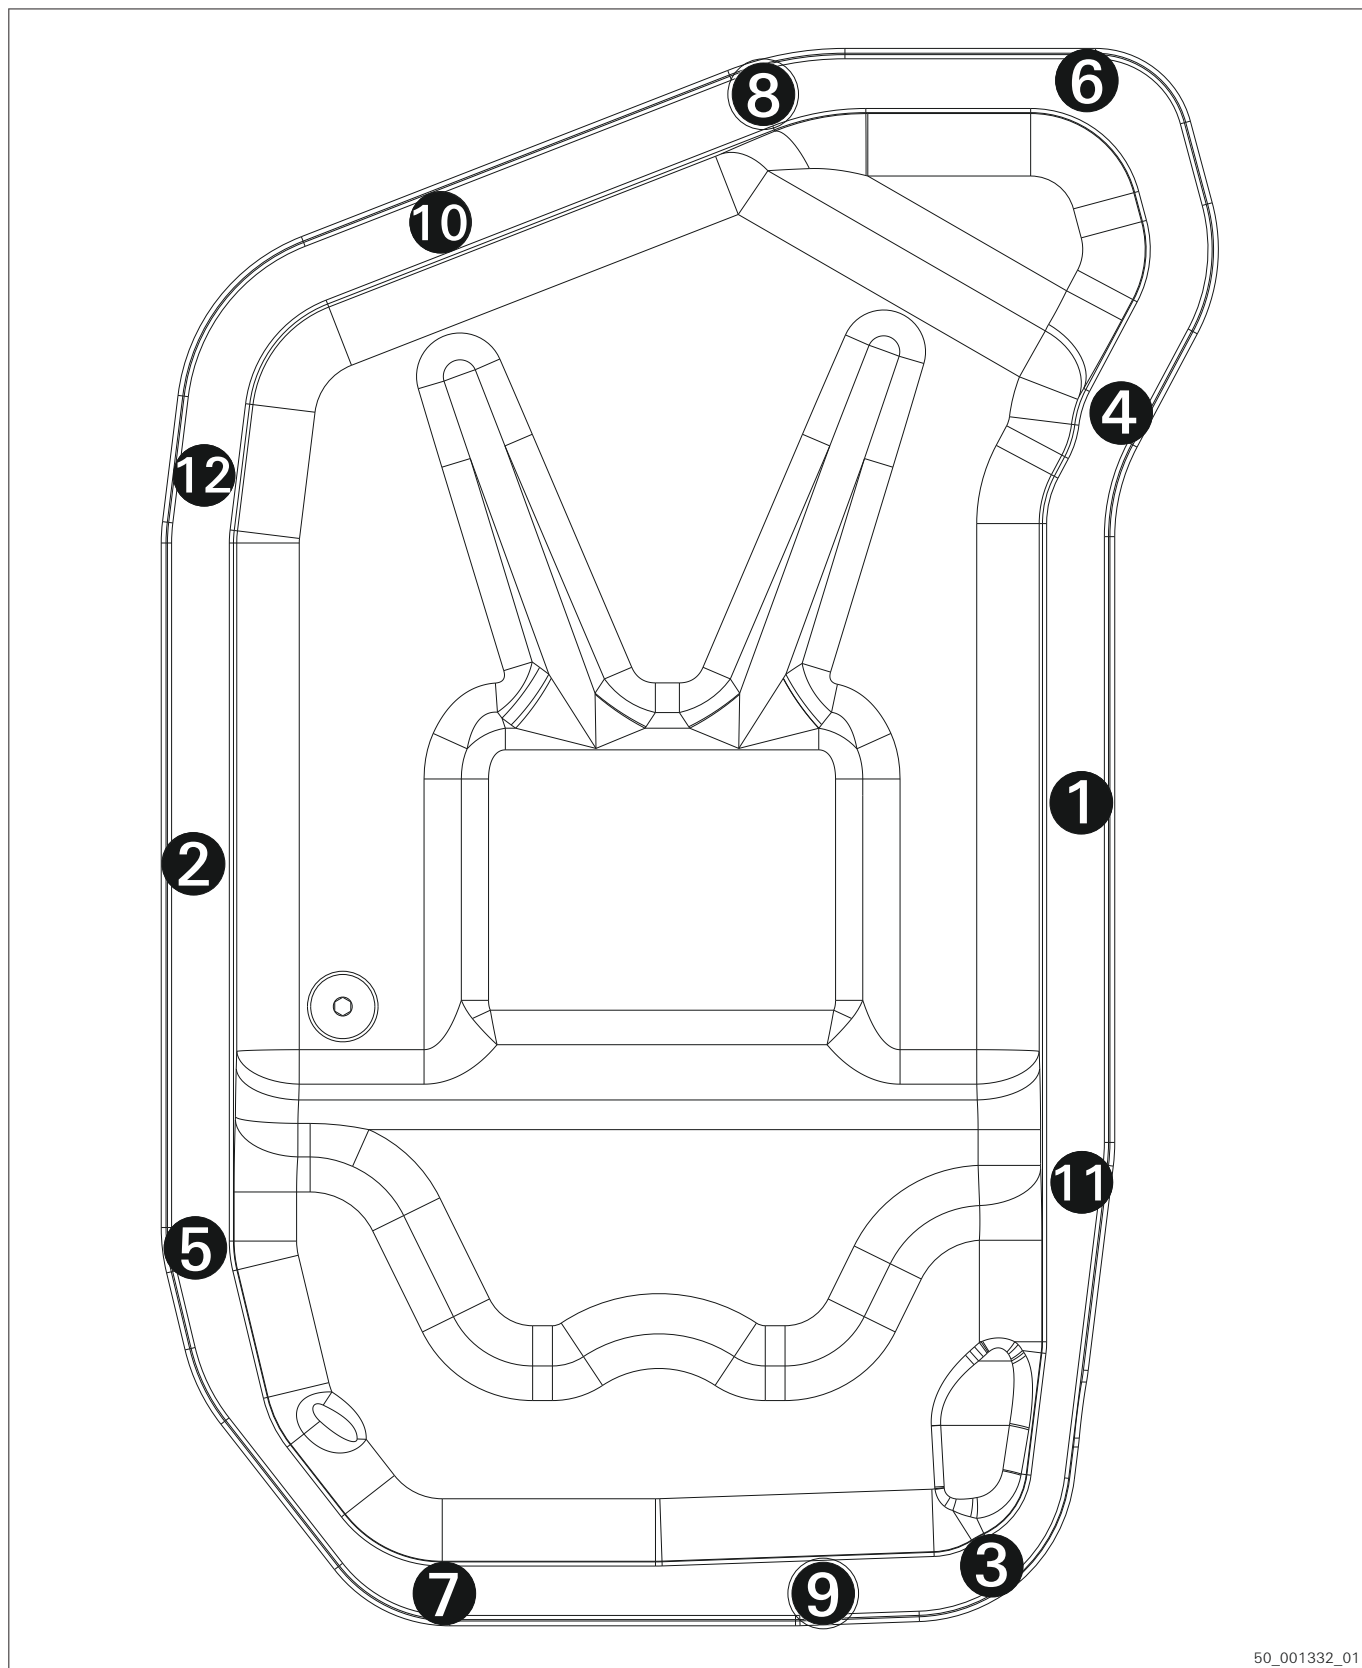

50_001332_01

Fig. 44 1087.700.272



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
53/312

ZF Aftermarket Service Information

Sequence	Screw position	Torque
1	8, 9	Insert centering pins
2	1-7	Torque according to the parts list entry
3	8, 9	Remove centering pins
4	8-12	Torque according to the parts list entry

Tab. 20 Tightening sequence



14.2 1090.700.035 – oil pan


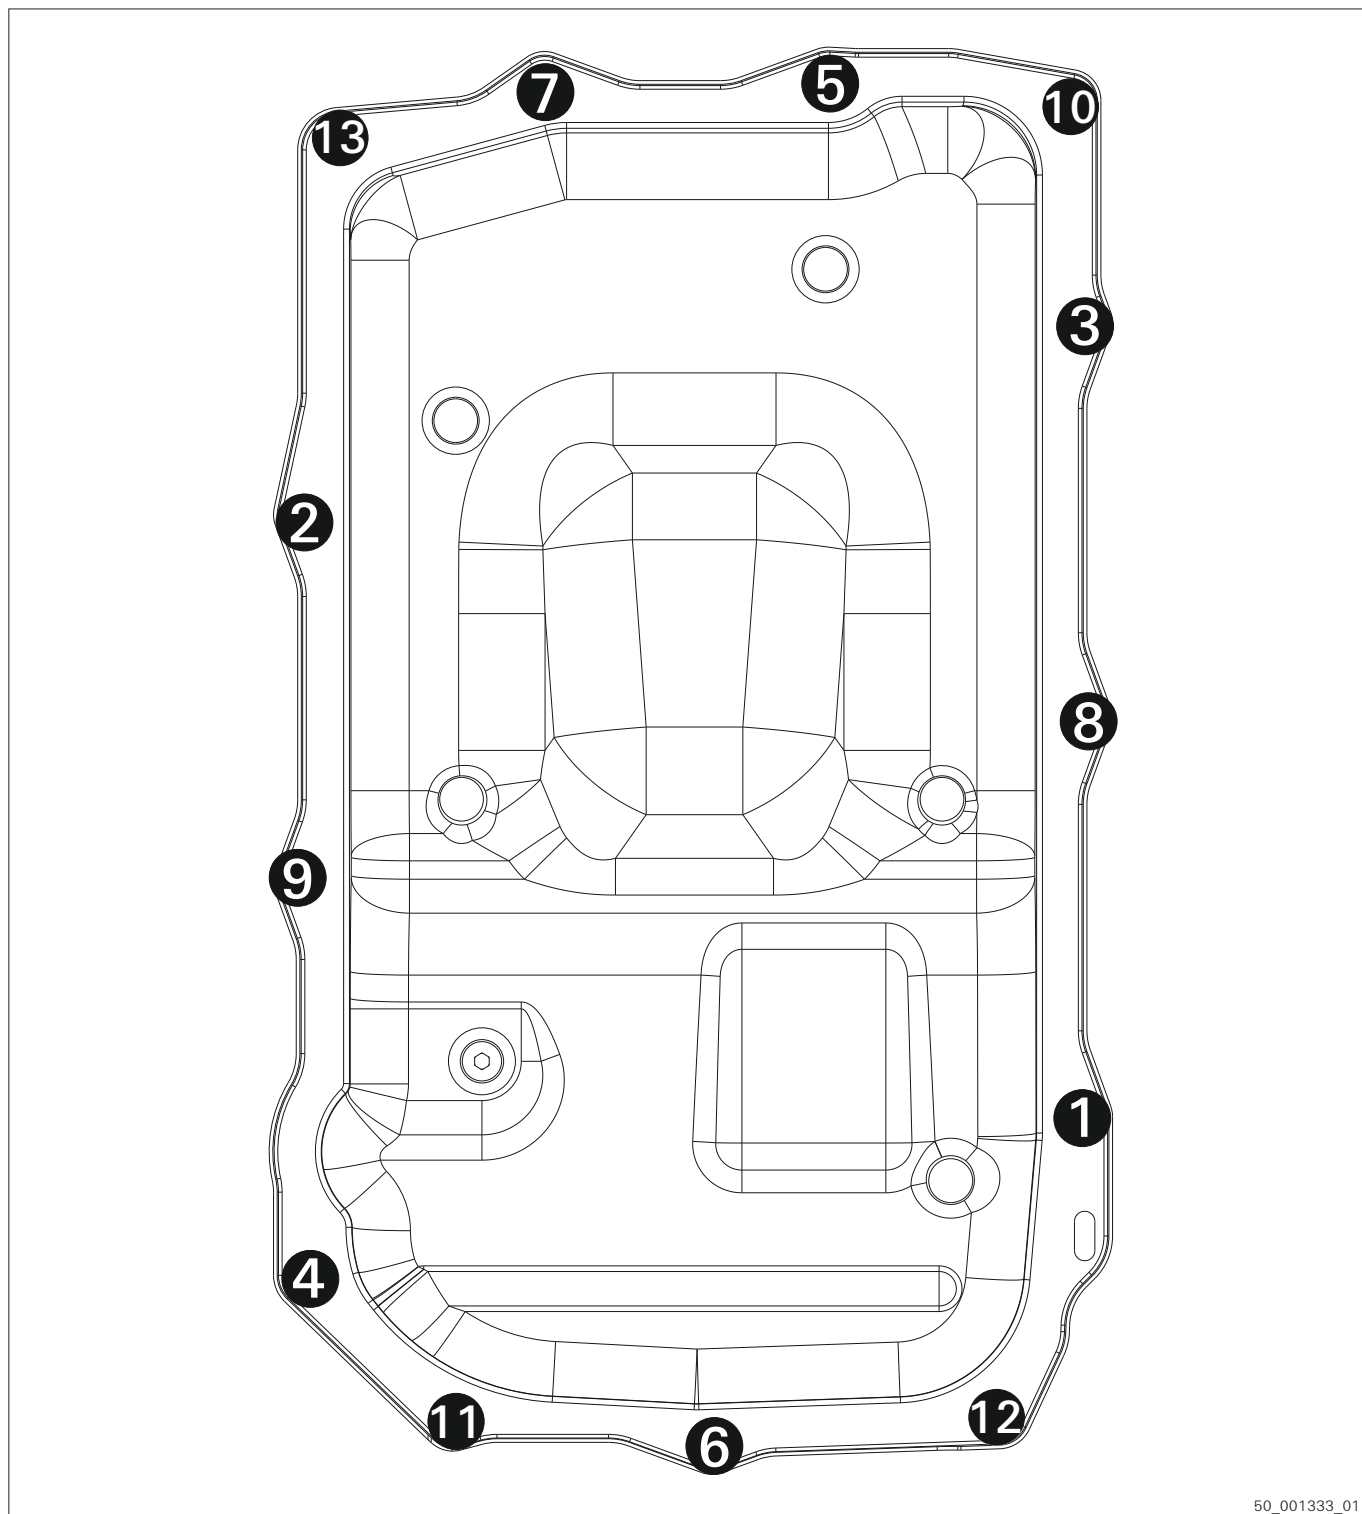


Fig. 45 1090.700.035

ZF Aftermarket Service Information

14.3 1091.700.xxx

14.3.1 1091.700.027 – oil pan

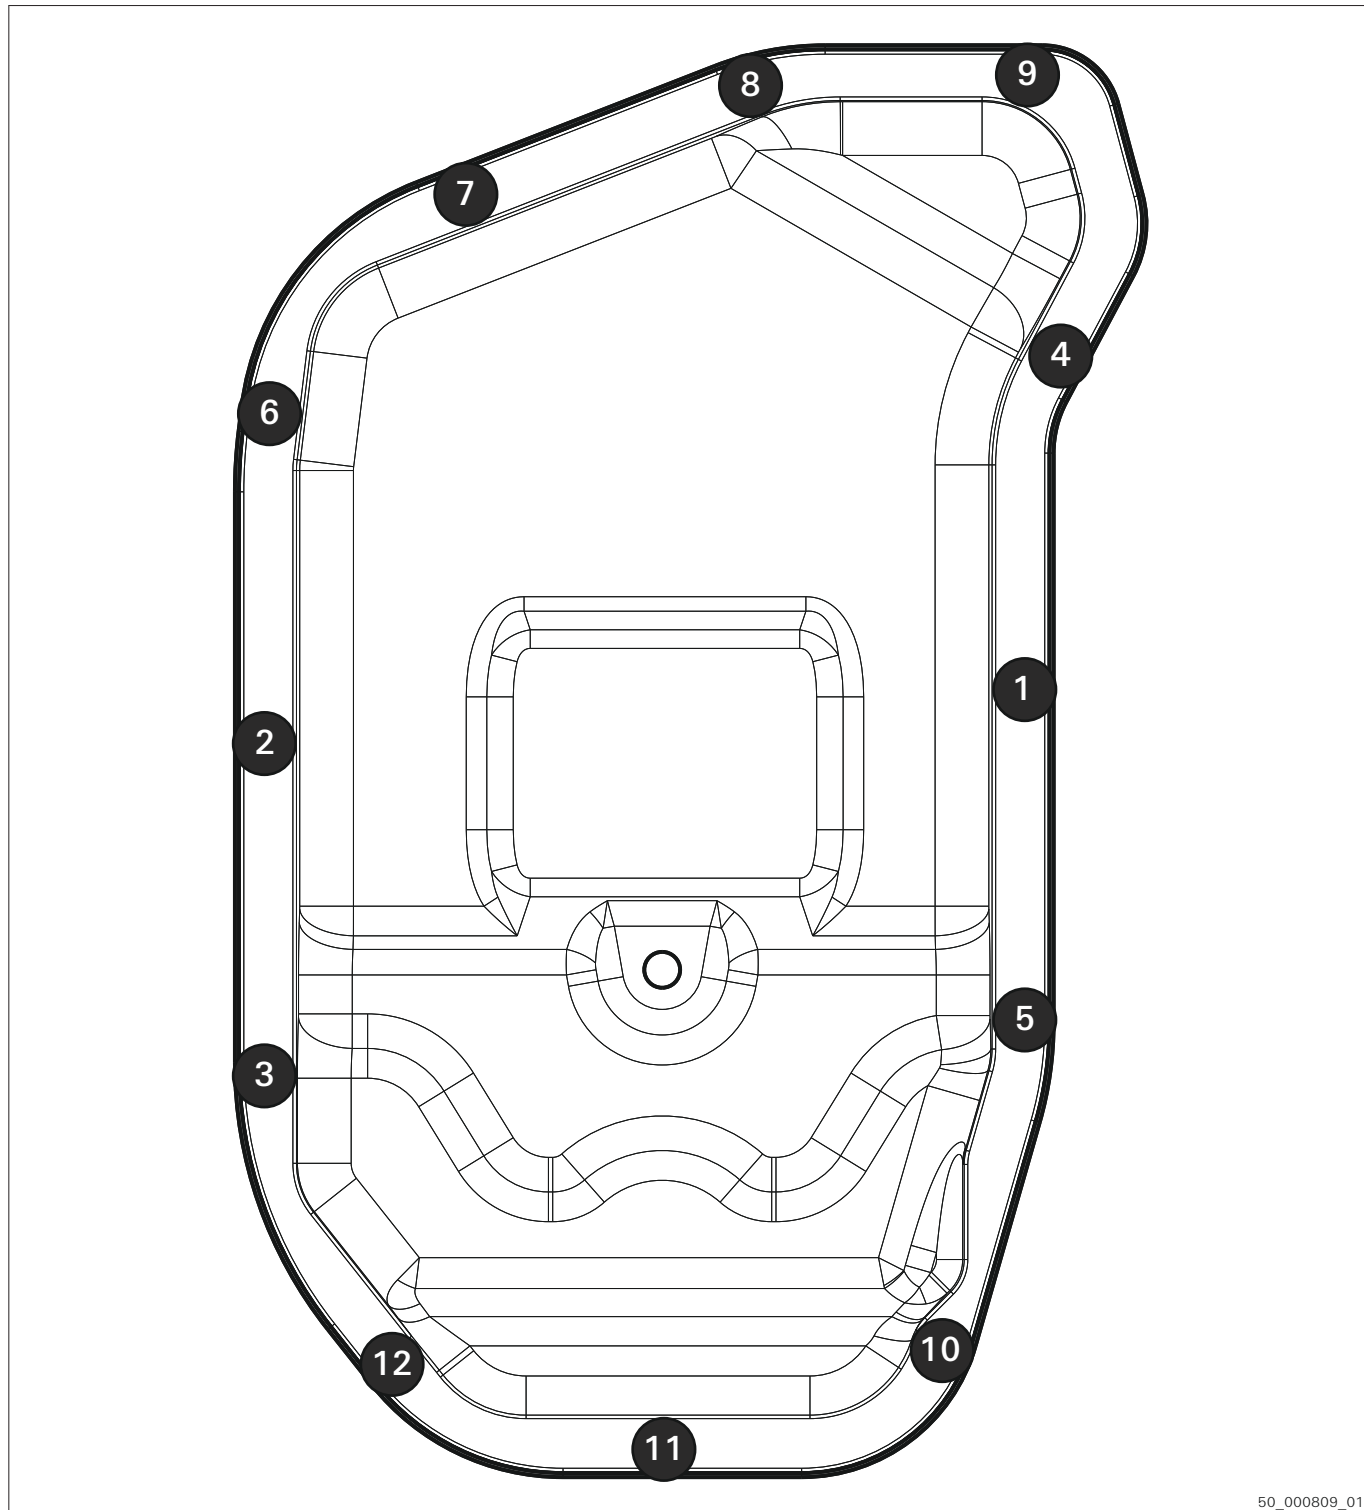

50_000809_01

Fig. 46 1091.700.027



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken


Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
56/312

ZF Aftermarket Service Information

14.3.2 1091.700.115 – oil pan

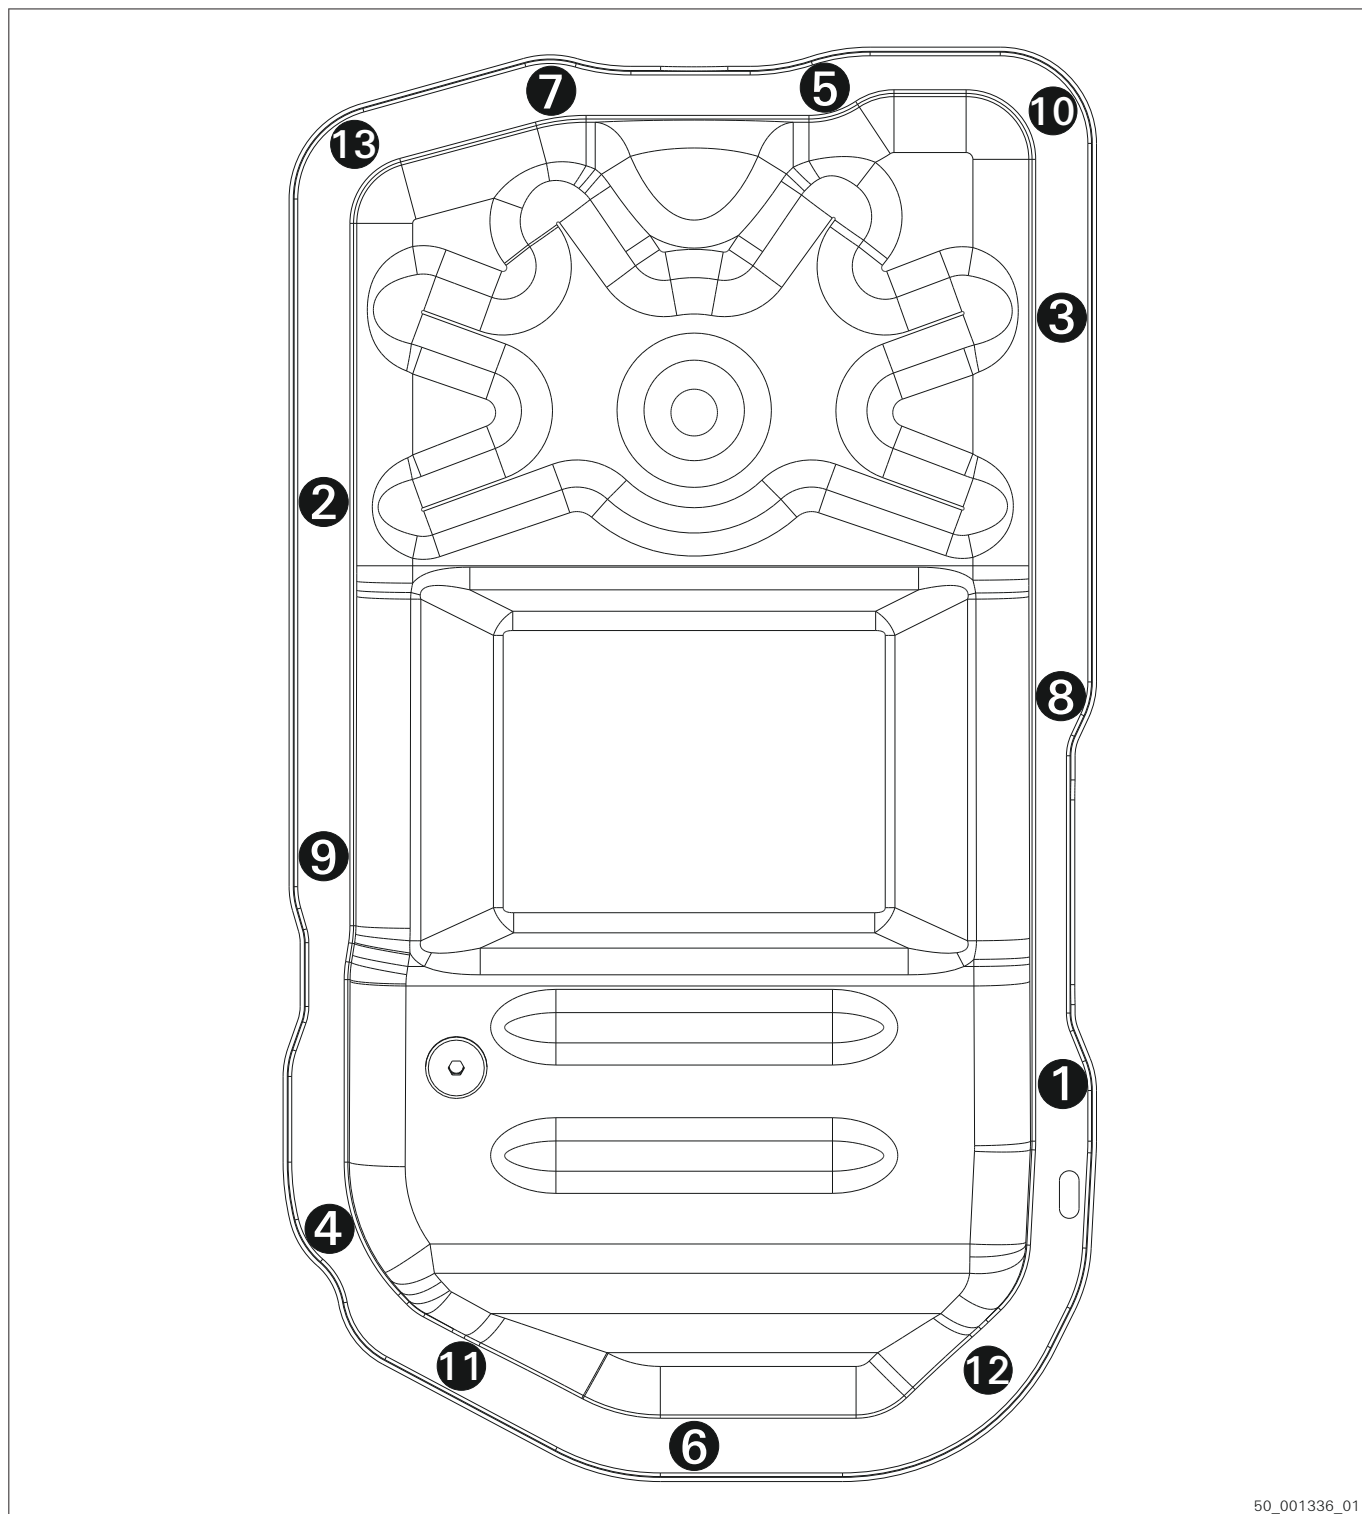

50_001336_01

Fig. 47 1091.700.115



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact


© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
57/312

ZF Aftermarket Service Information

14.4 1102.700.xxx

14.4.1 1102.700.113 – oil pan

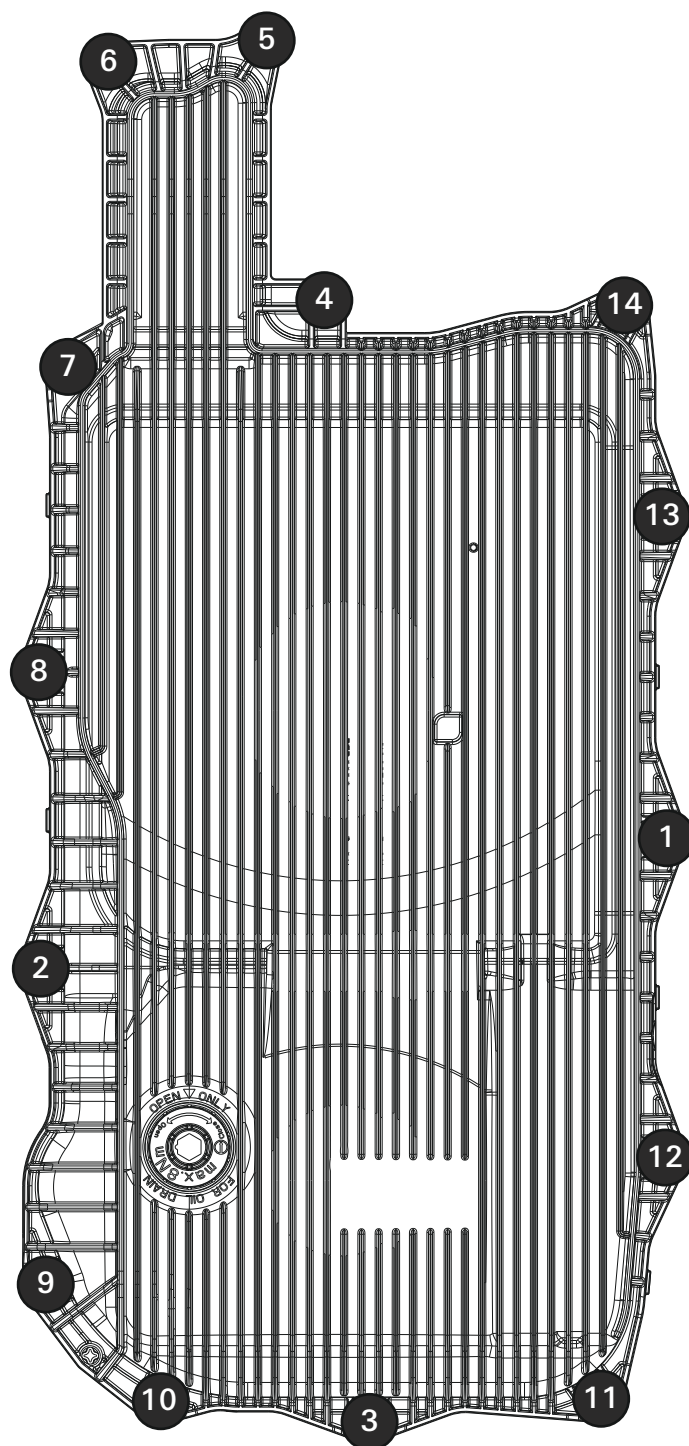

50_000810_01

Fig. 48 1102.700.113



AFTERMARKET


ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
58/312

14.4.2 1102.700.192 – oil pan

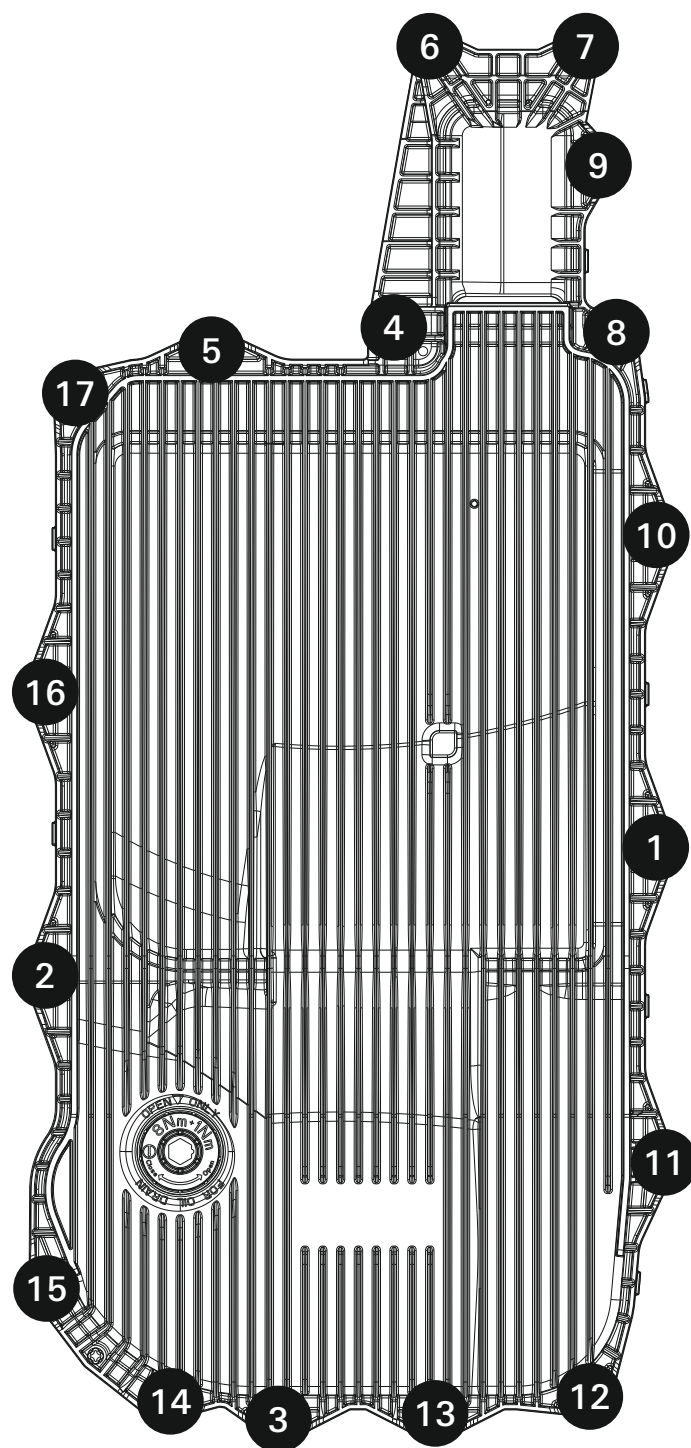


50_001082_01

Fig. 49 1102.700.192

ZF Aftermarket Service Information

14.5 1103.700.xxx

14.5.1 1103.700.010 – oil pan

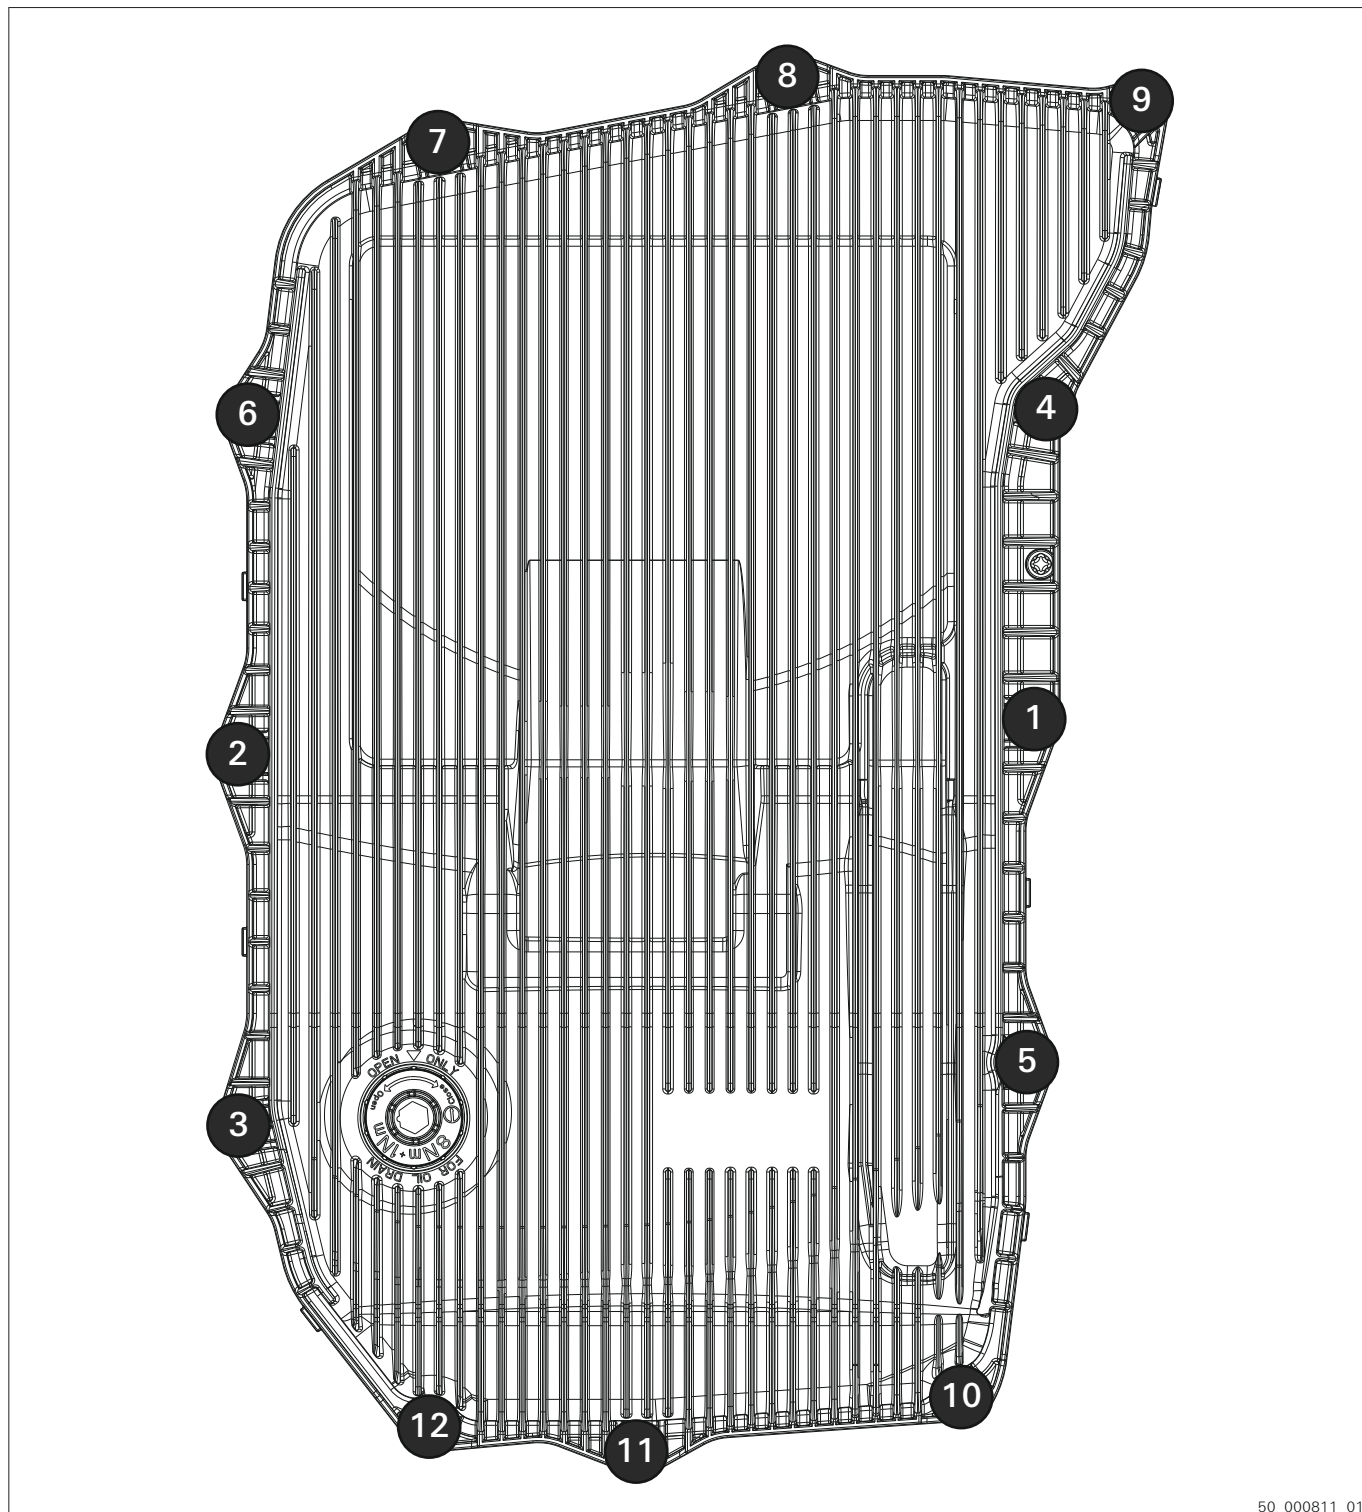

50_000811_01

Fig. 50 1103.700.010



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
60/312

14.5.2 1103.700.053 – oil pan


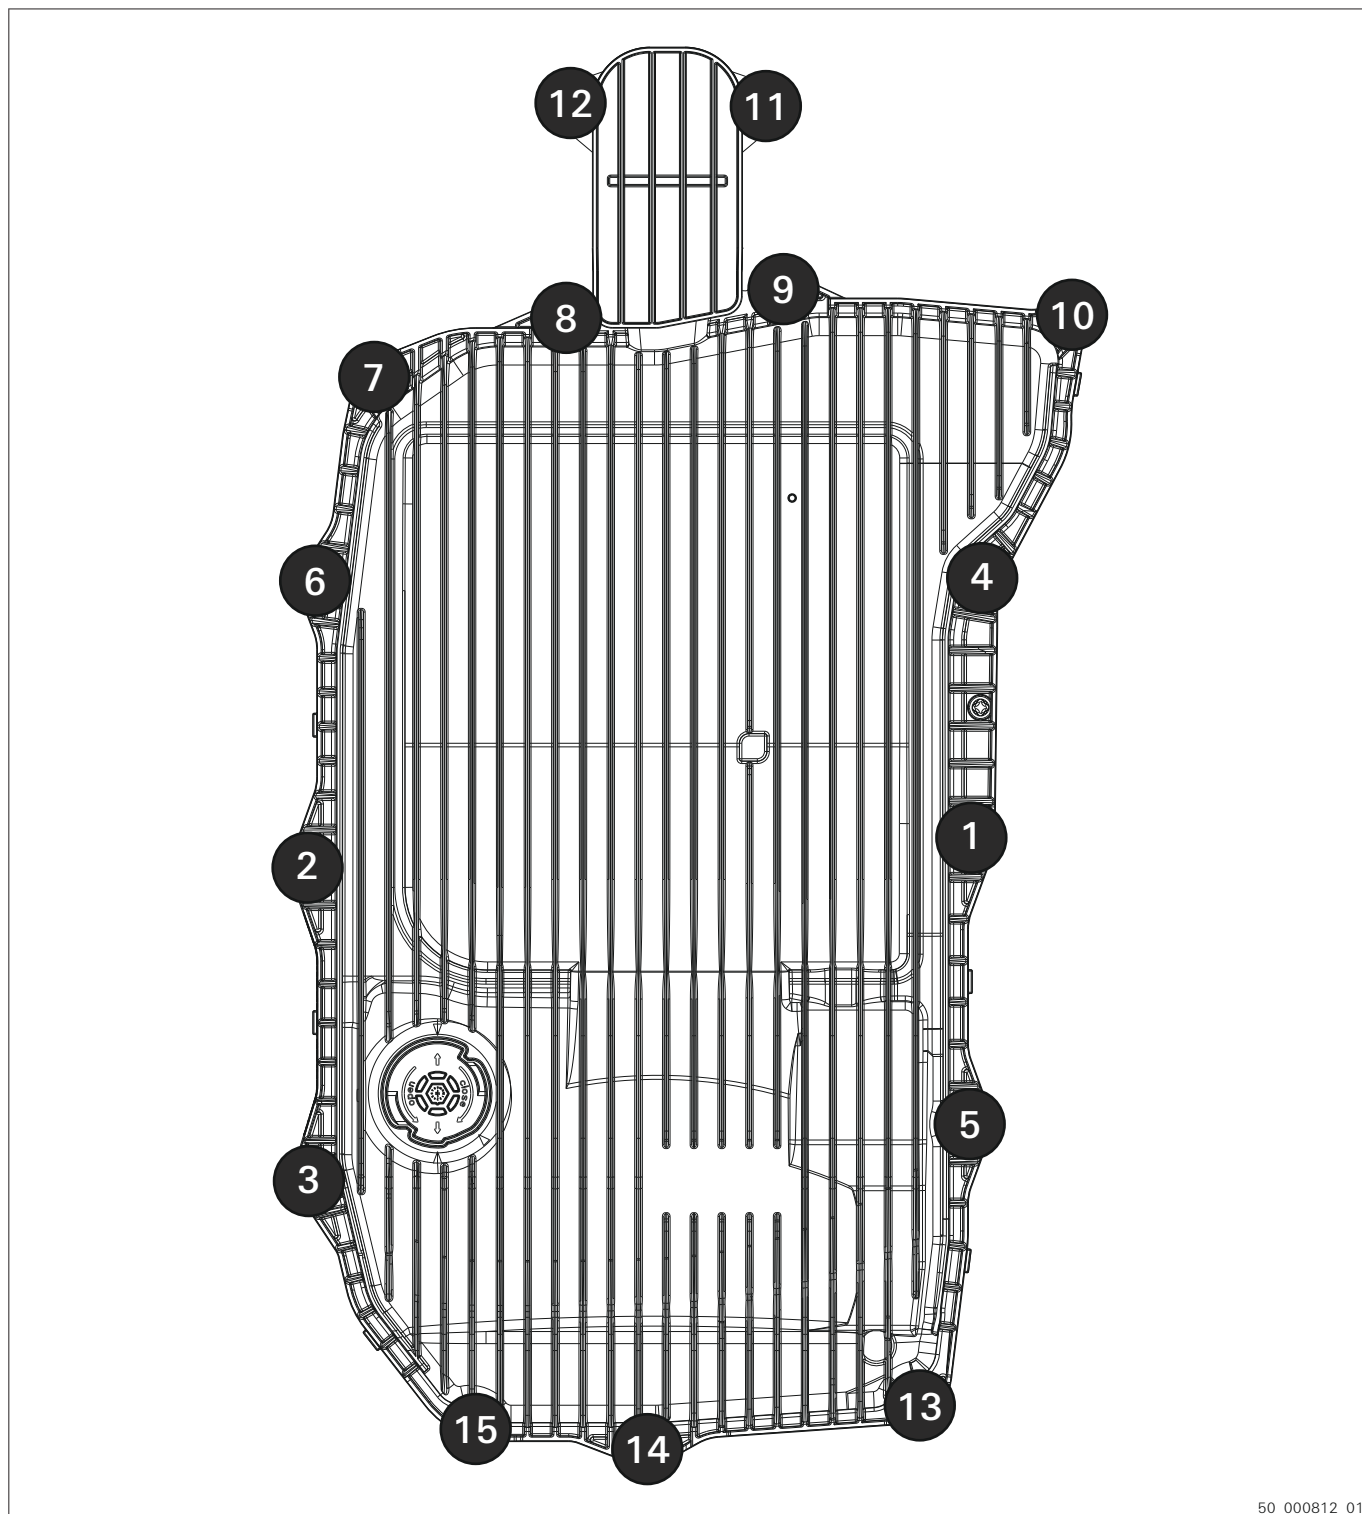


Fig. 51 1103.700.053

50_000812_01

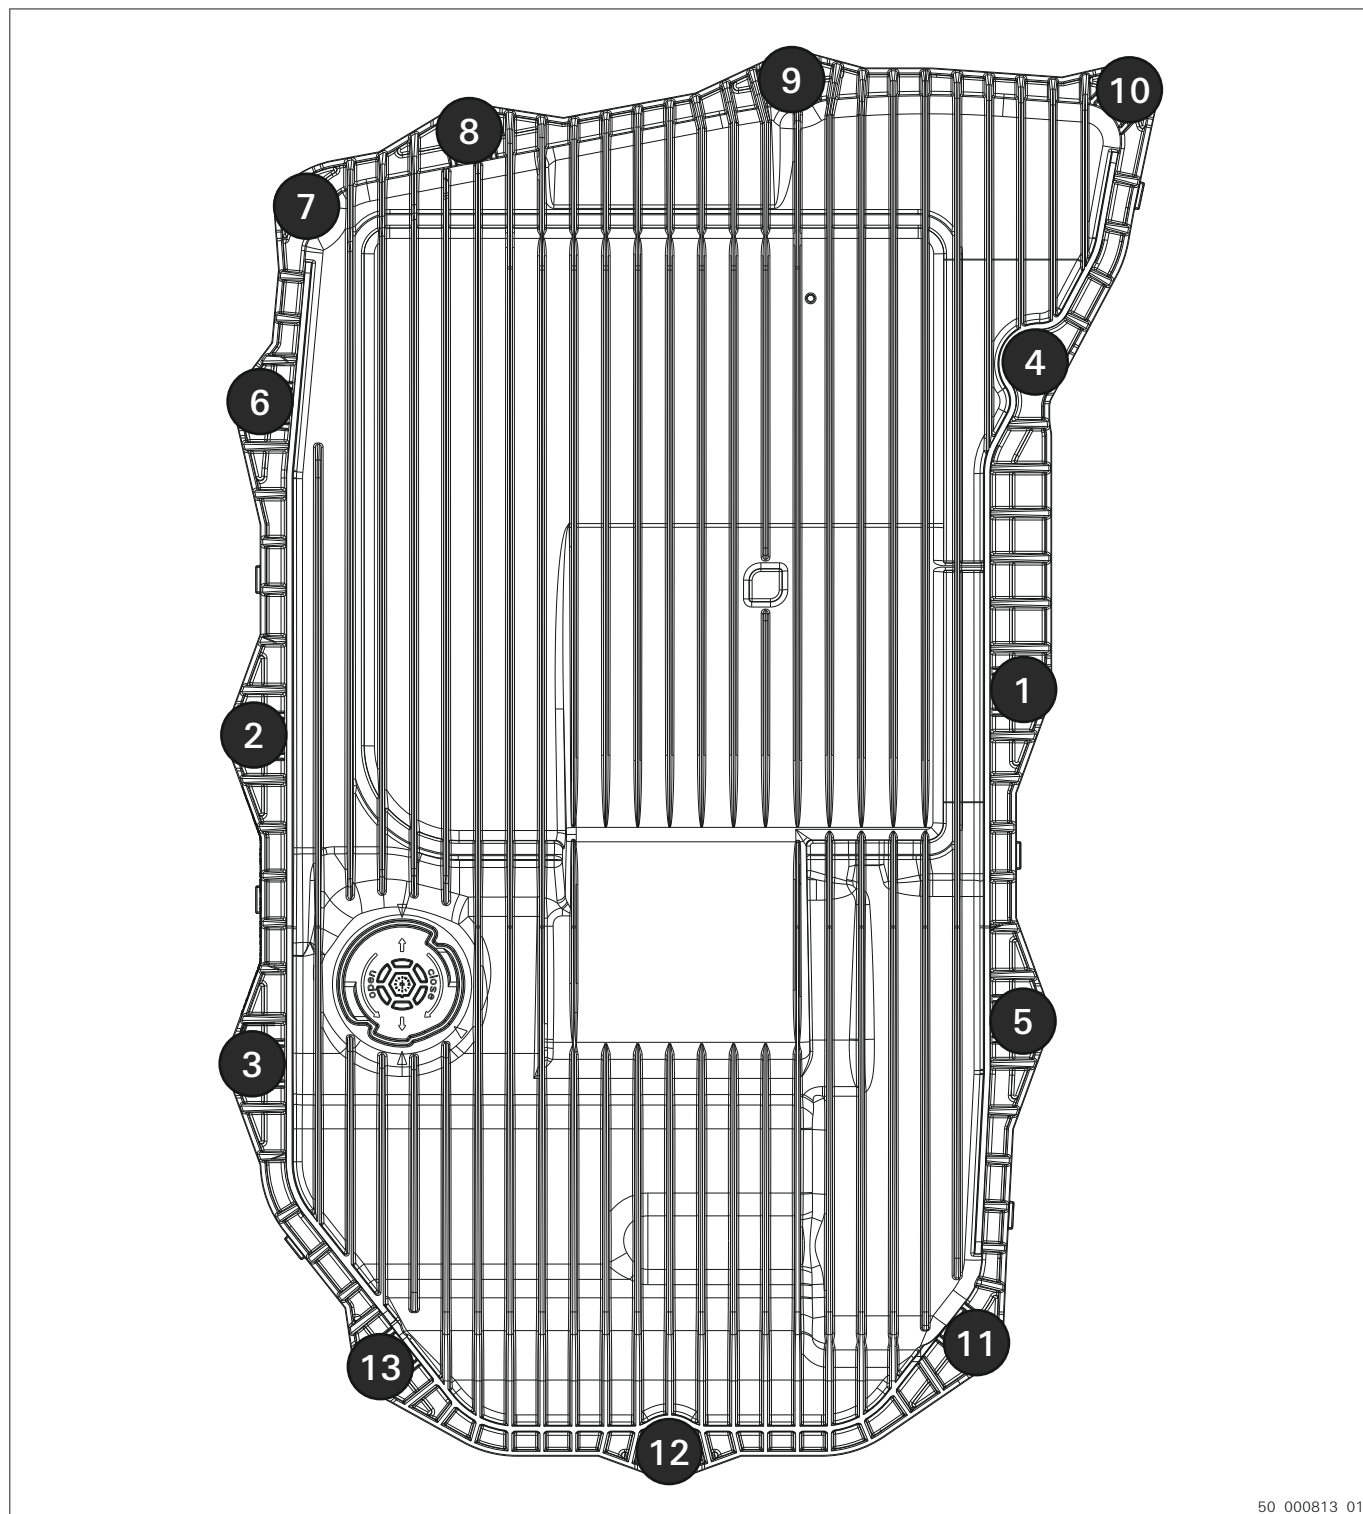

50_000813_01

Fig. 52 1104.700.043

14.7 1122.700.003 – oil pan

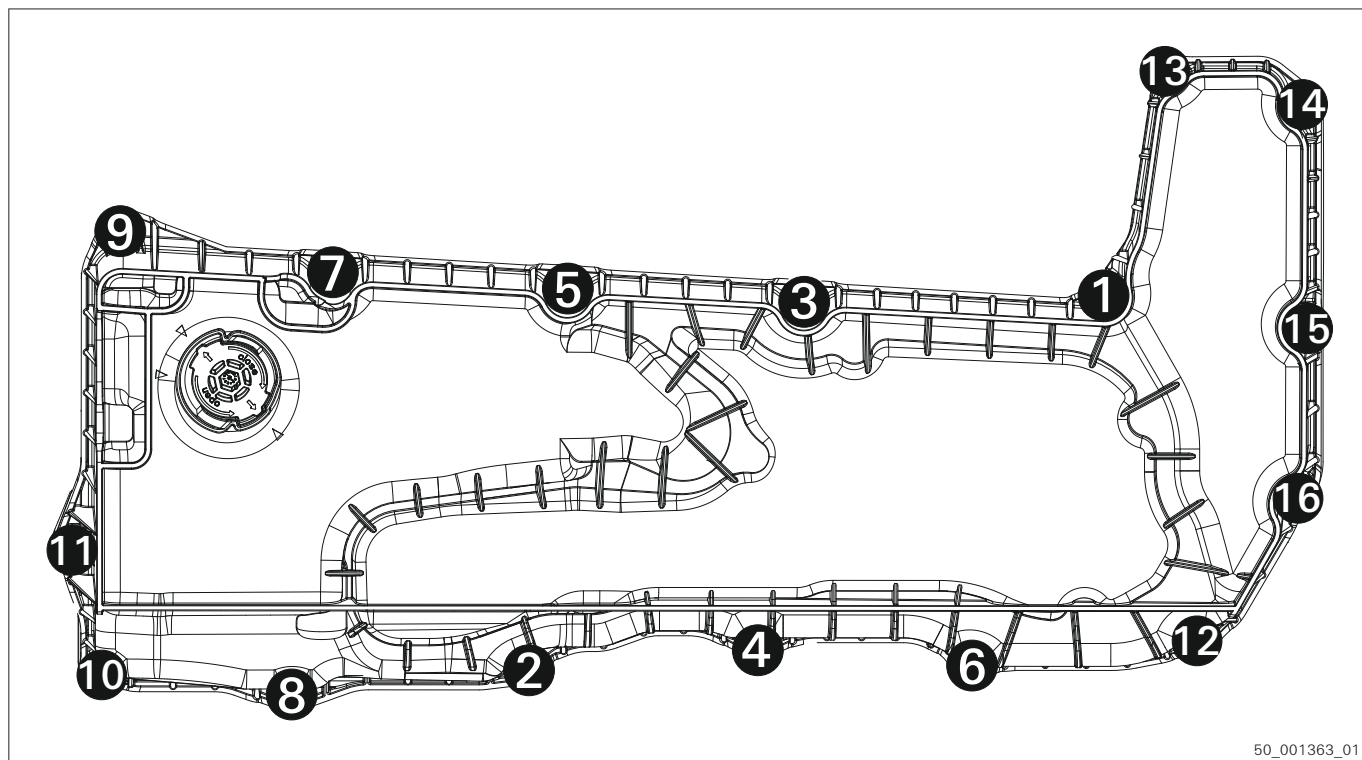


Fig. 53 1122.700.003

14.8 1124.700.028 – oil pan

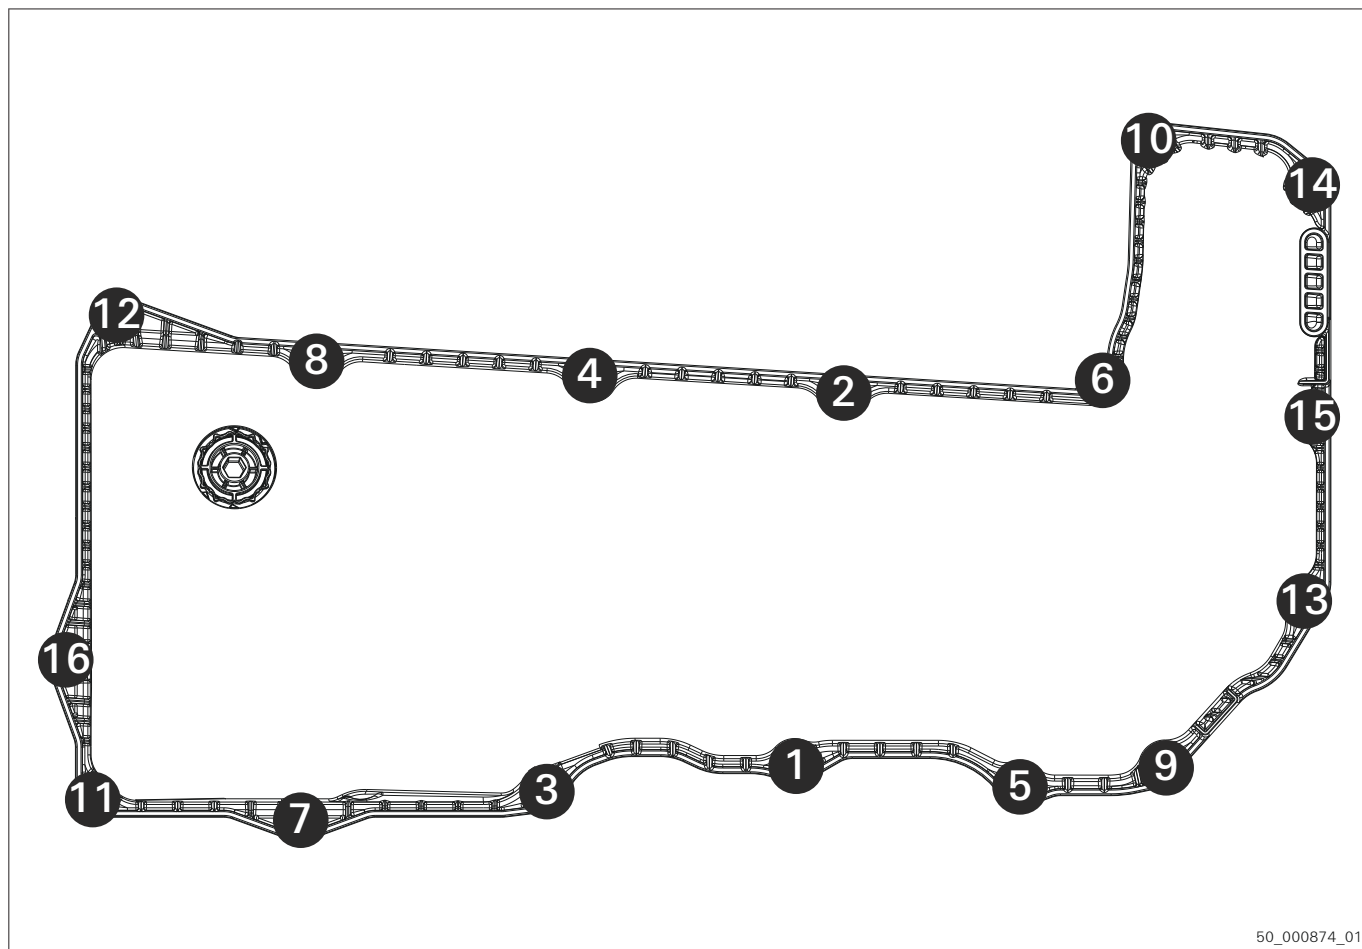


Fig. 54 1124.700.028

14.9 1126.700.103 – oil pan

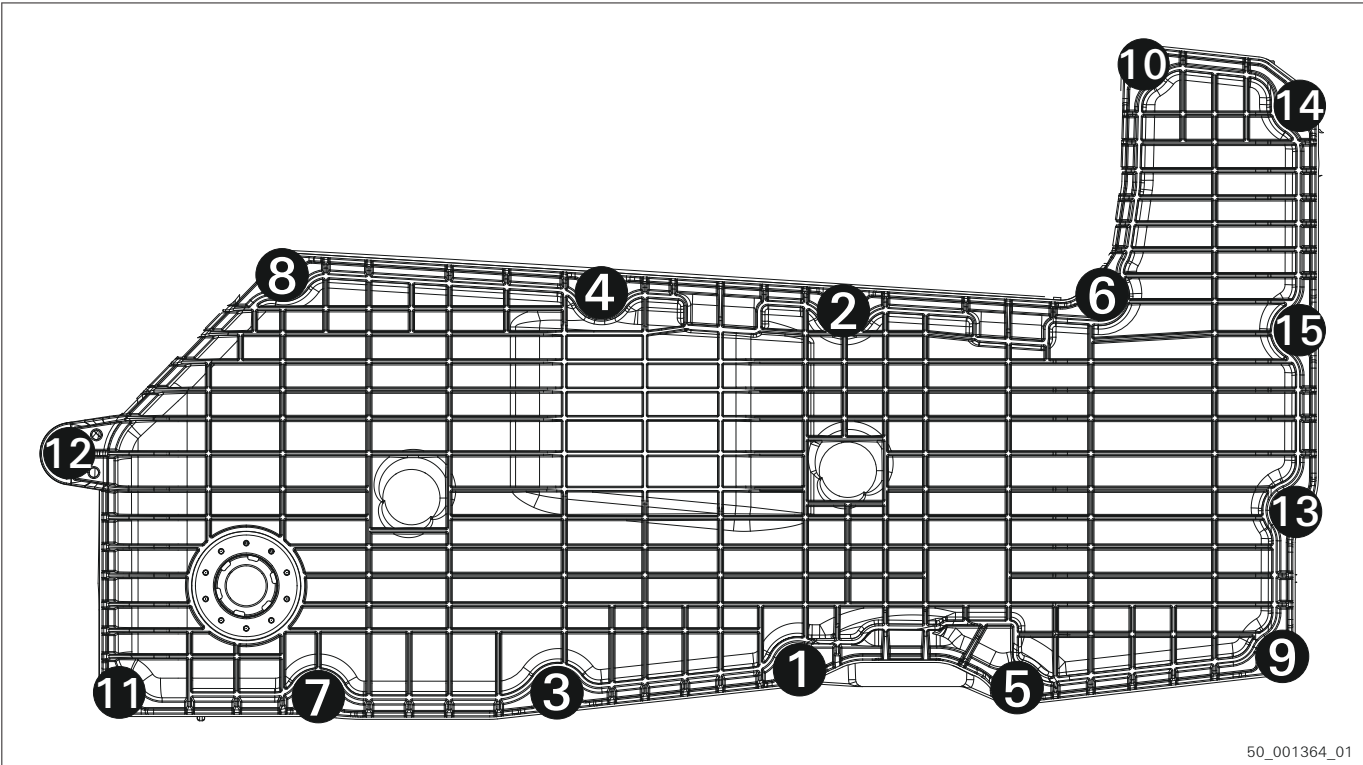


Fig. 55 1126.700.103

Sequence	Screw position	Torque
1	11, 14	Insert centering pins
2	1-10	Torque according to the parts list entry
3	11, 14	Remove centering pins
4	11-15	Torque according to the parts list entry

Tab. 21 Tightening sequence

15 Parking Lock Magnet Tightening Specifications

15.1 1124.700.090 – parking lock magnet


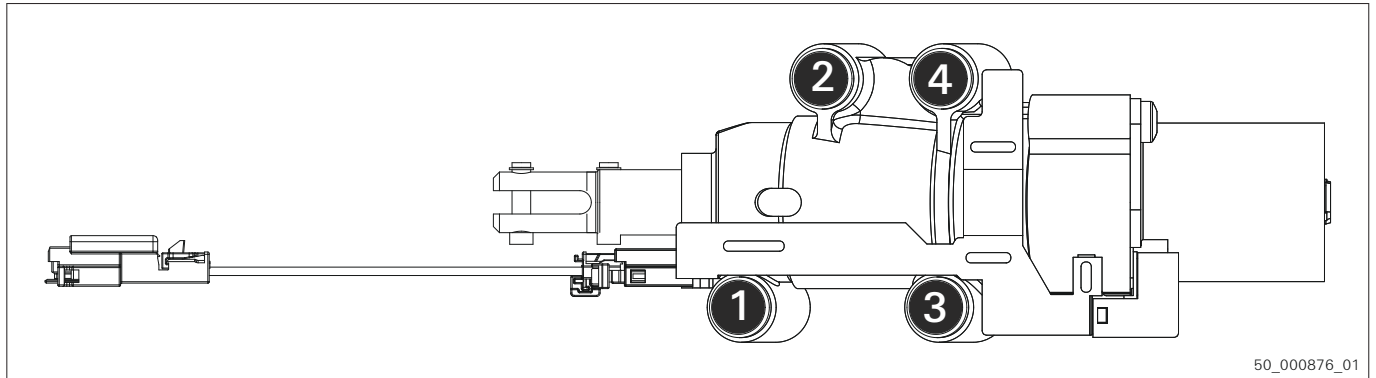


Fig. 56 1124.700.090

16 Rotor Position Sensor Tightening Specifications

16.1 1102.700.021 – rotor position sensor

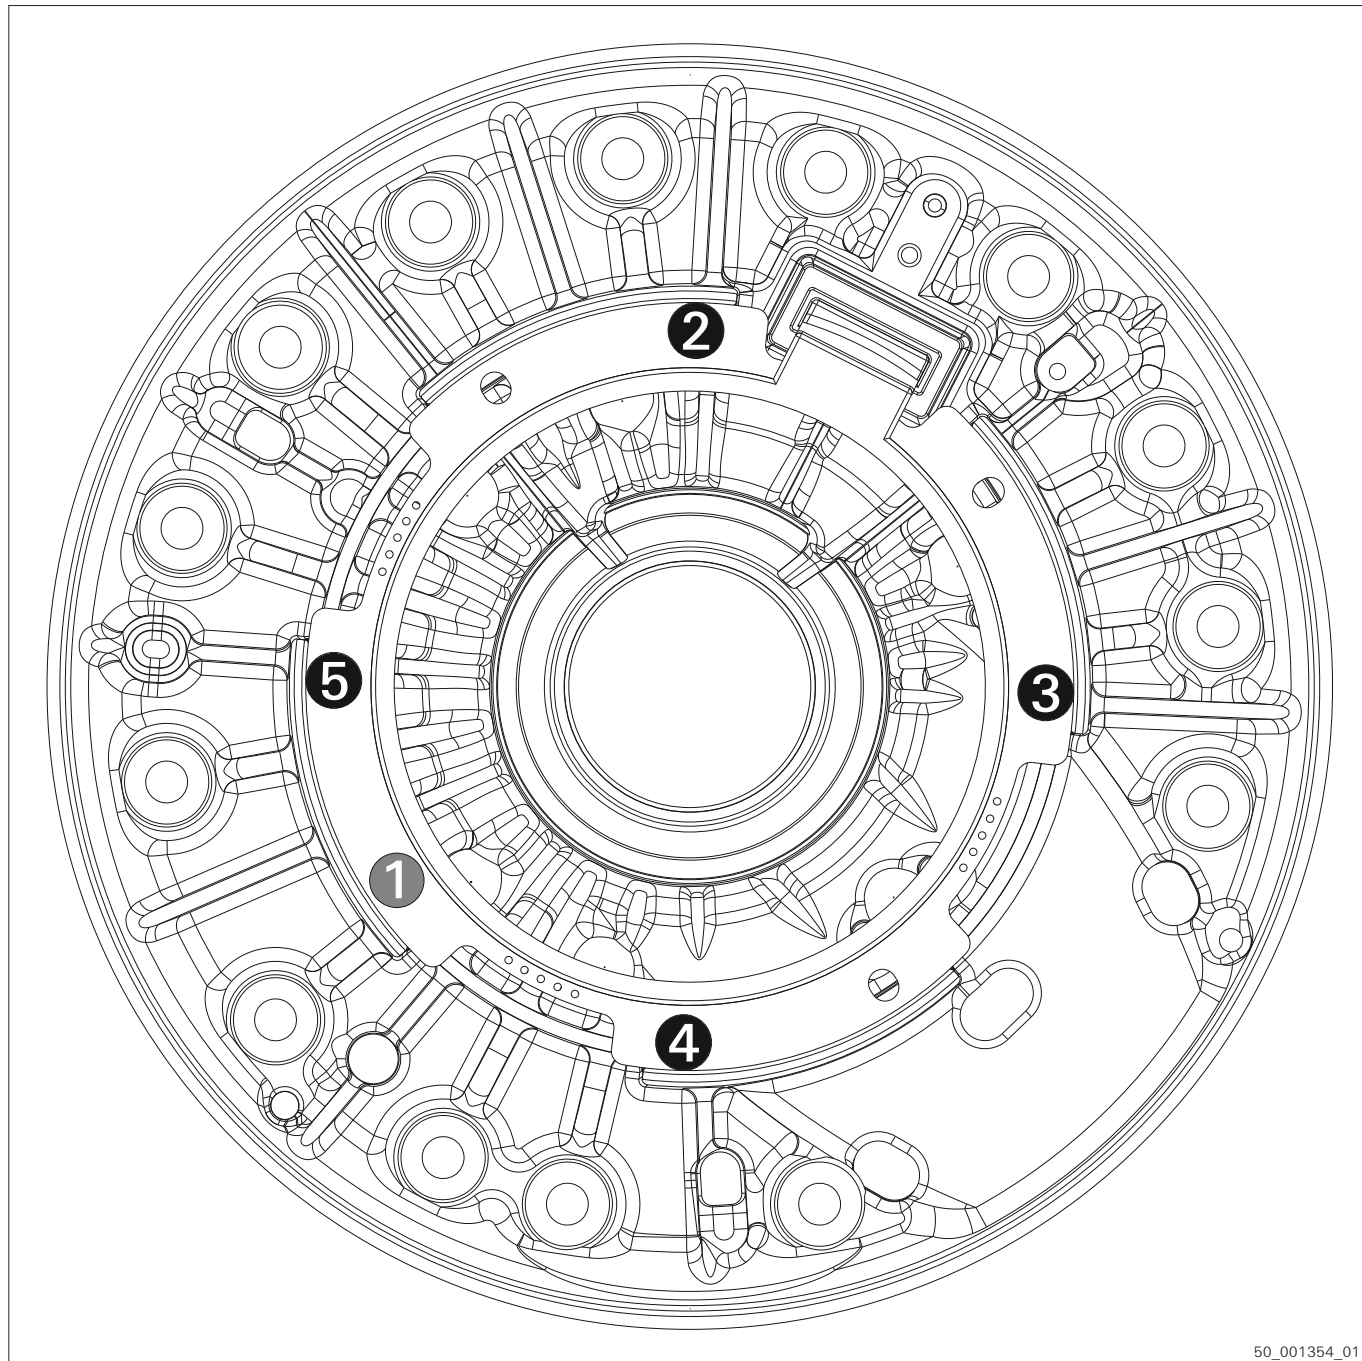

50_001354_01

Fig. 57 1102.700.021

ZF Aftermarket

Service Information


Sequence	Screw position	Torque
1	1	Insert centering pin Ø 6H7
2	2-5	Torque according to the parts list entry
3	1	Remove centering pin

Tab. 22 Tightening sequence



17 Extension Tightening Specifications

17.1 1090.700.141 – extension

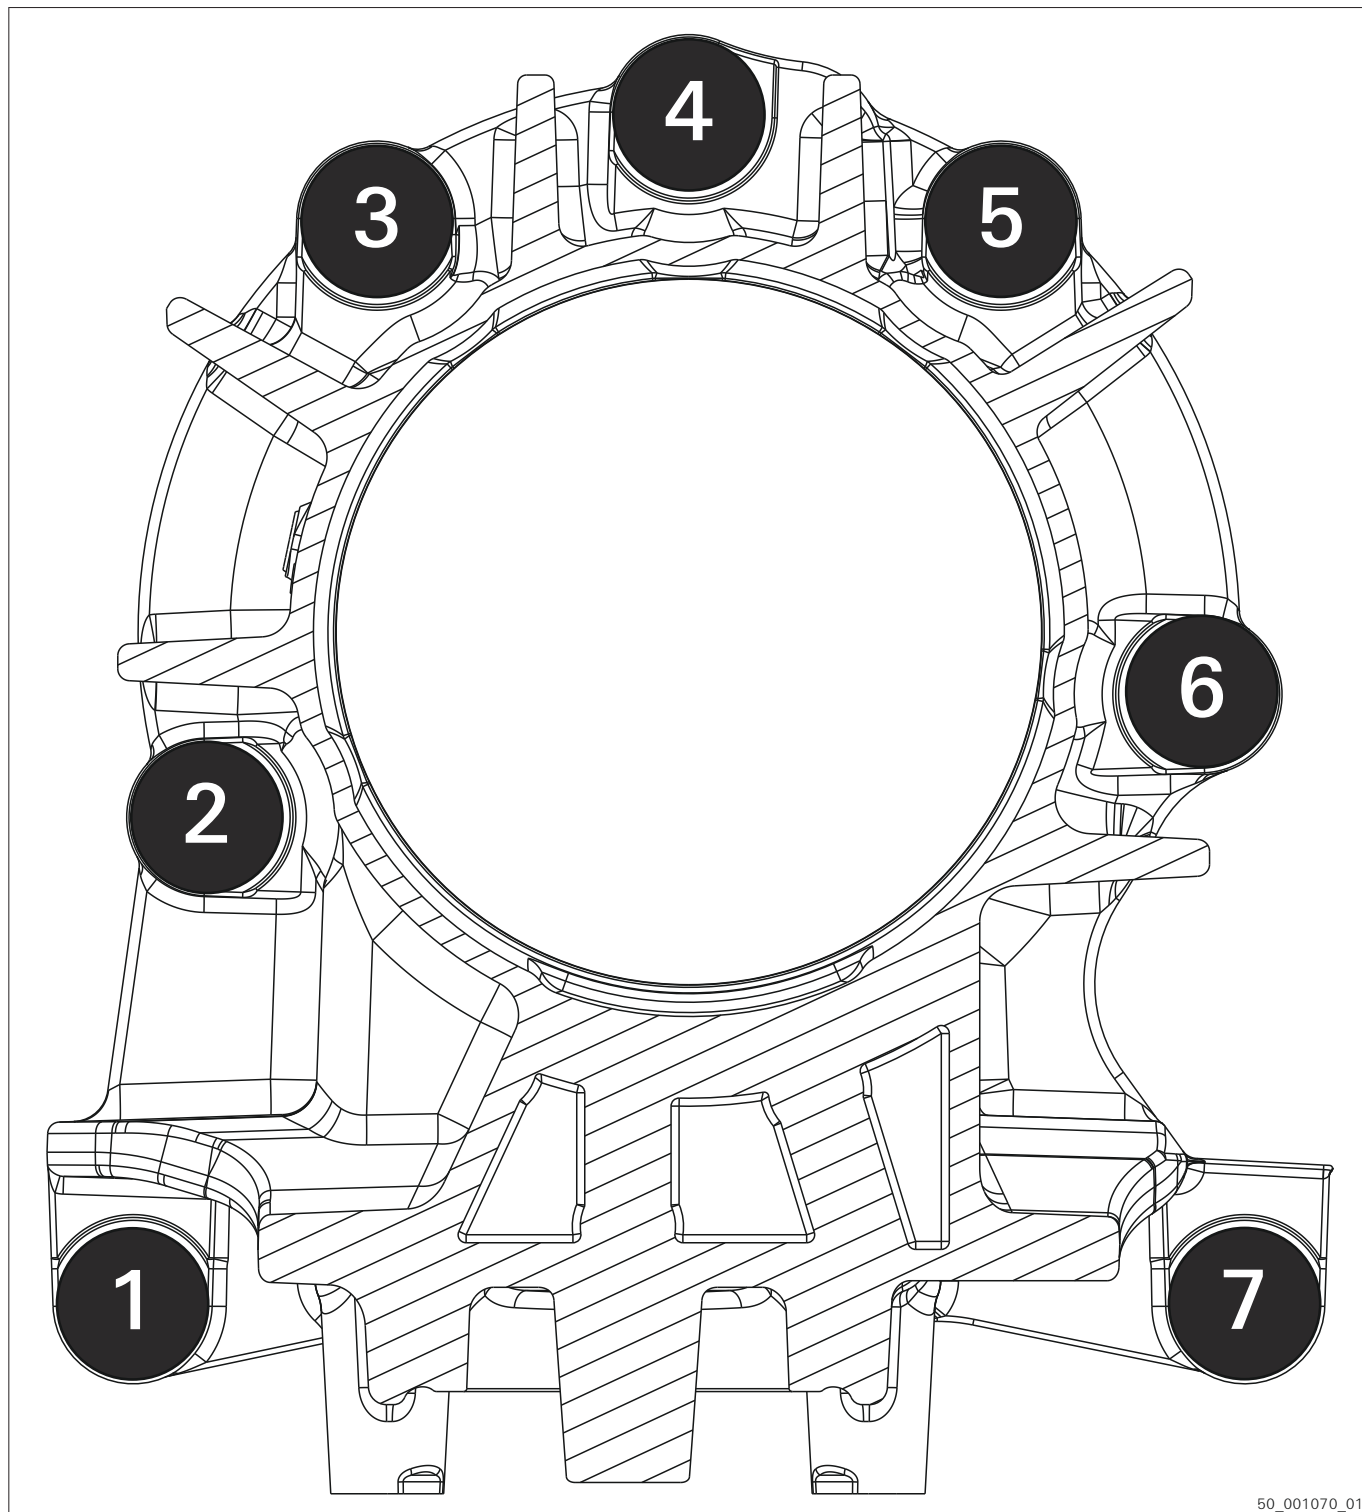


50_001070_01

Fig. 58 1090.700.141

18 Torque Converter Bell Housing Tightening Specifications

18.1 1087.700.081 – torque converter bell housing

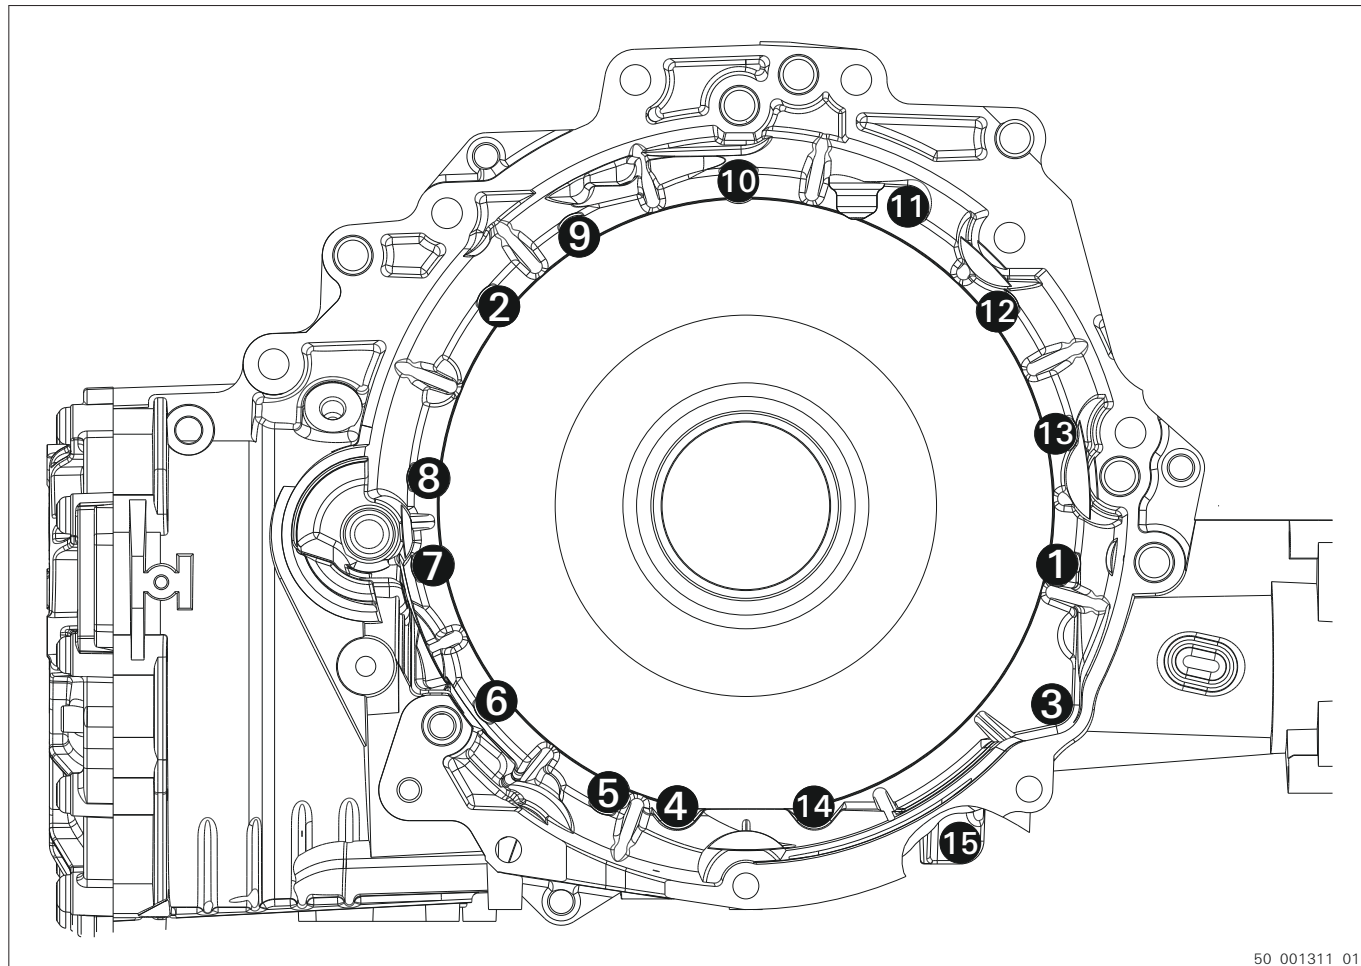

50_001311_01

Fig. 59 1087.700.081

18.2 1091.700.018 – torque converter bell housing


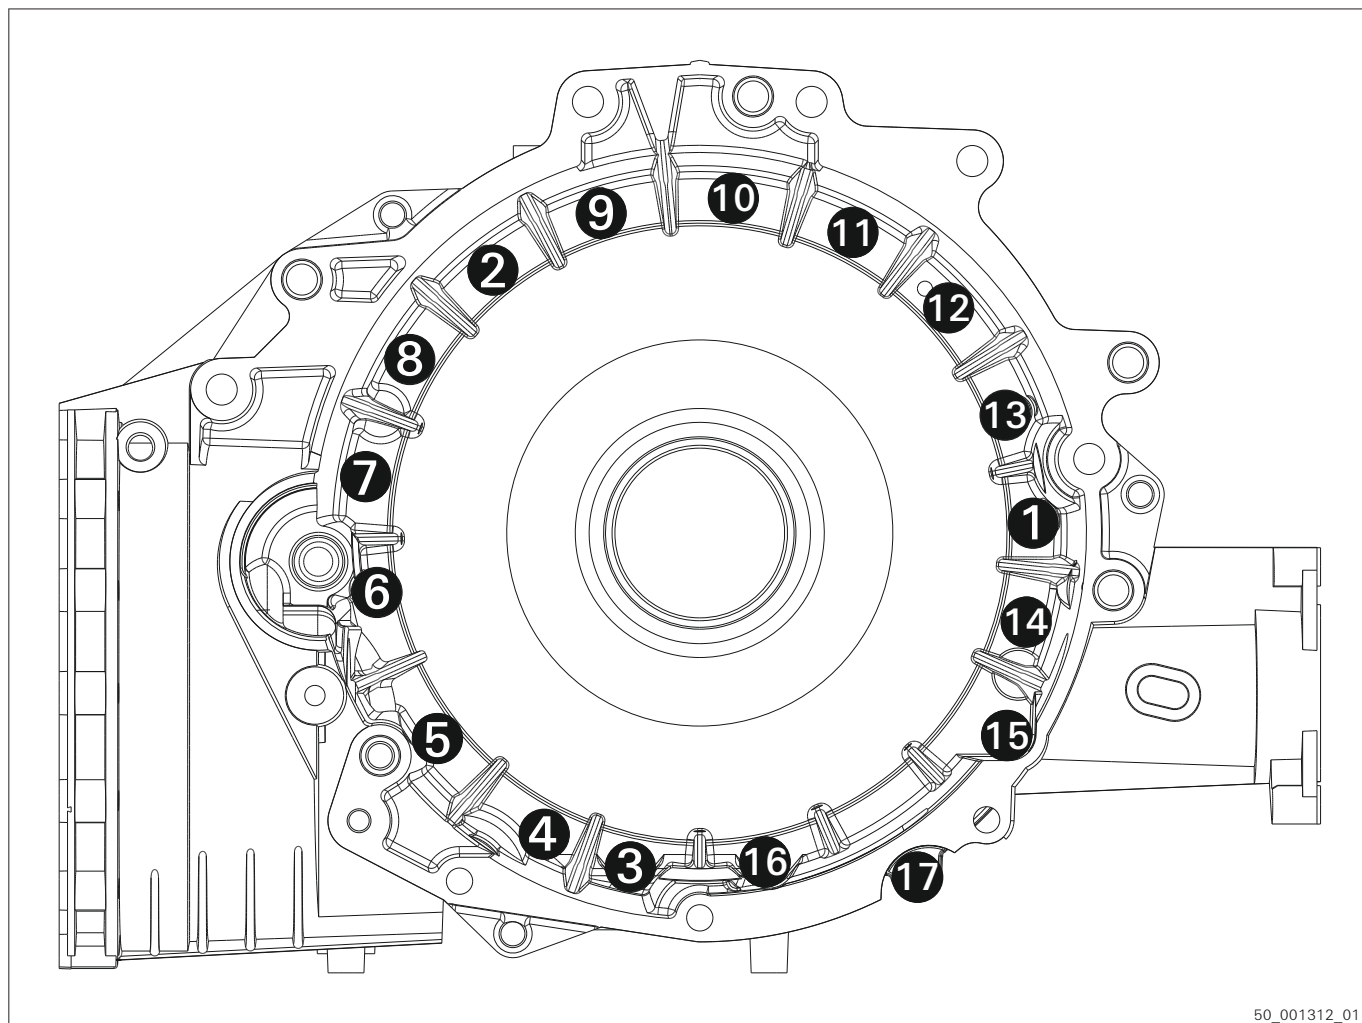


Fig. 60 1091.700.018

50_001312_01

19 Centering Plate Tightening Specifications

19.1 1124.700.023 – centering plate

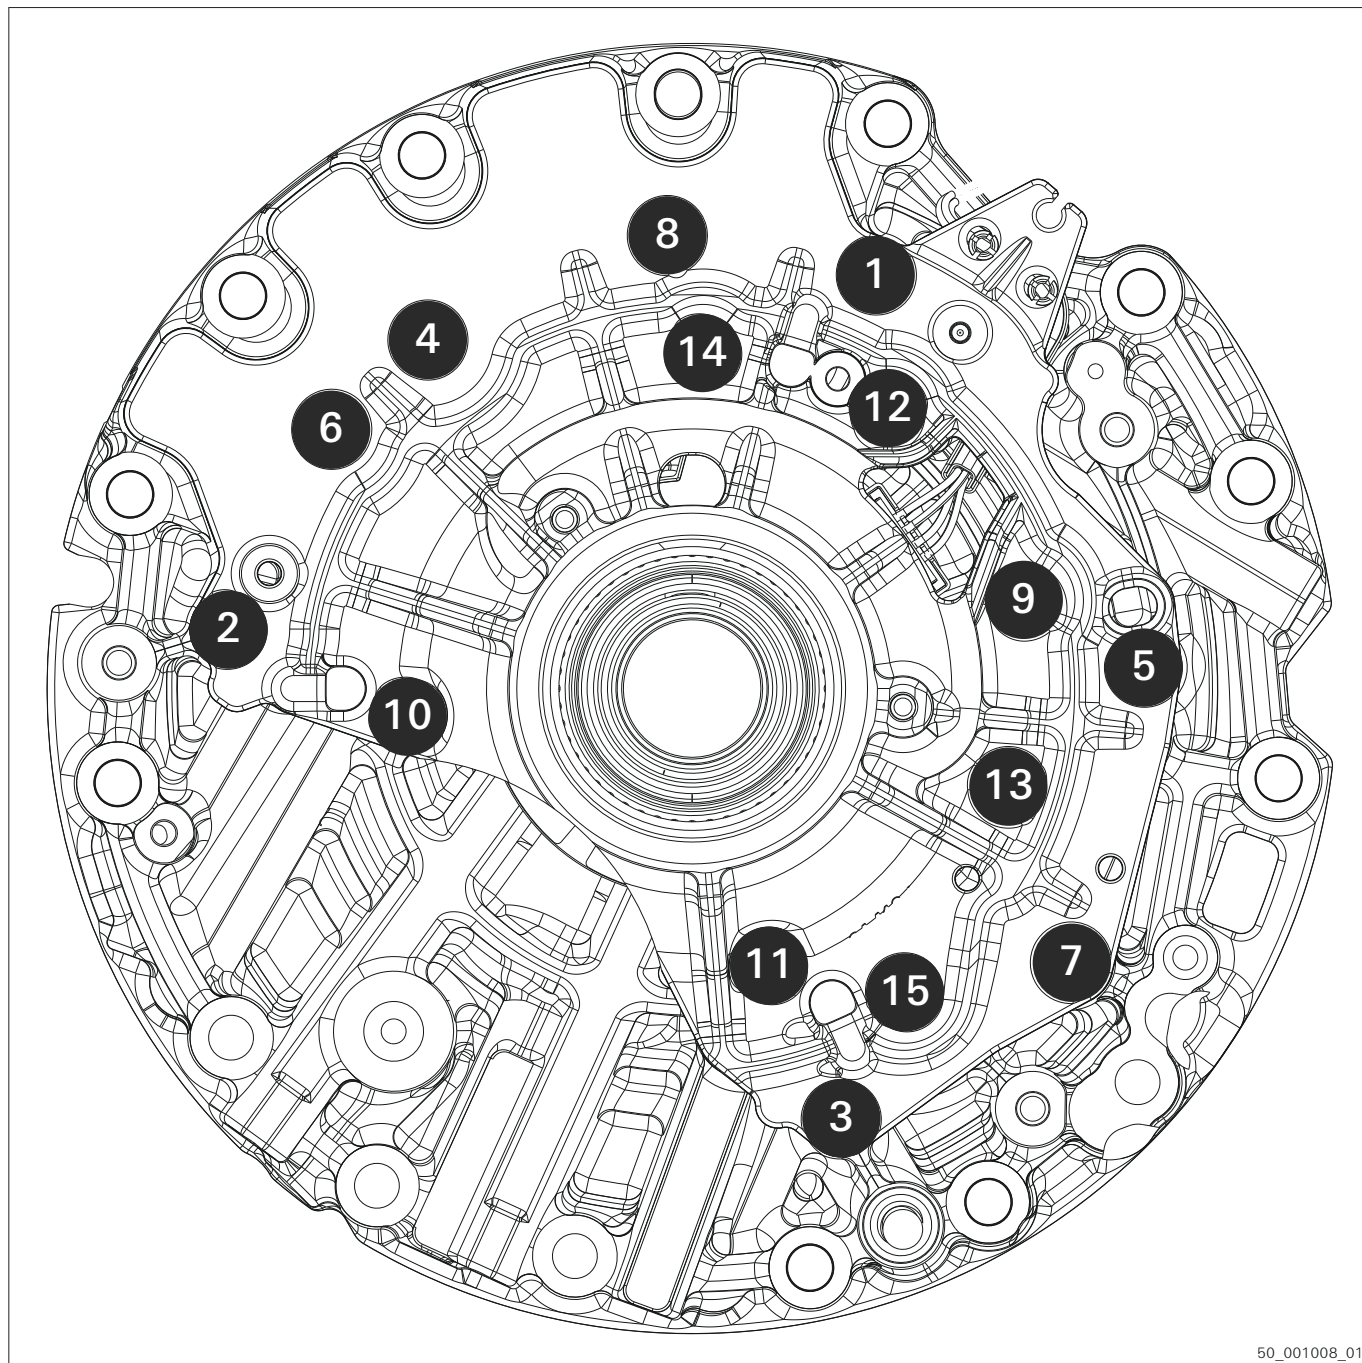


50_001008_01

Fig. 61 1124.700.023

20 Intermediate Housing Tightening Specifications

20.1 1091.700.117 – intermediate housing

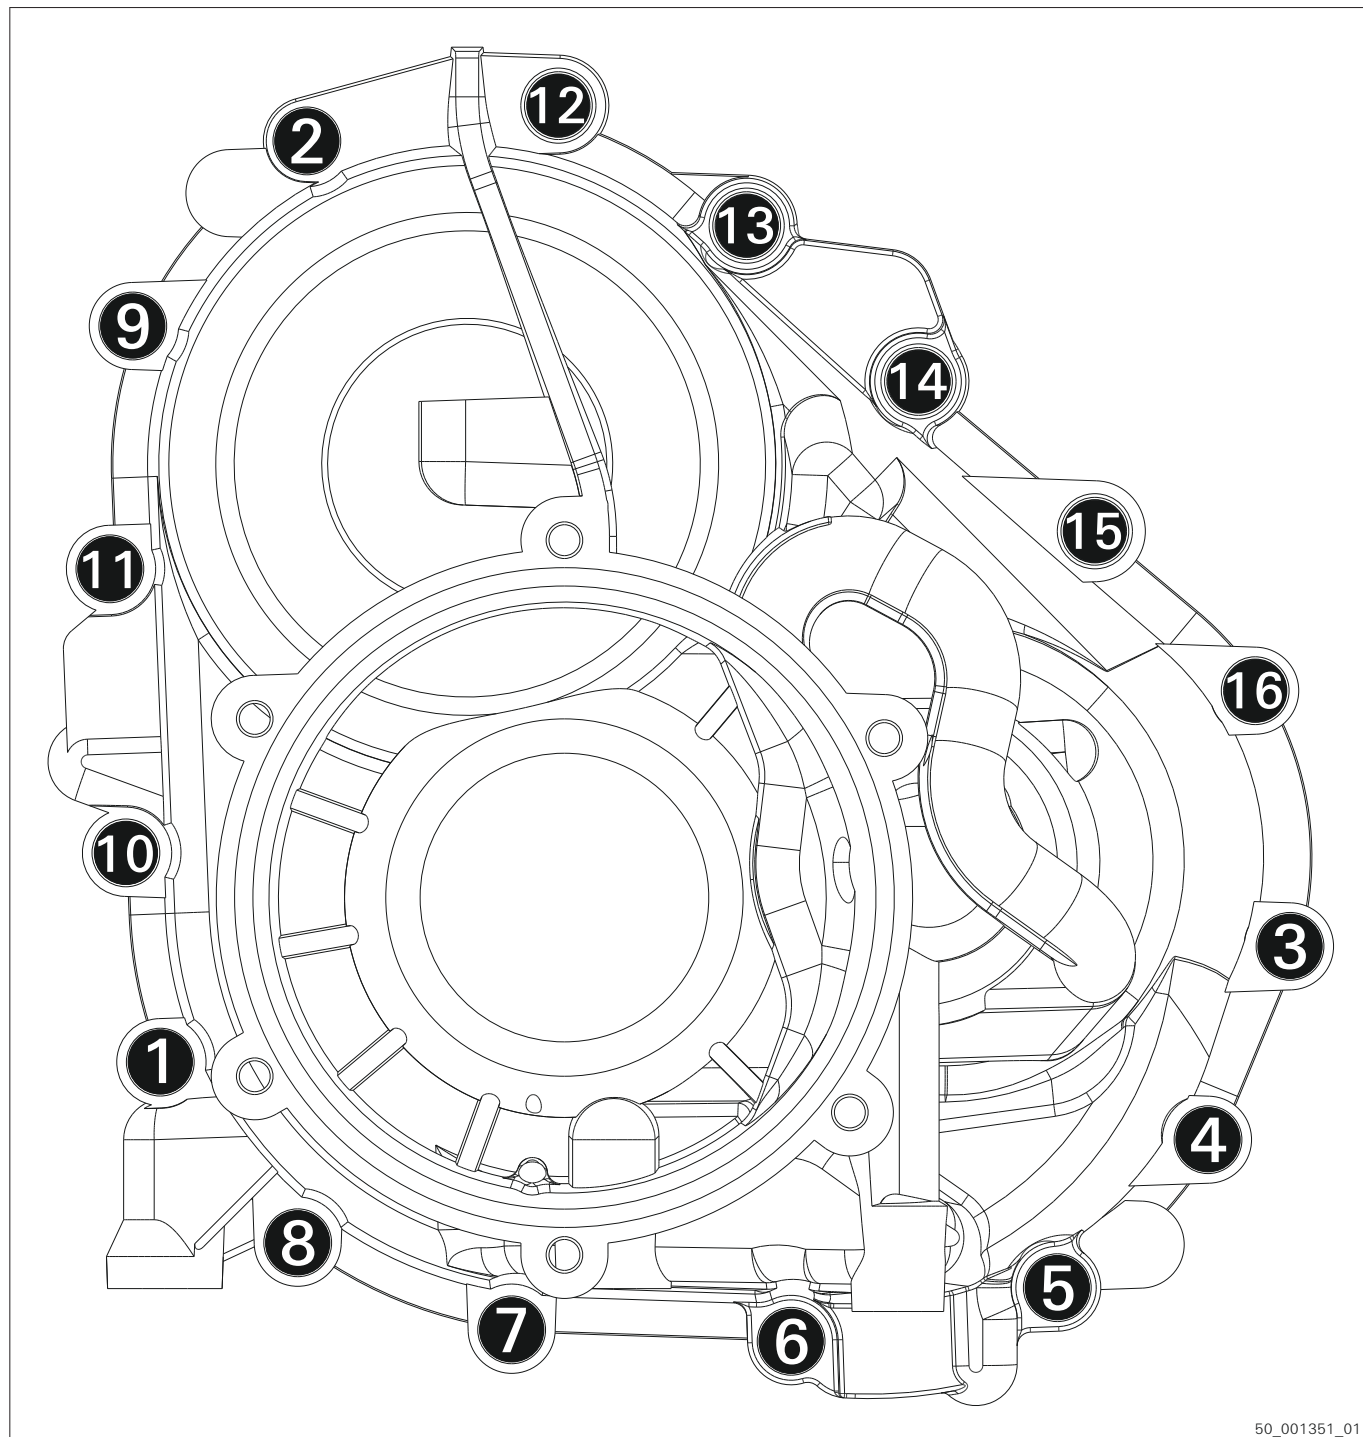

50_001351_01

Fig. 62 1091.700.117


ZF Aftermarket

Service Information

Sequence	Screw position	Torque
1	1, 2	6 Nm (± 1 Nm)
2	3-8	Torque according to the parts list entry
3	1	Torque according to the parts list entry
4	9, 2	Torque according to the parts list entry
5	10-16	Torque according to the parts list entry

Tab. 23 Tightening sequence



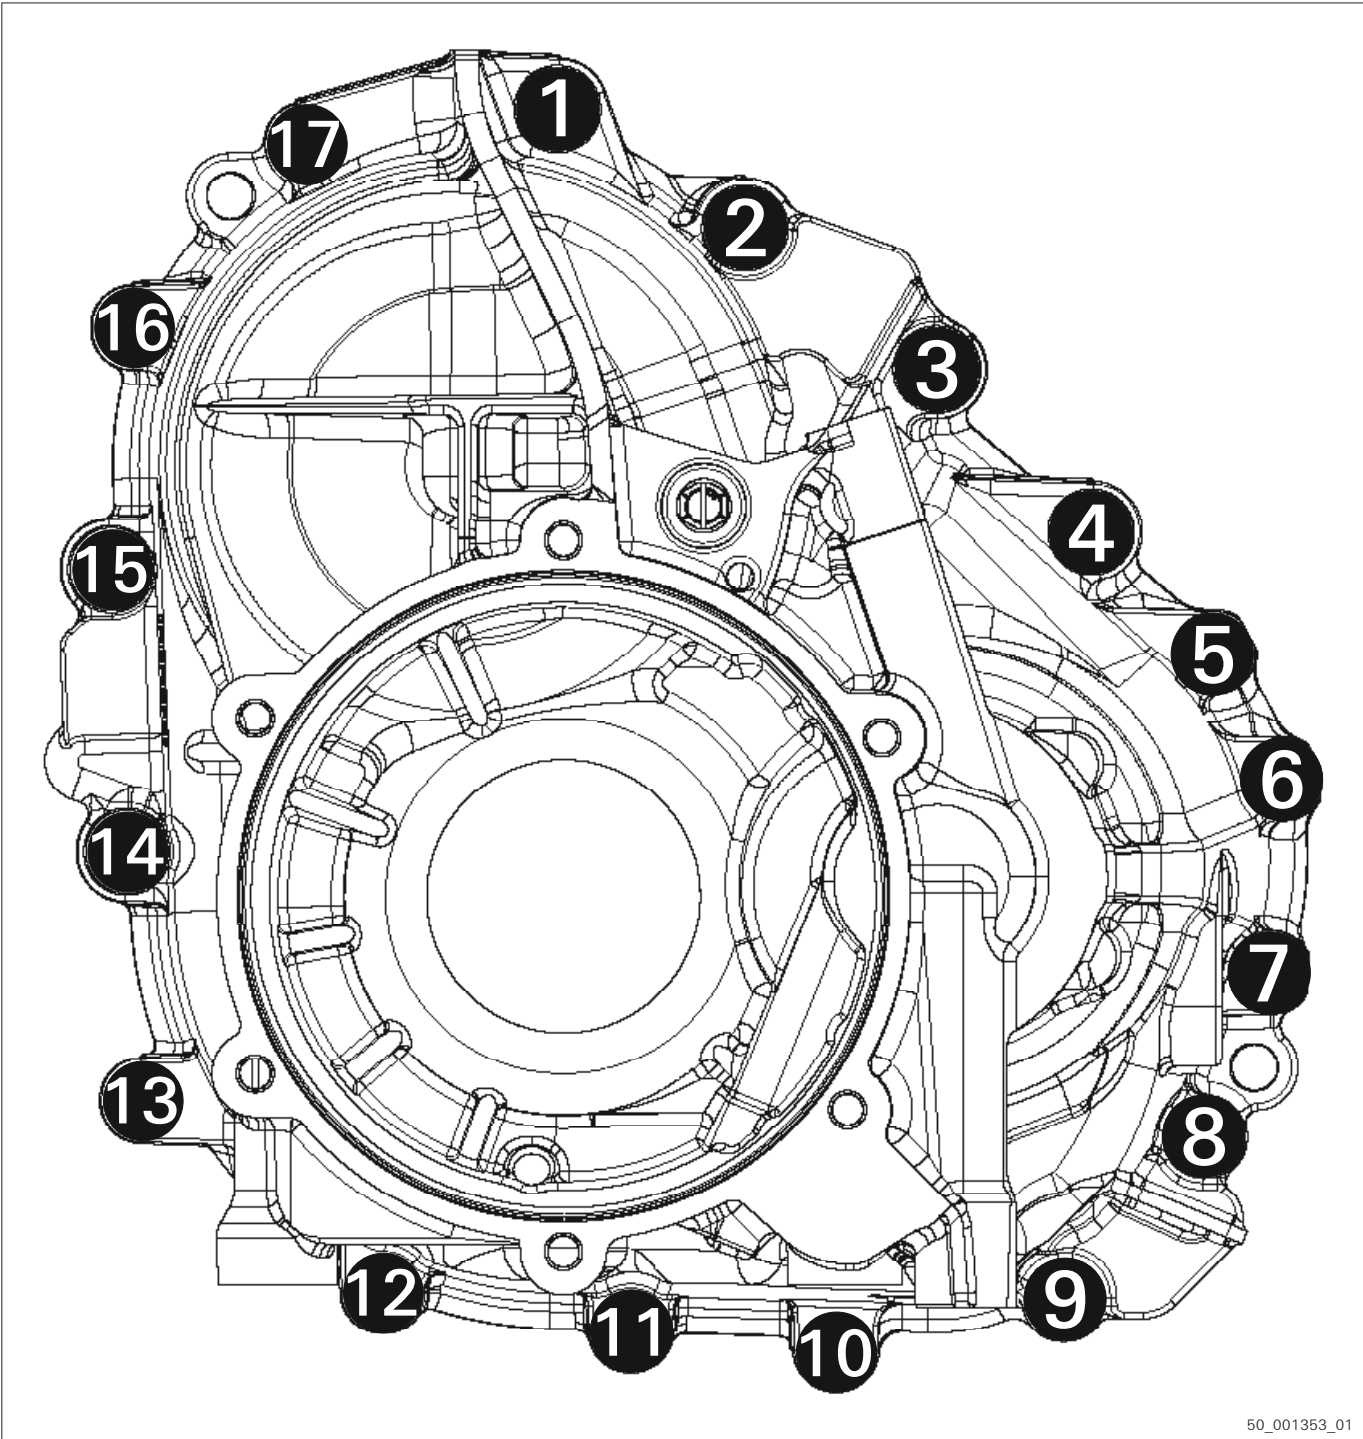

50_001353_01

Fig. 63 1103.700.033

Sequence	Screw position	Torque
1	8, 17, 12	6 Nm (± 1 Nm)
2	1-17	Torque according to the parts list entry

Tab. 24 Tightening sequence

20.3 1104.700.084 – intermediate housing

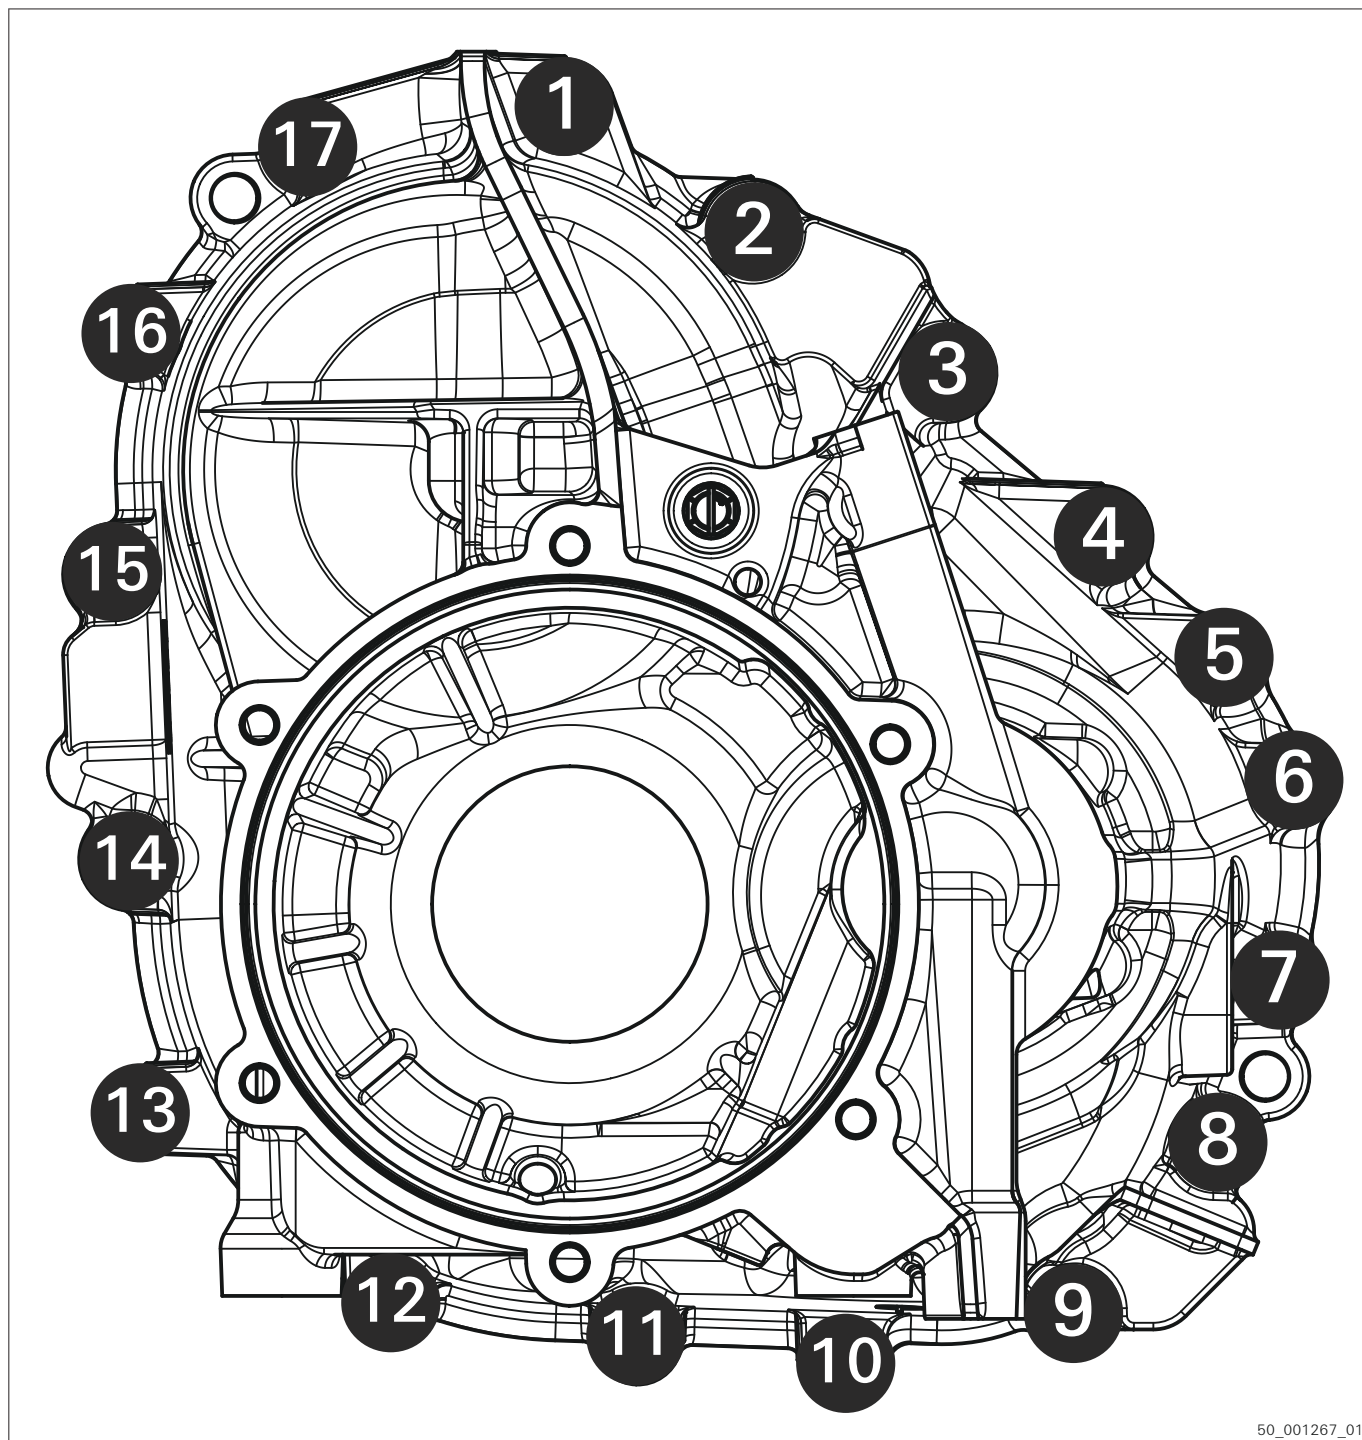


Fig. 64 1104.700.084

ZF Aftermarket

Service Information


Sequence	Screw position	Torque
1	8, 12, 17	6 Nm (± 1 Nm)
2	5-13	Torque according to the parts list entry
3	16, 17	Torque according to the parts list entry
4	14, 15	Torque according to the parts list entry
5	1-4	Torque according to the parts list entry

Tab. 25 Tightening sequence



21 Intermediate Plate Tightening Specifications


21.1 1087.700.133 – intermediate plate

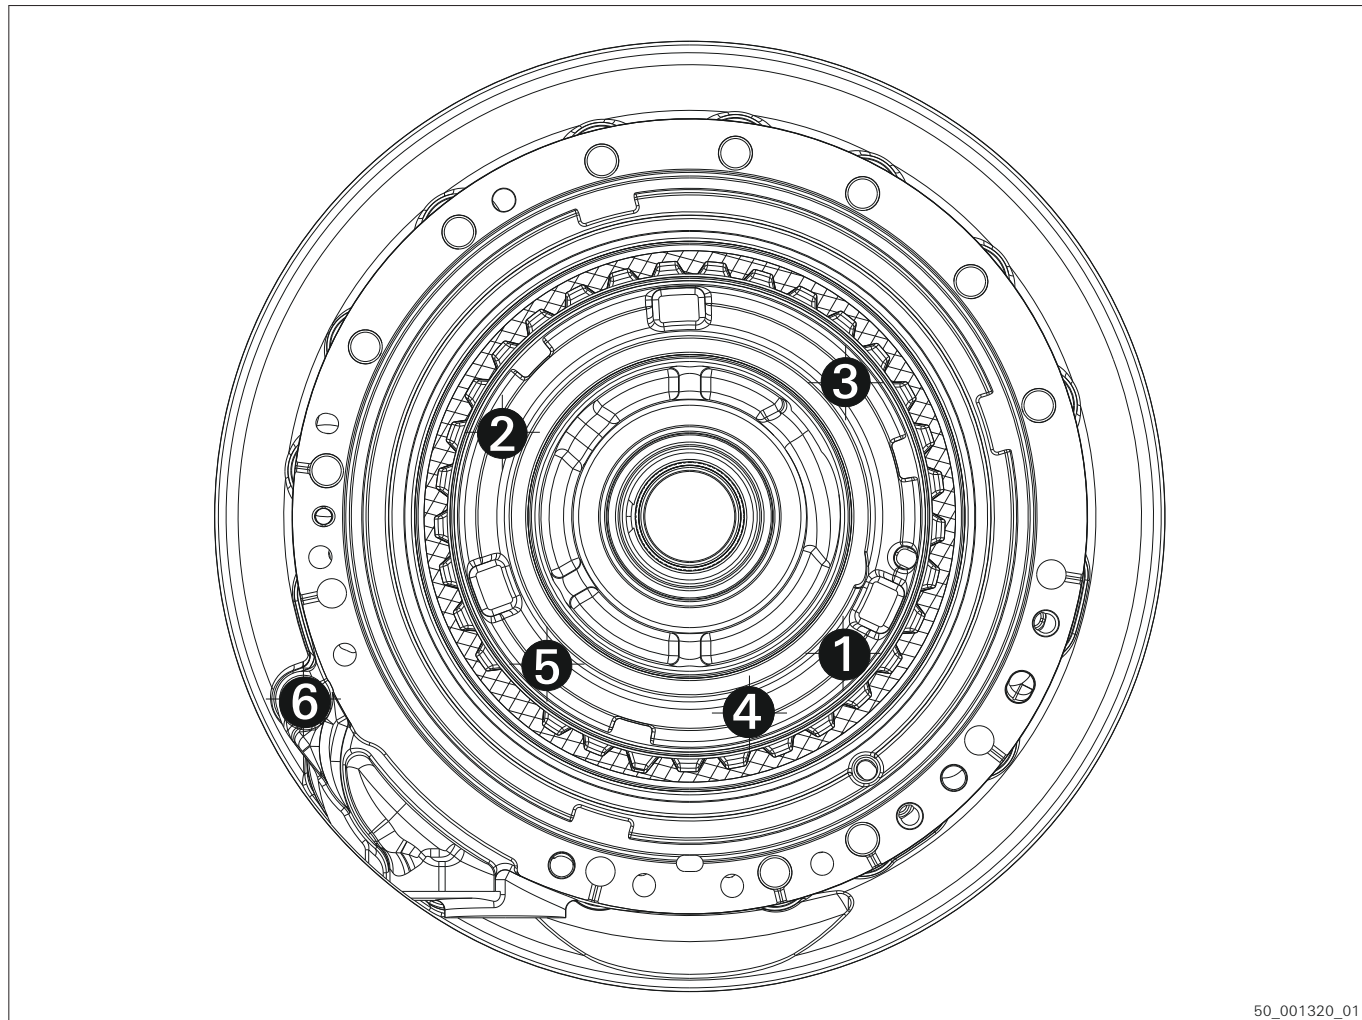

50_001320_01

Fig. 65 1087.700.133

ZF Aftermarket Service Information

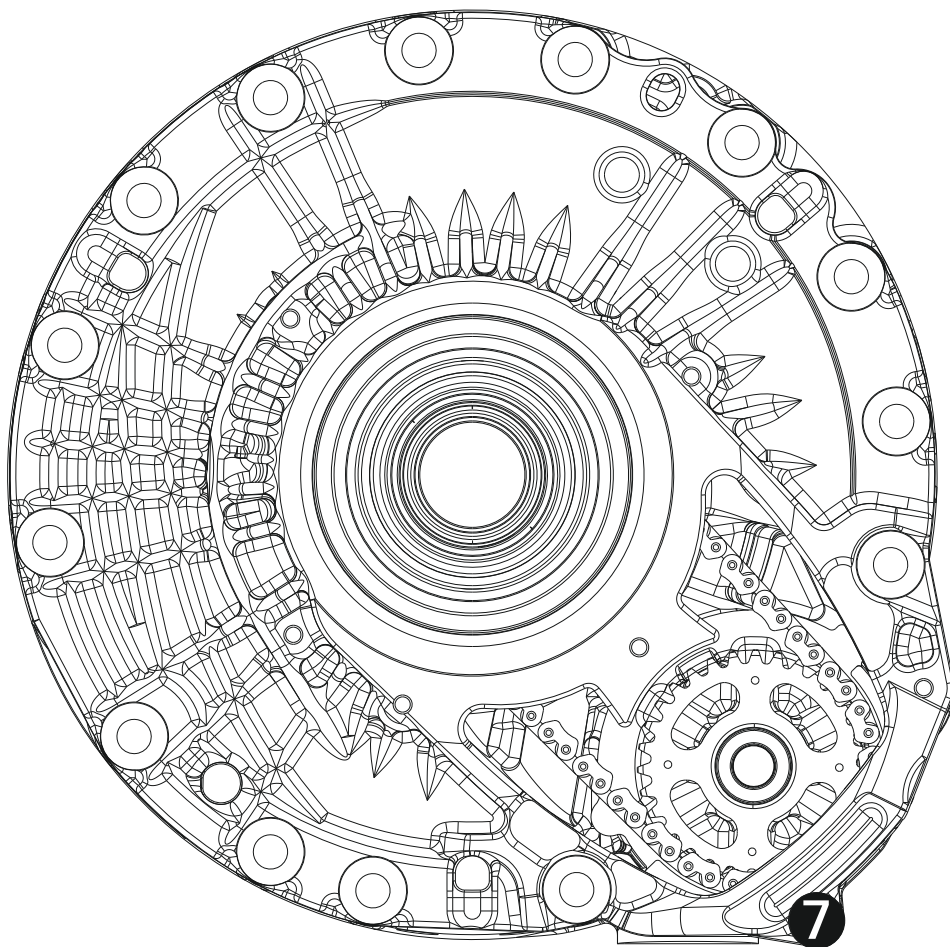

50_001321_01

Fig. 66 1087.700.133



AFTERMARKET


ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
79/312

21.2 1091.700.118 – intermediate plate

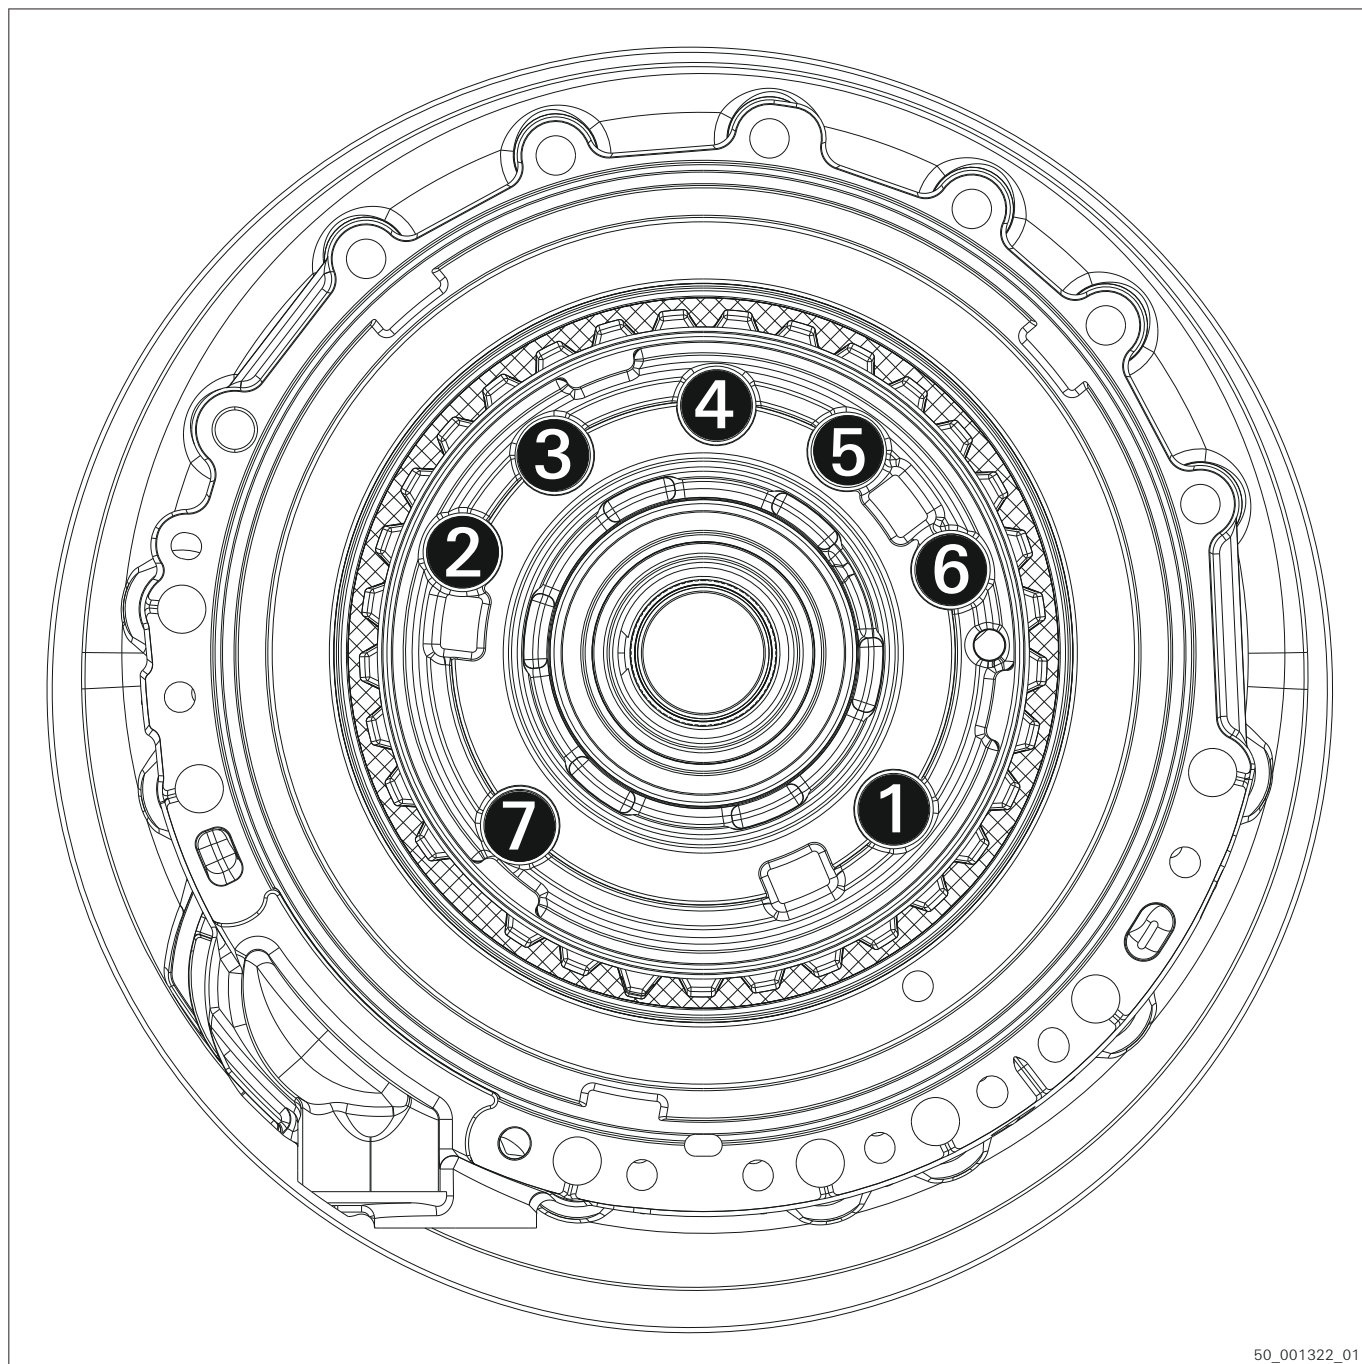

50_001322_01

Fig. 67 1091.700.118

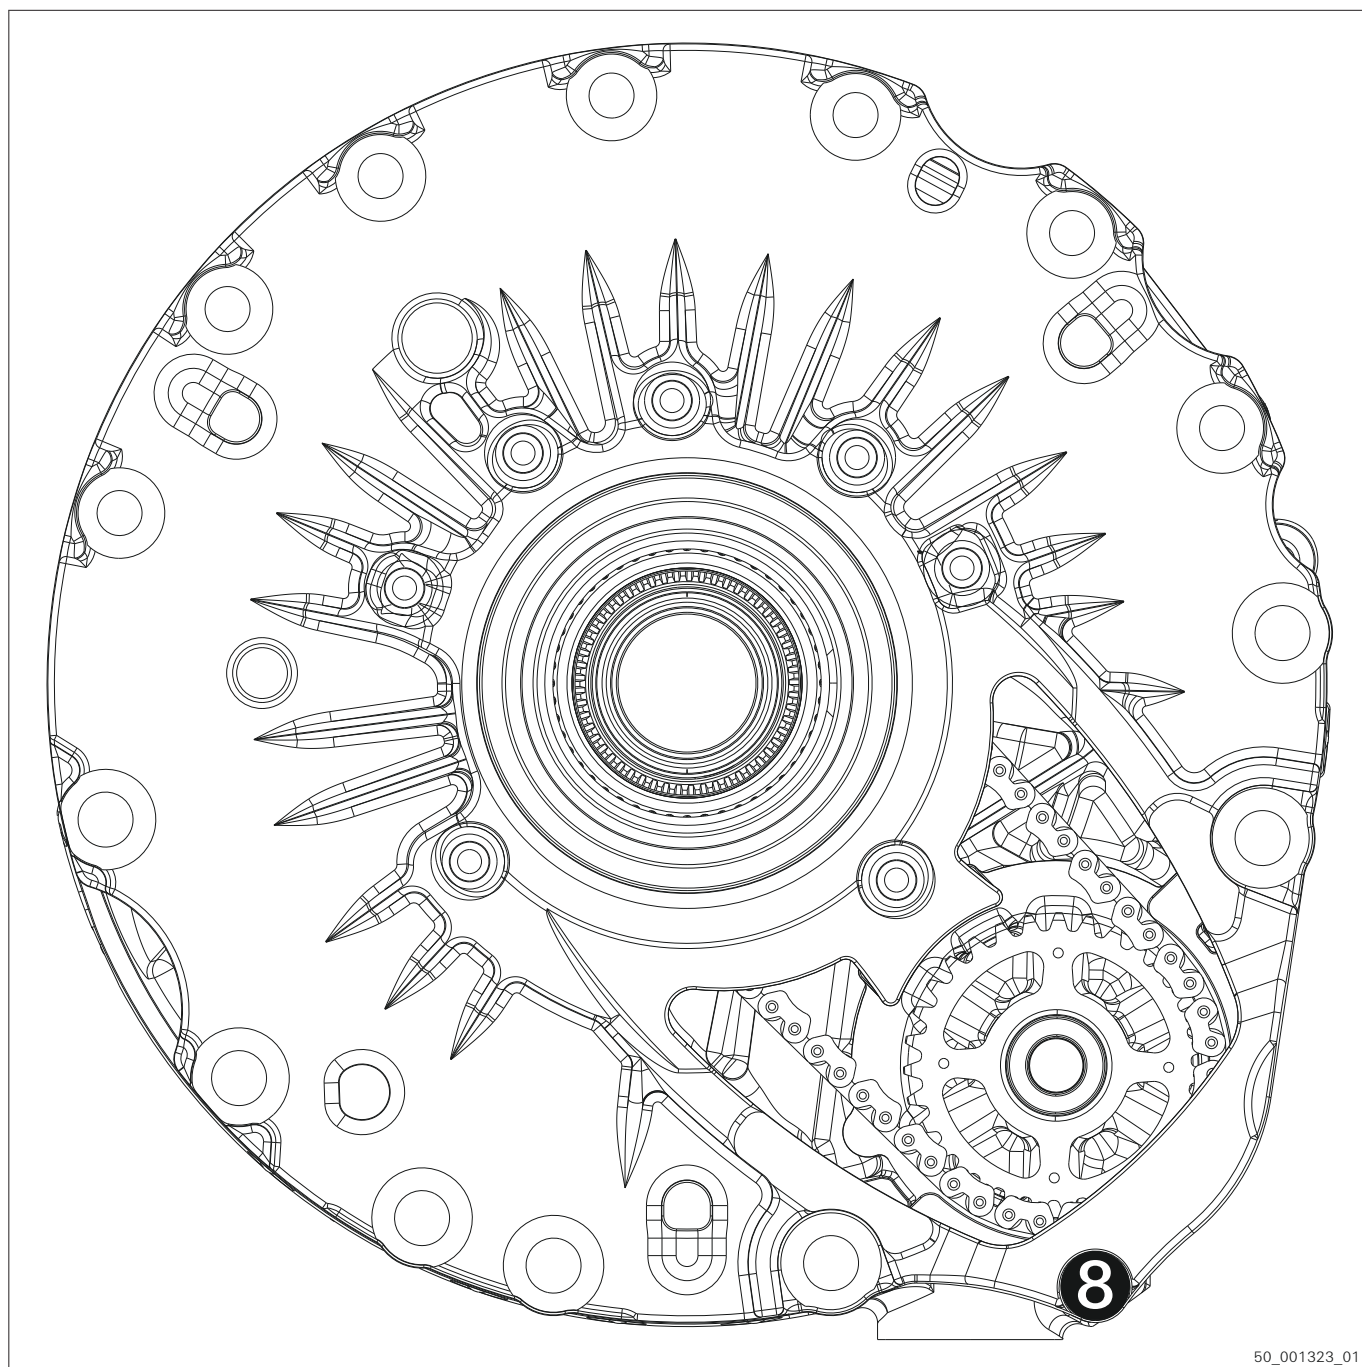



Fig. 68 1091.700.118

50_001323_01

ZF Aftermarket Service Information

21.3 1102.700.xxx

21.3.1 1102.700.067 – intermediate plate

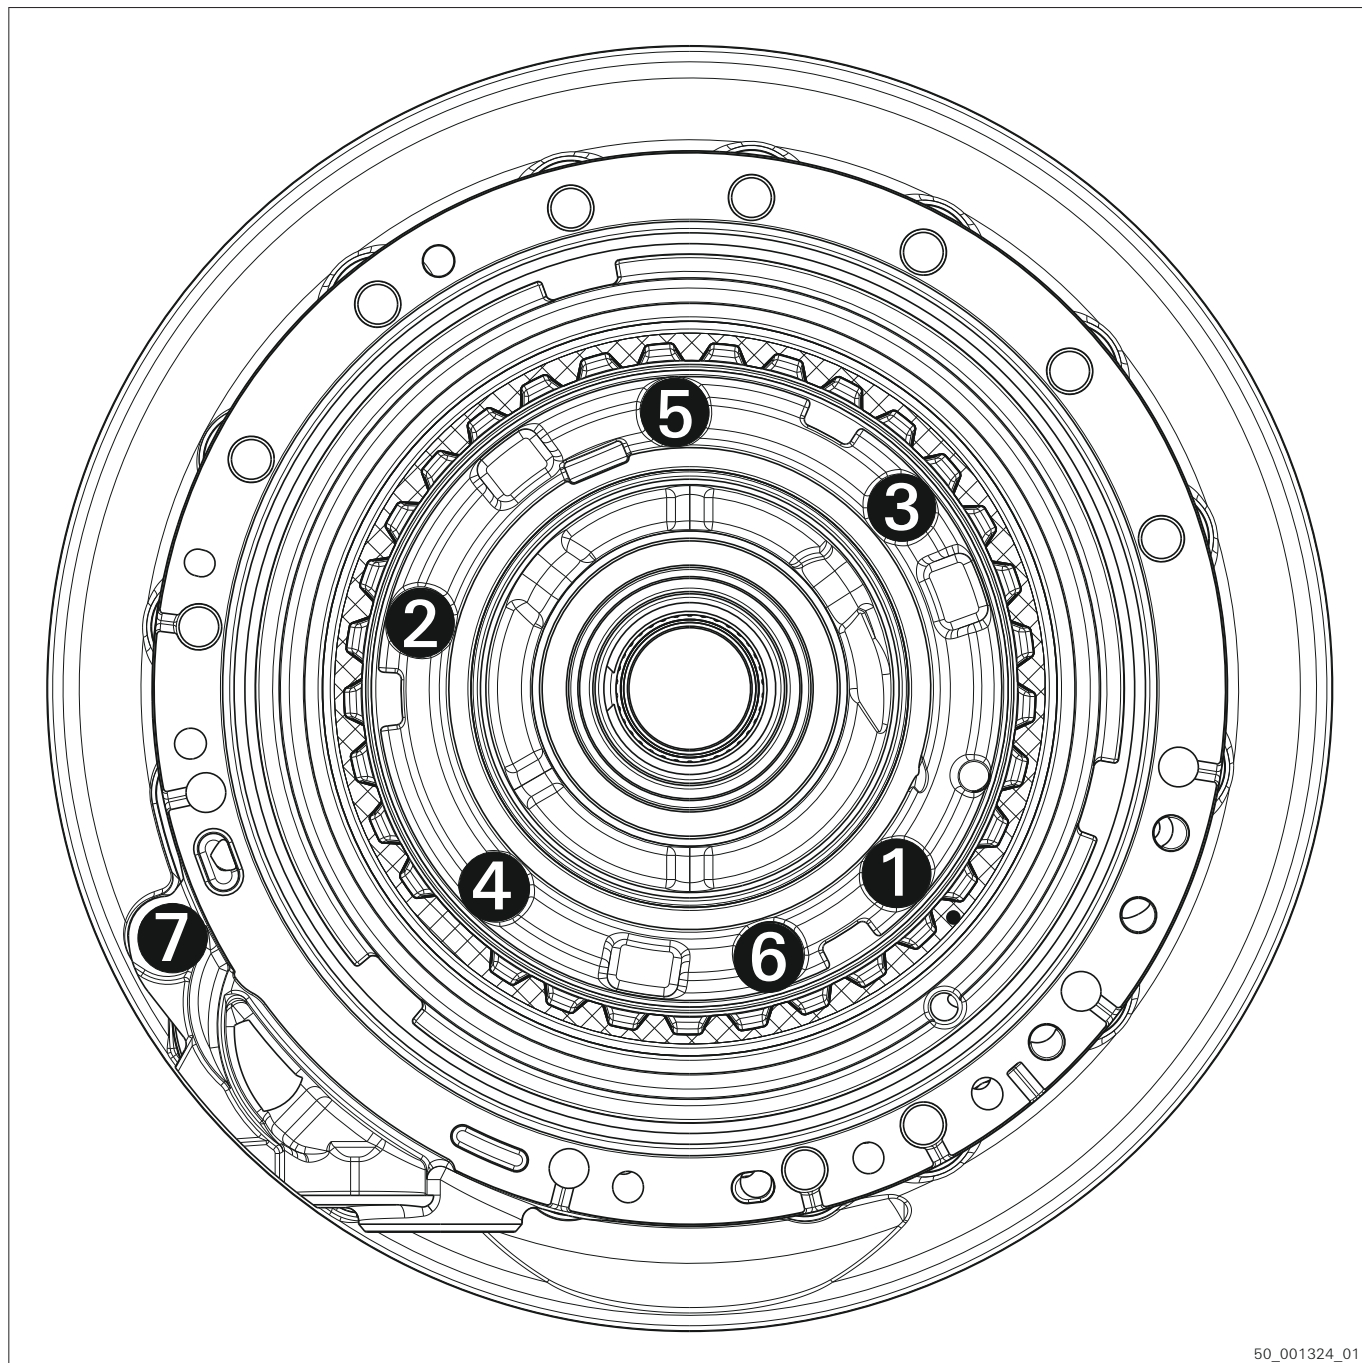

50_001324_01

Fig. 69 1102.700.067



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
82/312

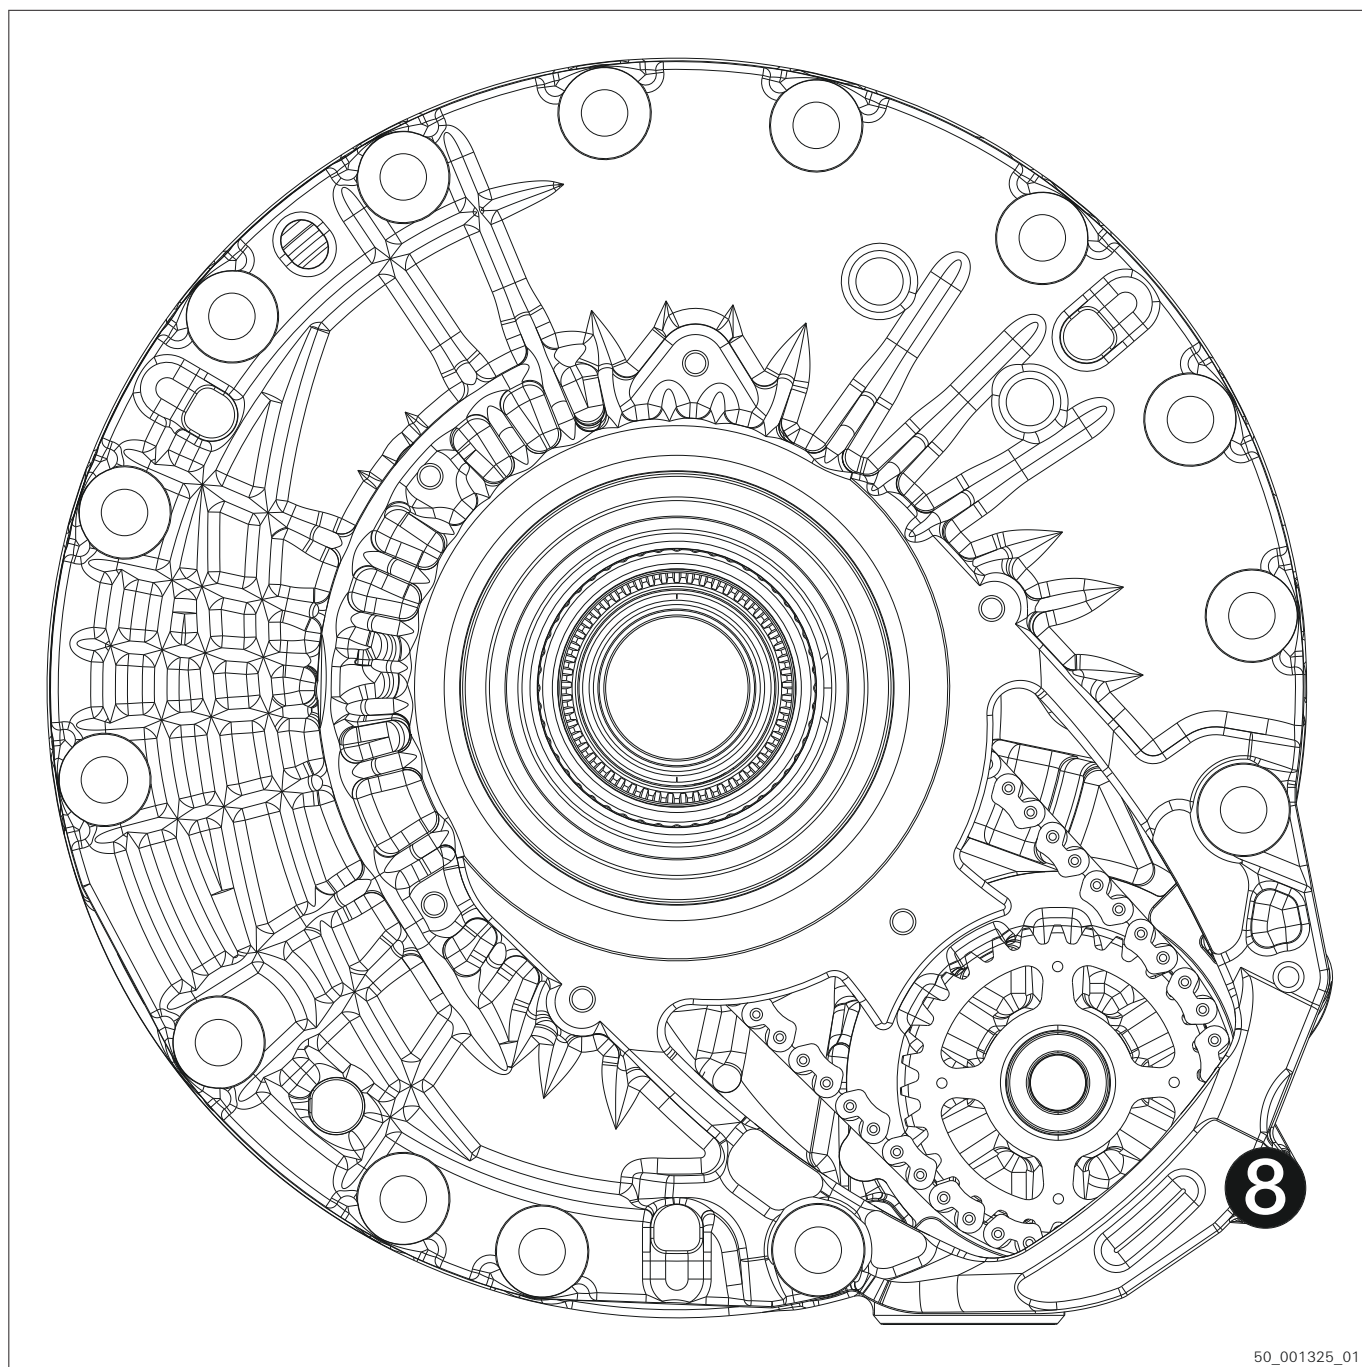


Fig. 70 1102.700.067

21.3.2 1102.700.067 – all-wheel intermediate plate

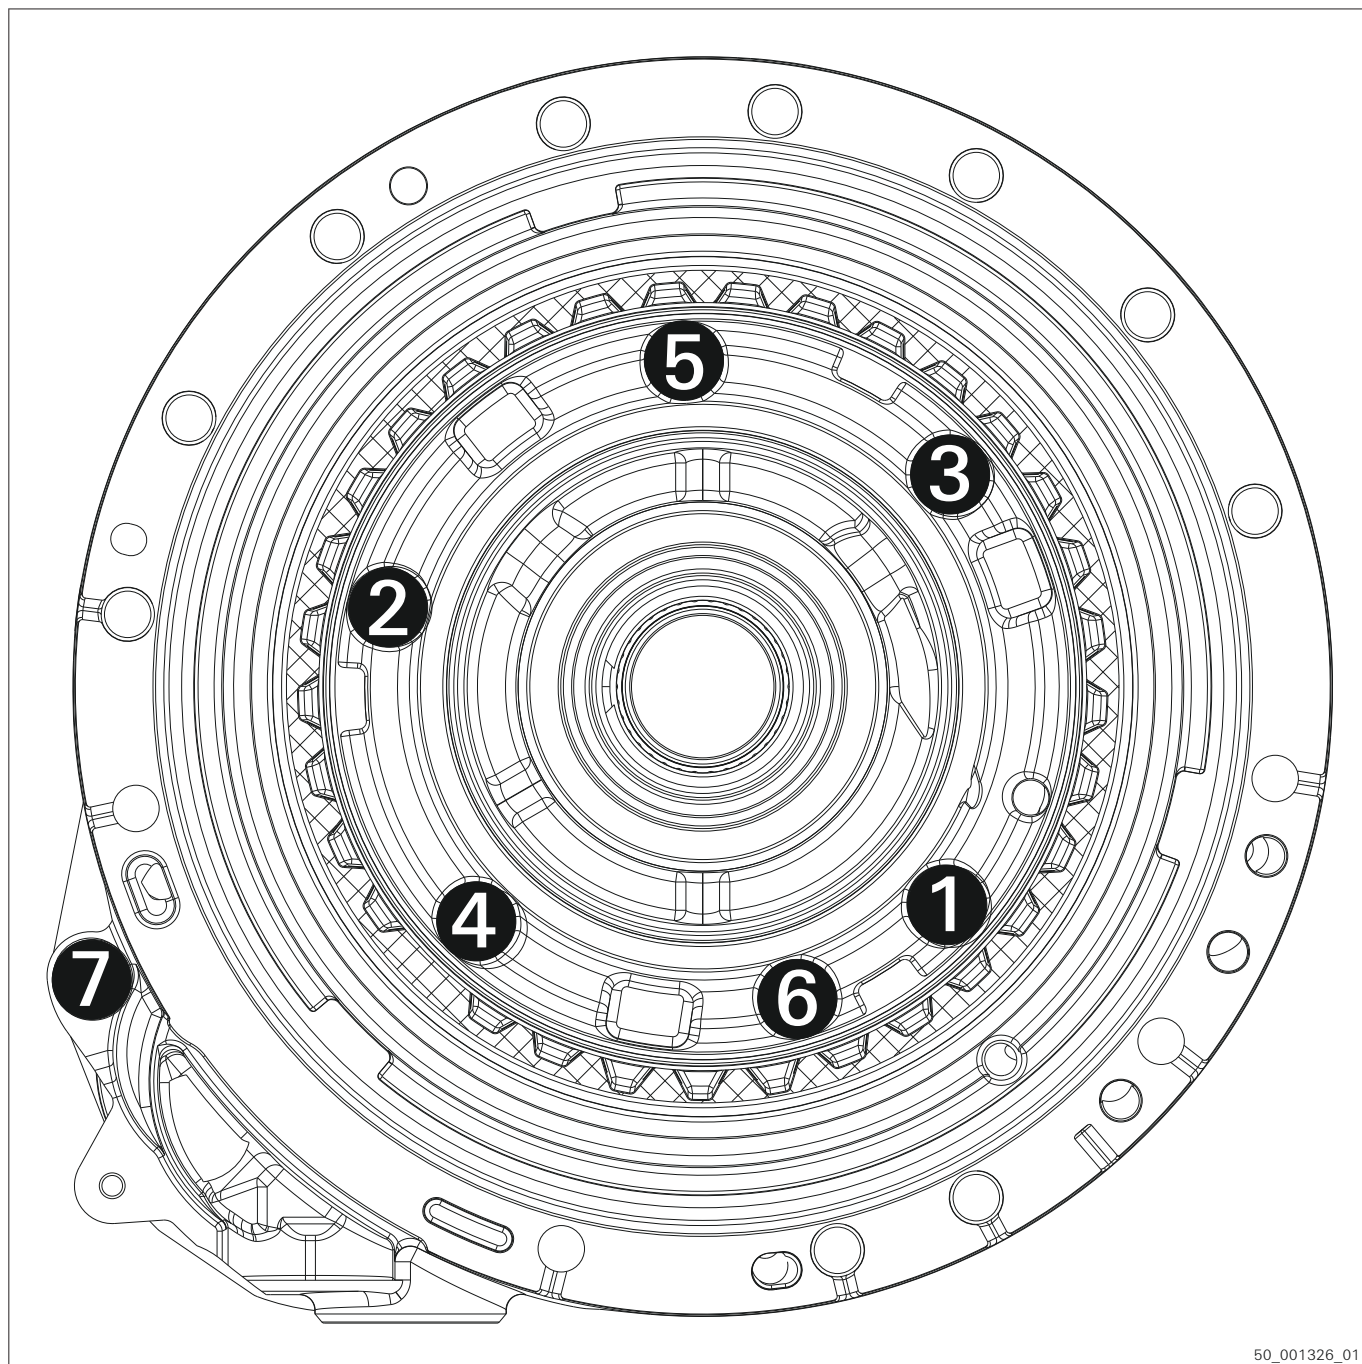


Fig. 71 1102.700.067

ZF Aftermarket Service Information

22 Allocation

22.1 Information on the allocation

The allocation is listed automatically based on our transmission database and is organized by transmission version. For secure allocation, the parts list [BoM] number on the type plate of the available transmission is always binding.

Any specification the transmission type is for information purposes only. Conclusions based only on the transmission type (e.g., 8HP70) can lead to the incorrect allocation of tightening specifications.



ZF Aftermarket Service Information

22.2 Model 1087

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70	1087.010.002	1087.700.079	Mechatronic
8HP70	1087.010.002	1087.700.136	Oil pan
8HP70	1087.010.002	1087.700.133	Intermediate plate
8HP70	1087.010.003	1087.700.079	Mechatronic
8HP70	1087.010.003	1087.700.136	Oil pan
8HP70	1087.010.003	1087.700.133	Intermediate plate
8HP70	1087.010.004	1087.700.079	Mechatronic
8HP70	1087.010.004	1087.700.136	Oil pan
8HP70	1087.010.004	1087.700.133	Intermediate plate
8HP70	1087.010.005	1087.700.079	Mechatronic
8HP70	1087.010.005	1087.700.136	Oil pan
8HP70	1087.010.005	1087.700.133	Intermediate plate
8HP70	1087.010.006	1087.700.079	Mechatronic
8HP70	1087.010.006	1087.700.136	Oil pan
8HP70	1087.010.006	1087.700.133	Intermediate plate
8HP70	1087.010.007	1087.700.079	Mechatronic
8HP70	1087.010.007	1087.700.136	Oil pan
8HP70	1087.010.007	1087.700.133	Intermediate plate
8HP70	1087.010.012	1087.700.079	Mechatronic
8HP70	1087.010.012	1087.700.136	Oil pan
8HP70	1087.010.012	1087.700.133	Intermediate plate
8HP70	1087.010.013	1087.700.079	Mechatronic
8HP70	1087.010.013	1087.700.136	Oil pan
8HP70	1087.010.013	1087.700.133	Intermediate plate
8HP70	1087.010.014	1087.700.079	Mechatronic
8HP70	1087.010.014	1087.700.136	Oil pan
8HP70	1087.010.014	1087.700.133	Intermediate plate
8HP70	1087.010.016	1087.700.079	Mechatronic
8HP70	1087.010.016	1087.700.136	Oil pan
8HP70	1087.010.016	1087.700.133	Intermediate plate
8HP70	1087.010.019	1087.700.079	Mechatronic
8HP70	1087.010.019	1087.700.136	Oil pan
8HP70	1087.010.019	1087.700.133	Intermediate plate
8HP70	1087.010.021	1087.700.079	Mechatronic
8HP70	1087.010.021	1087.700.136	Oil pan
8HP70	1087.010.021	1087.700.133	Intermediate plate
8HP70	1087.010.023	1087.700.079	Mechatronic
8HP70	1087.010.023	1087.700.136	Oil pan
8HP70	1087.010.023	1087.700.133	Intermediate plate
8HP70	1087.010.024	1087.700.079	Mechatronic
8HP70	1087.010.024	1087.700.136	Oil pan
8HP70	1087.010.024	1087.700.133	Intermediate plate
8HP70	1087.010.025	1087.700.079	Mechatronic
8HP70	1087.010.025	1087.700.136	Oil pan
8HP70	1087.010.025	1087.700.133	Intermediate plate
8HP70	1087.010.026	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
86/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70	1087.010.026	1087.700.136	Oil pan
8HP70	1087.010.026	1087.700.133	Intermediate plate
8HP70	1087.010.028	1087.700.079	Mechatronic
8HP70	1087.010.028	1087.700.136	Oil pan
8HP70	1087.010.028	1087.700.133	Intermediate plate
8HP70	1087.010.029	1087.700.079	Mechatronic
8HP70	1087.010.029	1087.700.136	Oil pan
8HP70	1087.010.029	1087.700.133	Intermediate plate
8HP70	1087.010.031	1087.700.079	Mechatronic
8HP70	1087.010.031	1087.700.136	Oil pan
8HP70	1087.010.031	1087.700.133	Intermediate plate
8HP70	1087.010.033	1087.700.079	Mechatronic
8HP70	1087.010.033	1087.700.136	Oil pan
8HP70	1087.010.033	1087.700.133	Intermediate plate
8HP70	1087.010.034	1087.700.079	Mechatronic
8HP70	1087.010.034	1087.700.136	Oil pan
8HP70	1087.010.034	1087.700.133	Intermediate plate
8HP70	1087.010.036	1087.700.079	Mechatronic
8HP70	1087.010.036	1087.700.136	Oil pan
8HP70	1087.010.036	1087.700.133	Intermediate plate
8HP70	1087.010.037	1087.700.079	Mechatronic
8HP70	1087.010.037	1087.700.136	Oil pan
8HP70	1087.010.037	1087.700.133	Intermediate plate
8HP70	1087.010.038	1087.700.079	Mechatronic
8HP70	1087.010.038	1087.700.136	Oil pan
8HP70	1087.010.038	1087.700.133	Intermediate plate
8HP70	1087.010.039	1087.700.079	Mechatronic
8HP70	1087.010.039	1087.700.136	Oil pan
8HP70	1087.010.039	1087.700.133	Intermediate plate
8HP70	1087.010.040	1087.700.079	Mechatronic
8HP70	1087.010.040	1087.700.136	Oil pan
8HP70	1087.010.040	1087.700.133	Intermediate plate
8HP70	1087.010.043	1087.700.079	Mechatronic
8HP70	1087.010.043	1087.700.136	Oil pan
8HP70	1087.010.043	1087.700.133	Intermediate plate
8HP70	1087.010.044	1087.700.079	Mechatronic
8HP70	1087.010.044	1087.700.136	Oil pan
8HP70	1087.010.044	1087.700.133	Intermediate plate
8HP70	1087.010.045	1087.700.079	Mechatronic
8HP70	1087.010.045	1087.700.136	Oil pan
8HP70	1087.010.045	1087.700.133	Intermediate plate
8HP70	1087.010.046	1087.700.079	Mechatronic
8HP70	1087.010.046	1087.700.136	Oil pan
8HP70	1087.010.046	1087.700.133	Intermediate plate
8HP70	1087.010.047	1087.700.079	Mechatronic
8HP70	1087.010.047	1087.700.136	Oil pan
8HP70	1087.010.047	1087.700.133	Intermediate plate
8HP70	1087.010.048	1087.700.079	Mechatronic
8HP70	1087.010.048	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
87/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70	1087.010.048	1087.700.133	Intermediate plate
8HP70	1087.010.052	1087.700.079	Mechatronic
8HP70	1087.010.052	1087.700.136	Oil pan
8HP70	1087.010.052	1087.700.133	Intermediate plate
8HP70	1087.010.053	1087.700.079	Mechatronic
8HP70	1087.010.053	1087.700.136	Oil pan
8HP70	1087.010.053	1087.700.133	Intermediate plate
8HP70	1087.010.054	1087.700.079	Mechatronic
8HP70	1087.010.054	1087.700.136	Oil pan
8HP70	1087.010.054	1087.700.133	Intermediate plate
8HP70	1087.010.055	1087.700.079	Mechatronic
8HP70	1087.010.055	1087.700.136	Oil pan
8HP70	1087.010.055	1087.700.133	Intermediate plate
8HP70	1087.010.056	1087.700.079	Mechatronic
8HP70	1087.010.056	1087.700.136	Oil pan
8HP70	1087.010.056	1087.700.133	Intermediate plate
8HP70	1087.010.057	1087.700.079	Mechatronic
8HP70	1087.010.057	1087.700.136	Oil pan
8HP70	1087.010.057	1087.700.133	Intermediate plate
8HP70	1087.010.058	1087.700.079	Mechatronic
8HP70	1087.010.058	1087.700.136	Oil pan
8HP70	1087.010.058	1087.700.133	Intermediate plate
8HP70	1087.010.059	1087.700.079	Mechatronic
8HP70	1087.010.059	1087.700.136	Oil pan
8HP70	1087.010.059	1087.700.133	Intermediate plate
8HP70	1087.010.060	1087.700.079	Mechatronic
8HP70	1087.010.060	1087.700.136	Oil pan
8HP70	1087.010.060	1087.700.133	Intermediate plate
8HP70	1087.010.061	1087.700.079	Mechatronic
8HP70	1087.010.061	1087.700.136	Oil pan
8HP70	1087.010.061	1087.700.133	Intermediate plate
8HP70	1087.010.062	1087.700.079	Mechatronic
8HP70	1087.010.062	1087.700.136	Oil pan
8HP70	1087.010.062	1087.700.133	Intermediate plate
8HP70	1087.010.063	1087.700.079	Mechatronic
8HP70	1087.010.063	1087.700.136	Oil pan
8HP70	1087.010.063	1087.700.133	Intermediate plate
8HP70	1087.010.069	1087.700.079	Mechatronic
8HP70	1087.010.069	1087.700.136	Oil pan
8HP70	1087.010.069	1087.700.133	Intermediate plate
8HP70	1087.010.070	1087.700.079	Mechatronic
8HP70	1087.010.070	1087.700.136	Oil pan
8HP70	1087.010.070	1087.700.133	Intermediate plate
8HP70	1087.010.071	1087.700.079	Mechatronic
8HP70	1087.010.071	1087.700.136	Oil pan
8HP70	1087.010.071	1087.700.133	Intermediate plate
8HP70	1087.010.073	1087.700.079	Mechatronic
8HP70	1087.010.073	1087.700.136	Oil pan
8HP70	1087.010.073	1087.700.133	Intermediate plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
88/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70	1087.010.078	1087.700.079	Mechatronic
8HP70	1087.010.078	1087.700.136	Oil pan
8HP70	1087.010.078	1087.700.133	Intermediate plate
8HP70	1087.010.080	1087.700.079	Mechatronic
8HP70	1087.010.080	1087.700.136	Oil pan
8HP70	1087.010.080	1087.700.133	Intermediate plate
8HP70	1087.010.081	1087.700.079	Mechatronic
8HP70	1087.010.081	1087.700.136	Oil pan
8HP70	1087.010.081	1087.700.133	Intermediate plate
8HP70	1087.010.082	1087.700.079	Mechatronic
8HP70	1087.010.082	1087.700.136	Oil pan
8HP70	1087.010.082	1087.700.133	Intermediate plate
8HP70	1087.010.083	1087.700.079	Mechatronic
8HP70	1087.010.083	1087.700.136	Oil pan
8HP70	1087.010.083	1087.700.133	Intermediate plate
8HP70	1087.010.084	1087.700.079	Mechatronic
8HP70	1087.010.084	1087.700.136	Oil pan
8HP70	1087.010.084	1087.700.133	Intermediate plate
8HP70	1087.010.085	1087.700.079	Mechatronic
8HP70	1087.010.085	1087.700.136	Oil pan
8HP70	1087.010.085	1087.700.133	Intermediate plate
8HP70	1087.010.086	1087.700.079	Mechatronic
8HP70	1087.010.086	1087.700.136	Oil pan
8HP70	1087.010.086	1087.700.133	Intermediate plate
8HP70	1087.010.088	1087.700.079	Mechatronic
8HP70	1087.010.088	1087.700.136	Oil pan
8HP70	1087.010.088	1087.700.133	Intermediate plate
8HP70	1087.010.089	1087.700.079	Mechatronic
8HP70	1087.010.089	1087.700.136	Oil pan
8HP70	1087.010.089	1087.700.133	Intermediate plate
8HP70	1087.010.090	1087.700.079	Mechatronic
8HP70	1087.010.090	1087.700.136	Oil pan
8HP70	1087.010.090	1087.700.133	Intermediate plate
8HP70	1087.010.091	1087.700.079	Mechatronic
8HP70	1087.010.091	1087.700.136	Oil pan
8HP70	1087.010.091	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.002	1087.700.079	Mechatronic
8HP70 HIS	1087.014.002	1087.700.136	Oil pan
8HP70 HIS	1087.014.002	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.007	1087.700.079	Mechatronic
8HP70 HIS	1087.014.007	1087.700.136	Oil pan
8HP70 HIS	1087.014.007	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.008	1087.700.079	Mechatronic
8HP70 HIS	1087.014.008	1087.700.136	Oil pan
8HP70 HIS	1087.014.008	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.009	1087.700.079	Mechatronic
8HP70 HIS	1087.014.009	1087.700.136	Oil pan
8HP70 HIS	1087.014.009	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.010	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
89/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70 HIS	1087.014.010	1087.700.136	Oil pan
8HP70 HIS	1087.014.010	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.011	1087.700.079	Mechatronic
8HP70 HIS	1087.014.011	1087.700.136	Oil pan
8HP70 HIS	1087.014.011	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.012	1087.700.079	Mechatronic
8HP70 HIS	1087.014.012	1087.700.136	Oil pan
8HP70 HIS	1087.014.012	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.017	1087.700.079	Mechatronic
8HP70 HIS	1087.014.017	1087.700.136	Oil pan
8HP70 HIS	1087.014.017	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.022	1087.700.079	Mechatronic
8HP70 HIS	1087.014.022	1087.700.136	Oil pan
8HP70 HIS	1087.014.022	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.024	1087.700.079	Mechatronic
8HP70 HIS	1087.014.024	1087.700.136	Oil pan
8HP70 HIS	1087.014.024	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.025	1087.700.079	Mechatronic
8HP70 HIS	1087.014.025	1087.700.136	Oil pan
8HP70 HIS	1087.014.025	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.026	1087.700.079	Mechatronic
8HP70 HIS	1087.014.026	1087.700.136	Oil pan
8HP70 HIS	1087.014.026	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.027	1087.700.079	Mechatronic
8HP70 HIS	1087.014.027	1087.700.136	Oil pan
8HP70 HIS	1087.014.027	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.033	1087.700.079	Mechatronic
8HP70 HIS	1087.014.033	1087.700.136	Oil pan
8HP70 HIS	1087.014.033	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.034	1087.700.079	Mechatronic
8HP70 HIS	1087.014.034	1087.700.136	Oil pan
8HP70 HIS	1087.014.034	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.036	1087.700.079	Mechatronic
8HP70 HIS	1087.014.036	1087.700.136	Oil pan
8HP70 HIS	1087.014.036	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.037	1087.700.079	Mechatronic
8HP70 HIS	1087.014.037	1087.700.136	Oil pan
8HP70 HIS	1087.014.037	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.038	1087.700.079	Mechatronic
8HP70 HIS	1087.014.038	1087.700.136	Oil pan
8HP70 HIS	1087.014.038	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.039	1087.700.079	Mechatronic
8HP70 HIS	1087.014.039	1087.700.136	Oil pan
8HP70 HIS	1087.014.039	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.040	1087.700.079	Mechatronic
8HP70 HIS	1087.014.040	1087.700.136	Oil pan
8HP70 HIS	1087.014.040	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.046	1087.700.079	Mechatronic
8HP70 HIS	1087.014.046	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
90/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70 HIS	1087.014.046	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.047	1087.700.079	Mechatronic
8HP70 HIS	1087.014.047	1087.700.136	Oil pan
8HP70 HIS	1087.014.047	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.048	1087.700.079	Mechatronic
8HP70 HIS	1087.014.048	1087.700.136	Oil pan
8HP70 HIS	1087.014.048	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.049	1087.700.079	Mechatronic
8HP70 HIS	1087.014.049	1087.700.136	Oil pan
8HP70 HIS	1087.014.049	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.050	1087.700.079	Mechatronic
8HP70 HIS	1087.014.050	1087.700.136	Oil pan
8HP70 HIS	1087.014.050	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.052	1087.700.079	Mechatronic
8HP70 HIS	1087.014.052	1087.700.136	Oil pan
8HP70 HIS	1087.014.052	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.054	1087.700.079	Mechatronic
8HP70 HIS	1087.014.054	1087.700.136	Oil pan
8HP70 HIS	1087.014.054	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.057	1087.700.079	Mechatronic
8HP70 HIS	1087.014.057	1087.700.136	Oil pan
8HP70 HIS	1087.014.057	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.058	1087.700.079	Mechatronic
8HP70 HIS	1087.014.058	1087.700.136	Oil pan
8HP70 HIS	1087.014.058	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.059	1087.700.079	Mechatronic
8HP70 HIS	1087.014.059	1087.700.136	Oil pan
8HP70 HIS	1087.014.059	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.060	1087.700.079	Mechatronic
8HP70 HIS	1087.014.060	1087.700.136	Oil pan
8HP70 HIS	1087.014.060	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.061	1087.700.079	Mechatronic
8HP70 HIS	1087.014.061	1087.700.136	Oil pan
8HP70 HIS	1087.014.061	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.062	1087.700.079	Mechatronic
8HP70 HIS	1087.014.062	1087.700.136	Oil pan
8HP70 HIS	1087.014.062	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.067	1087.700.079	Mechatronic
8HP70 HIS	1087.014.067	1087.700.136	Oil pan
8HP70 HIS	1087.014.067	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.068	1087.700.079	Mechatronic
8HP70 HIS	1087.014.068	1087.700.136	Oil pan
8HP70 HIS	1087.014.068	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.069	1087.700.079	Mechatronic
8HP70 HIS	1087.014.069	1087.700.136	Oil pan
8HP70 HIS	1087.014.069	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.070	1087.700.079	Mechatronic
8HP70 HIS	1087.014.070	1087.700.136	Oil pan
8HP70 HIS	1087.014.070	1087.700.133	Intermediate plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
91/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70 HIS	1087.014.071	1087.700.079	Mechatronic
8HP70 HIS	1087.014.071	1087.700.136	Oil pan
8HP70 HIS	1087.014.071	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.073	1087.700.079	Mechatronic
8HP70 HIS	1087.014.073	1087.700.136	Oil pan
8HP70 HIS	1087.014.073	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.074	1087.700.079	Mechatronic
8HP70 HIS	1087.014.074	1087.700.136	Oil pan
8HP70 HIS	1087.014.074	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.075	1087.700.079	Mechatronic
8HP70 HIS	1087.014.075	1087.700.136	Oil pan
8HP70 HIS	1087.014.075	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.076	1087.700.079	Mechatronic
8HP70 HIS	1087.014.076	1087.700.136	Oil pan
8HP70 HIS	1087.014.076	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.078	1087.700.079	Mechatronic
8HP70 HIS	1087.014.078	1087.700.136	Oil pan
8HP70 HIS	1087.014.078	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.083	1087.700.079	Mechatronic
8HP70 HIS	1087.014.083	1087.700.136	Oil pan
8HP70 HIS	1087.014.083	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.087	1087.700.079	Mechatronic
8HP70 HIS	1087.014.087	1087.700.136	Oil pan
8HP70 HIS	1087.014.087	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.090	1087.700.079	Mechatronic
8HP70 HIS	1087.014.090	1087.700.136	Oil pan
8HP70 HIS	1087.014.090	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.092	1087.700.079	Mechatronic
8HP70 HIS	1087.014.092	1087.700.136	Oil pan
8HP70 HIS	1087.014.092	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.093	1087.700.079	Mechatronic
8HP70 HIS	1087.014.093	1087.700.136	Oil pan
8HP70 HIS	1087.014.093	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.096	1087.700.079	Mechatronic
8HP70 HIS	1087.014.096	1087.700.136	Oil pan
8HP70 HIS	1087.014.096	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.097	1087.700.079	Mechatronic
8HP70 HIS	1087.014.097	1087.700.136	Oil pan
8HP70 HIS	1087.014.097	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.098	1087.700.079	Mechatronic
8HP70 HIS	1087.014.098	1087.700.136	Oil pan
8HP70 HIS	1087.014.098	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.100	1087.700.079	Mechatronic
8HP70 HIS	1087.014.100	1087.700.136	Oil pan
8HP70 HIS	1087.014.100	1087.700.133	Intermediate plate
8HP70 HIS	1087.014.101	1087.700.079	Mechatronic
8HP70 HIS	1087.014.101	1087.700.136	Oil pan
8HP70 HIS	1087.014.101	1087.700.133	Intermediate plate
8HP70X	1087.020.002	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
92/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X	1087.020.002	1087.700.136	Oil pan
8HP70X	1087.020.002	1087.700.133	Intermediate plate
8HP70X	1087.020.003	1087.700.079	Mechatronic
8HP70X	1087.020.003	1087.700.136	Oil pan
8HP70X	1087.020.003	1087.700.133	Intermediate plate
8HP70X	1087.020.004	1087.700.079	Mechatronic
8HP70X	1087.020.004	1087.700.136	Oil pan
8HP70X	1087.020.004	1087.700.133	Intermediate plate
8HP70X	1087.020.005	1087.700.079	Mechatronic
8HP70X	1087.020.005	1087.700.136	Oil pan
8HP70X	1087.020.005	1087.700.133	Intermediate plate
8HP70X	1087.020.007	1087.700.079	Mechatronic
8HP70X	1087.020.007	1087.700.136	Oil pan
8HP70X	1087.020.007	1087.700.133	Intermediate plate
8HP70X	1087.020.008	1087.700.079	Mechatronic
8HP70X	1087.020.008	1087.700.136	Oil pan
8HP70X	1087.020.008	1087.700.133	Intermediate plate
8HP70X	1087.020.009	1087.700.079	Mechatronic
8HP70X	1087.020.009	1087.700.136	Oil pan
8HP70X	1087.020.009	1087.700.133	Intermediate plate
8HP70X	1087.020.010	1087.700.079	Mechatronic
8HP70X	1087.020.010	1087.700.136	Oil pan
8HP70X	1087.020.010	1087.700.133	Intermediate plate
8HP70X	1087.020.011	1087.700.079	Mechatronic
8HP70X	1087.020.011	1087.700.136	Oil pan
8HP70X	1087.020.011	1087.700.133	Intermediate plate
8HP70X	1087.020.012	1087.700.079	Mechatronic
8HP70X	1087.020.012	1087.700.136	Oil pan
8HP70X	1087.020.012	1087.700.133	Intermediate plate
8HP70X	1087.020.013	1087.700.079	Mechatronic
8HP70X	1087.020.013	1087.700.136	Oil pan
8HP70X	1087.020.013	1087.700.133	Intermediate plate
8HP70X	1087.020.014	1087.700.079	Mechatronic
8HP70X	1087.020.014	1087.700.136	Oil pan
8HP70X	1087.020.014	1087.700.133	Intermediate plate
8HP70X	1087.020.016	1087.700.079	Mechatronic
8HP70X	1087.020.016	1087.700.136	Oil pan
8HP70X	1087.020.016	1087.700.133	Intermediate plate
8HP70X	1087.020.017	1087.700.079	Mechatronic
8HP70X	1087.020.017	1087.700.136	Oil pan
8HP70X	1087.020.017	1087.700.133	Intermediate plate
8HP70X	1087.020.018	1087.700.079	Mechatronic
8HP70X	1087.020.018	1087.700.136	Oil pan
8HP70X	1087.020.018	1087.700.133	Intermediate plate
8HP70X	1087.020.023	1087.700.079	Mechatronic
8HP70X	1087.020.023	1087.700.136	Oil pan
8HP70X	1087.020.023	1087.700.133	Intermediate plate
8HP70X	1087.020.025	1087.700.079	Mechatronic
8HP70X	1087.020.025	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
93/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X	1087.020.025	1087.700.133	Intermediate plate
8HP70X	1087.020.027	1087.700.079	Mechatronic
8HP70X	1087.020.027	1087.700.136	Oil pan
8HP70X	1087.020.027	1090.700.141	Extension
8HP70X	1087.020.027	1087.700.133	Intermediate plate
8HP70X	1087.020.035	1087.700.079	Mechatronic
8HP70X	1087.020.035	1087.700.136	Oil pan
8HP70X	1087.020.035	1087.700.133	Intermediate plate
8HP70X	1087.020.037	1087.700.079	Mechatronic
8HP70X	1087.020.037	1087.700.136	Oil pan
8HP70X	1087.020.037	1090.700.141	Extension
8HP70X	1087.020.037	1087.700.133	Intermediate plate
8HP70X	1087.020.038	1087.700.079	Mechatronic
8HP70X	1087.020.038	1087.700.136	Oil pan
8HP70X	1087.020.038	1090.700.141	Extension
8HP70X	1087.020.038	1087.700.133	Intermediate plate
8HP70X	1087.020.040	1087.700.079	Mechatronic
8HP70X	1087.020.040	1087.700.136	Oil pan
8HP70X	1087.020.040	1087.700.133	Intermediate plate
8HP70X	1087.020.041	1087.700.079	Mechatronic
8HP70X	1087.020.041	1087.700.136	Oil pan
8HP70X	1087.020.041	1087.700.133	Intermediate plate
8HP70X	1087.020.043	1087.700.079	Mechatronic
8HP70X	1087.020.043	1087.700.136	Oil pan
8HP70X	1087.020.043	1087.700.133	Intermediate plate
8HP70X	1087.020.047	1087.700.079	Mechatronic
8HP70X	1087.020.047	1087.700.136	Oil pan
8HP70X	1087.020.047	1087.700.133	Intermediate plate
8HP70X	1087.020.048	1087.700.079	Mechatronic
8HP70X	1087.020.048	1087.700.136	Oil pan
8HP70X	1087.020.048	1087.700.133	Intermediate plate
8HP70X	1087.020.049	1087.700.079	Mechatronic
8HP70X	1087.020.049	1087.700.136	Oil pan
8HP70X	1087.020.049	1087.700.133	Intermediate plate
8HP70X	1087.020.050	1087.700.079	Mechatronic
8HP70X	1087.020.050	1087.700.136	Oil pan
8HP70X	1087.020.050	1087.700.133	Intermediate plate
8HP70X	1087.020.051	1087.700.079	Mechatronic
8HP70X	1087.020.051	1087.700.136	Oil pan
8HP70X	1087.020.051	1090.700.141	Extension
8HP70X	1087.020.051	1087.700.133	Intermediate plate
8HP70X	1087.020.052	1087.700.079	Mechatronic
8HP70X	1087.020.052	1087.700.136	Oil pan
8HP70X	1087.020.052	1090.700.141	Extension
8HP70X	1087.020.052	1087.700.133	Intermediate plate
8HP70X	1087.020.054	1087.700.079	Mechatronic
8HP70X	1087.020.054	1087.700.136	Oil pan
8HP70X	1087.020.054	1090.700.141	Extension
8HP70X	1087.020.054	1087.700.133	Intermediate plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
94/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X	1087.020.055	1087.700.079	Mechatronic
8HP70X	1087.020.055	1087.700.136	Oil pan
8HP70X	1087.020.055	1087.700.133	Intermediate plate
8HP70X	1087.020.056	1087.700.079	Mechatronic
8HP70X	1087.020.056	1087.700.136	Oil pan
8HP70X	1087.020.056	1087.700.133	Intermediate plate
8HP70X	1087.020.057	1087.700.079	Mechatronic
8HP70X	1087.020.057	1087.700.136	Oil pan
8HP70X	1087.020.057	1087.700.133	Intermediate plate
8HP70X	1087.020.058	1087.700.079	Mechatronic
8HP70X	1087.020.058	1087.700.136	Oil pan
8HP70X	1087.020.058	1087.700.133	Intermediate plate
8HP70X	1087.020.059	1087.700.079	Mechatronic
8HP70X	1087.020.059	1087.700.136	Oil pan
8HP70X	1087.020.059	1087.700.133	Intermediate plate
8HP70X	1087.020.060	1087.700.079	Mechatronic
8HP70X	1087.020.060	1087.700.136	Oil pan
8HP70X	1087.020.060	1087.700.133	Intermediate plate
8HP70X	1087.020.061	1087.700.079	Mechatronic
8HP70X	1087.020.061	1087.700.136	Oil pan
8HP70X	1087.020.061	1087.700.133	Intermediate plate
8HP70X	1087.020.062	1087.700.079	Mechatronic
8HP70X	1087.020.062	1087.700.136	Oil pan
8HP70X	1087.020.062	1090.700.141	Extension
8HP70X	1087.020.062	1087.700.133	Intermediate plate
8HP70X	1087.020.063	1087.700.079	Mechatronic
8HP70X	1087.020.063	1087.700.136	Oil pan
8HP70X	1087.020.063	1090.700.141	Extension
8HP70X	1087.020.063	1087.700.133	Intermediate plate
8HP70T	1087.020.066	1087.700.079	Mechatronic
8HP70T	1087.020.066	1087.700.136	Oil pan
8HP70T	1087.020.066	1087.700.133	Intermediate plate
8HP70X	1087.020.067	1087.700.079	Mechatronic
8HP70X	1087.020.067	1087.700.136	Oil pan
8HP70X	1087.020.067	1087.700.133	Intermediate plate
8HP70X	1087.020.068	1087.700.079	Mechatronic
8HP70X	1087.020.068	1087.700.136	Oil pan
8HP70X	1087.020.068	1087.700.133	Intermediate plate
8HP70X	1087.020.069	1087.700.079	Mechatronic
8HP70X	1087.020.069	1087.700.136	Oil pan
8HP70X	1087.020.069	1087.700.133	Intermediate plate
8HP70X	1087.020.070	1087.700.079	Mechatronic
8HP70X	1087.020.070	1087.700.136	Oil pan
8HP70X	1087.020.070	1087.700.133	Intermediate plate
8HP70X	1087.020.071	1087.700.079	Mechatronic
8HP70X	1087.020.071	1087.700.136	Oil pan
8HP70X	1087.020.071	1087.700.133	Intermediate plate
8HP70X	1087.020.072	1087.700.079	Mechatronic
8HP70X	1087.020.072	1087.700.136	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X	1087.020.072	1087.700.133	Intermediate plate
8HP70X	1087.020.073	1087.700.079	Mechatronic
8HP70X	1087.020.073	1087.700.136	Oil pan
8HP70X	1087.020.073	1087.700.133	Intermediate plate
8HP70X	1087.020.074	1087.700.079	Mechatronic
8HP70X	1087.020.074	1087.700.136	Oil pan
8HP70X	1087.020.074	1087.700.133	Intermediate plate
8HP70X	1087.020.077	1087.700.079	Mechatronic
8HP70X	1087.020.077	1087.700.136	Oil pan
8HP70X	1087.020.077	1087.700.133	Intermediate plate
8HP70X	1087.020.078	1087.700.079	Mechatronic
8HP70X	1087.020.078	1087.700.136	Oil pan
8HP70X	1087.020.078	1090.700.141	Extension
8HP70X	1087.020.078	1087.700.133	Intermediate plate
8HP70X	1087.020.080	1087.700.079	Mechatronic
8HP70X	1087.020.080	1087.700.136	Oil pan
8HP70X	1087.020.080	1087.700.133	Intermediate plate
8HP70X	1087.020.095	1087.700.079	Mechatronic
8HP70X	1087.020.095	1090.700.035	Oil pan
8HP70X	1087.020.095	1087.700.133	Intermediate plate
8HP70X	1087.020.096	1087.700.079	Mechatronic
8HP70X	1087.020.096	1087.700.136	Oil pan
8HP70X	1087.020.096	1087.700.133	Intermediate plate
8HP70X	1087.020.097	1087.700.079	Mechatronic
8HP70X	1087.020.097	1087.700.136	Oil pan
8HP70X	1087.020.097	1087.700.133	Intermediate plate
8HP70X	1087.020.098	1087.700.079	Mechatronic
8HP70X	1087.020.098	1087.700.136	Oil pan
8HP70X	1087.020.098	1087.700.133	Intermediate plate
8HP70X	1087.020.110	1087.700.079	Mechatronic
8HP70X	1087.020.110	1090.700.035	Oil pan
8HP70X	1087.020.110	1087.700.133	Intermediate plate
8HP70X	1087.020.112	1087.700.079	Mechatronic
8HP70X	1087.020.112	1087.700.136	Oil pan
8HP70X	1087.020.112	1087.700.133	Intermediate plate
8HP70X	1087.020.114	1087.700.079	Mechatronic
8HP70X	1087.020.114	1087.700.136	Oil pan
8HP70X	1087.020.114	1090.700.141	Extension
8HP70X	1087.020.114	1087.700.133	Intermediate plate
8HP70X	1087.020.115	1087.700.079	Mechatronic
8HP70X	1087.020.115	1087.700.136	Oil pan
8HP70X	1087.020.115	1090.700.141	Extension
8HP70X	1087.020.115	1087.700.133	Intermediate plate
8HP70X	1087.020.116	1087.700.079	Mechatronic
8HP70X	1087.020.116	1087.700.136	Oil pan
8HP70X	1087.020.116	1090.700.141	Extension
8HP70X	1087.020.116	1087.700.133	Intermediate plate
8HP70X	1087.020.117	1087.700.079	Mechatronic
8HP70X	1087.020.117	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X	1087.020.117	1090.700.141	Extension
8HP70X	1087.020.117	1087.700.133	Intermediate plate
8HP70X	1087.020.118	1087.700.079	Mechatronic
8HP70X	1087.020.118	1090.700.035	Oil pan
8HP70X	1087.020.118	1087.700.133	Intermediate plate
8HP70X	1087.020.119	1087.700.079	Mechatronic
8HP70X	1087.020.119	1087.700.136	Oil pan
8HP70X	1087.020.119	1090.700.141	Extension
8HP70X	1087.020.119	1087.700.133	Intermediate plate
8HP70X	1087.020.120	1087.700.079	Mechatronic
8HP70X	1087.020.120	1087.700.136	Oil pan
8HP70X	1087.020.120	1090.700.141	Extension
8HP70X	1087.020.120	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.001	1087.700.079	Mechatronic
8HP70X HIS	1087.024.001	1087.700.136	Oil pan
8HP70X HIS	1087.024.001	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.006	1087.700.079	Mechatronic
8HP70X HIS	1087.024.006	1087.700.136	Oil pan
8HP70X HIS	1087.024.006	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.008	1087.700.079	Mechatronic
8HP70X HIS	1087.024.008	1087.700.136	Oil pan
8HP70X HIS	1087.024.008	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.009	1087.700.079	Mechatronic
8HP70X HIS	1087.024.009	1087.700.136	Oil pan
8HP70X HIS	1087.024.009	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.011	1087.700.079	Mechatronic
8HP70X HIS	1087.024.011	1087.700.136	Oil pan
8HP70X HIS	1087.024.011	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.026	1087.700.079	Mechatronic
8HP70X HIS	1087.024.026	1087.700.136	Oil pan
8HP70X HIS	1087.024.026	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.028	1087.700.079	Mechatronic
8HP70X HIS	1087.024.028	1087.700.136	Oil pan
8HP70X HIS	1087.024.028	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.029	1087.700.079	Mechatronic
8HP70X HIS	1087.024.029	1087.700.136	Oil pan
8HP70X HIS	1087.024.029	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.030	1087.700.079	Mechatronic
8HP70X HIS	1087.024.030	1087.700.136	Oil pan
8HP70X HIS	1087.024.030	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.031	1087.700.079	Mechatronic
8HP70X HIS	1087.024.031	1087.700.136	Oil pan
8HP70X HIS	1087.024.031	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.034	1087.700.079	Mechatronic
8HP70X HIS	1087.024.034	1087.700.136	Oil pan
8HP70X HIS	1087.024.034	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.035	1087.700.079	Mechatronic
8HP70X HIS	1087.024.035	1087.700.136	Oil pan
8HP70X HIS	1087.024.035	1087.700.133	Intermediate plate



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X HIS	1087.024.036	1087.700.079	Mechatronic
8HP70X HIS	1087.024.036	1087.700.136	Oil pan
8HP70X HIS	1087.024.036	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.041	1087.700.079	Mechatronic
8HP70X HIS	1087.024.041	1087.700.136	Oil pan
8HP70X HIS	1087.024.041	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.042	1087.700.079	Mechatronic
8HP70X HIS	1087.024.042	1087.700.136	Oil pan
8HP70X HIS	1087.024.042	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.044	1087.700.079	Mechatronic
8HP70X HIS	1087.024.044	1087.700.136	Oil pan
8HP70X HIS	1087.024.044	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.045	1087.700.079	Mechatronic
8HP70X HIS	1087.024.045	1087.700.136	Oil pan
8HP70X HIS	1087.024.045	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.046	1087.700.079	Mechatronic
8HP70X HIS	1087.024.046	1087.700.136	Oil pan
8HP70X HIS	1087.024.046	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.049	1087.700.079	Mechatronic
8HP70X HIS	1087.024.049	1087.700.136	Oil pan
8HP70X HIS	1087.024.049	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.058	1087.700.079	Mechatronic
8HP70X HIS	1087.024.058	1087.700.136	Oil pan
8HP70X HIS	1087.024.058	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.059	1087.700.079	Mechatronic
8HP70X HIS	1087.024.059	1087.700.136	Oil pan
8HP70X HIS	1087.024.059	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.060	1087.700.079	Mechatronic
8HP70X HIS	1087.024.060	1087.700.136	Oil pan
8HP70X HIS	1087.024.060	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.061	1087.700.079	Mechatronic
8HP70X HIS	1087.024.061	1087.700.136	Oil pan
8HP70X HIS	1087.024.061	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.062	1087.700.079	Mechatronic
8HP70X HIS	1087.024.062	1087.700.136	Oil pan
8HP70X HIS	1087.024.062	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.063	1087.700.079	Mechatronic
8HP70X HIS	1087.024.063	1087.700.136	Oil pan
8HP70X HIS	1087.024.063	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.065	1087.700.079	Mechatronic
8HP70X HIS	1087.024.065	1087.700.136	Oil pan
8HP70X HIS	1087.024.065	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.068	1087.700.079	Mechatronic
8HP70X HIS	1087.024.068	1087.700.136	Oil pan
8HP70X HIS	1087.024.068	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.069	1087.700.079	Mechatronic
8HP70X HIS	1087.024.069	1087.700.136	Oil pan
8HP70X HIS	1087.024.069	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.070	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
98/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X HIS	1087.024.070	1087.700.136	Oil pan
8HP70X HIS	1087.024.070	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.071	1087.700.079	Mechatronic
8HP70X HIS	1087.024.071	1087.700.136	Oil pan
8HP70X HIS	1087.024.071	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.072	1087.700.079	Mechatronic
8HP70X HIS	1087.024.072	1087.700.136	Oil pan
8HP70X HIS	1087.024.072	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.073	1087.700.079	Mechatronic
8HP70X HIS	1087.024.073	1087.700.136	Oil pan
8HP70X HIS	1087.024.073	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.076	1087.700.079	Mechatronic
8HP70X HIS	1087.024.076	1087.700.136	Oil pan
8HP70X HIS	1087.024.076	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.078	1087.700.079	Mechatronic
8HP70X HIS	1087.024.078	1087.700.136	Oil pan
8HP70X HIS	1087.024.078	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.079	1087.700.079	Mechatronic
8HP70X HIS	1087.024.079	1087.700.136	Oil pan
8HP70X HIS	1087.024.079	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.081	1087.700.079	Mechatronic
8HP70X HIS	1087.024.081	1087.700.136	Oil pan
8HP70X HIS	1087.024.081	1087.700.133	Intermediate plate
8HP70T HIS	1087.024.085	1087.700.079	Mechatronic
8HP70T HIS	1087.024.085	1087.700.136	Oil pan
8HP70T HIS	1087.024.085	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.086	1087.700.079	Mechatronic
8HP70X HIS	1087.024.086	1087.700.136	Oil pan
8HP70X HIS	1087.024.086	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.088	1087.700.079	Mechatronic
8HP70X HIS	1087.024.088	1087.700.136	Oil pan
8HP70X HIS	1087.024.088	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.089	1087.700.079	Mechatronic
8HP70X HIS	1087.024.089	1087.700.136	Oil pan
8HP70X HIS	1087.024.089	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.090	1087.700.079	Mechatronic
8HP70X HIS	1087.024.090	1087.700.136	Oil pan
8HP70X HIS	1087.024.090	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.091	1087.700.079	Mechatronic
8HP70X HIS	1087.024.091	1087.700.136	Oil pan
8HP70X HIS	1087.024.091	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.092	1087.700.079	Mechatronic
8HP70X HIS	1087.024.092	1087.700.136	Oil pan
8HP70X HIS	1087.024.092	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.093	1087.700.079	Mechatronic
8HP70X HIS	1087.024.093	1087.700.136	Oil pan
8HP70X HIS	1087.024.093	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.094	1087.700.079	Mechatronic
8HP70X HIS	1087.024.094	1087.700.136	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X HIS	1087.024.094	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.095	1087.700.079	Mechatronic
8HP70X HIS	1087.024.095	1087.700.136	Oil pan
8HP70X HIS	1087.024.095	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.096	1087.700.079	Mechatronic
8HP70X HIS	1087.024.096	1087.700.136	Oil pan
8HP70X HIS	1087.024.096	1090.700.141	Extension
8HP70X HIS	1087.024.096	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.097	1087.700.079	Mechatronic
8HP70X HIS	1087.024.097	1087.700.136	Oil pan
8HP70X HIS	1087.024.097	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.099	1087.700.079	Mechatronic
8HP70X HIS	1087.024.099	1087.700.136	Oil pan
8HP70X HIS	1087.024.099	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.105	1087.700.079	Mechatronic
8HP70X HIS	1087.024.105	1087.700.136	Oil pan
8HP70X HIS	1087.024.105	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.106	1087.700.079	Mechatronic
8HP70X HIS	1087.024.106	1087.700.136	Oil pan
8HP70X HIS	1087.024.106	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.107	1087.700.079	Mechatronic
8HP70X HIS	1087.024.107	1087.700.136	Oil pan
8HP70X HIS	1087.024.107	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.110	1087.700.079	Mechatronic
8HP70X HIS	1087.024.110	1090.700.035	Oil pan
8HP70X HIS	1087.024.110	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.111	1087.700.079	Mechatronic
8HP70X HIS	1087.024.111	1087.700.136	Oil pan
8HP70X HIS	1087.024.111	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.112	1087.700.079	Mechatronic
8HP70X HIS	1087.024.112	1087.700.136	Oil pan
8HP70X HIS	1087.024.112	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.113	1087.700.079	Mechatronic
8HP70X HIS	1087.024.113	1087.700.136	Oil pan
8HP70X HIS	1087.024.113	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.114	1087.700.079	Mechatronic
8HP70X HIS	1087.024.114	1087.700.136	Oil pan
8HP70X HIS	1087.024.114	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.115	1087.700.079	Mechatronic
8HP70X HIS	1087.024.115	1087.700.136	Oil pan
8HP70X HIS	1087.024.115	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.120	1087.700.079	Mechatronic
8HP70X HIS	1087.024.120	1087.700.136	Oil pan
8HP70X HIS	1087.024.120	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.122	1087.700.079	Mechatronic
8HP70X HIS	1087.024.122	1087.700.136	Oil pan
8HP70X HIS	1087.024.122	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.123	1087.700.079	Mechatronic
8HP70X HIS	1087.024.123	1087.700.136	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X HIS	1087.024.123	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.125	1087.700.079	Mechatronic
8HP70X HIS	1087.024.125	1087.700.136	Oil pan
8HP70X HIS	1087.024.125	1087.700.133	Intermediate plate
8HP70T HIS	1087.024.129	1087.700.079	Mechatronic
8HP70T HIS	1087.024.129	1087.700.136	Oil pan
8HP70T HIS	1087.024.129	1087.700.133	Intermediate plate
8HP70T HIS	1087.024.130	1087.700.079	Mechatronic
8HP70T HIS	1087.024.130	1087.700.136	Oil pan
8HP70T HIS	1087.024.130	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.131	1087.700.079	Mechatronic
8HP70X HIS	1087.024.131	1087.700.136	Oil pan
8HP70X HIS	1087.024.131	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.132	1087.700.079	Mechatronic
8HP70X HIS	1087.024.132	1090.700.035	Oil pan
8HP70X HIS	1087.024.132	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.133	1087.700.079	Mechatronic
8HP70X HIS	1087.024.133	1087.700.136	Oil pan
8HP70X HIS	1087.024.133	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.134	1087.700.079	Mechatronic
8HP70X HIS	1087.024.134	1090.700.035	Oil pan
8HP70X HIS	1087.024.134	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.136	1087.700.079	Mechatronic
8HP70X HIS	1087.024.136	1087.700.136	Oil pan
8HP70X HIS	1087.024.136	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.137	1087.700.079	Mechatronic
8HP70X HIS	1087.024.137	1087.700.136	Oil pan
8HP70X HIS	1087.024.137	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.143	1087.700.079	Mechatronic
8HP70X HIS	1087.024.143	1087.700.136	Oil pan
8HP70X HIS	1087.024.143	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.144	1087.700.079	Mechatronic
8HP70X HIS	1087.024.144	1087.700.136	Oil pan
8HP70X HIS	1087.024.144	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.145	1087.700.079	Mechatronic
8HP70X HIS	1087.024.145	1087.700.136	Oil pan
8HP70X HIS	1087.024.145	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.146	1087.700.079	Mechatronic
8HP70X HIS	1087.024.146	1087.700.136	Oil pan
8HP70X HIS	1087.024.146	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.147	1087.700.079	Mechatronic
8HP70X HIS	1087.024.147	1087.700.136	Oil pan
8HP70X HIS	1087.024.147	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.148	1087.700.079	Mechatronic
8HP70X HIS	1087.024.148	1087.700.136	Oil pan
8HP70X HIS	1087.024.148	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.149	1087.700.079	Mechatronic
8HP70X HIS	1087.024.149	1090.700.035	Oil pan
8HP70X HIS	1087.024.149	1087.700.133	Intermediate plate



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70X HIS	1087.024.151	1087.700.079	Mechatronic
8HP70X HIS	1087.024.151	1087.700.136	Oil pan
8HP70X HIS	1087.024.151	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.152	1087.700.079	Mechatronic
8HP70X HIS	1087.024.152	1087.700.136	Oil pan
8HP70X HIS	1087.024.152	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.153	1087.700.079	Mechatronic
8HP70X HIS	1087.024.153	1087.700.136	Oil pan
8HP70X HIS	1087.024.153	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.154	1087.700.079	Mechatronic
8HP70X HIS	1087.024.154	1087.700.136	Oil pan
8HP70X HIS	1087.024.154	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.155	1087.700.079	Mechatronic
8HP70X HIS	1087.024.155	1087.700.136	Oil pan
8HP70X HIS	1087.024.155	1087.700.133	Intermediate plate
8HP70T HIS	1087.024.156	1087.700.079	Mechatronic
8HP70T HIS	1087.024.156	1087.700.136	Oil pan
8HP70T HIS	1087.024.156	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.157	1087.700.079	Mechatronic
8HP70X HIS	1087.024.157	1087.700.136	Oil pan
8HP70X HIS	1087.024.157	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.158	1087.700.079	Mechatronic
8HP70X HIS	1087.024.158	1087.700.136	Oil pan
8HP70X HIS	1087.024.158	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.159	1087.700.079	Mechatronic
8HP70X HIS	1087.024.159	1087.700.136	Oil pan
8HP70X HIS	1087.024.159	1087.700.133	Intermediate plate
8HP70X HIS	1087.024.160	1087.700.079	Mechatronic
8HP70X HIS	1087.024.160	1087.700.136	Oil pan
8HP70X HIS	1087.024.160	1087.700.133	Intermediate plate
8HP55A	1087.030.005	1087.700.079	Mechatronic
8HP55A	1087.030.005	1087.700.272	Oil pan
8HP55A	1087.030.005	1087.700.272	Oil pan
8HP55A	1087.030.005	1104.700.039	Torque converter bell housing
8HP55A	1087.030.005	1087.700.133	Intermediate plate
8HP55A	1087.030.007	1087.700.079	Mechatronic
8HP55A	1087.030.007	1087.700.272	Oil pan
8HP55A	1087.030.007	1087.700.272	Oil pan
8HP55A	1087.030.007	1104.700.039	Torque converter bell housing
8HP55A	1087.030.007	1087.700.133	Intermediate plate
8HP55A	1087.030.010	1087.700.079	Mechatronic
8HP55A	1087.030.010	1087.700.272	Oil pan
8HP55A	1087.030.010	1087.700.272	Oil pan
8HP55A	1087.030.010	1104.700.039	Torque converter bell housing
8HP55A	1087.030.010	1087.700.133	Intermediate plate
8HP55A	1087.030.013	1087.700.079	Mechatronic
8HP55A	1087.030.013	1087.700.272	Oil pan
8HP55A	1087.030.013	1087.700.272	Oil pan
8HP55A	1087.030.013	1104.700.039	Torque converter bell housing



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A	1087.030.013	1087.700.133	Intermediate plate
8HP55A	1087.030.014	1087.700.079	Mechatronic
8HP55A	1087.030.014	1087.700.272	Oil pan
8HP55A	1087.030.014	1087.700.272	Oil pan
8HP55A	1087.030.014	1104.700.039	Torque converter bell housing
8HP55A	1087.030.014	1087.700.133	Intermediate plate
8HP55A	1087.030.015	1087.700.079	Mechatronic
8HP55A	1087.030.015	1087.700.272	Oil pan
8HP55A	1087.030.015	1087.700.272	Oil pan
8HP55A	1087.030.015	1104.700.039	Torque converter bell housing
8HP55A	1087.030.015	1087.700.133	Intermediate plate
8HP55A	1087.030.016	1087.700.079	Mechatronic
8HP55A	1087.030.016	1087.700.272	Oil pan
8HP55A	1087.030.016	1087.700.272	Oil pan
8HP55A	1087.030.016	1104.700.039	Torque converter bell housing
8HP55A	1087.030.016	1087.700.133	Intermediate plate
8HP55A	1087.030.018	1087.700.079	Mechatronic
8HP55A	1087.030.018	1087.700.272	Oil pan
8HP55A	1087.030.018	1087.700.272	Oil pan
8HP55A	1087.030.018	1104.700.039	Torque converter bell housing
8HP55A	1087.030.018	1087.700.133	Intermediate plate
8HP55A	1087.030.019	1087.700.079	Mechatronic
8HP55A	1087.030.019	1087.700.272	Oil pan
8HP55A	1087.030.019	1087.700.272	Oil pan
8HP55A	1087.030.019	1104.700.039	Torque converter bell housing
8HP55A	1087.030.019	1087.700.133	Intermediate plate
8HP55A	1087.030.020	1087.700.079	Mechatronic
8HP55A	1087.030.020	1087.700.272	Oil pan
8HP55A	1087.030.020	1087.700.272	Oil pan
8HP55A	1087.030.020	1104.700.039	Torque converter bell housing
8HP55A	1087.030.020	1087.700.133	Intermediate plate
8HP55A	1087.030.021	1087.700.079	Mechatronic
8HP55A	1087.030.021	1087.700.272	Oil pan
8HP55A	1087.030.021	1087.700.272	Oil pan
8HP55A	1087.030.021	1104.700.039	Torque converter bell housing
8HP55A	1087.030.021	1087.700.133	Intermediate plate
8HP55A	1087.030.022	1087.700.079	Mechatronic
8HP55A	1087.030.022	1087.700.272	Oil pan
8HP55A	1087.030.022	1087.700.272	Oil pan
8HP55A	1087.030.022	1104.700.039	Torque converter bell housing
8HP55A	1087.030.022	1087.700.133	Intermediate plate
8HP55A	1087.030.023	1087.700.079	Mechatronic
8HP55A	1087.030.023	1087.700.272	Oil pan
8HP55A	1087.030.023	1087.700.272	Oil pan
8HP55A	1087.030.023	1104.700.039	Torque converter bell housing
8HP55A	1087.030.023	1087.700.133	Intermediate plate
8HP55A	1087.030.024	1087.700.079	Mechatronic
8HP55A	1087.030.024	1087.700.272	Oil pan
8HP55A	1087.030.024	1087.700.272	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
103/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A	1087.030.024	1104.700.039	Torque converter bell housing
8HP55A	1087.030.024	1087.700.133	Intermediate plate
8HP55A	1087.030.025	1087.700.079	Mechatronic
8HP55A	1087.030.025	1087.700.272	Oil pan
8HP55A	1087.030.025	1087.700.272	Oil pan
8HP55A	1087.030.025	1104.700.039	Torque converter bell housing
8HP55A	1087.030.025	1087.700.133	Intermediate plate
8HP55A	1087.030.030	1087.700.079	Mechatronic
8HP55A	1087.030.030	1087.700.272	Oil pan
8HP55A	1087.030.030	1087.700.272	Oil pan
8HP55A	1087.030.030	1104.700.039	Torque converter bell housing
8HP55A	1087.030.030	1087.700.133	Intermediate plate
8HP55A	1087.030.031	1087.700.079	Mechatronic
8HP55A	1087.030.031	1087.700.272	Oil pan
8HP55A	1087.030.031	1087.700.272	Oil pan
8HP55A	1087.030.031	1104.700.039	Torque converter bell housing
8HP55A	1087.030.031	1087.700.133	Intermediate plate
8HP55A	1087.030.033	1087.700.079	Mechatronic
8HP55A	1087.030.033	1087.700.272	Oil pan
8HP55A	1087.030.033	1087.700.272	Oil pan
8HP55A	1087.030.033	1104.700.039	Torque converter bell housing
8HP55A	1087.030.033	1087.700.133	Intermediate plate
8HP55A	1087.030.034	1087.700.079	Mechatronic
8HP55A	1087.030.034	1087.700.272	Oil pan
8HP55A	1087.030.034	1087.700.272	Oil pan
8HP55A	1087.030.034	1104.700.039	Torque converter bell housing
8HP55A	1087.030.034	1087.700.133	Intermediate plate
8HP55A	1087.030.036	1087.700.079	Mechatronic
8HP55A	1087.030.036	1087.700.272	Oil pan
8HP55A	1087.030.036	1087.700.272	Oil pan
8HP55A	1087.030.036	1104.700.039	Torque converter bell housing
8HP55A	1087.030.036	1087.700.133	Intermediate plate
8HP55A	1087.030.037	1087.700.079	Mechatronic
8HP55A	1087.030.037	1087.700.272	Oil pan
8HP55A	1087.030.037	1087.700.272	Oil pan
8HP55A	1087.030.037	1104.700.039	Torque converter bell housing
8HP55A	1087.030.037	1087.700.133	Intermediate plate
8HP55A	1087.030.038	1087.700.079	Mechatronic
8HP55A	1087.030.038	1087.700.272	Oil pan
8HP55A	1087.030.038	1087.700.272	Oil pan
8HP55A	1087.030.038	1104.700.039	Torque converter bell housing
8HP55A	1087.030.038	1087.700.133	Intermediate plate
8HP55A	1087.030.039	1087.700.079	Mechatronic
8HP55A	1087.030.039	1087.700.272	Oil pan
8HP55A	1087.030.039	1087.700.272	Oil pan
8HP55A	1087.030.039	1104.700.039	Torque converter bell housing
8HP55A	1087.030.039	1087.700.133	Intermediate plate
8HP55A	1087.030.040	1087.700.079	Mechatronic
8HP55A	1087.030.040	1087.700.272	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
104/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A	1087.030.040	1087.700.272	Oil pan
8HP55A	1087.030.040	1104.700.039	Torque converter bell housing
8HP55A	1087.030.040	1087.700.133	Intermediate plate
8HP55A	1087.030.041	1087.700.079	Mechatronic
8HP55A	1087.030.041	1087.700.272	Oil pan
8HP55A	1087.030.041	1087.700.272	Oil pan
8HP55A	1087.030.041	1104.700.039	Torque converter bell housing
8HP55A	1087.030.041	1087.700.133	Intermediate plate
8HP55A	1087.030.044	1087.700.079	Mechatronic
8HP55A	1087.030.044	1087.700.272	Oil pan
8HP55A	1087.030.044	1087.700.272	Oil pan
8HP55A	1087.030.044	1104.700.039	Torque converter bell housing
8HP55A	1087.030.044	1087.700.133	Intermediate plate
8HP55A	1087.030.045	1087.700.079	Mechatronic
8HP55A	1087.030.045	1087.700.272	Oil pan
8HP55A	1087.030.045	1087.700.272	Oil pan
8HP55A	1087.030.045	1104.700.039	Torque converter bell housing
8HP55A	1087.030.045	1087.700.133	Intermediate plate
8HP55A	1087.030.049	1087.700.079	Mechatronic
8HP55A	1087.030.049	1087.700.272	Oil pan
8HP55A	1087.030.049	1087.700.272	Oil pan
8HP55A	1087.030.049	1104.700.039	Torque converter bell housing
8HP55A	1087.030.049	1087.700.133	Intermediate plate
8HP55A	1087.030.050	1087.700.079	Mechatronic
8HP55A	1087.030.050	1087.700.272	Oil pan
8HP55A	1087.030.050	1087.700.272	Oil pan
8HP55A	1087.030.050	1104.700.039	Torque converter bell housing
8HP55A	1087.030.050	1087.700.133	Intermediate plate
8HP55A	1087.030.051	1087.700.079	Mechatronic
8HP55A	1087.030.051	1087.700.272	Oil pan
8HP55A	1087.030.051	1087.700.272	Oil pan
8HP55A	1087.030.051	1104.700.039	Torque converter bell housing
8HP55A	1087.030.051	1087.700.133	Intermediate plate
8HP55A	1087.030.052	1087.700.079	Mechatronic
8HP55A	1087.030.052	1087.700.272	Oil pan
8HP55A	1087.030.052	1087.700.272	Oil pan
8HP55A	1087.030.052	1104.700.039	Torque converter bell housing
8HP55A	1087.030.052	1087.700.133	Intermediate plate
8HP55A	1087.030.053	1087.700.079	Mechatronic
8HP55A	1087.030.053	1087.700.272	Oil pan
8HP55A	1087.030.053	1087.700.272	Oil pan
8HP55A	1087.030.053	1104.700.039	Torque converter bell housing
8HP55A	1087.030.053	1087.700.133	Intermediate plate
8HP55A	1087.030.054	1087.700.079	Mechatronic
8HP55A	1087.030.054	1087.700.272	Oil pan
8HP55A	1087.030.054	1087.700.272	Oil pan
8HP55A	1087.030.054	1104.700.039	Torque converter bell housing
8HP55A	1087.030.054	1087.700.133	Intermediate plate
8HP55A	1087.030.055	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
105/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A	1087.030.055	1087.700.272	Oil pan
8HP55A	1087.030.055	1087.700.272	Oil pan
8HP55A	1087.030.055	1104.700.039	Torque converter bell housing
8HP55A	1087.030.055	1087.700.133	Intermediate plate
8HP55A	1087.030.057	1087.700.079	Mechatronic
8HP55A	1087.030.057	1087.700.272	Oil pan
8HP55A	1087.030.057	1087.700.272	Oil pan
8HP55A	1087.030.057	1104.700.039	Torque converter bell housing
8HP55A	1087.030.057	1087.700.133	Intermediate plate
8HP55A	1087.030.058	1087.700.079	Mechatronic
8HP55A	1087.030.058	1087.700.272	Oil pan
8HP55A	1087.030.058	1087.700.272	Oil pan
8HP55A	1087.030.058	1104.700.039	Torque converter bell housing
8HP55A	1087.030.058	1087.700.133	Intermediate plate
8HP55A	1087.030.059	1087.700.079	Mechatronic
8HP55A	1087.030.059	1087.700.272	Oil pan
8HP55A	1087.030.059	1087.700.272	Oil pan
8HP55A	1087.030.059	1104.700.039	Torque converter bell housing
8HP55A	1087.030.059	1087.700.133	Intermediate plate
8HP55A	1087.030.060	1087.700.079	Mechatronic
8HP55A	1087.030.060	1087.700.272	Oil pan
8HP55A	1087.030.060	1087.700.272	Oil pan
8HP55A	1087.030.060	1104.700.039	Torque converter bell housing
8HP55A	1087.030.060	1087.700.133	Intermediate plate
8HP55A	1087.030.067	1087.700.079	Mechatronic
8HP55A	1087.030.067	1087.700.272	Oil pan
8HP55A	1087.030.067	1087.700.272	Oil pan
8HP55A	1087.030.067	1104.700.039	Torque converter bell housing
8HP55A	1087.030.067	1087.700.133	Intermediate plate
8HP55A	1087.030.068	1087.700.079	Mechatronic
8HP55A	1087.030.068	1087.700.272	Oil pan
8HP55A	1087.030.068	1087.700.272	Oil pan
8HP55A	1087.030.068	1104.700.039	Torque converter bell housing
8HP55A	1087.030.068	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.001	1087.700.079	Mechatronic
8HP55A HIS	1087.034.001	1087.700.272	Oil pan
8HP55A HIS	1087.034.001	1087.700.272	Oil pan
8HP55A HIS	1087.034.001	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.001	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.002	1087.700.079	Mechatronic
8HP55A HIS	1087.034.002	1087.700.272	Oil pan
8HP55A HIS	1087.034.002	1087.700.272	Oil pan
8HP55A HIS	1087.034.002	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.002	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.004	1087.700.079	Mechatronic
8HP55A HIS	1087.034.004	1087.700.272	Oil pan
8HP55A HIS	1087.034.004	1087.700.272	Oil pan
8HP55A HIS	1087.034.004	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.004	1087.700.133	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.009	1087.700.079	Mechatronic
8HP55A HIS	1087.034.009	1087.700.272	Oil pan
8HP55A HIS	1087.034.009	1087.700.272	Oil pan
8HP55A HIS	1087.034.009	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.009	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.014	1087.700.079	Mechatronic
8HP55A HIS	1087.034.014	1087.700.272	Oil pan
8HP55A HIS	1087.034.014	1087.700.272	Oil pan
8HP55A HIS	1087.034.014	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.014	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.016	1087.700.079	Mechatronic
8HP55A HIS	1087.034.016	1087.700.272	Oil pan
8HP55A HIS	1087.034.016	1087.700.272	Oil pan
8HP55A HIS	1087.034.016	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.016	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.017	1087.700.079	Mechatronic
8HP55A HIS	1087.034.017	1087.700.272	Oil pan
8HP55A HIS	1087.034.017	1087.700.272	Oil pan
8HP55A HIS	1087.034.017	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.017	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.018	1087.700.079	Mechatronic
8HP55A HIS	1087.034.018	1087.700.272	Oil pan
8HP55A HIS	1087.034.018	1087.700.272	Oil pan
8HP55A HIS	1087.034.018	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.018	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.019	1087.700.079	Mechatronic
8HP55A HIS	1087.034.019	1087.700.272	Oil pan
8HP55A HIS	1087.034.019	1087.700.272	Oil pan
8HP55A HIS	1087.034.019	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.019	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.020	1087.700.079	Mechatronic
8HP55A HIS	1087.034.020	1087.700.272	Oil pan
8HP55A HIS	1087.034.020	1087.700.272	Oil pan
8HP55A HIS	1087.034.020	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.020	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.022	1087.700.079	Mechatronic
8HP55A HIS	1087.034.022	1087.700.272	Oil pan
8HP55A HIS	1087.034.022	1087.700.272	Oil pan
8HP55A HIS	1087.034.022	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.022	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.023	1087.700.079	Mechatronic
8HP55A HIS	1087.034.023	1087.700.272	Oil pan
8HP55A HIS	1087.034.023	1087.700.272	Oil pan
8HP55A HIS	1087.034.023	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.023	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.024	1087.700.079	Mechatronic
8HP55A HIS	1087.034.024	1087.700.272	Oil pan
8HP55A HIS	1087.034.024	1087.700.272	Oil pan
8HP55A HIS	1087.034.024	1104.700.039	Torque converter bell housing



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.024	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.026	1087.700.079	Mechatronic
8HP55A HIS	1087.034.026	1087.700.272	Oil pan
8HP55A HIS	1087.034.026	1087.700.272	Oil pan
8HP55A HIS	1087.034.026	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.026	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.028	1087.700.079	Mechatronic
8HP55A HIS	1087.034.028	1087.700.272	Oil pan
8HP55A HIS	1087.034.028	1087.700.272	Oil pan
8HP55A HIS	1087.034.028	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.028	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.029	1087.700.079	Mechatronic
8HP55A HIS	1087.034.029	1087.700.272	Oil pan
8HP55A HIS	1087.034.029	1087.700.272	Oil pan
8HP55A HIS	1087.034.029	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.029	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.030	1087.700.079	Mechatronic
8HP55A HIS	1087.034.030	1087.700.272	Oil pan
8HP55A HIS	1087.034.030	1087.700.272	Oil pan
8HP55A HIS	1087.034.030	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.030	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.044	1087.700.079	Mechatronic
8HP55A HIS	1087.034.044	1087.700.272	Oil pan
8HP55A HIS	1087.034.044	1087.700.272	Oil pan
8HP55A HIS	1087.034.044	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.044	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.045	1087.700.079	Mechatronic
8HP55A HIS	1087.034.045	1087.700.272	Oil pan
8HP55A HIS	1087.034.045	1087.700.272	Oil pan
8HP55A HIS	1087.034.045	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.045	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.046	1087.700.079	Mechatronic
8HP55A HIS	1087.034.046	1087.700.272	Oil pan
8HP55A HIS	1087.034.046	1087.700.272	Oil pan
8HP55A HIS	1087.034.046	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.046	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.047	1087.700.079	Mechatronic
8HP55A HIS	1087.034.047	1087.700.272	Oil pan
8HP55A HIS	1087.034.047	1087.700.272	Oil pan
8HP55A HIS	1087.034.047	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.047	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.048	1087.700.079	Mechatronic
8HP55A HIS	1087.034.048	1087.700.272	Oil pan
8HP55A HIS	1087.034.048	1087.700.272	Oil pan
8HP55A HIS	1087.034.048	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.048	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.049	1087.700.079	Mechatronic
8HP55A HIS	1087.034.049	1087.700.272	Oil pan
8HP55A HIS	1087.034.049	1087.700.272	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.049	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.049	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.050	1087.700.079	Mechatronic
8HP55A HIS	1087.034.050	1087.700.272	Oil pan
8HP55A HIS	1087.034.050	1087.700.272	Oil pan
8HP55A HIS	1087.034.050	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.050	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.054	1087.700.079	Mechatronic
8HP55A HIS	1087.034.054	1087.700.272	Oil pan
8HP55A HIS	1087.034.054	1087.700.272	Oil pan
8HP55A HIS	1087.034.054	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.054	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.055	1087.700.079	Mechatronic
8HP55A HIS	1087.034.055	1087.700.272	Oil pan
8HP55A HIS	1087.034.055	1087.700.272	Oil pan
8HP55A HIS	1087.034.055	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.055	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.056	1087.700.079	Mechatronic
8HP55A HIS	1087.034.056	1087.700.272	Oil pan
8HP55A HIS	1087.034.056	1087.700.272	Oil pan
8HP55A HIS	1087.034.056	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.056	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.057	1087.700.079	Mechatronic
8HP55A HIS	1087.034.057	1087.700.272	Oil pan
8HP55A HIS	1087.034.057	1087.700.272	Oil pan
8HP55A HIS	1087.034.057	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.057	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.058	1087.700.079	Mechatronic
8HP55A HIS	1087.034.058	1087.700.272	Oil pan
8HP55A HIS	1087.034.058	1087.700.272	Oil pan
8HP55A HIS	1087.034.058	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.058	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.059	1087.700.079	Mechatronic
8HP55A HIS	1087.034.059	1087.700.272	Oil pan
8HP55A HIS	1087.034.059	1087.700.272	Oil pan
8HP55A HIS	1087.034.059	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.059	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.061	1087.700.079	Mechatronic
8HP55A HIS	1087.034.061	1087.700.272	Oil pan
8HP55A HIS	1087.034.061	1087.700.272	Oil pan
8HP55A HIS	1087.034.061	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.061	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.062	1087.700.079	Mechatronic
8HP55A HIS	1087.034.062	1087.700.272	Oil pan
8HP55A HIS	1087.034.062	1087.700.272	Oil pan
8HP55A HIS	1087.034.062	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.062	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.064	1087.700.079	Mechatronic
8HP55A HIS	1087.034.064	1087.700.272	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.064	1087.700.272	Oil pan
8HP55A HIS	1087.034.064	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.064	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.065	1087.700.079	Mechatronic
8HP55A HIS	1087.034.065	1087.700.272	Oil pan
8HP55A HIS	1087.034.065	1087.700.272	Oil pan
8HP55A HIS	1087.034.065	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.065	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.068	1087.700.079	Mechatronic
8HP55A HIS	1087.034.068	1087.700.272	Oil pan
8HP55A HIS	1087.034.068	1087.700.272	Oil pan
8HP55A HIS	1087.034.068	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.068	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.069	1087.700.079	Mechatronic
8HP55A HIS	1087.034.069	1087.700.272	Oil pan
8HP55A HIS	1087.034.069	1087.700.272	Oil pan
8HP55A HIS	1087.034.069	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.069	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.070	1087.700.079	Mechatronic
8HP55A HIS	1087.034.070	1087.700.272	Oil pan
8HP55A HIS	1087.034.070	1087.700.272	Oil pan
8HP55A HIS	1087.034.070	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.070	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.071	1087.700.079	Mechatronic
8HP55A HIS	1087.034.071	1087.700.272	Oil pan
8HP55A HIS	1087.034.071	1087.700.272	Oil pan
8HP55A HIS	1087.034.071	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.071	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.072	1087.700.079	Mechatronic
8HP55A HIS	1087.034.072	1087.700.272	Oil pan
8HP55A HIS	1087.034.072	1087.700.272	Oil pan
8HP55A HIS	1087.034.072	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.072	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.073	1087.700.079	Mechatronic
8HP55A HIS	1087.034.073	1087.700.272	Oil pan
8HP55A HIS	1087.034.073	1087.700.272	Oil pan
8HP55A HIS	1087.034.073	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.073	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.074	1087.700.079	Mechatronic
8HP55A HIS	1087.034.074	1087.700.272	Oil pan
8HP55A HIS	1087.034.074	1087.700.272	Oil pan
8HP55A HIS	1087.034.074	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.074	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.075	1087.700.079	Mechatronic
8HP55A HIS	1087.034.075	1087.700.272	Oil pan
8HP55A HIS	1087.034.075	1087.700.272	Oil pan
8HP55A HIS	1087.034.075	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.075	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.076	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.076	1087.700.272	Oil pan
8HP55A HIS	1087.034.076	1087.700.272	Oil pan
8HP55A HIS	1087.034.076	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.076	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.077	1087.700.079	Mechatronic
8HP55A HIS	1087.034.077	1087.700.272	Oil pan
8HP55A HIS	1087.034.077	1087.700.272	Oil pan
8HP55A HIS	1087.034.077	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.077	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.078	1087.700.079	Mechatronic
8HP55A HIS	1087.034.078	1087.700.272	Oil pan
8HP55A HIS	1087.034.078	1087.700.272	Oil pan
8HP55A HIS	1087.034.078	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.078	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.080	1087.700.079	Mechatronic
8HP55A HIS	1087.034.080	1087.700.272	Oil pan
8HP55A HIS	1087.034.080	1087.700.272	Oil pan
8HP55A HIS	1087.034.080	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.080	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.081	1087.700.079	Mechatronic
8HP55A HIS	1087.034.081	1087.700.272	Oil pan
8HP55A HIS	1087.034.081	1087.700.272	Oil pan
8HP55A HIS	1087.034.081	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.081	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.082	1087.700.079	Mechatronic
8HP55A HIS	1087.034.082	1087.700.272	Oil pan
8HP55A HIS	1087.034.082	1087.700.272	Oil pan
8HP55A HIS	1087.034.082	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.082	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.083	1087.700.079	Mechatronic
8HP55A HIS	1087.034.083	1087.700.272	Oil pan
8HP55A HIS	1087.034.083	1087.700.272	Oil pan
8HP55A HIS	1087.034.083	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.083	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.084	1087.700.079	Mechatronic
8HP55A HIS	1087.034.084	1087.700.272	Oil pan
8HP55A HIS	1087.034.084	1087.700.272	Oil pan
8HP55A HIS	1087.034.084	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.084	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.085	1087.700.079	Mechatronic
8HP55A HIS	1087.034.085	1087.700.272	Oil pan
8HP55A HIS	1087.034.085	1087.700.272	Oil pan
8HP55A HIS	1087.034.085	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.085	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.116	1087.700.079	Mechatronic
8HP55A HIS	1087.034.116	1087.700.272	Oil pan
8HP55A HIS	1087.034.116	1087.700.272	Oil pan
8HP55A HIS	1087.034.116	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.116	1087.700.133	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.117	1087.700.079	Mechatronic
8HP55A HIS	1087.034.117	1087.700.272	Oil pan
8HP55A HIS	1087.034.117	1087.700.272	Oil pan
8HP55A HIS	1087.034.117	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.117	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.118	1087.700.079	Mechatronic
8HP55A HIS	1087.034.118	1087.700.272	Oil pan
8HP55A HIS	1087.034.118	1087.700.272	Oil pan
8HP55A HIS	1087.034.118	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.118	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.119	1087.700.079	Mechatronic
8HP55A HIS	1087.034.119	1087.700.272	Oil pan
8HP55A HIS	1087.034.119	1087.700.272	Oil pan
8HP55A HIS	1087.034.119	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.119	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.120	1087.700.079	Mechatronic
8HP55A HIS	1087.034.120	1087.700.272	Oil pan
8HP55A HIS	1087.034.120	1087.700.272	Oil pan
8HP55A HIS	1087.034.120	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.120	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.121	1087.700.079	Mechatronic
8HP55A HIS	1087.034.121	1087.700.272	Oil pan
8HP55A HIS	1087.034.121	1087.700.272	Oil pan
8HP55A HIS	1087.034.121	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.121	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.122	1087.700.079	Mechatronic
8HP55A HIS	1087.034.122	1087.700.272	Oil pan
8HP55A HIS	1087.034.122	1087.700.272	Oil pan
8HP55A HIS	1087.034.122	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.122	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.123	1087.700.079	Mechatronic
8HP55A HIS	1087.034.123	1087.700.272	Oil pan
8HP55A HIS	1087.034.123	1087.700.272	Oil pan
8HP55A HIS	1087.034.123	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.123	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.124	1087.700.079	Mechatronic
8HP55A HIS	1087.034.124	1087.700.272	Oil pan
8HP55A HIS	1087.034.124	1087.700.272	Oil pan
8HP55A HIS	1087.034.124	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.124	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.125	1087.700.079	Mechatronic
8HP55A HIS	1087.034.125	1087.700.272	Oil pan
8HP55A HIS	1087.034.125	1087.700.272	Oil pan
8HP55A HIS	1087.034.125	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.125	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.126	1087.700.079	Mechatronic
8HP55A HIS	1087.034.126	1087.700.272	Oil pan
8HP55A HIS	1087.034.126	1087.700.272	Oil pan
8HP55A HIS	1087.034.126	1104.700.039	Torque converter bell housing



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55A HIS	1087.034.126	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.127	1087.700.079	Mechatronic
8HP55A HIS	1087.034.127	1087.700.272	Oil pan
8HP55A HIS	1087.034.127	1087.700.272	Oil pan
8HP55A HIS	1087.034.127	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.127	1087.700.133	Intermediate plate
8HP55A HIS	1087.034.128	1087.700.079	Mechatronic
8HP55A HIS	1087.034.128	1087.700.272	Oil pan
8HP55A HIS	1087.034.128	1087.700.272	Oil pan
8HP55A HIS	1087.034.128	1104.700.039	Torque converter bell housing
8HP55A HIS	1087.034.128	1087.700.133	Intermediate plate
8HP70H	1087.040.002	1087.700.079	Mechatronic
8HP70H	1087.040.002	1087.700.136	Oil pan
8HP70H	1087.040.002	1087.700.133	Intermediate plate
8HP70H	1087.040.003	1087.700.079	Mechatronic
8HP70H	1087.040.003	1087.700.136	Oil pan
8HP70H	1087.040.003	1087.700.133	Intermediate plate
8HP70H	1087.040.004	1087.700.079	Mechatronic
8HP70H	1087.040.004	1087.700.136	Oil pan
8HP70H	1087.040.004	1087.700.133	Intermediate plate
8HP70H	1087.040.005	1087.700.079	Mechatronic
8HP70H	1087.040.005	1087.700.136	Oil pan
8HP70H	1087.040.005	1087.700.133	Intermediate plate
8P55AH	1087.050.005	1087.700.612	Power connection
8P55AH	1087.050.005	1087.700.079	Mechatronic
8P55AH	1087.050.005	1087.700.272	Oil pan
8P55AH	1087.050.005	1087.700.272	Oil pan
8P55AH	1087.050.005	1087.700.081	Torque converter bell housing
8P55AH	1087.050.005	1087.700.133	Intermediate plate
8P55AH	1087.050.007	1087.700.612	Power connection
8P55AH	1087.050.007	1087.700.079	Mechatronic
8P55AH	1087.050.007	1087.700.272	Oil pan
8P55AH	1087.050.007	1087.700.272	Oil pan
8P55AH	1087.050.007	1087.700.081	Torque converter bell housing
8P55AH	1087.050.007	1087.700.133	Intermediate plate
8P55AH	1087.050.008	1087.700.612	Power connection
8P55AH	1087.050.009	1087.700.612	Power connection
8P55AH	1087.050.009	1087.700.079	Mechatronic
8P55AH	1087.050.009	1087.700.272	Oil pan
8P55AH	1087.050.009	1087.700.272	Oil pan
8P55AH	1087.050.009	1087.700.081	Torque converter bell housing
8P55AH	1087.050.009	1087.700.133	Intermediate plate
8P55AH	1087.050.010	1087.700.612	Power connection
8P55AH	1087.050.011	1087.700.612	Power connection
8P55AH	1087.050.012	1087.700.612	Power connection
8P55AH	1087.050.012	1087.700.079	Mechatronic
8P55AH	1087.050.012	1087.700.272	Oil pan
8P55AH	1087.050.012	1087.700.272	Oil pan
8P55AH	1087.050.012	1087.700.081	Torque converter bell housing



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
113/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P55AH	1087.050.012	1087.700.133	Intermediate plate
8P55AH	1087.050.069	1087.700.612	Power connection
8P55AH	1087.050.069	1087.700.079	Mechatronic
8P55AH	1087.050.069	1087.700.272	Oil pan
8P55AH	1087.050.069	1087.700.272	Oil pan
8P55AH	1087.050.069	1087.700.081	Torque converter bell housing
8P55AH	1087.050.069	1087.700.133	Intermediate plate
8P55AH	1087.050.070	1087.700.612	Power connection
8P55FLH	1087.054.002	1087.700.218	Hybrid drive
8P55FLH	1087.054.002	1087.700.612	Power connection
8P55FLH	1087.054.003	1087.700.612	Power connection
8P55FLH	1087.054.003	1087.700.079	Mechatronic
8P55FLH	1087.054.003	1087.700.272	Oil pan
8P55FLH	1087.054.003	1087.700.272	Oil pan
8P55FLH	1087.054.003	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.003	1087.700.133	Intermediate plate
8P55FLH	1087.054.004	1087.700.612	Power connection
8P55FLH	1087.054.007	1087.700.218	Hybrid drive
8P55FLH	1087.054.007	1087.700.612	Power connection
8P55FLH	1087.054.007	1087.700.079	Mechatronic
8P55FLH	1087.054.007	1087.700.272	Oil pan
8P55FLH	1087.054.007	1087.700.272	Oil pan
8P55FLH	1087.054.007	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.007	1087.700.133	Intermediate plate
8P55FLH	1087.054.008	1087.700.612	Power connection
8P55FLH	1087.054.009	1087.700.612	Power connection
8P55FLH	1087.054.009	1087.700.079	Mechatronic
8P55FLH	1087.054.009	1087.700.272	Oil pan
8P55FLH	1087.054.009	1087.700.272	Oil pan
8P55FLH	1087.054.009	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.009	1087.700.133	Intermediate plate
8P55FLH	1087.054.010	1087.700.218	Hybrid drive
8P55FLH	1087.054.010	1087.700.612	Power connection
8P55FLH	1087.054.010	1087.700.079	Mechatronic
8P55FLH	1087.054.010	1087.700.272	Oil pan
8P55FLH	1087.054.010	1087.700.272	Oil pan
8P55FLH	1087.054.010	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.010	1087.700.133	Intermediate plate
8P55FLH	1087.054.011	1087.700.612	Power connection
8P55FLH	1087.054.011	1087.700.079	Mechatronic
8P55FLH	1087.054.011	1087.700.272	Oil pan
8P55FLH	1087.054.011	1087.700.272	Oil pan
8P55FLH	1087.054.011	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.011	1087.700.133	Intermediate plate
8P55FLH	1087.054.012	1087.700.218	Hybrid drive
8P55FLH	1087.054.012	1087.700.612	Power connection
8P55FLH	1087.054.012	1087.700.079	Mechatronic
8P55FLH	1087.054.012	1087.700.272	Oil pan
8P55FLH	1087.054.012	1087.700.272	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P55FLH	1087.054.012	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.012	1087.700.133	Intermediate plate
8P55FLH	1087.054.013	1087.700.612	Power connection
8P55FLH	1087.054.013	1087.700.079	Mechatronic
8P55FLH	1087.054.013	1087.700.272	Oil pan
8P55FLH	1087.054.013	1087.700.272	Oil pan
8P55FLH	1087.054.013	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.013	1087.700.133	Intermediate plate
8P55FLH	1087.054.014	1087.700.218	Hybrid drive
8P55FLH	1087.054.014	1087.700.612	Power connection
8P55FLH	1087.054.014	1087.700.079	Mechatronic
8P55FLH	1087.054.014	1087.700.272	Oil pan
8P55FLH	1087.054.014	1087.700.272	Oil pan
8P55FLH	1087.054.014	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.014	1087.700.133	Intermediate plate
8P55FLH	1087.054.015	1087.700.612	Power connection
8P55FLH	1087.054.016	1087.700.218	Hybrid drive
8P55FLH	1087.054.016	1087.700.612	Power connection
8P55FLH	1087.054.017	1087.700.612	Power connection
8P55FLH	1087.054.017	1087.700.079	Mechatronic
8P55FLH	1087.054.017	1087.700.272	Oil pan
8P55FLH	1087.054.017	1087.700.272	Oil pan
8P55FLH	1087.054.017	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.017	1087.700.133	Intermediate plate
8P55FLH	1087.054.018	1087.700.218	Hybrid drive
8P55FLH	1087.054.018	1087.700.612	Power connection
8P55FLH	1087.054.018	1087.700.079	Mechatronic
8P55FLH	1087.054.018	1087.700.272	Oil pan
8P55FLH	1087.054.018	1087.700.272	Oil pan
8P55FLH	1087.054.018	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.018	1087.700.133	Intermediate plate
8P55FLH	1087.054.019	1087.700.218	Hybrid drive
8P55FLH	1087.054.019	1087.700.612	Power connection
8P55FLH	1087.054.019	1087.700.079	Mechatronic
8P55FLH	1087.054.019	1087.700.272	Oil pan
8P55FLH	1087.054.019	1087.700.272	Oil pan
8P55FLH	1087.054.019	1104.700.039	Torque converter bell housing
8P55FLH	1087.054.019	1087.700.133	Intermediate plate
8P55FLH	1087.054.020	1087.700.218	Hybrid drive
8P55FLH	1087.054.020	1087.700.612	Power connection
8P55FLH	1087.054.021	1087.700.612	Power connection
8HP55FL HIS	1087.064.002	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.002	1087.700.272	Oil pan
8HP55FL HIS	1087.064.002	1087.700.272	Oil pan
8HP55FL HIS	1087.064.002	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.002	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.008	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.008	1087.700.272	Oil pan
8HP55FL HIS	1087.064.008	1087.700.272	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
115/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP55FL HIS	1087.064.008	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.008	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.010	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.010	1087.700.272	Oil pan
8HP55FL HIS	1087.064.010	1087.700.272	Oil pan
8HP55FL HIS	1087.064.010	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.010	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.011	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.011	1087.700.272	Oil pan
8HP55FL HIS	1087.064.011	1087.700.272	Oil pan
8HP55FL HIS	1087.064.011	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.011	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.012	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.012	1087.700.272	Oil pan
8HP55FL HIS	1087.064.012	1087.700.272	Oil pan
8HP55FL HIS	1087.064.012	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.012	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.013	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.013	1087.700.272	Oil pan
8HP55FL HIS	1087.064.013	1087.700.272	Oil pan
8HP55FL HIS	1087.064.013	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.013	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.014	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.014	1087.700.272	Oil pan
8HP55FL HIS	1087.064.014	1087.700.272	Oil pan
8HP55FL HIS	1087.064.014	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.014	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.018	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.018	1087.700.272	Oil pan
8HP55FL HIS	1087.064.018	1087.700.272	Oil pan
8HP55FL HIS	1087.064.018	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.018	1087.700.133	Intermediate plate
8HP55FL HIS	1087.064.019	1087.700.079	Mechatronic
8HP55FL HIS	1087.064.019	1087.700.272	Oil pan
8HP55FL HIS	1087.064.019	1087.700.272	Oil pan
8HP55FL HIS	1087.064.019	1104.700.039	Torque converter bell housing
8HP55FL HIS	1087.064.019	1087.700.133	Intermediate plate
8P70H	1087.070.002	1087.700.215	Hybrid drive
8P70H	1087.070.002	1087.700.079	Mechatronic
8P70H	1087.070.002	1087.700.136	Oil pan
8P70H	1087.070.002	1087.700.133	Intermediate plate
8P70H	1087.070.003	1087.700.215	Hybrid drive
8P70H	1087.070.003	1087.700.079	Mechatronic
8P70H	1087.070.003	1087.700.136	Oil pan
8P70H	1087.070.003	1087.700.133	Intermediate plate
8P70H	1087.070.004	1087.700.215	Hybrid drive
8P70H	1087.070.005	1087.700.215	Hybrid drive
8P70H	1087.070.006	1087.700.215	Hybrid drive
8P70H	1087.070.006	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
116/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P70H	1087.070.006	1087.700.136	Oil pan
8P70H	1087.070.006	1087.700.133	Intermediate plate
8P70H	1087.070.007	1087.700.215	Hybrid drive
8P70H	1087.070.007	1087.700.079	Mechatronic
8P70H	1087.070.007	1087.700.136	Oil pan
8P70H	1087.070.007	1087.700.133	Intermediate plate
8P70H	1087.070.008	1087.700.215	Hybrid drive
8P70H	1087.070.008	1087.700.079	Mechatronic
8P70H	1087.070.008	1087.700.136	Oil pan
8P70H	1087.070.008	1087.700.133	Intermediate plate
8P70H	1087.070.009	1087.700.215	Hybrid drive
8P70H	1087.070.009	1087.700.079	Mechatronic
8P70H	1087.070.009	1087.700.136	Oil pan
8P70H	1087.070.009	1087.700.133	Intermediate plate
8P70H	1087.070.010	1087.700.215	Hybrid drive
8P70H	1087.070.010	1087.700.079	Mechatronic
8P70H	1087.070.010	1087.700.136	Oil pan
8P70H	1087.070.010	1087.700.133	Intermediate plate
8P70H	1087.070.012	1087.700.215	Hybrid drive
8P70H	1087.070.013	1087.700.215	Hybrid drive
8P70H	1087.070.014	1087.700.215	Hybrid drive
8P70H	1087.070.014	1087.700.079	Mechatronic
8P70H	1087.070.014	1087.700.136	Oil pan
8P70H	1087.070.014	1087.700.133	Intermediate plate
8P70H	1087.070.015	1087.700.215	Hybrid drive
8P70H	1087.070.018	1087.700.215	Hybrid drive
8P70H	1087.070.018	1087.700.079	Mechatronic
8P70H	1087.070.018	1087.700.136	Oil pan
8P70H	1087.070.018	1087.700.133	Intermediate plate
8P70H	1087.070.019	1087.700.215	Hybrid drive
8P70H	1087.070.020	1087.700.215	Hybrid drive
8P70H	1087.070.020	1087.700.079	Mechatronic
8P70H	1087.070.020	1087.700.136	Oil pan
8P70H	1087.070.020	1087.700.133	Intermediate plate
8P70H	1087.070.021	1087.700.215	Hybrid drive
8P70H	1087.070.023	1087.700.215	Hybrid drive
8P70H	1087.070.023	1087.700.079	Mechatronic
8P70H	1087.070.023	1087.700.136	Oil pan
8P70H	1087.070.023	1087.700.133	Intermediate plate
8P70H	1087.070.024	1087.700.215	Hybrid drive
8P70H	1087.070.025	1087.700.215	Hybrid drive
8P70H	1087.070.025	1087.700.079	Mechatronic
8P70H	1087.070.025	1087.700.136	Oil pan
8P70H	1087.070.025	1087.700.133	Intermediate plate
8P70H	1087.070.026	1087.700.215	Hybrid drive
8P70H	1087.070.026	1087.700.079	Mechatronic
8P70H	1087.070.026	1087.700.136	Oil pan
8P70H	1087.070.026	1087.700.133	Intermediate plate
8P70H	1087.070.027	1087.700.215	Hybrid drive



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P70H	1087.070.027	1087.700.079	Mechatronic
8P70H	1087.070.027	1087.700.136	Oil pan
8P70H	1087.070.027	1087.700.133	Intermediate plate
8P70H	1087.070.028	1087.700.215	Hybrid drive
8P70H	1087.070.028	1087.700.079	Mechatronic
8P70H	1087.070.028	1087.700.136	Oil pan
8P70H	1087.070.028	1087.700.133	Intermediate plate
8P70H	1087.070.029	1087.700.215	Hybrid drive
8P70H	1087.070.029	1087.700.079	Mechatronic
8P70H	1087.070.029	1087.700.136	Oil pan
8P70H	1087.070.029	1087.700.133	Intermediate plate
8P70H	1087.070.030	1087.700.215	Hybrid drive
8P70H	1087.070.031	1087.700.215	Hybrid drive
8P70H	1087.070.031	1087.700.079	Mechatronic
8P70H	1087.070.031	1087.700.136	Oil pan
8P70H	1087.070.031	1087.700.133	Intermediate plate
8P70H	1087.070.032	1087.700.215	Hybrid drive
8P70H	1087.070.032	1087.700.079	Mechatronic
8P70H	1087.070.032	1087.700.136	Oil pan
8P70H	1087.070.032	1087.700.133	Intermediate plate
8P70H	1087.070.034	1087.700.215	Hybrid drive
8P70H	1087.070.034	1087.700.079	Mechatronic
8P70H	1087.070.034	1087.700.136	Oil pan
8P70H	1087.070.034	1087.700.133	Intermediate plate
8P70H	1087.070.035	1087.700.215	Hybrid drive
8P70XH	1087.074.003	1087.700.706	Hybrid drive
8P70XH	1087.074.003	1087.700.079	Mechatronic
8P70XH	1087.074.003	1087.700.136	Oil pan
8P70XH	1087.074.003	1087.700.133	Intermediate plate
8P70XH	1087.074.007	1087.700.706	Hybrid drive
8P70XH	1087.074.008	1087.700.706	Hybrid drive
8P70XH	1087.074.008	1087.700.079	Mechatronic
8P70XH	1087.074.008	1087.700.136	Oil pan
8P70XH	1087.074.008	1087.700.133	Intermediate plate
8P70XH	1087.074.010	1087.700.706	Hybrid drive
8P70XH	1087.074.011	1087.700.706	Hybrid drive
8P70XH	1087.074.012	1087.700.706	Hybrid drive
8P70XH	1087.074.012	1087.700.079	Mechatronic
8P70XH	1087.074.012	1087.700.136	Oil pan
8P70XH	1087.074.012	1087.700.133	Intermediate plate

Tab. 26 Model 1087



ZF Aftermarket Service Information

22.3 Model 1090

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45	1090.010.002	1087.700.079	Mechatronic
8HP45	1090.010.002	1090.700.133	Oil supply
8HP45	1090.010.002	1087.700.136	Oil pan
8HP45	1090.010.003	1087.700.079	Mechatronic
8HP45	1090.010.003	1090.700.133	Oil supply
8HP45	1090.010.003	1087.700.136	Oil pan
8HP45	1090.010.004	1087.700.079	Mechatronic
8HP45	1090.010.004	1090.700.133	Oil supply
8HP45	1090.010.004	1087.700.136	Oil pan
8HP45	1090.010.006	1087.700.079	Mechatronic
8HP45	1090.010.006	1090.700.133	Oil supply
8HP45	1090.010.006	1087.700.136	Oil pan
8HP45	1090.010.008	1087.700.079	Mechatronic
8HP45	1090.010.008	1090.700.133	Oil supply
8HP45	1090.010.008	1087.700.136	Oil pan
8HP45	1090.010.009	1087.700.079	Mechatronic
8HP45	1090.010.009	1090.700.133	Oil supply
8HP45	1090.010.009	1087.700.136	Oil pan
8HP45	1090.010.010	1087.700.079	Mechatronic
8HP45	1090.010.010	1090.700.133	Oil supply
8HP45	1090.010.010	1087.700.136	Oil pan
8HP45	1090.010.011	1087.700.079	Mechatronic
8HP45	1090.010.011	1090.700.133	Oil supply
8HP45	1090.010.011	1087.700.136	Oil pan
8HP45	1090.010.012	1087.700.079	Mechatronic
8HP45	1090.010.012	1090.700.133	Oil supply
8HP45	1090.010.012	1087.700.136	Oil pan
8HP45	1090.010.015	1087.700.079	Mechatronic
8HP45	1090.010.015	1090.700.133	Oil supply
8HP45	1090.010.015	1087.700.136	Oil pan
8HP45	1090.010.018	1087.700.079	Mechatronic
8HP45	1090.010.018	1090.700.133	Oil supply
8HP45	1090.010.018	1087.700.136	Oil pan
8HP45	1090.010.019	1087.700.079	Mechatronic
8HP45	1090.010.019	1090.700.133	Oil supply
8HP45	1090.010.019	1087.700.136	Oil pan
8HP45	1090.010.020	1087.700.079	Mechatronic
8HP45	1090.010.020	1090.700.133	Oil supply
8HP45	1090.010.020	1087.700.136	Oil pan
8HP45	1090.010.027	1087.700.079	Mechatronic
8HP45	1090.010.027	1090.700.133	Oil supply
8HP45	1090.010.027	1087.700.136	Oil pan
8HP45	1090.010.034	1087.700.079	Mechatronic
8HP45	1090.010.034	1090.700.133	Oil supply
8HP45	1090.010.034	1087.700.136	Oil pan
8HP45	1090.010.037	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
119/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45	1090.010.037	1090.700.133	Oil supply
8HP45	1090.010.037	1087.700.136	Oil pan
8HP45	1090.010.039	1087.700.079	Mechatronic
8HP45	1090.010.039	1090.700.133	Oil supply
8HP45	1090.010.039	1087.700.136	Oil pan
8HP45	1090.010.044	1087.700.079	Mechatronic
8HP45	1090.010.044	1090.700.133	Oil supply
8HP45	1090.010.044	1087.700.136	Oil pan
8HP45	1090.010.045	1087.700.079	Mechatronic
8HP45	1090.010.045	1090.700.133	Oil supply
8HP45	1090.010.045	1087.700.136	Oil pan
8HP45	1090.010.047	1087.700.079	Mechatronic
8HP45	1090.010.047	1090.700.133	Oil supply
8HP45	1090.010.047	1087.700.136	Oil pan
8HP45	1090.010.048	1087.700.079	Mechatronic
8HP45	1090.010.048	1090.700.133	Oil supply
8HP45	1090.010.048	1087.700.136	Oil pan
8HP45	1090.010.049	1087.700.079	Mechatronic
8HP45	1090.010.049	1090.700.133	Oil supply
8HP45	1090.010.049	1087.700.136	Oil pan
8HP45	1090.010.055	1087.700.079	Mechatronic
8HP45	1090.010.055	1090.700.133	Oil supply
8HP45	1090.010.055	1087.700.136	Oil pan
8HP45	1090.010.057	1087.700.079	Mechatronic
8HP45	1090.010.057	1090.700.133	Oil supply
8HP45	1090.010.057	1087.700.136	Oil pan
8HP45	1090.010.059	1087.700.079	Mechatronic
8HP45	1090.010.059	1090.700.133	Oil supply
8HP45	1090.010.059	1087.700.136	Oil pan
8HP45	1090.010.060	1087.700.079	Mechatronic
8HP45	1090.010.060	1090.700.133	Oil supply
8HP45	1090.010.060	1087.700.136	Oil pan
8HP45	1090.010.061	1087.700.079	Mechatronic
8HP45	1090.010.061	1090.700.133	Oil supply
8HP45	1090.010.061	1087.700.136	Oil pan
8HP45	1090.010.062	1087.700.079	Mechatronic
8HP45	1090.010.062	1090.700.133	Oil supply
8HP45	1090.010.062	1087.700.136	Oil pan
8HP45	1090.010.063	1087.700.079	Mechatronic
8HP45	1090.010.063	1090.700.133	Oil supply
8HP45	1090.010.063	1087.700.136	Oil pan
8HP45	1090.010.064	1087.700.079	Mechatronic
8HP45	1090.010.064	1090.700.133	Oil supply
8HP45	1090.010.064	1087.700.136	Oil pan
8HP45	1090.010.065	1087.700.079	Mechatronic
8HP45	1090.010.065	1090.700.133	Oil supply
8HP45	1090.010.065	1087.700.136	Oil pan
8HP45	1090.010.066	1087.700.079	Mechatronic
8HP45	1090.010.066	1090.700.133	Oil supply



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
120/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45	1090.010.066	1087.700.136	Oil pan
8HP45	1090.010.067	1087.700.079	Mechatronic
8HP45	1090.010.067	1090.700.133	Oil supply
8HP45	1090.010.067	1087.700.136	Oil pan
8HP45	1090.010.068	1087.700.079	Mechatronic
8HP45	1090.010.068	1090.700.133	Oil supply
8HP45	1090.010.068	1087.700.136	Oil pan
8HP45	1090.010.069	1087.700.079	Mechatronic
8HP45	1090.010.069	1090.700.133	Oil supply
8HP45	1090.010.069	1087.700.136	Oil pan
8HP45	1090.010.070	1087.700.079	Mechatronic
8HP45	1090.010.070	1090.700.133	Oil supply
8HP45	1090.010.070	1087.700.136	Oil pan
8HP45	1090.010.071	1087.700.079	Mechatronic
8HP45	1090.010.071	1090.700.133	Oil supply
8HP45	1090.010.071	1087.700.136	Oil pan
8HP45	1090.010.072	1087.700.079	Mechatronic
8HP45	1090.010.072	1090.700.133	Oil supply
8HP45	1090.010.072	1087.700.136	Oil pan
8HP45	1090.010.073	1087.700.079	Mechatronic
8HP45	1090.010.073	1090.700.133	Oil supply
8HP45	1090.010.073	1087.700.136	Oil pan
8HP45	1090.010.074	1087.700.079	Mechatronic
8HP45	1090.010.074	1090.700.133	Oil supply
8HP45	1090.010.074	1087.700.136	Oil pan
8HP45	1090.010.075	1087.700.079	Mechatronic
8HP45	1090.010.075	1090.700.133	Oil supply
8HP45	1090.010.075	1087.700.136	Oil pan
8HP45	1090.010.077	1087.700.079	Mechatronic
8HP45	1090.010.077	1090.700.133	Oil supply
8HP45	1090.010.077	1087.700.136	Oil pan
8HP45	1090.010.078	1087.700.079	Mechatronic
8HP45	1090.010.078	1090.700.133	Oil supply
8HP45	1090.010.078	1090.700.035	Oil pan
8HP45	1090.010.079	1087.700.079	Mechatronic
8HP45	1090.010.079	1090.700.133	Oil supply
8HP45	1090.010.079	1087.700.136	Oil pan
8HP45	1090.010.081	1087.700.079	Mechatronic
8HP45	1090.010.081	1090.700.133	Oil supply
8HP45	1090.010.081	1087.700.136	Oil pan
8HP45	1090.010.084	1087.700.079	Mechatronic
8HP45	1090.010.084	1090.700.133	Oil supply
8HP45	1090.010.084	1087.700.136	Oil pan
8HP45	1090.010.085	1087.700.079	Mechatronic
8HP45	1090.010.085	1090.700.133	Oil supply
8HP45	1090.010.085	1087.700.136	Oil pan
8HP45	1090.010.087	1087.700.079	Mechatronic
8HP45	1090.010.087	1090.700.133	Oil supply
8HP45	1090.010.087	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
121/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45	1090.010.093	1087.700.079	Mechatronic
8HP45	1090.010.093	1090.700.133	Oil supply
8HP45	1090.010.093	1087.700.136	Oil pan
8HP45	1090.010.095	1087.700.079	Mechatronic
8HP45	1090.010.095	1090.700.133	Oil supply
8HP45	1090.010.095	1087.700.136	Oil pan
8HP45	1090.010.098	1087.700.079	Mechatronic
8HP45	1090.010.098	1090.700.133	Oil supply
8HP45	1090.010.098	1087.700.136	Oil pan
8HP45	1090.010.100	1087.700.079	Mechatronic
8HP45	1090.010.100	1090.700.133	Oil supply
8HP45	1090.010.100	1087.700.136	Oil pan
8HP45 HIS	1090.014.001	1087.700.079	Mechatronic
8HP45 HIS	1090.014.001	1090.700.133	Oil supply
8HP45 HIS	1090.014.001	1087.700.136	Oil pan
8HP45 HIS	1090.014.004	1087.700.079	Mechatronic
8HP45 HIS	1090.014.004	1090.700.133	Oil supply
8HP45 HIS	1090.014.004	1087.700.136	Oil pan
8HP45 HIS	1090.014.005	1087.700.079	Mechatronic
8HP45 HIS	1090.014.005	1090.700.133	Oil supply
8HP45 HIS	1090.014.005	1087.700.136	Oil pan
8HP45 HIS	1090.014.008	1087.700.079	Mechatronic
8HP45 HIS	1090.014.008	1090.700.133	Oil supply
8HP45 HIS	1090.014.008	1087.700.136	Oil pan
8HP45 HIS	1090.014.009	1087.700.079	Mechatronic
8HP45 HIS	1090.014.009	1090.700.133	Oil supply
8HP45 HIS	1090.014.009	1087.700.136	Oil pan
8HP45 HIS	1090.014.011	1087.700.079	Mechatronic
8HP45 HIS	1090.014.011	1090.700.133	Oil supply
8HP45 HIS	1090.014.011	1087.700.136	Oil pan
8HP45 HIS	1090.014.012	1087.700.079	Mechatronic
8HP45 HIS	1090.014.012	1090.700.133	Oil supply
8HP45 HIS	1090.014.012	1087.700.136	Oil pan
8HP45 HIS	1090.014.014	1087.700.079	Mechatronic
8HP45 HIS	1090.014.014	1090.700.133	Oil supply
8HP45 HIS	1090.014.014	1087.700.136	Oil pan
8HP45 HIS	1090.014.015	1087.700.079	Mechatronic
8HP45 HIS	1090.014.015	1090.700.133	Oil supply
8HP45 HIS	1090.014.015	1087.700.136	Oil pan
8HP45 HIS	1090.014.016	1087.700.079	Mechatronic
8HP45 HIS	1090.014.016	1090.700.133	Oil supply
8HP45 HIS	1090.014.016	1087.700.136	Oil pan
8HP45 HIS	1090.014.017	1087.700.079	Mechatronic
8HP45 HIS	1090.014.017	1090.700.133	Oil supply
8HP45 HIS	1090.014.017	1087.700.136	Oil pan
8HP45 HIS	1090.014.018	1087.700.079	Mechatronic
8HP45 HIS	1090.014.018	1090.700.133	Oil supply
8HP45 HIS	1090.014.018	1087.700.136	Oil pan
8HP45 HIS	1090.014.019	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45 HIS	1090.014.019	1090.700.133	Oil supply
8HP45 HIS	1090.014.019	1087.700.136	Oil pan
8HP45 HIS	1090.014.020	1087.700.079	Mechatronic
8HP45 HIS	1090.014.020	1090.700.133	Oil supply
8HP45 HIS	1090.014.020	1087.700.136	Oil pan
8HP45 HIS	1090.014.021	1087.700.079	Mechatronic
8HP45 HIS	1090.014.021	1090.700.133	Oil supply
8HP45 HIS	1090.014.021	1087.700.136	Oil pan
8HP45 HIS	1090.014.025	1087.700.079	Mechatronic
8HP45 HIS	1090.014.025	1090.700.133	Oil supply
8HP45 HIS	1090.014.025	1087.700.136	Oil pan
8HP45 HIS	1090.014.026	1087.700.079	Mechatronic
8HP45 HIS	1090.014.026	1090.700.133	Oil supply
8HP45 HIS	1090.014.026	1087.700.136	Oil pan
8HP45 HIS	1090.014.027	1087.700.079	Mechatronic
8HP45 HIS	1090.014.027	1090.700.133	Oil supply
8HP45 HIS	1090.014.027	1087.700.136	Oil pan
8HP45 HIS	1090.014.029	1087.700.079	Mechatronic
8HP45 HIS	1090.014.029	1090.700.133	Oil supply
8HP45 HIS	1090.014.029	1087.700.136	Oil pan
8HP45 HIS	1090.014.032	1087.700.079	Mechatronic
8HP45 HIS	1090.014.032	1090.700.133	Oil supply
8HP45 HIS	1090.014.032	1087.700.136	Oil pan
8HP45 HIS	1090.014.035	1087.700.079	Mechatronic
8HP45 HIS	1090.014.035	1090.700.133	Oil supply
8HP45 HIS	1090.014.035	1087.700.136	Oil pan
8HP45 HIS	1090.014.036	1087.700.079	Mechatronic
8HP45 HIS	1090.014.036	1090.700.133	Oil supply
8HP45 HIS	1090.014.036	1087.700.136	Oil pan
8HP45 HIS	1090.014.037	1087.700.079	Mechatronic
8HP45 HIS	1090.014.037	1090.700.133	Oil supply
8HP45 HIS	1090.014.037	1087.700.136	Oil pan
8HP45 HIS	1090.014.038	1087.700.079	Mechatronic
8HP45 HIS	1090.014.038	1090.700.133	Oil supply
8HP45 HIS	1090.014.038	1087.700.136	Oil pan
8HP45 HIS	1090.014.039	1087.700.079	Mechatronic
8HP45 HIS	1090.014.039	1090.700.133	Oil supply
8HP45 HIS	1090.014.039	1087.700.136	Oil pan
8HP45 HIS	1090.014.040	1087.700.079	Mechatronic
8HP45 HIS	1090.014.040	1090.700.133	Oil supply
8HP45 HIS	1090.014.040	1087.700.136	Oil pan
8HP45 HIS	1090.014.041	1087.700.079	Mechatronic
8HP45 HIS	1090.014.041	1090.700.133	Oil supply
8HP45 HIS	1090.014.041	1087.700.136	Oil pan
8HP45 HIS	1090.014.042	1087.700.079	Mechatronic
8HP45 HIS	1090.014.042	1090.700.133	Oil supply
8HP45 HIS	1090.014.042	1087.700.136	Oil pan
8HP45 HIS	1090.014.046	1087.700.079	Mechatronic
8HP45 HIS	1090.014.046	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45 HIS	1090.014.046	1087.700.136	Oil pan
8HP45 HIS	1090.014.048	1087.700.079	Mechatronic
8HP45 HIS	1090.014.048	1090.700.133	Oil supply
8HP45 HIS	1090.014.048	1087.700.136	Oil pan
8HP45 HIS	1090.014.049	1087.700.079	Mechatronic
8HP45 HIS	1090.014.049	1090.700.133	Oil supply
8HP45 HIS	1090.014.049	1087.700.136	Oil pan
8HP45 HIS	1090.014.050	1087.700.079	Mechatronic
8HP45 HIS	1090.014.050	1090.700.133	Oil supply
8HP45 HIS	1090.014.050	1087.700.136	Oil pan
8HP45 HIS	1090.014.051	1087.700.079	Mechatronic
8HP45 HIS	1090.014.051	1090.700.133	Oil supply
8HP45 HIS	1090.014.051	1087.700.136	Oil pan
8HP45 HIS	1090.014.052	1087.700.079	Mechatronic
8HP45 HIS	1090.014.052	1090.700.133	Oil supply
8HP45 HIS	1090.014.052	1087.700.136	Oil pan
8HP45 HIS	1090.014.053	1087.700.079	Mechatronic
8HP45 HIS	1090.014.053	1090.700.133	Oil supply
8HP45 HIS	1090.014.053	1087.700.136	Oil pan
8HP45 HIS	1090.014.054	1087.700.079	Mechatronic
8HP45 HIS	1090.014.054	1090.700.133	Oil supply
8HP45 HIS	1090.014.054	1087.700.136	Oil pan
8HP45 HIS	1090.014.055	1087.700.079	Mechatronic
8HP45 HIS	1090.014.055	1090.700.133	Oil supply
8HP45 HIS	1090.014.055	1087.700.136	Oil pan
8HP45 HIS	1090.014.056	1087.700.079	Mechatronic
8HP45 HIS	1090.014.056	1090.700.133	Oil supply
8HP45 HIS	1090.014.056	1087.700.136	Oil pan
8HP45 HIS	1090.014.057	1087.700.079	Mechatronic
8HP45 HIS	1090.014.057	1090.700.133	Oil supply
8HP45 HIS	1090.014.057	1087.700.136	Oil pan
8HP45 HIS	1090.014.059	1087.700.079	Mechatronic
8HP45 HIS	1090.014.059	1090.700.133	Oil supply
8HP45 HIS	1090.014.059	1087.700.136	Oil pan
8HP45 HIS	1090.014.060	1087.700.079	Mechatronic
8HP45 HIS	1090.014.060	1090.700.133	Oil supply
8HP45 HIS	1090.014.060	1087.700.136	Oil pan
8HP45 HIS	1090.014.077	1087.700.079	Mechatronic
8HP45 HIS	1090.014.077	1090.700.133	Oil supply
8HP45 HIS	1090.014.077	1087.700.136	Oil pan
8HP45 HIS	1090.014.078	1087.700.079	Mechatronic
8HP45 HIS	1090.014.078	1090.700.133	Oil supply
8HP45 HIS	1090.014.078	1087.700.136	Oil pan
8HP45 HIS	1090.014.079	1087.700.079	Mechatronic
8HP45 HIS	1090.014.079	1090.700.133	Oil supply
8HP45 HIS	1090.014.079	1087.700.136	Oil pan
8HP45 HIS	1090.014.080	1087.700.079	Mechatronic
8HP45 HIS	1090.014.080	1090.700.133	Oil supply
8HP45 HIS	1090.014.080	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
124/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45 HIS	1090.014.081	1087.700.079	Mechatronic
8HP45 HIS	1090.014.081	1090.700.133	Oil supply
8HP45 HIS	1090.014.081	1087.700.136	Oil pan
8HP45 HIS	1090.014.082	1087.700.079	Mechatronic
8HP45 HIS	1090.014.082	1090.700.133	Oil supply
8HP45 HIS	1090.014.082	1087.700.136	Oil pan
8HP45 HIS	1090.014.084	1087.700.079	Mechatronic
8HP45 HIS	1090.014.084	1090.700.133	Oil supply
8HP45 HIS	1090.014.084	1087.700.136	Oil pan
8HP45 HIS	1090.014.085	1087.700.079	Mechatronic
8HP45 HIS	1090.014.085	1090.700.133	Oil supply
8HP45 HIS	1090.014.085	1087.700.136	Oil pan
8HP45 HIS	1090.014.087	1087.700.079	Mechatronic
8HP45 HIS	1090.014.087	1090.700.133	Oil supply
8HP45 HIS	1090.014.087	1087.700.136	Oil pan
8HP45 HIS	1090.014.088	1087.700.079	Mechatronic
8HP45 HIS	1090.014.088	1090.700.133	Oil supply
8HP45 HIS	1090.014.088	1087.700.136	Oil pan
8HP45 HIS	1090.014.089	1087.700.079	Mechatronic
8HP45 HIS	1090.014.089	1090.700.133	Oil supply
8HP45 HIS	1090.014.089	1087.700.136	Oil pan
8HP45 HIS	1090.014.090	1087.700.079	Mechatronic
8HP45 HIS	1090.014.090	1090.700.133	Oil supply
8HP45 HIS	1090.014.090	1087.700.136	Oil pan
8HP45 HIS	1090.014.091	1087.700.079	Mechatronic
8HP45 HIS	1090.014.091	1090.700.133	Oil supply
8HP45 HIS	1090.014.091	1087.700.136	Oil pan
8HP45 HIS	1090.014.094	1087.700.079	Mechatronic
8HP45 HIS	1090.014.094	1090.700.133	Oil supply
8HP45 HIS	1090.014.094	1087.700.136	Oil pan
8HP45 HIS	1090.014.097	1087.700.079	Mechatronic
8HP45 HIS	1090.014.097	1090.700.133	Oil supply
8HP45 HIS	1090.014.097	1087.700.136	Oil pan
8HP45 HIS	1090.014.099	1087.700.079	Mechatronic
8HP45 HIS	1090.014.099	1090.700.133	Oil supply
8HP45 HIS	1090.014.099	1087.700.136	Oil pan
8HP45 HIS	1090.014.100	1087.700.079	Mechatronic
8HP45 HIS	1090.014.100	1090.700.133	Oil supply
8HP45 HIS	1090.014.100	1087.700.136	Oil pan
8HP45 HIS	1090.014.101	1087.700.079	Mechatronic
8HP45 HIS	1090.014.101	1090.700.133	Oil supply
8HP45 HIS	1090.014.101	1087.700.136	Oil pan
8HP45 HIS	1090.014.102	1087.700.079	Mechatronic
8HP45 HIS	1090.014.102	1090.700.133	Oil supply
8HP45 HIS	1090.014.102	1087.700.136	Oil pan
8HP45 HIS	1090.014.103	1087.700.079	Mechatronic
8HP45 HIS	1090.014.103	1090.700.133	Oil supply
8HP45 HIS	1090.014.103	1087.700.136	Oil pan
8HP45 HIS	1090.014.104	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45 HIS	1090.014.104	1090.700.133	Oil supply
8HP45 HIS	1090.014.104	1087.700.136	Oil pan
8HP45 HIS	1090.014.105	1087.700.079	Mechatronic
8HP45 HIS	1090.014.105	1090.700.133	Oil supply
8HP45 HIS	1090.014.105	1087.700.136	Oil pan
8HP45 HIS	1090.014.107	1087.700.079	Mechatronic
8HP45 HIS	1090.014.107	1090.700.133	Oil supply
8HP45 HIS	1090.014.107	1087.700.136	Oil pan
8HP45 HIS	1090.014.108	1087.700.079	Mechatronic
8HP45 HIS	1090.014.108	1090.700.133	Oil supply
8HP45 HIS	1090.014.108	1087.700.136	Oil pan
8HP45 HIS	1090.014.109	1087.700.079	Mechatronic
8HP45 HIS	1090.014.109	1090.700.133	Oil supply
8HP45 HIS	1090.014.109	1087.700.136	Oil pan
8HP45 HIS	1090.014.110	1087.700.079	Mechatronic
8HP45 HIS	1090.014.110	1090.700.133	Oil supply
8HP45 HIS	1090.014.110	1087.700.136	Oil pan
8HP45 HIS	1090.014.111	1087.700.079	Mechatronic
8HP45 HIS	1090.014.111	1090.700.133	Oil supply
8HP45 HIS	1090.014.111	1087.700.136	Oil pan
8HP45 HIS	1090.014.112	1087.700.079	Mechatronic
8HP45 HIS	1090.014.112	1090.700.133	Oil supply
8HP45 HIS	1090.014.112	1087.700.136	Oil pan
8HP45 HIS	1090.014.113	1087.700.079	Mechatronic
8HP45 HIS	1090.014.113	1090.700.133	Oil supply
8HP45 HIS	1090.014.113	1087.700.136	Oil pan
8HP45 HIS	1090.014.114	1087.700.079	Mechatronic
8HP45 HIS	1090.014.114	1090.700.133	Oil supply
8HP45 HIS	1090.014.114	1087.700.136	Oil pan
8HP45 HIS	1090.014.115	1087.700.079	Mechatronic
8HP45 HIS	1090.014.115	1090.700.133	Oil supply
8HP45 HIS	1090.014.115	1087.700.136	Oil pan
8HP45 HIS	1090.014.116	1087.700.079	Mechatronic
8HP45 HIS	1090.014.116	1090.700.133	Oil supply
8HP45 HIS	1090.014.116	1087.700.136	Oil pan
8HP45 HIS	1090.014.117	1087.700.079	Mechatronic
8HP45 HIS	1090.014.117	1090.700.133	Oil supply
8HP45 HIS	1090.014.117	1087.700.136	Oil pan
8HP45 HIS	1090.014.118	1087.700.079	Mechatronic
8HP45 HIS	1090.014.118	1090.700.133	Oil supply
8HP45 HIS	1090.014.118	1087.700.136	Oil pan
8HP45 HIS	1090.014.119	1087.700.079	Mechatronic
8HP45 HIS	1090.014.119	1090.700.133	Oil supply
8HP45 HIS	1090.014.119	1087.700.136	Oil pan
8HP45 HIS	1090.014.120	1087.700.079	Mechatronic
8HP45 HIS	1090.014.120	1090.700.133	Oil supply
8HP45 HIS	1090.014.120	1087.700.136	Oil pan
8HP45 HIS	1090.014.121	1087.700.079	Mechatronic
8HP45 HIS	1090.014.121	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45 HIS	1090.014.121	1087.700.136	Oil pan
8HP45 HIS	1090.014.122	1087.700.079	Mechatronic
8HP45 HIS	1090.014.122	1090.700.133	Oil supply
8HP45 HIS	1090.014.122	1087.700.136	Oil pan
8HP45 HIS	1090.014.123	1087.700.079	Mechatronic
8HP45 HIS	1090.014.123	1090.700.133	Oil supply
8HP45 HIS	1090.014.123	1090.700.035	Oil pan
8HP45 HIS	1090.014.125	1087.700.079	Mechatronic
8HP45 HIS	1090.014.125	1090.700.133	Oil supply
8HP45 HIS	1090.014.125	1087.700.136	Oil pan
8HP45 HIS	1090.014.126	1087.700.079	Mechatronic
8HP45 HIS	1090.014.126	1090.700.133	Oil supply
8HP45 HIS	1090.014.126	1087.700.136	Oil pan
8HP45 HIS	1090.014.127	1087.700.079	Mechatronic
8HP45 HIS	1090.014.127	1090.700.133	Oil supply
8HP45 HIS	1090.014.127	1087.700.136	Oil pan
8HP45 HIS	1090.014.132	1087.700.079	Mechatronic
8HP45 HIS	1090.014.132	1090.700.133	Oil supply
8HP45 HIS	1090.014.132	1087.700.136	Oil pan
8HP45 HIS	1090.014.134	1087.700.079	Mechatronic
8HP45 HIS	1090.014.134	1090.700.133	Oil supply
8HP45 HIS	1090.014.134	1087.700.136	Oil pan
8HP45 HIS	1090.014.135	1087.700.079	Mechatronic
8HP45 HIS	1090.014.135	1090.700.133	Oil supply
8HP45 HIS	1090.014.135	1087.700.136	Oil pan
8HP45 HIS	1090.014.137	1087.700.079	Mechatronic
8HP45 HIS	1090.014.137	1090.700.133	Oil supply
8HP45 HIS	1090.014.137	1087.700.136	Oil pan
8HP45 HIS	1090.014.145	1087.700.079	Mechatronic
8HP45 HIS	1090.014.145	1090.700.133	Oil supply
8HP45 HIS	1090.014.145	1087.700.136	Oil pan
8HP45 HIS	1090.014.147	1087.700.079	Mechatronic
8HP45 HIS	1090.014.147	1090.700.133	Oil supply
8HP45 HIS	1090.014.147	1087.700.136	Oil pan
8HP45 HIS	1090.014.150	1087.700.079	Mechatronic
8HP45 HIS	1090.014.150	1090.700.133	Oil supply
8HP45 HIS	1090.014.150	1087.700.136	Oil pan
8HP45 HIS	1090.014.152	1087.700.079	Mechatronic
8HP45 HIS	1090.014.152	1090.700.133	Oil supply
8HP45 HIS	1090.014.152	1087.700.136	Oil pan
8HP45 HIS	1090.014.153	1087.700.079	Mechatronic
8HP45 HIS	1090.014.153	1090.700.133	Oil supply
8HP45 HIS	1090.014.153	1087.700.136	Oil pan
8HP45 HIS	1090.014.154	1087.700.079	Mechatronic
8HP45 HIS	1090.014.154	1090.700.133	Oil supply
8HP45 HIS	1090.014.154	1087.700.136	Oil pan
8HP45 HIS	1090.014.158	1087.700.079	Mechatronic
8HP45 HIS	1090.014.158	1090.700.133	Oil supply
8HP45 HIS	1090.014.158	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45 HIS	1090.014.159	1087.700.079	Mechatronic
8HP45 HIS	1090.014.159	1090.700.133	Oil supply
8HP45 HIS	1090.014.159	1087.700.136	Oil pan
8HP45 HIS	1090.014.160	1087.700.079	Mechatronic
8HP45 HIS	1090.014.160	1090.700.133	Oil supply
8HP45 HIS	1090.014.160	1087.700.136	Oil pan
8HP45 HIS	1090.014.168	1087.700.079	Mechatronic
8HP45 HIS	1090.014.168	1090.700.133	Oil supply
8HP45 HIS	1090.014.168	1087.700.136	Oil pan
8HP45 HIS	1090.014.169	1087.700.079	Mechatronic
8HP45 HIS	1090.014.169	1090.700.133	Oil supply
8HP45 HIS	1090.014.169	1087.700.136	Oil pan
8HP45 HIS	1090.014.173	1087.700.079	Mechatronic
8HP45 HIS	1090.014.173	1090.700.133	Oil supply
8HP45 HIS	1090.014.173	1087.700.136	Oil pan
8HP45 HIS	1090.014.183	1087.700.079	Mechatronic
8HP45 HIS	1090.014.183	1090.700.133	Oil supply
8HP45 HIS	1090.014.183	1087.700.136	Oil pan
8HP45 HIS	1090.014.184	1087.700.079	Mechatronic
8HP45 HIS	1090.014.184	1090.700.133	Oil supply
8HP45 HIS	1090.014.184	1087.700.136	Oil pan
8HP45 HIS	1090.014.185	1087.700.079	Mechatronic
8HP45 HIS	1090.014.185	1090.700.133	Oil supply
8HP45 HIS	1090.014.185	1087.700.136	Oil pan
8HP45 HIS	1090.014.188	1087.700.079	Mechatronic
8HP45 HIS	1090.014.188	1090.700.133	Oil supply
8HP45 HIS	1090.014.188	1087.700.136	Oil pan
8HP45 HIS	1090.014.193	1087.700.079	Mechatronic
8HP45 HIS	1090.014.193	1090.700.133	Oil supply
8HP45 HIS	1090.014.193	1087.700.136	Oil pan
8HP45X	1090.020.001	1087.700.079	Mechatronic
8HP45X	1090.020.001	1090.700.133	Oil supply
8HP45X	1090.020.001	1087.700.136	Oil pan
8HP45X	1090.020.010	1087.700.079	Mechatronic
8HP45X	1090.020.010	1090.700.133	Oil supply
8HP45X	1090.020.010	1087.700.136	Oil pan
8HP45X	1090.020.011	1087.700.079	Mechatronic
8HP45X	1090.020.011	1090.700.133	Oil supply
8HP45X	1090.020.011	1087.700.136	Oil pan
8HP45X	1090.020.012	1087.700.079	Mechatronic
8HP45X	1090.020.012	1090.700.133	Oil supply
8HP45X	1090.020.012	1087.700.136	Oil pan
8HP45X	1090.020.013	1087.700.079	Mechatronic
8HP45X	1090.020.013	1090.700.133	Oil supply
8HP45X	1090.020.013	1087.700.136	Oil pan
8HP45X	1090.020.021	1087.700.079	Mechatronic
8HP45X	1090.020.021	1090.700.133	Oil supply
8HP45X	1090.020.021	1090.700.035	Oil pan
8HP45X	1090.020.023	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
128/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X	1090.020.023	1090.700.133	Oil supply
8HP45X	1090.020.023	1087.700.136	Oil pan
8HP45X	1090.020.024	1087.700.079	Mechatronic
8HP45X	1090.020.024	1090.700.133	Oil supply
8HP45X	1090.020.024	1087.700.136	Oil pan
8HP45X	1090.020.024	1090.700.141	Extension
8HP45X	1090.020.027	1087.700.079	Mechatronic
8HP45X	1090.020.027	1090.700.133	Oil supply
8HP45X	1090.020.027	1087.700.136	Oil pan
8HP45X	1090.020.029	1087.700.079	Mechatronic
8HP45X	1090.020.029	1090.700.133	Oil supply
8HP45X	1090.020.029	1087.700.136	Oil pan
8HP45X	1090.020.043	1087.700.079	Mechatronic
8HP45X	1090.020.043	1090.700.133	Oil supply
8HP45X	1090.020.043	1090.700.035	Oil pan
8HP45X	1090.020.045	1087.700.079	Mechatronic
8HP45X	1090.020.045	1090.700.133	Oil supply
8HP45X	1090.020.045	1087.700.136	Oil pan
8HP45X	1090.020.049	1087.700.079	Mechatronic
8HP45X	1090.020.049	1090.700.133	Oil supply
8HP45X	1090.020.049	1087.700.136	Oil pan
8HP45X	1090.020.050	1087.700.079	Mechatronic
8HP45X	1090.020.050	1090.700.133	Oil supply
8HP45X	1090.020.050	1090.700.035	Oil pan
8HP45X	1090.020.051	1087.700.079	Mechatronic
8HP45X	1090.020.051	1090.700.133	Oil supply
8HP45X	1090.020.051	1087.700.136	Oil pan
8HP45X	1090.020.052	1087.700.079	Mechatronic
8HP45X	1090.020.052	1090.700.133	Oil supply
8HP45X	1090.020.052	1087.700.136	Oil pan
8HP45X	1090.020.053	1087.700.079	Mechatronic
8HP45X	1090.020.053	1090.700.133	Oil supply
8HP45X	1090.020.053	1087.700.136	Oil pan
8HP45X	1090.020.054	1087.700.079	Mechatronic
8HP45X	1090.020.054	1090.700.133	Oil supply
8HP45X	1090.020.054	1087.700.136	Oil pan
8HP45X	1090.020.056	1087.700.079	Mechatronic
8HP45X	1090.020.056	1090.700.133	Oil supply
8HP45X	1090.020.056	1087.700.136	Oil pan
8HP45X	1090.020.058	1087.700.079	Mechatronic
8HP45X	1090.020.058	1090.700.133	Oil supply
8HP45X	1090.020.058	1087.700.136	Oil pan
8HP45X	1090.020.060	1087.700.079	Mechatronic
8HP45X	1090.020.060	1090.700.133	Oil supply
8HP45X	1090.020.060	1087.700.136	Oil pan
8HP45X	1090.020.062	1087.700.079	Mechatronic
8HP45X	1090.020.062	1090.700.133	Oil supply
8HP45X	1090.020.062	1087.700.136	Oil pan
8HP45X	1090.020.062	1090.700.141	Extension



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
129/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X	1090.020.063	1087.700.079	Mechatronic
8HP45X	1090.020.063	1090.700.133	Oil supply
8HP45X	1090.020.063	1087.700.136	Oil pan
8HP45X	1090.020.063	1090.700.141	Extension
8HP45X	1090.020.064	1087.700.079	Mechatronic
8HP45X	1090.020.064	1090.700.133	Oil supply
8HP45X	1090.020.064	1087.700.136	Oil pan
8HP45X	1090.020.067	1087.700.079	Mechatronic
8HP45X	1090.020.067	1090.700.133	Oil supply
8HP45X	1090.020.067	1087.700.136	Oil pan
8HP45X	1090.020.068	1087.700.079	Mechatronic
8HP45X	1090.020.068	1090.700.133	Oil supply
8HP45X	1090.020.068	1087.700.136	Oil pan
8HP45X	1090.020.069	1087.700.079	Mechatronic
8HP45X	1090.020.069	1090.700.133	Oil supply
8HP45X	1090.020.069	1087.700.136	Oil pan
8HP45X	1090.020.070	1087.700.079	Mechatronic
8HP45X	1090.020.070	1090.700.133	Oil supply
8HP45X	1090.020.070	1087.700.136	Oil pan
8HP45X	1090.020.071	1087.700.079	Mechatronic
8HP45X	1090.020.071	1090.700.133	Oil supply
8HP45X	1090.020.071	1087.700.136	Oil pan
8HP45X	1090.020.072	1087.700.079	Mechatronic
8HP45X	1090.020.072	1090.700.133	Oil supply
8HP45X	1090.020.072	1087.700.136	Oil pan
8HP45X	1090.020.078	1087.700.079	Mechatronic
8HP45X	1090.020.078	1090.700.133	Oil supply
8HP45X	1090.020.078	1087.700.136	Oil pan
8HP45X	1090.020.081	1087.700.079	Mechatronic
8HP45X	1090.020.081	1090.700.133	Oil supply
8HP45X	1090.020.081	1087.700.136	Oil pan
8HP45X	1090.020.082	1087.700.079	Mechatronic
8HP45X	1090.020.082	1090.700.133	Oil supply
8HP45X	1090.020.082	1087.700.136	Oil pan
8HP45X	1090.020.083	1087.700.079	Mechatronic
8HP45X	1090.020.083	1090.700.133	Oil supply
8HP45X	1090.020.083	1087.700.136	Oil pan
8HP45X	1090.020.087	1087.700.079	Mechatronic
8HP45X	1090.020.087	1090.700.133	Oil supply
8HP45X	1090.020.087	1087.700.136	Oil pan
8HP45X HIS	1090.024.005	1087.700.079	Mechatronic
8HP45X HIS	1090.024.005	1090.700.133	Oil supply
8HP45X HIS	1090.024.005	1087.700.136	Oil pan
8HP45X HIS	1090.024.006	1087.700.079	Mechatronic
8HP45X HIS	1090.024.006	1090.700.133	Oil supply
8HP45X HIS	1090.024.006	1087.700.136	Oil pan
8HP45X HIS	1090.024.007	1087.700.079	Mechatronic
8HP45X HIS	1090.024.007	1090.700.133	Oil supply
8HP45X HIS	1090.024.007	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
130/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X HIS	1090.024.011	1087.700.079	Mechatronic
8HP45X HIS	1090.024.011	1090.700.133	Oil supply
8HP45X HIS	1090.024.011	1090.700.035	Oil pan
8HP45X HIS	1090.024.012	1087.700.079	Mechatronic
8HP45X HIS	1090.024.012	1090.700.133	Oil supply
8HP45X HIS	1090.024.012	1087.700.136	Oil pan
8HP45X HIS	1090.024.024	1087.700.079	Mechatronic
8HP45X HIS	1090.024.024	1090.700.133	Oil supply
8HP45X HIS	1090.024.024	1087.700.136	Oil pan
8HP45X HIS	1090.024.026	1087.700.079	Mechatronic
8HP45X HIS	1090.024.026	1090.700.133	Oil supply
8HP45X HIS	1090.024.026	1087.700.136	Oil pan
8HP45X HIS	1090.024.026	1090.700.141	Extension
8HP45X HIS	1090.024.027	1087.700.079	Mechatronic
8HP45X HIS	1090.024.027	1090.700.133	Oil supply
8HP45X HIS	1090.024.027	1087.700.136	Oil pan
8HP45X HIS	1090.024.029	1087.700.079	Mechatronic
8HP45X HIS	1090.024.029	1090.700.133	Oil supply
8HP45X HIS	1090.024.029	1087.700.136	Oil pan
8HP45X HIS	1090.024.030	1087.700.079	Mechatronic
8HP45X HIS	1090.024.030	1090.700.133	Oil supply
8HP45X HIS	1090.024.030	1087.700.136	Oil pan
8HP45X HIS	1090.024.033	1087.700.079	Mechatronic
8HP45X HIS	1090.024.033	1090.700.133	Oil supply
8HP45X HIS	1090.024.033	1090.700.035	Oil pan
8HP45X HIS	1090.024.035	1087.700.079	Mechatronic
8HP45X HIS	1090.024.035	1090.700.133	Oil supply
8HP45X HIS	1090.024.035	1087.700.136	Oil pan
8HP45X HIS	1090.024.038	1087.700.079	Mechatronic
8HP45X HIS	1090.024.038	1090.700.133	Oil supply
8HP45X HIS	1090.024.038	1087.700.136	Oil pan
8HP45X HIS	1090.024.044	1087.700.079	Mechatronic
8HP45X HIS	1090.024.044	1090.700.133	Oil supply
8HP45X HIS	1090.024.044	1087.700.136	Oil pan
8HP45X HIS	1090.024.045	1087.700.079	Mechatronic
8HP45X HIS	1090.024.045	1090.700.133	Oil supply
8HP45X HIS	1090.024.045	1087.700.136	Oil pan
8HP45X HIS	1090.024.046	1087.700.079	Mechatronic
8HP45X HIS	1090.024.046	1090.700.133	Oil supply
8HP45X HIS	1090.024.046	1087.700.136	Oil pan
8HP45X HIS	1090.024.047	1087.700.079	Mechatronic
8HP45X HIS	1090.024.047	1090.700.133	Oil supply
8HP45X HIS	1090.024.047	1087.700.136	Oil pan
8HP45X HIS	1090.024.048	1087.700.079	Mechatronic
8HP45X HIS	1090.024.048	1090.700.133	Oil supply
8HP45X HIS	1090.024.048	1087.700.136	Oil pan
8HP45X HIS	1090.024.051	1087.700.079	Mechatronic
8HP45X HIS	1090.024.051	1090.700.133	Oil supply
8HP45X HIS	1090.024.051	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X HIS	1090.024.052	1087.700.079	Mechatronic
8HP45X HIS	1090.024.052	1090.700.133	Oil supply
8HP45X HIS	1090.024.052	1087.700.136	Oil pan
8HP45X HIS	1090.024.055	1087.700.079	Mechatronic
8HP45X HIS	1090.024.055	1090.700.133	Oil supply
8HP45X HIS	1090.024.055	1087.700.136	Oil pan
8HP45X HIS	1090.024.056	1087.700.079	Mechatronic
8HP45X HIS	1090.024.056	1090.700.133	Oil supply
8HP45X HIS	1090.024.056	1087.700.136	Oil pan
8HP45X HIS	1090.024.057	1087.700.079	Mechatronic
8HP45X HIS	1090.024.057	1090.700.133	Oil supply
8HP45X HIS	1090.024.057	1087.700.136	Oil pan
8HP45X HIS	1090.024.058	1087.700.079	Mechatronic
8HP45X HIS	1090.024.058	1090.700.133	Oil supply
8HP45X HIS	1090.024.058	1087.700.136	Oil pan
8HP45X HIS	1090.024.071	1087.700.079	Mechatronic
8HP45X HIS	1090.024.071	1090.700.133	Oil supply
8HP45X HIS	1090.024.071	1087.700.136	Oil pan
8HP45X HIS	1090.024.073	1087.700.079	Mechatronic
8HP45X HIS	1090.024.073	1090.700.133	Oil supply
8HP45X HIS	1090.024.073	1087.700.136	Oil pan
8HP45X HIS	1090.024.074	1087.700.079	Mechatronic
8HP45X HIS	1090.024.074	1090.700.133	Oil supply
8HP45X HIS	1090.024.074	1087.700.136	Oil pan
8HP45X HIS	1090.024.076	1087.700.079	Mechatronic
8HP45X HIS	1090.024.076	1090.700.133	Oil supply
8HP45X HIS	1090.024.076	1087.700.136	Oil pan
8HP45X HIS	1090.024.077	1087.700.079	Mechatronic
8HP45X HIS	1090.024.077	1090.700.133	Oil supply
8HP45X HIS	1090.024.077	1087.700.136	Oil pan
8HP45X HIS	1090.024.078	1087.700.079	Mechatronic
8HP45X HIS	1090.024.078	1090.700.133	Oil supply
8HP45X HIS	1090.024.078	1087.700.136	Oil pan
8HP45X HIS	1090.024.079	1087.700.079	Mechatronic
8HP45X HIS	1090.024.079	1090.700.133	Oil supply
8HP45X HIS	1090.024.079	1087.700.136	Oil pan
8HP45X HIS	1090.024.080	1087.700.079	Mechatronic
8HP45X HIS	1090.024.080	1090.700.133	Oil supply
8HP45X HIS	1090.024.080	1087.700.136	Oil pan
8HP45X HIS	1090.024.082	1087.700.079	Mechatronic
8HP45X HIS	1090.024.082	1090.700.133	Oil supply
8HP45X HIS	1090.024.082	1087.700.136	Oil pan
8HP45X HIS	1090.024.083	1087.700.079	Mechatronic
8HP45X HIS	1090.024.083	1090.700.133	Oil supply
8HP45X HIS	1090.024.083	1087.700.136	Oil pan
8HP45X HIS	1090.024.084	1087.700.079	Mechatronic
8HP45X HIS	1090.024.084	1090.700.133	Oil supply
8HP45X HIS	1090.024.084	1087.700.136	Oil pan
8HP45X HIS	1090.024.085	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X HIS	1090.024.085	1090.700.133	Oil supply
8HP45X HIS	1090.024.085	1087.700.136	Oil pan
8HP45X HIS	1090.024.086	1087.700.079	Mechatronic
8HP45X HIS	1090.024.086	1090.700.133	Oil supply
8HP45X HIS	1090.024.086	1087.700.136	Oil pan
8HP45X HIS	1090.024.087	1087.700.079	Mechatronic
8HP45X HIS	1090.024.087	1090.700.133	Oil supply
8HP45X HIS	1090.024.087	1087.700.136	Oil pan
8HP45X HIS	1090.024.088	1087.700.079	Mechatronic
8HP45X HIS	1090.024.088	1090.700.133	Oil supply
8HP45X HIS	1090.024.088	1087.700.136	Oil pan
8HP45X HIS	1090.024.089	1087.700.079	Mechatronic
8HP45X HIS	1090.024.089	1090.700.133	Oil supply
8HP45X HIS	1090.024.089	1087.700.136	Oil pan
8HP45X HIS	1090.024.090	1087.700.079	Mechatronic
8HP45X HIS	1090.024.090	1090.700.133	Oil supply
8HP45X HIS	1090.024.090	1087.700.136	Oil pan
8HP45X HIS	1090.024.091	1087.700.079	Mechatronic
8HP45X HIS	1090.024.091	1090.700.133	Oil supply
8HP45X HIS	1090.024.091	1087.700.136	Oil pan
8HP45X HIS	1090.024.092	1087.700.079	Mechatronic
8HP45X HIS	1090.024.092	1090.700.133	Oil supply
8HP45X HIS	1090.024.092	1087.700.136	Oil pan
8HP45X HIS	1090.024.094	1087.700.079	Mechatronic
8HP45X HIS	1090.024.094	1090.700.133	Oil supply
8HP45X HIS	1090.024.094	1087.700.136	Oil pan
8HP45X HIS	1090.024.095	1087.700.079	Mechatronic
8HP45X HIS	1090.024.095	1090.700.133	Oil supply
8HP45X HIS	1090.024.095	1087.700.136	Oil pan
8HP45X HIS	1090.024.096	1087.700.079	Mechatronic
8HP45X HIS	1090.024.096	1090.700.133	Oil supply
8HP45X HIS	1090.024.096	1087.700.136	Oil pan
8HP45X HIS	1090.024.097	1087.700.079	Mechatronic
8HP45X HIS	1090.024.097	1090.700.133	Oil supply
8HP45X HIS	1090.024.097	1087.700.136	Oil pan
8HP45X HIS	1090.024.098	1087.700.079	Mechatronic
8HP45X HIS	1090.024.098	1090.700.133	Oil supply
8HP45X HIS	1090.024.098	1087.700.136	Oil pan
8HP45X HIS	1090.024.099	1087.700.079	Mechatronic
8HP45X HIS	1090.024.099	1090.700.133	Oil supply
8HP45X HIS	1090.024.099	1087.700.136	Oil pan
8HP45X HIS	1090.024.100	1087.700.079	Mechatronic
8HP45X HIS	1090.024.100	1090.700.133	Oil supply
8HP45X HIS	1090.024.100	1087.700.136	Oil pan
8HP45X HIS	1090.024.101	1087.700.079	Mechatronic
8HP45X HIS	1090.024.101	1090.700.133	Oil supply
8HP45X HIS	1090.024.101	1087.700.136	Oil pan
8HP45X HIS	1090.024.102	1087.700.079	Mechatronic
8HP45X HIS	1090.024.102	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X HIS	1090.024.102	1087.700.136	Oil pan
8HP45X HIS	1090.024.103	1087.700.079	Mechatronic
8HP45X HIS	1090.024.103	1090.700.133	Oil supply
8HP45X HIS	1090.024.103	1087.700.136	Oil pan
8HP45X HIS	1090.024.104	1087.700.079	Mechatronic
8HP45X HIS	1090.024.104	1090.700.133	Oil supply
8HP45X HIS	1090.024.104	1087.700.136	Oil pan
8HP45X HIS	1090.024.105	1087.700.079	Mechatronic
8HP45X HIS	1090.024.105	1090.700.133	Oil supply
8HP45X HIS	1090.024.105	1087.700.136	Oil pan
8HP45X HIS	1090.024.106	1087.700.079	Mechatronic
8HP45X HIS	1090.024.106	1090.700.133	Oil supply
8HP45X HIS	1090.024.106	1087.700.136	Oil pan
8HP45X HIS	1090.024.107	1087.700.079	Mechatronic
8HP45X HIS	1090.024.107	1090.700.133	Oil supply
8HP45X HIS	1090.024.107	1087.700.136	Oil pan
8HP45X HIS	1090.024.108	1087.700.079	Mechatronic
8HP45X HIS	1090.024.108	1090.700.133	Oil supply
8HP45X HIS	1090.024.108	1087.700.136	Oil pan
8HP45X HIS	1090.024.109	1087.700.079	Mechatronic
8HP45X HIS	1090.024.109	1090.700.133	Oil supply
8HP45X HIS	1090.024.109	1087.700.136	Oil pan
8HP45X HIS	1090.024.110	1087.700.079	Mechatronic
8HP45X HIS	1090.024.110	1090.700.133	Oil supply
8HP45X HIS	1090.024.110	1087.700.136	Oil pan
8HP45X HIS	1090.024.111	1087.700.079	Mechatronic
8HP45X HIS	1090.024.111	1090.700.133	Oil supply
8HP45X HIS	1090.024.111	1087.700.136	Oil pan
8HP45X HIS	1090.024.112	1087.700.079	Mechatronic
8HP45X HIS	1090.024.112	1090.700.133	Oil supply
8HP45X HIS	1090.024.112	1087.700.136	Oil pan
8HP45X HIS	1090.024.113	1087.700.079	Mechatronic
8HP45X HIS	1090.024.113	1090.700.133	Oil supply
8HP45X HIS	1090.024.113	1087.700.136	Oil pan
8HP45X HIS	1090.024.116	1087.700.079	Mechatronic
8HP45X HIS	1090.024.116	1090.700.133	Oil supply
8HP45X HIS	1090.024.116	1087.700.136	Oil pan
8HP45X HIS	1090.024.118	1087.700.079	Mechatronic
8HP45X HIS	1090.024.118	1090.700.133	Oil supply
8HP45X HIS	1090.024.118	1087.700.136	Oil pan
8HP45X HIS	1090.024.119	1087.700.079	Mechatronic
8HP45X HIS	1090.024.119	1090.700.133	Oil supply
8HP45X HIS	1090.024.119	1087.700.136	Oil pan
8HP45X HIS	1090.024.120	1087.700.079	Mechatronic
8HP45X HIS	1090.024.120	1090.700.133	Oil supply
8HP45X HIS	1090.024.120	1087.700.136	Oil pan
8HP45X HIS	1090.024.121	1087.700.079	Mechatronic
8HP45X HIS	1090.024.121	1090.700.133	Oil supply
8HP45X HIS	1090.024.121	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X HIS	1090.024.122	1087.700.079	Mechatronic
8HP45X HIS	1090.024.122	1090.700.133	Oil supply
8HP45X HIS	1090.024.122	1087.700.136	Oil pan
8HP45X HIS	1090.024.123	1087.700.079	Mechatronic
8HP45X HIS	1090.024.123	1090.700.133	Oil supply
8HP45X HIS	1090.024.123	1087.700.136	Oil pan
8HP45X HIS	1090.024.124	1087.700.079	Mechatronic
8HP45X HIS	1090.024.124	1090.700.133	Oil supply
8HP45X HIS	1090.024.124	1087.700.136	Oil pan
8HP45X HIS	1090.024.126	1087.700.079	Mechatronic
8HP45X HIS	1090.024.126	1090.700.133	Oil supply
8HP45X HIS	1090.024.126	1087.700.136	Oil pan
8HP45X HIS	1090.024.129	1087.700.079	Mechatronic
8HP45X HIS	1090.024.129	1090.700.133	Oil supply
8HP45X HIS	1090.024.129	1087.700.136	Oil pan
8HP45X HIS	1090.024.130	1087.700.079	Mechatronic
8HP45X HIS	1090.024.130	1090.700.133	Oil supply
8HP45X HIS	1090.024.130	1087.700.136	Oil pan
8HP45X HIS	1090.024.131	1087.700.079	Mechatronic
8HP45X HIS	1090.024.131	1090.700.133	Oil supply
8HP45X HIS	1090.024.131	1087.700.136	Oil pan
8HP45X HIS	1090.024.137	1087.700.079	Mechatronic
8HP45X HIS	1090.024.137	1090.700.133	Oil supply
8HP45X HIS	1090.024.137	1087.700.136	Oil pan
8HP45X HIS	1090.024.138	1087.700.079	Mechatronic
8HP45X HIS	1090.024.138	1090.700.133	Oil supply
8HP45X HIS	1090.024.138	1087.700.136	Oil pan
8HP45X HIS	1090.024.139	1087.700.079	Mechatronic
8HP45X HIS	1090.024.139	1090.700.133	Oil supply
8HP45X HIS	1090.024.139	1087.700.136	Oil pan
8HP45X HIS	1090.024.140	1087.700.079	Mechatronic
8HP45X HIS	1090.024.140	1090.700.133	Oil supply
8HP45X HIS	1090.024.140	1087.700.136	Oil pan
8HP45X HIS	1090.024.141	1087.700.079	Mechatronic
8HP45X HIS	1090.024.141	1090.700.133	Oil supply
8HP45X HIS	1090.024.141	1087.700.136	Oil pan
8HP45X HIS	1090.024.142	1087.700.079	Mechatronic
8HP45X HIS	1090.024.142	1090.700.133	Oil supply
8HP45X HIS	1090.024.142	1087.700.136	Oil pan
8HP45X HIS	1090.024.143	1087.700.079	Mechatronic
8HP45X HIS	1090.024.143	1090.700.133	Oil supply
8HP45X HIS	1090.024.143	1087.700.136	Oil pan
8HP45X HIS	1090.024.146	1087.700.079	Mechatronic
8HP45X HIS	1090.024.146	1090.700.133	Oil supply
8HP45X HIS	1090.024.146	1087.700.136	Oil pan
8HP45X HIS	1090.024.148	1087.700.079	Mechatronic
8HP45X HIS	1090.024.148	1090.700.133	Oil supply
8HP45X HIS	1090.024.148	1087.700.136	Oil pan
8HP45X HIS	1090.024.152	1087.700.079	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP45X HIS	1090.024.152	1090.700.133	Oil supply
8HP45X HIS	1090.024.152	1087.700.136	Oil pan
8HP45X HIS	1090.024.153	1087.700.079	Mechatronic
8HP45X HIS	1090.024.153	1090.700.133	Oil supply
8HP45X HIS	1090.024.153	1087.700.136	Oil pan
8HP45X HIS	1090.024.154	1087.700.079	Mechatronic
8HP45X HIS	1090.024.154	1090.700.133	Oil supply
8HP45X HIS	1090.024.154	1087.700.136	Oil pan
8HP45X HIS	1090.024.155	1087.700.079	Mechatronic
8HP45X HIS	1090.024.155	1090.700.133	Oil supply
8HP45X HIS	1090.024.155	1087.700.136	Oil pan
8HP45X HIS	1090.024.157	1087.700.079	Mechatronic
8HP45X HIS	1090.024.157	1090.700.133	Oil supply
8HP45X HIS	1090.024.157	1087.700.136	Oil pan
8HP45X HIS	1090.024.158	1087.700.079	Mechatronic
8HP45X HIS	1090.024.158	1090.700.133	Oil supply
8HP45X HIS	1090.024.158	1087.700.136	Oil pan
8HP45X HIS	1090.024.161	1087.700.079	Mechatronic
8HP45X HIS	1090.024.161	1090.700.133	Oil supply
8HP45X HIS	1090.024.161	1087.700.136	Oil pan
8HP45X HIS	1090.024.162	1087.700.079	Mechatronic
8HP45X HIS	1090.024.162	1090.700.133	Oil supply
8HP45X HIS	1090.024.162	1087.700.136	Oil pan
8HP45X HIS	1090.024.165	1087.700.079	Mechatronic
8HP45X HIS	1090.024.165	1090.700.133	Oil supply
8HP45X HIS	1090.024.165	1087.700.136	Oil pan
8HP45X HIS	1090.024.176	1087.700.079	Mechatronic
8HP45X HIS	1090.024.176	1090.700.133	Oil supply
8HP45X HIS	1090.024.176	1087.700.136	Oil pan
8HP45X HIS	1090.024.177	1087.700.079	Mechatronic
8HP45X HIS	1090.024.177	1090.700.133	Oil supply
8HP45X HIS	1090.024.177	1087.700.136	Oil pan
8HP45X HIS	1090.024.178	1087.700.079	Mechatronic
8HP45X HIS	1090.024.178	1090.700.133	Oil supply
8HP45X HIS	1090.024.178	1087.700.136	Oil pan
8HP45X HIS	1090.024.179	1087.700.079	Mechatronic
8HP45X HIS	1090.024.179	1090.700.133	Oil supply
8HP45X HIS	1090.024.179	1087.700.136	Oil pan
8HP45X HIS	1090.024.183	1087.700.079	Mechatronic
8HP45X HIS	1090.024.183	1090.700.133	Oil supply
8HP45X HIS	1090.024.183	1087.700.136	Oil pan
8HP45X HIS	1090.024.184	1087.700.079	Mechatronic
8HP45X HIS	1090.024.184	1090.700.133	Oil supply
8HP45X HIS	1090.024.184	1087.700.136	Oil pan

Tab. 27 Model 1090



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
136/312

ZF Aftermarket Service Information

22.4 Model 1091

Transmission type	Parts list (BoM)	Specification	Assembly
8HP90	1091.010.002	1087.700.079	Mechatronic
8HP90	1091.010.002	1091.700.115	Oil pan
8HP90	1091.010.002	1091.700.118	Intermediate plate
8HP90	1091.010.003	1087.700.079	Mechatronic
8HP90	1091.010.003	1091.700.115	Oil pan
8HP90	1091.010.003	1091.700.118	Intermediate plate
8HP90	1091.010.004	1087.700.079	Mechatronic
8HP90	1091.010.004	1091.700.115	Oil pan
8HP90	1091.010.004	1091.700.118	Intermediate plate
8HP90	1091.010.006	1087.700.079	Mechatronic
8HP90	1091.010.006	1091.700.115	Oil pan
8HP90	1091.010.006	1091.700.118	Intermediate plate
8HP90	1091.010.007	1087.700.079	Mechatronic
8HP90	1091.010.007	1091.700.115	Oil pan
8HP90	1091.010.007	1091.700.118	Intermediate plate
8HP90	1091.010.008	1087.700.079	Mechatronic
8HP90	1091.010.008	1091.700.115	Oil pan
8HP90	1091.010.008	1091.700.118	Intermediate plate
8HP90	1091.010.009	1087.700.079	Mechatronic
8HP90	1091.010.009	1091.700.115	Oil pan
8HP90	1091.010.009	1091.700.118	Intermediate plate
8HP90	1091.010.010	1087.700.079	Mechatronic
8HP90	1091.010.010	1091.700.115	Oil pan
8HP90	1091.010.010	1091.700.118	Intermediate plate
8HP90	1091.010.011	1087.700.079	Mechatronic
8HP90	1091.010.011	1091.700.115	Oil pan
8HP90	1091.010.011	1091.700.118	Intermediate plate
8HP90	1091.010.012	1087.700.079	Mechatronic
8HP90	1091.010.012	1091.700.115	Oil pan
8HP90	1091.010.012	1091.700.118	Intermediate plate
8HP90	1091.010.013	1087.700.079	Mechatronic
8HP90	1091.010.013	1091.700.115	Oil pan
8HP90	1091.010.013	1091.700.118	Intermediate plate
8HP90	1091.010.015	1087.700.079	Mechatronic
8HP90	1091.010.015	1091.700.115	Oil pan
8HP90	1091.010.015	1091.700.118	Intermediate plate
8HP90A	1091.030.005	1091.700.114	Differential cover
8HP90A	1091.030.005	1087.700.079	Mechatronic
8HP90A	1091.030.005	1091.700.027	Oil pan
8HP90A	1091.030.005	1091.700.018	Torque converter bell housing
8HP90A	1091.030.005	1104.700.039	Torque converter bell housing
8HP90A	1091.030.005	1091.700.117	Intermediate housing
8HP90A	1091.030.005	1091.700.118	Intermediate plate
8HP90A	1091.030.006	1091.700.114	Differential cover
8HP90A	1091.030.006	1087.700.079	Mechatronic
8HP90A	1091.030.006	1091.700.027	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
137/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP90A	1091.030.006	1091.700.018	Torque converter bell housing
8HP90A	1091.030.006	1104.700.039	Torque converter bell housing
8HP90A	1091.030.006	1091.700.117	Intermediate housing
8HP90A	1091.030.006	1091.700.118	Intermediate plate
8HP90A	1091.030.007	1091.700.114	Differential cover
8HP90A	1091.030.007	1087.700.079	Mechatronic
8HP90A	1091.030.007	1091.700.027	Oil pan
8HP90A	1091.030.007	1091.700.018	Torque converter bell housing
8HP90A	1091.030.007	1104.700.039	Torque converter bell housing
8HP90A	1091.030.007	1091.700.117	Intermediate housing
8HP90A	1091.030.007	1091.700.118	Intermediate plate
8HP90A	1091.030.009	1091.700.114	Differential cover
8HP90A	1091.030.009	1087.700.079	Mechatronic
8HP90A	1091.030.009	1091.700.027	Oil pan
8HP90A	1091.030.009	1091.700.018	Torque converter bell housing
8HP90A	1091.030.009	1104.700.039	Torque converter bell housing
8HP90A	1091.030.009	1091.700.117	Intermediate housing
8HP90A	1091.030.009	1091.700.118	Intermediate plate
8HP90A HIS	1091.034.003	1091.700.114	Differential cover
8HP90A HIS	1091.034.003	1087.700.079	Mechatronic
8HP90A HIS	1091.034.003	1091.700.027	Oil pan
8HP90A HIS	1091.034.003	1091.700.018	Torque converter bell housing
8HP90A HIS	1091.034.003	1104.700.039	Torque converter bell housing
8HP90A HIS	1091.034.003	1091.700.117	Intermediate housing
8HP90A HIS	1091.034.003	1091.700.118	Intermediate plate
8HP90A HIS	1091.034.009	1091.700.114	Differential cover
8HP90A HIS	1091.034.009	1087.700.079	Mechatronic
8HP90A HIS	1091.034.009	1091.700.027	Oil pan
8HP90A HIS	1091.034.009	1091.700.018	Torque converter bell housing
8HP90A HIS	1091.034.009	1104.700.039	Torque converter bell housing
8HP90A HIS	1091.034.009	1091.700.117	Intermediate housing
8HP90A HIS	1091.034.009	1091.700.118	Intermediate plate
8HP90A HIS	1091.034.012	1091.700.114	Differential cover
8HP90A HIS	1091.034.012	1087.700.079	Mechatronic
8HP90A HIS	1091.034.012	1091.700.027	Oil pan
8HP90A HIS	1091.034.012	1091.700.018	Torque converter bell housing
8HP90A HIS	1091.034.012	1104.700.039	Torque converter bell housing
8HP90A HIS	1091.034.012	1091.700.117	Intermediate housing
8HP90A HIS	1091.034.012	1091.700.118	Intermediate plate
8HP90A74	1091.040.001	1091.700.123	Differential cover
8HP90A74	1091.040.002	1091.700.123	Differential cover
8HP90A74	1091.040.003	1091.700.123	Differential cover
8HP90A74	1091.040.003	1087.700.079	Mechatronic
8HP90A74	1091.040.003	1091.700.027	Oil pan
8HP90A74	1091.040.003	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.003	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.003	1091.700.117	Intermediate housing
8HP90A74	1091.040.003	1091.700.118	Intermediate plate
8HP90A74	1091.040.004	1091.700.123	Differential cover



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP90A74	1091.040.005	1091.700.123	Differential cover
8HP90A74	1091.040.005	1087.700.079	Mechatronic
8HP90A74	1091.040.005	1091.700.027	Oil pan
8HP90A74	1091.040.005	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.005	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.005	1091.700.117	Intermediate housing
8HP90A74	1091.040.005	1091.700.118	Intermediate plate
8HP90A74	1091.040.006	1091.700.123	Differential cover
8HP90A74	1091.040.006	1087.700.079	Mechatronic
8HP90A74	1091.040.006	1091.700.027	Oil pan
8HP90A74	1091.040.006	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.006	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.006	1091.700.117	Intermediate housing
8HP90A74	1091.040.006	1091.700.118	Intermediate plate
8HP90A74	1091.040.007	1091.700.123	Differential cover
8HP90A74	1091.040.008	1091.700.123	Differential cover
8HP90A74	1091.040.008	1087.700.079	Mechatronic
8HP90A74	1091.040.008	1091.700.027	Oil pan
8HP90A74	1091.040.008	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.008	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.008	1091.700.117	Intermediate housing
8HP90A74	1091.040.008	1091.700.118	Intermediate plate
8HP90A74	1091.040.009	1091.700.123	Differential cover
8HP90A74	1091.040.010	1091.700.123	Differential cover
8HP90A74	1091.040.010	1087.700.079	Mechatronic
8HP90A74	1091.040.010	1091.700.027	Oil pan
8HP90A74	1091.040.010	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.010	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.010	1091.700.117	Intermediate housing
8HP90A74	1091.040.010	1091.700.118	Intermediate plate
8HP90A74	1091.040.011	1091.700.123	Differential cover
8HP90A74	1091.040.011	1087.700.079	Mechatronic
8HP90A74	1091.040.011	1091.700.027	Oil pan
8HP90A74	1091.040.011	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.011	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.011	1091.700.117	Intermediate housing
8HP90A74	1091.040.011	1091.700.118	Intermediate plate
8HP90A74	1091.040.012	1091.700.123	Differential cover
8HP90A74	1091.040.012	1087.700.079	Mechatronic
8HP90A74	1091.040.012	1091.700.027	Oil pan
8HP90A74	1091.040.012	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.012	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.012	1091.700.117	Intermediate housing
8HP90A74	1091.040.012	1091.700.118	Intermediate plate
8HP90A74	1091.040.014	1091.700.123	Differential cover
8HP90A74	1091.040.014	1087.700.079	Mechatronic
8HP90A74	1091.040.014	1091.700.027	Oil pan
8HP90A74	1091.040.014	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.014	1104.700.039	Torque converter bell housing



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP90A74	1091.040.014	1091.700.117	Intermediate housing
8HP90A74	1091.040.014	1091.700.118	Intermediate plate
8HP90A74	1091.040.016	1091.700.123	Differential cover
8HP90A74	1091.040.016	1087.700.079	Mechatronic
8HP90A74	1091.040.016	1091.700.027	Oil pan
8HP90A74	1091.040.016	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.016	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.016	1091.700.117	Intermediate housing
8HP90A74	1091.040.016	1091.700.118	Intermediate plate
8HP90A74	1091.040.017	1091.700.123	Differential cover
8HP90A74	1091.040.018	1091.700.123	Differential cover
8HP90A74	1091.040.018	1087.700.079	Mechatronic
8HP90A74	1091.040.018	1091.700.027	Oil pan
8HP90A74	1091.040.018	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.018	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.018	1091.700.117	Intermediate housing
8HP90A74	1091.040.018	1091.700.118	Intermediate plate
8HP90A74	1091.040.019	1091.700.123	Differential cover
8HP90A74	1091.040.019	1087.700.079	Mechatronic
8HP90A74	1091.040.019	1091.700.027	Oil pan
8HP90A74	1091.040.019	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.019	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.019	1091.700.117	Intermediate housing
8HP90A74	1091.040.019	1091.700.118	Intermediate plate
8HP90A74	1091.040.020	1091.700.123	Differential cover
8HP90A74	1091.040.020	1087.700.079	Mechatronic
8HP90A74	1091.040.020	1091.700.027	Oil pan
8HP90A74	1091.040.020	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.020	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.020	1091.700.117	Intermediate housing
8HP90A74	1091.040.020	1091.700.118	Intermediate plate
8HP90A74	1091.040.021	1091.700.123	Differential cover
8HP90A74	1091.040.022	1091.700.123	Differential cover
8HP90A74	1091.040.022	1087.700.079	Mechatronic
8HP90A74	1091.040.022	1091.700.027	Oil pan
8HP90A74	1091.040.022	1091.700.018	Torque converter bell housing
8HP90A74	1091.040.022	1104.700.039	Torque converter bell housing
8HP90A74	1091.040.022	1091.700.117	Intermediate housing
8HP90A74	1091.040.022	1091.700.118	Intermediate plate
8HP90A74 HIS	1091.044.001	1091.700.123	Differential cover
8HP90	1091.057.001	1087.700.079	Mechatronic
8HP90	1091.057.001	1091.700.027	Oil pan
8HP90	1091.057.001	1091.700.118	Intermediate plate
8HP90	1091.057.005	1087.700.079	Mechatronic
8HP90	1091.057.005	1091.700.027	Oil pan
8HP90	1091.057.005	1091.700.118	Intermediate plate
8HP90	1091.057.006	1087.700.079	Mechatronic
8HP90	1091.057.006	1091.700.027	Oil pan
8HP90	1091.057.006	1091.700.118	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP90	1091.057.007	1087.700.079	Mechatronic
8HP90	1091.057.007	1091.700.027	Oil pan
8HP90	1091.057.007	1091.700.118	Intermediate plate
8HP90	1091.057.008	1087.700.079	Mechatronic
8HP90	1091.057.008	1091.700.027	Oil pan
8HP90	1091.057.008	1091.700.118	Intermediate plate
8HP90	1091.057.009	1087.700.079	Mechatronic
8HP90	1091.057.009	1091.700.027	Oil pan
8HP90	1091.057.009	1091.700.118	Intermediate plate
8HP90	1091.057.010	1087.700.079	Mechatronic
8HP90	1091.057.010	1091.700.027	Oil pan
8HP90	1091.057.010	1091.700.118	Intermediate plate
8HP90	1091.057.011	1087.700.079	Mechatronic
8HP90	1091.057.011	1091.700.027	Oil pan
8HP90	1091.057.011	1091.700.118	Intermediate plate
8HP90	1091.057.012	1087.700.079	Mechatronic
8HP90	1091.057.012	1091.700.027	Oil pan
8HP90	1091.057.012	1091.700.118	Intermediate plate
8HP90	1091.057.013	1087.700.079	Mechatronic
8HP90	1091.057.013	1091.700.027	Oil pan
8HP90	1091.057.013	1091.700.118	Intermediate plate
8HP90	1091.057.014	1087.700.079	Mechatronic
8HP90	1091.057.014	1091.700.027	Oil pan
8HP90	1091.057.014	1091.700.118	Intermediate plate
8HP90	1091.057.015	1087.700.079	Mechatronic
8HP90	1091.057.015	1091.700.027	Oil pan
8HP90	1091.057.015	1091.700.118	Intermediate plate
8HP90	1091.057.016	1087.700.079	Mechatronic
8HP90	1091.057.016	1091.700.027	Oil pan
8HP90	1091.057.016	1091.700.118	Intermediate plate
8HP90	1091.057.017	1087.700.079	Mechatronic
8HP90	1091.057.017	1091.700.027	Oil pan
8HP90	1091.057.017	1091.700.118	Intermediate plate
8HP90	1091.057.018	1087.700.079	Mechatronic
8HP90	1091.057.018	1091.700.027	Oil pan
8HP90	1091.057.018	1091.700.118	Intermediate plate
8HP90	1091.057.019	1087.700.079	Mechatronic
8HP90	1091.057.019	1091.700.027	Oil pan
8HP90	1091.057.019	1091.700.118	Intermediate plate
8HP90	1091.057.020	1087.700.079	Mechatronic
8HP90	1091.057.020	1091.700.027	Oil pan
8HP90	1091.057.020	1091.700.118	Intermediate plate
8HP90	1091.057.021	1087.700.079	Mechatronic
8HP90	1091.057.021	1091.700.027	Oil pan
8HP90	1091.057.021	1091.700.118	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP90	1091.057.022	1087.700.079	Mechatronic
8HP90	1091.057.022	1091.700.027	Oil pan
8HP90	1091.057.022	1091.700.118	Intermediate plate

Tab. 28 Model 1091



ZF Aftermarket Service Information

22.5 Model 1101

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50	1101.010.002	1087.700.079	Mechatronic
8HP50	1101.010.002	1102.700.034	Mechatronic
8HP50	1101.010.002	1090.700.133	Oil supply
8HP50	1101.010.002	1087.700.136	Oil pan
8HP50	1101.010.009	1087.700.079	Mechatronic
8HP50	1101.010.009	1102.700.034	Mechatronic
8HP50	1101.010.009	1090.700.133	Oil supply
8HP50	1101.010.009	1087.700.136	Oil pan
8HP50	1101.010.014	1087.700.079	Mechatronic
8HP50	1101.010.014	1102.700.034	Mechatronic
8HP50	1101.010.014	1090.700.133	Oil supply
8HP50	1101.010.014	1087.700.136	Oil pan
8HP50	1101.010.015	1087.700.079	Mechatronic
8HP50	1101.010.015	1102.700.034	Mechatronic
8HP50	1101.010.015	1090.700.133	Oil supply
8HP50	1101.010.015	1087.700.136	Oil pan
8HP50	1101.010.020	1087.700.079	Mechatronic
8HP50	1101.010.020	1102.700.034	Mechatronic
8HP50	1101.010.020	1090.700.133	Oil supply
8HP50	1101.010.020	1087.700.136	Oil pan
8HP50	1101.010.022	1087.700.079	Mechatronic
8HP50	1101.010.022	1102.700.034	Mechatronic
8HP50	1101.010.022	1090.700.133	Oil supply
8HP50	1101.010.022	1087.700.136	Oil pan
8HP50	1101.010.025	1087.700.079	Mechatronic
8HP50	1101.010.025	1102.700.034	Mechatronic
8HP50	1101.010.025	1090.700.133	Oil supply
8HP50	1101.010.025	1087.700.136	Oil pan
8HP50	1101.010.026	1087.700.079	Mechatronic
8HP50	1101.010.026	1102.700.034	Mechatronic
8HP50	1101.010.026	1090.700.133	Oil supply
8HP50	1101.010.026	1087.700.136	Oil pan
8HP50	1101.010.028	1087.700.079	Mechatronic
8HP50	1101.010.028	1102.700.034	Mechatronic
8HP50	1101.010.028	1090.700.133	Oil supply
8HP50	1101.010.028	1087.700.136	Oil pan
8HP50	1101.010.034	1087.700.079	Mechatronic
8HP50	1101.010.034	1102.700.034	Mechatronic
8HP50	1101.010.034	1090.700.133	Oil supply
8HP50	1101.010.034	1087.700.136	Oil pan
8HP50	1101.010.035	1087.700.079	Mechatronic
8HP50	1101.010.035	1102.700.034	Mechatronic
8HP50	1101.010.035	1090.700.133	Oil supply
8HP50	1101.010.035	1087.700.136	Oil pan
8HP50	1101.010.037	1087.700.079	Mechatronic
8HP50	1101.010.037	1102.700.034	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
143/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50	1101.010.037	1090.700.133	Oil supply
8HP50	1101.010.037	1087.700.136	Oil pan
8HP50	1101.010.041	1087.700.079	Mechatronic
8HP50	1101.010.041	1102.700.034	Mechatronic
8HP50	1101.010.041	1090.700.133	Oil supply
8HP50	1101.010.041	1087.700.136	Oil pan
8HP50	1101.010.042	1087.700.079	Mechatronic
8HP50	1101.010.042	1102.700.034	Mechatronic
8HP50	1101.010.042	1090.700.133	Oil supply
8HP50	1101.010.042	1087.700.136	Oil pan
8HP50	1101.010.043	1087.700.079	Mechatronic
8HP50	1101.010.043	1102.700.034	Mechatronic
8HP50	1101.010.043	1090.700.133	Oil supply
8HP50	1101.010.043	1087.700.136	Oil pan
8HP50	1101.010.044	1087.700.079	Mechatronic
8HP50	1101.010.044	1102.700.034	Mechatronic
8HP50	1101.010.044	1090.700.133	Oil supply
8HP50	1101.010.044	1087.700.136	Oil pan
8HP50	1101.010.045	1087.700.079	Mechatronic
8HP50	1101.010.045	1102.700.034	Mechatronic
8HP50	1101.010.045	1090.700.133	Oil supply
8HP50	1101.010.045	1087.700.136	Oil pan
8HP50	1101.010.046	1087.700.079	Mechatronic
8HP50	1101.010.046	1102.700.034	Mechatronic
8HP50	1101.010.046	1090.700.133	Oil supply
8HP50	1101.010.046	1087.700.136	Oil pan
8HP50	1101.010.047	1087.700.079	Mechatronic
8HP50	1101.010.047	1102.700.034	Mechatronic
8HP50	1101.010.047	1090.700.133	Oil supply
8HP50	1101.010.047	1087.700.136	Oil pan
8HP50	1101.010.048	1087.700.079	Mechatronic
8HP50	1101.010.048	1102.700.034	Mechatronic
8HP50	1101.010.048	1090.700.133	Oil supply
8HP50	1101.010.048	1087.700.136	Oil pan
8HP50	1101.010.049	1087.700.079	Mechatronic
8HP50	1101.010.049	1102.700.034	Mechatronic
8HP50	1101.010.049	1090.700.133	Oil supply
8HP50	1101.010.049	1087.700.136	Oil pan
8HP50	1101.010.050	1087.700.079	Mechatronic
8HP50	1101.010.050	1102.700.034	Mechatronic
8HP50	1101.010.050	1090.700.133	Oil supply
8HP50	1101.010.050	1087.700.136	Oil pan
8HP50	1101.010.051	1087.700.079	Mechatronic
8HP50	1101.010.051	1102.700.034	Mechatronic
8HP50	1101.010.051	1090.700.133	Oil supply
8HP50	1101.010.051	1087.700.136	Oil pan
8HP50	1101.010.052	1087.700.079	Mechatronic
8HP50	1101.010.052	1102.700.034	Mechatronic
8HP50	1101.010.052	1090.700.133	Oil supply



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
144/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50	1101.010.052	1087.700.136	Oil pan
8HP50	1101.010.053	1087.700.079	Mechatronic
8HP50	1101.010.053	1102.700.034	Mechatronic
8HP50	1101.010.053	1090.700.133	Oil supply
8HP50	1101.010.053	1087.700.136	Oil pan
8HP50	1101.010.054	1087.700.079	Mechatronic
8HP50	1101.010.054	1102.700.034	Mechatronic
8HP50	1101.010.054	1090.700.133	Oil supply
8HP50	1101.010.054	1087.700.136	Oil pan
8HP50	1101.010.055	1087.700.079	Mechatronic
8HP50	1101.010.055	1102.700.034	Mechatronic
8HP50	1101.010.055	1090.700.133	Oil supply
8HP50	1101.010.055	1087.700.136	Oil pan
8HP50	1101.010.056	1087.700.079	Mechatronic
8HP50	1101.010.056	1102.700.034	Mechatronic
8HP50	1101.010.056	1090.700.133	Oil supply
8HP50	1101.010.056	1087.700.136	Oil pan
8HP50	1101.010.058	1087.700.079	Mechatronic
8HP50	1101.010.058	1102.700.034	Mechatronic
8HP50	1101.010.058	1090.700.133	Oil supply
8HP50	1101.010.058	1087.700.136	Oil pan
8HP50	1101.010.059	1087.700.079	Mechatronic
8HP50	1101.010.059	1102.700.034	Mechatronic
8HP50	1101.010.059	1090.700.133	Oil supply
8HP50	1101.010.059	1087.700.136	Oil pan
8HP50	1101.010.061	1087.700.079	Mechatronic
8HP50	1101.010.061	1102.700.034	Mechatronic
8HP50	1101.010.061	1090.700.133	Oil supply
8HP50	1101.010.061	1087.700.136	Oil pan
8HP50	1101.010.062	1087.700.079	Mechatronic
8HP50	1101.010.062	1102.700.034	Mechatronic
8HP50	1101.010.062	1090.700.133	Oil supply
8HP50	1101.010.062	1087.700.136	Oil pan
8HP50	1101.010.064	1087.700.079	Mechatronic
8HP50	1101.010.064	1102.700.034	Mechatronic
8HP50	1101.010.064	1090.700.133	Oil supply
8HP50	1101.010.064	1087.700.136	Oil pan
8HP50	1101.010.065	1087.700.079	Mechatronic
8HP50	1101.010.065	1102.700.034	Mechatronic
8HP50	1101.010.065	1090.700.133	Oil supply
8HP50	1101.010.065	1087.700.136	Oil pan
8HP50	1101.010.066	1087.700.079	Mechatronic
8HP50	1101.010.066	1102.700.034	Mechatronic
8HP50	1101.010.066	1090.700.133	Oil supply
8HP50	1101.010.066	1087.700.136	Oil pan
8HP50	1101.010.067	1087.700.079	Mechatronic
8HP50	1101.010.067	1102.700.034	Mechatronic
8HP50	1101.010.067	1090.700.133	Oil supply
8HP50	1101.010.067	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50	1101.010.069	1087.700.079	Mechatronic
8HP50	1101.010.069	1102.700.034	Mechatronic
8HP50	1101.010.069	1090.700.133	Oil supply
8HP50	1101.010.069	1087.700.136	Oil pan
8HP50	1101.010.070	1087.700.079	Mechatronic
8HP50	1101.010.070	1102.700.034	Mechatronic
8HP50	1101.010.070	1090.700.133	Oil supply
8HP50	1101.010.070	1087.700.136	Oil pan
8HP50	1101.010.071	1087.700.079	Mechatronic
8HP50	1101.010.071	1102.700.034	Mechatronic
8HP50	1101.010.071	1090.700.133	Oil supply
8HP50	1101.010.071	1087.700.136	Oil pan
8HP50	1101.010.072	1087.700.079	Mechatronic
8HP50	1101.010.072	1102.700.034	Mechatronic
8HP50	1101.010.072	1090.700.133	Oil supply
8HP50	1101.010.072	1087.700.136	Oil pan
8HP50	1101.010.073	1087.700.079	Mechatronic
8HP50	1101.010.073	1102.700.034	Mechatronic
8HP50	1101.010.073	1090.700.133	Oil supply
8HP50	1101.010.073	1087.700.136	Oil pan
8HP50	1101.010.075	1087.700.079	Mechatronic
8HP50	1101.010.075	1102.700.034	Mechatronic
8HP50	1101.010.075	1090.700.133	Oil supply
8HP50	1101.010.075	1087.700.136	Oil pan
8HP50	1101.010.076	1087.700.079	Mechatronic
8HP50	1101.010.076	1102.700.034	Mechatronic
8HP50	1101.010.076	1090.700.133	Oil supply
8HP50	1101.010.076	1087.700.136	Oil pan
8HP50	1101.010.077	1087.700.079	Mechatronic
8HP50	1101.010.077	1102.700.034	Mechatronic
8HP50	1101.010.077	1090.700.133	Oil supply
8HP50	1101.010.077	1087.700.136	Oil pan
8HP50	1101.010.078	1087.700.079	Mechatronic
8HP50	1101.010.078	1102.700.034	Mechatronic
8HP50	1101.010.078	1090.700.133	Oil supply
8HP50	1101.010.078	1087.700.136	Oil pan
8HP50	1101.010.079	1087.700.079	Mechatronic
8HP50	1101.010.079	1102.700.034	Mechatronic
8HP50	1101.010.079	1090.700.133	Oil supply
8HP50	1101.010.079	1087.700.136	Oil pan
8HP50	1101.010.080	1087.700.079	Mechatronic
8HP50	1101.010.080	1102.700.034	Mechatronic
8HP50	1101.010.080	1090.700.133	Oil supply
8HP50	1101.010.080	1087.700.136	Oil pan
8HP50	1101.010.081	1087.700.079	Mechatronic
8HP50	1101.010.081	1102.700.034	Mechatronic
8HP50	1101.010.081	1090.700.133	Oil supply
8HP50	1101.010.081	1087.700.136	Oil pan
8HP50	1101.010.082	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
146/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50	1101.010.082	1102.700.034	Mechatronic
8HP50	1101.010.082	1090.700.133	Oil supply
8HP50	1101.010.082	1087.700.136	Oil pan
8HP50	1101.010.083	1087.700.079	Mechatronic
8HP50	1101.010.083	1102.700.034	Mechatronic
8HP50	1101.010.083	1090.700.133	Oil supply
8HP50	1101.010.083	1087.700.136	Oil pan
8HP50	1101.010.084	1087.700.079	Mechatronic
8HP50	1101.010.084	1102.700.034	Mechatronic
8HP50	1101.010.084	1090.700.133	Oil supply
8HP50	1101.010.084	1087.700.136	Oil pan
8HP50	1101.010.085	1087.700.079	Mechatronic
8HP50	1101.010.085	1102.700.034	Mechatronic
8HP50	1101.010.085	1090.700.133	Oil supply
8HP50	1101.010.085	1087.700.136	Oil pan
8HP50	1101.010.087	1087.700.079	Mechatronic
8HP50	1101.010.087	1102.700.034	Mechatronic
8HP50	1101.010.087	1090.700.133	Oil supply
8HP50	1101.010.087	1087.700.136	Oil pan
8HP50	1101.010.088	1087.700.079	Mechatronic
8HP50	1101.010.088	1102.700.034	Mechatronic
8HP50	1101.010.088	1090.700.133	Oil supply
8HP50	1101.010.088	1087.700.136	Oil pan
8HP50	1101.010.089	1087.700.079	Mechatronic
8HP50	1101.010.089	1102.700.034	Mechatronic
8HP50	1101.010.089	1090.700.133	Oil supply
8HP50	1101.010.089	1087.700.136	Oil pan
8HP50	1101.010.090	1087.700.079	Mechatronic
8HP50	1101.010.090	1102.700.034	Mechatronic
8HP50	1101.010.090	1090.700.133	Oil supply
8HP50	1101.010.090	1087.700.136	Oil pan
8HP50	1101.010.091	1087.700.079	Mechatronic
8HP50	1101.010.091	1102.700.034	Mechatronic
8HP50	1101.010.091	1090.700.133	Oil supply
8HP50	1101.010.091	1087.700.136	Oil pan
8HP50	1101.010.092	1087.700.079	Mechatronic
8HP50	1101.010.092	1102.700.034	Mechatronic
8HP50	1101.010.092	1090.700.133	Oil supply
8HP50	1101.010.092	1087.700.136	Oil pan
8HP50	1101.010.093	1087.700.079	Mechatronic
8HP50	1101.010.093	1102.700.034	Mechatronic
8HP50	1101.010.093	1090.700.133	Oil supply
8HP50	1101.010.093	1087.700.136	Oil pan
8HP50	1101.010.094	1087.700.079	Mechatronic
8HP50	1101.010.094	1102.700.034	Mechatronic
8HP50	1101.010.094	1090.700.133	Oil supply
8HP50	1101.010.094	1087.700.136	Oil pan
8HP50	1101.010.095	1087.700.079	Mechatronic
8HP50	1101.010.095	1102.700.034	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
147/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50	1101.010.095	1090.700.133	Oil supply
8HP50	1101.010.095	1087.700.136	Oil pan
8HP50	1101.010.096	1087.700.079	Mechatronic
8HP50	1101.010.096	1102.700.034	Mechatronic
8HP50	1101.010.096	1090.700.133	Oil supply
8HP50	1101.010.096	1087.700.136	Oil pan
8HP50	1101.010.097	1087.700.136	Oil pan
8HP50	1101.010.099	1087.700.136	Oil pan
8HP50 HIS	1101.014.006	1087.700.079	Mechatronic
8HP50 HIS	1101.014.006	1102.700.034	Mechatronic
8HP50 HIS	1101.014.006	1090.700.133	Oil supply
8HP50 HIS	1101.014.006	1087.700.136	Oil pan
8HP50 HIS	1101.014.010	1087.700.079	Mechatronic
8HP50 HIS	1101.014.010	1102.700.034	Mechatronic
8HP50 HIS	1101.014.010	1090.700.133	Oil supply
8HP50 HIS	1101.014.010	1087.700.136	Oil pan
8HP50 HIS	1101.014.011	1087.700.079	Mechatronic
8HP50 HIS	1101.014.011	1102.700.034	Mechatronic
8HP50 HIS	1101.014.011	1090.700.133	Oil supply
8HP50 HIS	1101.014.011	1087.700.136	Oil pan
8HP50 HIS	1101.014.012	1087.700.079	Mechatronic
8HP50 HIS	1101.014.012	1102.700.034	Mechatronic
8HP50 HIS	1101.014.012	1090.700.133	Oil supply
8HP50 HIS	1101.014.012	1087.700.136	Oil pan
8HP50 HIS	1101.014.013	1087.700.079	Mechatronic
8HP50 HIS	1101.014.013	1102.700.034	Mechatronic
8HP50 HIS	1101.014.013	1090.700.133	Oil supply
8HP50 HIS	1101.014.013	1087.700.136	Oil pan
8HP50 HIS	1101.014.014	1087.700.079	Mechatronic
8HP50 HIS	1101.014.014	1102.700.034	Mechatronic
8HP50 HIS	1101.014.014	1090.700.133	Oil supply
8HP50 HIS	1101.014.014	1087.700.136	Oil pan
8HP50 HIS	1101.014.015	1087.700.079	Mechatronic
8HP50 HIS	1101.014.015	1102.700.034	Mechatronic
8HP50 HIS	1101.014.015	1090.700.133	Oil supply
8HP50 HIS	1101.014.015	1087.700.136	Oil pan
8HP50 HIS	1101.014.016	1087.700.079	Mechatronic
8HP50 HIS	1101.014.016	1102.700.034	Mechatronic
8HP50 HIS	1101.014.016	1090.700.133	Oil supply
8HP50 HIS	1101.014.016	1087.700.136	Oil pan
8HP50 HIS	1101.014.018	1087.700.079	Mechatronic
8HP50 HIS	1101.014.018	1102.700.034	Mechatronic
8HP50 HIS	1101.014.018	1090.700.133	Oil supply
8HP50 HIS	1101.014.018	1087.700.136	Oil pan
8HP50 HIS	1101.014.028	1087.700.079	Mechatronic
8HP50 HIS	1101.014.028	1102.700.034	Mechatronic
8HP50 HIS	1101.014.028	1090.700.133	Oil supply
8HP50 HIS	1101.014.028	1087.700.136	Oil pan
8HP50 HIS	1101.014.030	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.030	1102.700.034	Mechatronic
8HP50 HIS	1101.014.030	1090.700.133	Oil supply
8HP50 HIS	1101.014.030	1087.700.136	Oil pan
8HP50 HIS	1101.014.031	1087.700.079	Mechatronic
8HP50 HIS	1101.014.031	1102.700.034	Mechatronic
8HP50 HIS	1101.014.031	1090.700.133	Oil supply
8HP50 HIS	1101.014.031	1087.700.136	Oil pan
8HP50 HIS	1101.014.032	1087.700.079	Mechatronic
8HP50 HIS	1101.014.032	1102.700.034	Mechatronic
8HP50 HIS	1101.014.032	1090.700.133	Oil supply
8HP50 HIS	1101.014.032	1087.700.136	Oil pan
8HP50 HIS	1101.014.033	1087.700.079	Mechatronic
8HP50 HIS	1101.014.033	1102.700.034	Mechatronic
8HP50 HIS	1101.014.033	1090.700.133	Oil supply
8HP50 HIS	1101.014.033	1087.700.136	Oil pan
8HP50 HIS	1101.014.035	1087.700.079	Mechatronic
8HP50 HIS	1101.014.035	1102.700.034	Mechatronic
8HP50 HIS	1101.014.035	1090.700.133	Oil supply
8HP50 HIS	1101.014.035	1087.700.136	Oil pan
8HP50 HIS	1101.014.036	1087.700.079	Mechatronic
8HP50 HIS	1101.014.036	1102.700.034	Mechatronic
8HP50 HIS	1101.014.036	1090.700.133	Oil supply
8HP50 HIS	1101.014.036	1087.700.136	Oil pan
8HP50 HIS	1101.014.037	1087.700.079	Mechatronic
8HP50 HIS	1101.014.037	1102.700.034	Mechatronic
8HP50 HIS	1101.014.037	1090.700.133	Oil supply
8HP50 HIS	1101.014.037	1087.700.136	Oil pan
8HP50 HIS	1101.014.041	1087.700.079	Mechatronic
8HP50 HIS	1101.014.041	1102.700.034	Mechatronic
8HP50 HIS	1101.014.041	1090.700.133	Oil supply
8HP50 HIS	1101.014.041	1087.700.136	Oil pan
8HP50 HIS	1101.014.042	1087.700.079	Mechatronic
8HP50 HIS	1101.014.042	1102.700.034	Mechatronic
8HP50 HIS	1101.014.042	1090.700.133	Oil supply
8HP50 HIS	1101.014.042	1087.700.136	Oil pan
8HP50 HIS	1101.014.043	1087.700.079	Mechatronic
8HP50 HIS	1101.014.043	1102.700.034	Mechatronic
8HP50 HIS	1101.014.043	1090.700.133	Oil supply
8HP50 HIS	1101.014.043	1087.700.136	Oil pan
8HP50 HIS	1101.014.044	1087.700.079	Mechatronic
8HP50 HIS	1101.014.044	1102.700.034	Mechatronic
8HP50 HIS	1101.014.044	1090.700.133	Oil supply
8HP50 HIS	1101.014.044	1087.700.136	Oil pan
8HP50 HIS	1101.014.047	1087.700.079	Mechatronic
8HP50 HIS	1101.014.047	1102.700.034	Mechatronic
8HP50 HIS	1101.014.047	1090.700.133	Oil supply
8HP50 HIS	1101.014.047	1087.700.136	Oil pan
8HP50 HIS	1101.014.051	1087.700.079	Mechatronic
8HP50 HIS	1101.014.051	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.051	1090.700.133	Oil supply
8HP50 HIS	1101.014.051	1087.700.136	Oil pan
8HP50 HIS	1101.014.052	1087.700.079	Mechatronic
8HP50 HIS	1101.014.052	1102.700.034	Mechatronic
8HP50 HIS	1101.014.052	1090.700.133	Oil supply
8HP50 HIS	1101.014.052	1087.700.136	Oil pan
8HP50 HIS	1101.014.053	1087.700.079	Mechatronic
8HP50 HIS	1101.014.053	1102.700.034	Mechatronic
8HP50 HIS	1101.014.053	1090.700.133	Oil supply
8HP50 HIS	1101.014.053	1087.700.136	Oil pan
8HP50 HIS	1101.014.054	1087.700.079	Mechatronic
8HP50 HIS	1101.014.054	1102.700.034	Mechatronic
8HP50 HIS	1101.014.054	1090.700.133	Oil supply
8HP50 HIS	1101.014.054	1087.700.136	Oil pan
8HP50 HIS	1101.014.056	1087.700.079	Mechatronic
8HP50 HIS	1101.014.056	1102.700.034	Mechatronic
8HP50 HIS	1101.014.056	1090.700.133	Oil supply
8HP50 HIS	1101.014.056	1087.700.136	Oil pan
8HP50 HIS	1101.014.057	1087.700.079	Mechatronic
8HP50 HIS	1101.014.057	1102.700.034	Mechatronic
8HP50 HIS	1101.014.057	1090.700.133	Oil supply
8HP50 HIS	1101.014.057	1087.700.136	Oil pan
8HP50 HIS	1101.014.058	1087.700.079	Mechatronic
8HP50 HIS	1101.014.058	1102.700.034	Mechatronic
8HP50 HIS	1101.014.058	1090.700.133	Oil supply
8HP50 HIS	1101.014.058	1087.700.136	Oil pan
8HP50 HIS	1101.014.059	1087.700.079	Mechatronic
8HP50 HIS	1101.014.059	1102.700.034	Mechatronic
8HP50 HIS	1101.014.059	1090.700.133	Oil supply
8HP50 HIS	1101.014.059	1087.700.136	Oil pan
8HP50 HIS	1101.014.060	1087.700.079	Mechatronic
8HP50 HIS	1101.014.060	1102.700.034	Mechatronic
8HP50 HIS	1101.014.060	1090.700.133	Oil supply
8HP50 HIS	1101.014.060	1087.700.136	Oil pan
8HP50 HIS	1101.014.061	1087.700.079	Mechatronic
8HP50 HIS	1101.014.061	1102.700.034	Mechatronic
8HP50 HIS	1101.014.061	1090.700.133	Oil supply
8HP50 HIS	1101.014.061	1087.700.136	Oil pan
8HP50 HIS	1101.014.064	1087.700.079	Mechatronic
8HP50 HIS	1101.014.064	1102.700.034	Mechatronic
8HP50 HIS	1101.014.064	1090.700.133	Oil supply
8HP50 HIS	1101.014.064	1087.700.136	Oil pan
8HP50 HIS	1101.014.070	1087.700.079	Mechatronic
8HP50 HIS	1101.014.070	1102.700.034	Mechatronic
8HP50 HIS	1101.014.070	1090.700.133	Oil supply
8HP50 HIS	1101.014.070	1087.700.136	Oil pan
8HP50 HIS	1101.014.071	1087.700.079	Mechatronic
8HP50 HIS	1101.014.071	1102.700.034	Mechatronic
8HP50 HIS	1101.014.071	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.071	1087.700.136	Oil pan
8HP50 HIS	1101.014.074	1087.700.079	Mechatronic
8HP50 HIS	1101.014.074	1102.700.034	Mechatronic
8HP50 HIS	1101.014.074	1090.700.133	Oil supply
8HP50 HIS	1101.014.074	1087.700.136	Oil pan
8HP50 HIS	1101.014.076	1087.700.079	Mechatronic
8HP50 HIS	1101.014.076	1102.700.034	Mechatronic
8HP50 HIS	1101.014.076	1090.700.133	Oil supply
8HP50 HIS	1101.014.076	1087.700.136	Oil pan
8HP50 HIS	1101.014.077	1087.700.079	Mechatronic
8HP50 HIS	1101.014.077	1102.700.034	Mechatronic
8HP50 HIS	1101.014.077	1090.700.133	Oil supply
8HP50 HIS	1101.014.077	1087.700.136	Oil pan
8HP50 HIS	1101.014.078	1087.700.079	Mechatronic
8HP50 HIS	1101.014.078	1102.700.034	Mechatronic
8HP50 HIS	1101.014.078	1090.700.133	Oil supply
8HP50 HIS	1101.014.078	1087.700.136	Oil pan
8HP50 HIS	1101.014.080	1087.700.079	Mechatronic
8HP50 HIS	1101.014.080	1102.700.034	Mechatronic
8HP50 HIS	1101.014.080	1090.700.133	Oil supply
8HP50 HIS	1101.014.080	1087.700.136	Oil pan
8HP50 HIS	1101.014.082	1087.700.079	Mechatronic
8HP50 HIS	1101.014.082	1102.700.034	Mechatronic
8HP50 HIS	1101.014.082	1090.700.133	Oil supply
8HP50 HIS	1101.014.082	1087.700.136	Oil pan
8HP50 HIS	1101.014.085	1087.700.079	Mechatronic
8HP50 HIS	1101.014.085	1102.700.034	Mechatronic
8HP50 HIS	1101.014.085	1090.700.133	Oil supply
8HP50 HIS	1101.014.085	1087.700.136	Oil pan
8HP50 HIS	1101.014.086	1087.700.079	Mechatronic
8HP50 HIS	1101.014.086	1102.700.034	Mechatronic
8HP50 HIS	1101.014.086	1090.700.133	Oil supply
8HP50 HIS	1101.014.086	1087.700.136	Oil pan
8HP50 HIS	1101.014.087	1087.700.079	Mechatronic
8HP50 HIS	1101.014.087	1102.700.034	Mechatronic
8HP50 HIS	1101.014.087	1090.700.133	Oil supply
8HP50 HIS	1101.014.087	1087.700.136	Oil pan
8HP50 HIS	1101.014.088	1087.700.079	Mechatronic
8HP50 HIS	1101.014.088	1102.700.034	Mechatronic
8HP50 HIS	1101.014.088	1090.700.133	Oil supply
8HP50 HIS	1101.014.088	1087.700.136	Oil pan
8HP50 HIS	1101.014.089	1087.700.079	Mechatronic
8HP50 HIS	1101.014.089	1102.700.034	Mechatronic
8HP50 HIS	1101.014.089	1090.700.133	Oil supply
8HP50 HIS	1101.014.089	1087.700.136	Oil pan
8HP50 HIS	1101.014.090	1087.700.079	Mechatronic
8HP50 HIS	1101.014.090	1102.700.034	Mechatronic
8HP50 HIS	1101.014.090	1090.700.133	Oil supply
8HP50 HIS	1101.014.090	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.091	1087.700.079	Mechatronic
8HP50 HIS	1101.014.091	1102.700.034	Mechatronic
8HP50 HIS	1101.014.091	1090.700.133	Oil supply
8HP50 HIS	1101.014.091	1087.700.136	Oil pan
8HP50 HIS	1101.014.092	1087.700.079	Mechatronic
8HP50 HIS	1101.014.092	1102.700.034	Mechatronic
8HP50 HIS	1101.014.092	1090.700.133	Oil supply
8HP50 HIS	1101.014.092	1087.700.136	Oil pan
8HP50 HIS	1101.014.094	1087.700.079	Mechatronic
8HP50 HIS	1101.014.094	1102.700.034	Mechatronic
8HP50 HIS	1101.014.094	1090.700.133	Oil supply
8HP50 HIS	1101.014.094	1087.700.136	Oil pan
8HP50 HIS	1101.014.096	1087.700.079	Mechatronic
8HP50 HIS	1101.014.096	1102.700.034	Mechatronic
8HP50 HIS	1101.014.096	1090.700.133	Oil supply
8HP50 HIS	1101.014.096	1087.700.136	Oil pan
8HP50 HIS	1101.014.098	1087.700.079	Mechatronic
8HP50 HIS	1101.014.098	1102.700.034	Mechatronic
8HP50 HIS	1101.014.098	1090.700.133	Oil supply
8HP50 HIS	1101.014.098	1087.700.136	Oil pan
8HP50 HIS	1101.014.099	1087.700.079	Mechatronic
8HP50 HIS	1101.014.099	1102.700.034	Mechatronic
8HP50 HIS	1101.014.099	1090.700.133	Oil supply
8HP50 HIS	1101.014.099	1087.700.136	Oil pan
8HP50 HIS	1101.014.100	1087.700.079	Mechatronic
8HP50 HIS	1101.014.100	1102.700.034	Mechatronic
8HP50 HIS	1101.014.100	1090.700.133	Oil supply
8HP50 HIS	1101.014.100	1087.700.136	Oil pan
8HP50 HIS	1101.014.111	1087.700.079	Mechatronic
8HP50 HIS	1101.014.111	1102.700.034	Mechatronic
8HP50 HIS	1101.014.111	1090.700.133	Oil supply
8HP50 HIS	1101.014.111	1087.700.136	Oil pan
8HP50 HIS	1101.014.112	1087.700.079	Mechatronic
8HP50 HIS	1101.014.112	1102.700.034	Mechatronic
8HP50 HIS	1101.014.112	1090.700.133	Oil supply
8HP50 HIS	1101.014.112	1087.700.136	Oil pan
8HP50 HIS	1101.014.114	1087.700.079	Mechatronic
8HP50 HIS	1101.014.114	1102.700.034	Mechatronic
8HP50 HIS	1101.014.114	1090.700.133	Oil supply
8HP50 HIS	1101.014.114	1087.700.136	Oil pan
8HP50 HIS	1101.014.116	1087.700.079	Mechatronic
8HP50 HIS	1101.014.116	1102.700.034	Mechatronic
8HP50 HIS	1101.014.116	1090.700.133	Oil supply
8HP50 HIS	1101.014.116	1087.700.136	Oil pan
8HP50 HIS	1101.014.118	1087.700.079	Mechatronic
8HP50 HIS	1101.014.118	1102.700.034	Mechatronic
8HP50 HIS	1101.014.118	1090.700.133	Oil supply
8HP50 HIS	1101.014.118	1087.700.136	Oil pan
8HP50 HIS	1101.014.119	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.119	1102.700.034	Mechatronic
8HP50 HIS	1101.014.119	1090.700.133	Oil supply
8HP50 HIS	1101.014.119	1087.700.136	Oil pan
8HP50 HIS	1101.014.125	1087.700.079	Mechatronic
8HP50 HIS	1101.014.125	1102.700.034	Mechatronic
8HP50 HIS	1101.014.125	1090.700.133	Oil supply
8HP50 HIS	1101.014.125	1087.700.136	Oil pan
8HP50 HIS	1101.014.126	1087.700.079	Mechatronic
8HP50 HIS	1101.014.126	1102.700.034	Mechatronic
8HP50 HIS	1101.014.126	1090.700.133	Oil supply
8HP50 HIS	1101.014.126	1087.700.136	Oil pan
8HP50 HIS	1101.014.127	1087.700.079	Mechatronic
8HP50 HIS	1101.014.127	1102.700.034	Mechatronic
8HP50 HIS	1101.014.127	1090.700.133	Oil supply
8HP50 HIS	1101.014.127	1087.700.136	Oil pan
8HP50 HIS	1101.014.129	1087.700.079	Mechatronic
8HP50 HIS	1101.014.129	1102.700.034	Mechatronic
8HP50 HIS	1101.014.129	1090.700.133	Oil supply
8HP50 HIS	1101.014.129	1087.700.136	Oil pan
8HP50 HIS	1101.014.131	1087.700.079	Mechatronic
8HP50 HIS	1101.014.131	1102.700.034	Mechatronic
8HP50 HIS	1101.014.131	1090.700.133	Oil supply
8HP50 HIS	1101.014.131	1087.700.136	Oil pan
8HP50 HIS	1101.014.132	1087.700.079	Mechatronic
8HP50 HIS	1101.014.132	1102.700.034	Mechatronic
8HP50 HIS	1101.014.132	1090.700.133	Oil supply
8HP50 HIS	1101.014.132	1087.700.136	Oil pan
8HP50 HIS	1101.014.133	1087.700.079	Mechatronic
8HP50 HIS	1101.014.133	1102.700.034	Mechatronic
8HP50 HIS	1101.014.133	1090.700.133	Oil supply
8HP50 HIS	1101.014.133	1087.700.136	Oil pan
8HP50 HIS	1101.014.134	1087.700.079	Mechatronic
8HP50 HIS	1101.014.134	1102.700.034	Mechatronic
8HP50 HIS	1101.014.134	1090.700.133	Oil supply
8HP50 HIS	1101.014.134	1087.700.136	Oil pan
8HP50 HIS	1101.014.135	1087.700.079	Mechatronic
8HP50 HIS	1101.014.135	1102.700.034	Mechatronic
8HP50 HIS	1101.014.135	1090.700.133	Oil supply
8HP50 HIS	1101.014.135	1087.700.136	Oil pan
8HP50 HIS	1101.014.143	1087.700.079	Mechatronic
8HP50 HIS	1101.014.143	1102.700.034	Mechatronic
8HP50 HIS	1101.014.143	1090.700.133	Oil supply
8HP50 HIS	1101.014.143	1087.700.136	Oil pan
8HP50 HIS	1101.014.149	1087.700.079	Mechatronic
8HP50 HIS	1101.014.149	1102.700.034	Mechatronic
8HP50 HIS	1101.014.149	1090.700.133	Oil supply
8HP50 HIS	1101.014.149	1087.700.136	Oil pan
8HP50 HIS	1101.014.151	1087.700.079	Mechatronic
8HP50 HIS	1101.014.151	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.151	1090.700.133	Oil supply
8HP50 HIS	1101.014.151	1087.700.136	Oil pan
8HP50 HIS	1101.014.152	1087.700.079	Mechatronic
8HP50 HIS	1101.014.152	1102.700.034	Mechatronic
8HP50 HIS	1101.014.152	1090.700.133	Oil supply
8HP50 HIS	1101.014.152	1087.700.136	Oil pan
8HP50 HIS	1101.014.153	1087.700.079	Mechatronic
8HP50 HIS	1101.014.153	1102.700.034	Mechatronic
8HP50 HIS	1101.014.153	1090.700.133	Oil supply
8HP50 HIS	1101.014.153	1087.700.136	Oil pan
8HP50 HIS	1101.014.160	1087.700.079	Mechatronic
8HP50 HIS	1101.014.160	1102.700.034	Mechatronic
8HP50 HIS	1101.014.160	1090.700.133	Oil supply
8HP50 HIS	1101.014.160	1087.700.136	Oil pan
8HP50 HIS	1101.014.162	1087.700.079	Mechatronic
8HP50 HIS	1101.014.162	1102.700.034	Mechatronic
8HP50 HIS	1101.014.162	1090.700.133	Oil supply
8HP50 HIS	1101.014.162	1087.700.136	Oil pan
8HP50 HIS	1101.014.163	1087.700.079	Mechatronic
8HP50 HIS	1101.014.163	1102.700.034	Mechatronic
8HP50 HIS	1101.014.163	1090.700.133	Oil supply
8HP50 HIS	1101.014.163	1087.700.136	Oil pan
8HP50 HIS	1101.014.166	1087.700.079	Mechatronic
8HP50 HIS	1101.014.166	1102.700.034	Mechatronic
8HP50 HIS	1101.014.166	1090.700.133	Oil supply
8HP50 HIS	1101.014.166	1087.700.136	Oil pan
8HP50 HIS	1101.014.168	1087.700.079	Mechatronic
8HP50 HIS	1101.014.168	1102.700.034	Mechatronic
8HP50 HIS	1101.014.168	1090.700.133	Oil supply
8HP50 HIS	1101.014.168	1087.700.136	Oil pan
8HP50 HIS	1101.014.174	1087.700.079	Mechatronic
8HP50 HIS	1101.014.174	1102.700.034	Mechatronic
8HP50 HIS	1101.014.174	1090.700.133	Oil supply
8HP50 HIS	1101.014.174	1087.700.136	Oil pan
8HP50 HIS	1101.014.176	1087.700.079	Mechatronic
8HP50 HIS	1101.014.176	1102.700.034	Mechatronic
8HP50 HIS	1101.014.176	1090.700.133	Oil supply
8HP50 HIS	1101.014.176	1087.700.136	Oil pan
8HP50 HIS	1101.014.177	1087.700.079	Mechatronic
8HP50 HIS	1101.014.177	1102.700.034	Mechatronic
8HP50 HIS	1101.014.177	1090.700.133	Oil supply
8HP50 HIS	1101.014.177	1087.700.136	Oil pan
8HP50 HIS	1101.014.179	1087.700.079	Mechatronic
8HP50 HIS	1101.014.179	1102.700.034	Mechatronic
8HP50 HIS	1101.014.179	1090.700.133	Oil supply
8HP50 HIS	1101.014.179	1087.700.136	Oil pan
8HP50 HIS	1101.014.189	1087.700.079	Mechatronic
8HP50 HIS	1101.014.189	1102.700.034	Mechatronic
8HP50 HIS	1101.014.189	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.189	1087.700.136	Oil pan
8HP50 HIS	1101.014.190	1087.700.079	Mechatronic
8HP50 HIS	1101.014.190	1102.700.034	Mechatronic
8HP50 HIS	1101.014.190	1090.700.133	Oil supply
8HP50 HIS	1101.014.190	1087.700.136	Oil pan
8HP50 HIS	1101.014.191	1087.700.079	Mechatronic
8HP50 HIS	1101.014.191	1102.700.034	Mechatronic
8HP50 HIS	1101.014.191	1090.700.133	Oil supply
8HP50 HIS	1101.014.191	1087.700.136	Oil pan
8HP50 HIS	1101.014.192	1087.700.079	Mechatronic
8HP50 HIS	1101.014.192	1102.700.034	Mechatronic
8HP50 HIS	1101.014.192	1090.700.133	Oil supply
8HP50 HIS	1101.014.192	1087.700.136	Oil pan
8HP50 HIS	1101.014.194	1087.700.079	Mechatronic
8HP50 HIS	1101.014.194	1102.700.034	Mechatronic
8HP50 HIS	1101.014.194	1090.700.133	Oil supply
8HP50 HIS	1101.014.194	1087.700.136	Oil pan
8HP50 HIS	1101.014.195	1087.700.079	Mechatronic
8HP50 HIS	1101.014.195	1102.700.034	Mechatronic
8HP50 HIS	1101.014.195	1090.700.133	Oil supply
8HP50 HIS	1101.014.195	1087.700.136	Oil pan
8HP50 HIS	1101.014.200	1087.700.079	Mechatronic
8HP50 HIS	1101.014.200	1102.700.034	Mechatronic
8HP50 HIS	1101.014.200	1090.700.133	Oil supply
8HP50 HIS	1101.014.200	1087.700.136	Oil pan
8HP50 HIS	1101.014.201	1087.700.079	Mechatronic
8HP50 HIS	1101.014.201	1102.700.034	Mechatronic
8HP50 HIS	1101.014.201	1090.700.133	Oil supply
8HP50 HIS	1101.014.201	1087.700.136	Oil pan
8HP50 HIS	1101.014.202	1087.700.079	Mechatronic
8HP50 HIS	1101.014.202	1102.700.034	Mechatronic
8HP50 HIS	1101.014.202	1090.700.133	Oil supply
8HP50 HIS	1101.014.202	1087.700.136	Oil pan
8HP50 HIS	1101.014.224	1087.700.079	Mechatronic
8HP50 HIS	1101.014.224	1102.700.034	Mechatronic
8HP50 HIS	1101.014.224	1090.700.133	Oil supply
8HP50 HIS	1101.014.224	1087.700.136	Oil pan
8HP50 HIS	1101.014.225	1087.700.079	Mechatronic
8HP50 HIS	1101.014.225	1102.700.034	Mechatronic
8HP50 HIS	1101.014.225	1090.700.133	Oil supply
8HP50 HIS	1101.014.225	1087.700.136	Oil pan
8HP50 HIS	1101.014.226	1087.700.079	Mechatronic
8HP50 HIS	1101.014.226	1102.700.034	Mechatronic
8HP50 HIS	1101.014.226	1090.700.133	Oil supply
8HP50 HIS	1101.014.226	1087.700.136	Oil pan
8HP50 HIS	1101.014.227	1087.700.079	Mechatronic
8HP50 HIS	1101.014.227	1102.700.034	Mechatronic
8HP50 HIS	1101.014.227	1090.700.133	Oil supply
8HP50 HIS	1101.014.227	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.228	1087.700.079	Mechatronic
8HP50 HIS	1101.014.228	1102.700.034	Mechatronic
8HP50 HIS	1101.014.228	1090.700.133	Oil supply
8HP50 HIS	1101.014.228	1087.700.136	Oil pan
8HP50 HIS	1101.014.230	1087.700.079	Mechatronic
8HP50 HIS	1101.014.230	1102.700.034	Mechatronic
8HP50 HIS	1101.014.230	1090.700.133	Oil supply
8HP50 HIS	1101.014.230	1087.700.136	Oil pan
8HP50 HIS	1101.014.231	1087.700.079	Mechatronic
8HP50 HIS	1101.014.231	1102.700.034	Mechatronic
8HP50 HIS	1101.014.231	1090.700.133	Oil supply
8HP50 HIS	1101.014.231	1087.700.136	Oil pan
8HP50 HIS	1101.014.236	1087.700.079	Mechatronic
8HP50 HIS	1101.014.236	1102.700.034	Mechatronic
8HP50 HIS	1101.014.236	1090.700.133	Oil supply
8HP50 HIS	1101.014.236	1087.700.136	Oil pan
8HP50 HIS	1101.014.238	1087.700.079	Mechatronic
8HP50 HIS	1101.014.238	1102.700.034	Mechatronic
8HP50 HIS	1101.014.238	1090.700.133	Oil supply
8HP50 HIS	1101.014.238	1087.700.136	Oil pan
8HP50 HIS	1101.014.240	1087.700.079	Mechatronic
8HP50 HIS	1101.014.240	1102.700.034	Mechatronic
8HP50 HIS	1101.014.240	1090.700.133	Oil supply
8HP50 HIS	1101.014.240	1087.700.136	Oil pan
8HP50 HIS	1101.014.245	1087.700.079	Mechatronic
8HP50 HIS	1101.014.245	1102.700.034	Mechatronic
8HP50 HIS	1101.014.245	1090.700.133	Oil supply
8HP50 HIS	1101.014.245	1087.700.136	Oil pan
8HP50 HIS	1101.014.246	1087.700.079	Mechatronic
8HP50 HIS	1101.014.246	1102.700.034	Mechatronic
8HP50 HIS	1101.014.246	1090.700.133	Oil supply
8HP50 HIS	1101.014.246	1087.700.136	Oil pan
8HP50 HIS	1101.014.247	1087.700.079	Mechatronic
8HP50 HIS	1101.014.247	1102.700.034	Mechatronic
8HP50 HIS	1101.014.247	1090.700.133	Oil supply
8HP50 HIS	1101.014.247	1087.700.136	Oil pan
8HP50 HIS	1101.014.249	1087.700.079	Mechatronic
8HP50 HIS	1101.014.249	1102.700.034	Mechatronic
8HP50 HIS	1101.014.249	1090.700.133	Oil supply
8HP50 HIS	1101.014.249	1087.700.136	Oil pan
8HP50 HIS	1101.014.250	1087.700.079	Mechatronic
8HP50 HIS	1101.014.250	1102.700.034	Mechatronic
8HP50 HIS	1101.014.250	1090.700.133	Oil supply
8HP50 HIS	1101.014.250	1087.700.136	Oil pan
8HP50 HIS	1101.014.252	1087.700.079	Mechatronic
8HP50 HIS	1101.014.252	1102.700.034	Mechatronic
8HP50 HIS	1101.014.252	1090.700.133	Oil supply
8HP50 HIS	1101.014.252	1087.700.136	Oil pan
8HP50 HIS	1101.014.253	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.253	1102.700.034	Mechatronic
8HP50 HIS	1101.014.253	1090.700.133	Oil supply
8HP50 HIS	1101.014.253	1087.700.136	Oil pan
8HP50 HIS	1101.014.254	1087.700.079	Mechatronic
8HP50 HIS	1101.014.254	1102.700.034	Mechatronic
8HP50 HIS	1101.014.254	1090.700.133	Oil supply
8HP50 HIS	1101.014.254	1087.700.136	Oil pan
8HP50 HIS	1101.014.255	1087.700.079	Mechatronic
8HP50 HIS	1101.014.255	1102.700.034	Mechatronic
8HP50 HIS	1101.014.255	1090.700.133	Oil supply
8HP50 HIS	1101.014.255	1087.700.136	Oil pan
8HP50 HIS	1101.014.259	1087.700.079	Mechatronic
8HP50 HIS	1101.014.259	1102.700.034	Mechatronic
8HP50 HIS	1101.014.259	1090.700.133	Oil supply
8HP50 HIS	1101.014.259	1087.700.136	Oil pan
8HP50 HIS	1101.014.260	1087.700.079	Mechatronic
8HP50 HIS	1101.014.260	1102.700.034	Mechatronic
8HP50 HIS	1101.014.260	1090.700.133	Oil supply
8HP50 HIS	1101.014.260	1087.700.136	Oil pan
8HP50 HIS	1101.014.261	1087.700.079	Mechatronic
8HP50 HIS	1101.014.261	1102.700.034	Mechatronic
8HP50 HIS	1101.014.261	1090.700.133	Oil supply
8HP50 HIS	1101.014.261	1087.700.136	Oil pan
8HP50 HIS	1101.014.262	1087.700.079	Mechatronic
8HP50 HIS	1101.014.262	1102.700.034	Mechatronic
8HP50 HIS	1101.014.262	1090.700.133	Oil supply
8HP50 HIS	1101.014.262	1087.700.136	Oil pan
8HP50 HIS	1101.014.263	1087.700.079	Mechatronic
8HP50 HIS	1101.014.263	1102.700.034	Mechatronic
8HP50 HIS	1101.014.263	1090.700.133	Oil supply
8HP50 HIS	1101.014.263	1087.700.136	Oil pan
8HP50 HIS	1101.014.264	1087.700.079	Mechatronic
8HP50 HIS	1101.014.264	1102.700.034	Mechatronic
8HP50 HIS	1101.014.264	1090.700.133	Oil supply
8HP50 HIS	1101.014.264	1087.700.136	Oil pan
8HP50 HIS	1101.014.265	1087.700.079	Mechatronic
8HP50 HIS	1101.014.265	1102.700.034	Mechatronic
8HP50 HIS	1101.014.265	1090.700.133	Oil supply
8HP50 HIS	1101.014.265	1087.700.136	Oil pan
8HP50 HIS	1101.014.266	1087.700.079	Mechatronic
8HP50 HIS	1101.014.266	1102.700.034	Mechatronic
8HP50 HIS	1101.014.266	1090.700.133	Oil supply
8HP50 HIS	1101.014.266	1087.700.136	Oil pan
8HP50 HIS	1101.014.267	1087.700.079	Mechatronic
8HP50 HIS	1101.014.267	1102.700.034	Mechatronic
8HP50 HIS	1101.014.267	1090.700.133	Oil supply
8HP50 HIS	1101.014.267	1087.700.136	Oil pan
8HP50 HIS	1101.014.268	1087.700.079	Mechatronic
8HP50 HIS	1101.014.268	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.268	1090.700.133	Oil supply
8HP50 HIS	1101.014.268	1087.700.136	Oil pan
8HP50 HIS	1101.014.270	1087.700.079	Mechatronic
8HP50 HIS	1101.014.270	1102.700.034	Mechatronic
8HP50 HIS	1101.014.270	1090.700.133	Oil supply
8HP50 HIS	1101.014.270	1087.700.136	Oil pan
8HP50 HIS	1101.014.274	1087.700.079	Mechatronic
8HP50 HIS	1101.014.274	1102.700.034	Mechatronic
8HP50 HIS	1101.014.274	1090.700.133	Oil supply
8HP50 HIS	1101.014.274	1087.700.136	Oil pan
8HP50 HIS	1101.014.275	1087.700.079	Mechatronic
8HP50 HIS	1101.014.275	1102.700.034	Mechatronic
8HP50 HIS	1101.014.275	1090.700.133	Oil supply
8HP50 HIS	1101.014.275	1087.700.136	Oil pan
8HP50 HIS	1101.014.277	1087.700.079	Mechatronic
8HP50 HIS	1101.014.277	1102.700.034	Mechatronic
8HP50 HIS	1101.014.277	1090.700.133	Oil supply
8HP50 HIS	1101.014.277	1087.700.136	Oil pan
8HP50 HIS	1101.014.278	1087.700.079	Mechatronic
8HP50 HIS	1101.014.278	1102.700.034	Mechatronic
8HP50 HIS	1101.014.278	1090.700.133	Oil supply
8HP50 HIS	1101.014.278	1087.700.136	Oil pan
8HP50 HIS	1101.014.279	1087.700.079	Mechatronic
8HP50 HIS	1101.014.279	1102.700.034	Mechatronic
8HP50 HIS	1101.014.279	1090.700.133	Oil supply
8HP50 HIS	1101.014.279	1087.700.136	Oil pan
8HP50 HIS	1101.014.280	1087.700.079	Mechatronic
8HP50 HIS	1101.014.280	1102.700.034	Mechatronic
8HP50 HIS	1101.014.280	1090.700.133	Oil supply
8HP50 HIS	1101.014.280	1087.700.136	Oil pan
8HP50 HIS	1101.014.281	1087.700.079	Mechatronic
8HP50 HIS	1101.014.281	1102.700.034	Mechatronic
8HP50 HIS	1101.014.281	1090.700.133	Oil supply
8HP50 HIS	1101.014.281	1087.700.136	Oil pan
8HP50 HIS	1101.014.282	1087.700.079	Mechatronic
8HP50 HIS	1101.014.282	1102.700.034	Mechatronic
8HP50 HIS	1101.014.282	1090.700.133	Oil supply
8HP50 HIS	1101.014.282	1087.700.136	Oil pan
8HP50 HIS	1101.014.283	1087.700.079	Mechatronic
8HP50 HIS	1101.014.283	1102.700.034	Mechatronic
8HP50 HIS	1101.014.283	1090.700.133	Oil supply
8HP50 HIS	1101.014.283	1087.700.136	Oil pan
8HP50 HIS	1101.014.284	1087.700.079	Mechatronic
8HP50 HIS	1101.014.284	1102.700.034	Mechatronic
8HP50 HIS	1101.014.284	1090.700.133	Oil supply
8HP50 HIS	1101.014.284	1087.700.136	Oil pan
8HP50 HIS	1101.014.285	1087.700.079	Mechatronic
8HP50 HIS	1101.014.285	1102.700.034	Mechatronic
8HP50 HIS	1101.014.285	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.285	1087.700.136	Oil pan
8HP50 HIS	1101.014.287	1087.700.079	Mechatronic
8HP50 HIS	1101.014.287	1102.700.034	Mechatronic
8HP50 HIS	1101.014.287	1090.700.133	Oil supply
8HP50 HIS	1101.014.287	1087.700.136	Oil pan
8HP50 HIS	1101.014.288	1087.700.079	Mechatronic
8HP50 HIS	1101.014.288	1102.700.034	Mechatronic
8HP50 HIS	1101.014.288	1090.700.133	Oil supply
8HP50 HIS	1101.014.288	1087.700.136	Oil pan
8HP50 HIS	1101.014.289	1087.700.079	Mechatronic
8HP50 HIS	1101.014.289	1102.700.034	Mechatronic
8HP50 HIS	1101.014.289	1090.700.133	Oil supply
8HP50 HIS	1101.014.289	1087.700.136	Oil pan
8HP50 HIS	1101.014.293	1087.700.079	Mechatronic
8HP50 HIS	1101.014.293	1102.700.034	Mechatronic
8HP50 HIS	1101.014.293	1090.700.133	Oil supply
8HP50 HIS	1101.014.293	1087.700.136	Oil pan
8HP50 HIS	1101.014.294	1087.700.079	Mechatronic
8HP50 HIS	1101.014.294	1102.700.034	Mechatronic
8HP50 HIS	1101.014.294	1090.700.133	Oil supply
8HP50 HIS	1101.014.294	1087.700.136	Oil pan
8HP50 HIS	1101.014.295	1087.700.079	Mechatronic
8HP50 HIS	1101.014.295	1102.700.034	Mechatronic
8HP50 HIS	1101.014.295	1090.700.133	Oil supply
8HP50 HIS	1101.014.295	1087.700.136	Oil pan
8HP50 HIS	1101.014.296	1087.700.079	Mechatronic
8HP50 HIS	1101.014.296	1102.700.034	Mechatronic
8HP50 HIS	1101.014.296	1090.700.133	Oil supply
8HP50 HIS	1101.014.296	1087.700.136	Oil pan
8HP50 HIS	1101.014.298	1087.700.079	Mechatronic
8HP50 HIS	1101.014.298	1102.700.034	Mechatronic
8HP50 HIS	1101.014.298	1090.700.133	Oil supply
8HP50 HIS	1101.014.298	1087.700.136	Oil pan
8HP50 HIS	1101.014.299	1087.700.079	Mechatronic
8HP50 HIS	1101.014.299	1102.700.034	Mechatronic
8HP50 HIS	1101.014.299	1090.700.133	Oil supply
8HP50 HIS	1101.014.299	1087.700.136	Oil pan
8HP50 HIS	1101.014.300	1087.700.079	Mechatronic
8HP50 HIS	1101.014.300	1102.700.034	Mechatronic
8HP50 HIS	1101.014.300	1090.700.133	Oil supply
8HP50 HIS	1101.014.300	1087.700.136	Oil pan
8HP50 HIS	1101.014.301	1087.700.079	Mechatronic
8HP50 HIS	1101.014.301	1102.700.034	Mechatronic
8HP50 HIS	1101.014.301	1090.700.133	Oil supply
8HP50 HIS	1101.014.301	1087.700.136	Oil pan
8HP50 HIS	1101.014.302	1087.700.079	Mechatronic
8HP50 HIS	1101.014.302	1102.700.034	Mechatronic
8HP50 HIS	1101.014.302	1090.700.133	Oil supply
8HP50 HIS	1101.014.302	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50 HIS	1101.014.303	1087.700.079	Mechatronic
8HP50 HIS	1101.014.303	1102.700.034	Mechatronic
8HP50 HIS	1101.014.303	1090.700.133	Oil supply
8HP50 HIS	1101.014.303	1087.700.136	Oil pan
8HP50 HIS	1101.014.304	1087.700.079	Mechatronic
8HP50 HIS	1101.014.304	1102.700.034	Mechatronic
8HP50 HIS	1101.014.304	1090.700.133	Oil supply
8HP50 HIS	1101.014.304	1087.700.136	Oil pan
8HP50 HIS	1101.014.306	1087.700.079	Mechatronic
8HP50 HIS	1101.014.306	1102.700.034	Mechatronic
8HP50 HIS	1101.014.306	1090.700.133	Oil supply
8HP50 HIS	1101.014.306	1087.700.136	Oil pan
8HP50 HIS	1101.014.880	1087.700.079	Mechatronic
8HP50 HIS	1101.014.880	1102.700.034	Mechatronic
8HP50 HIS	1101.014.880	1090.700.133	Oil supply
8HP50 HIS	1101.014.880	1087.700.136	Oil pan
8HP50 HIS	1101.014.881	1087.700.079	Mechatronic
8HP50 HIS	1101.014.881	1102.700.034	Mechatronic
8HP50 HIS	1101.014.881	1090.700.133	Oil supply
8HP50 HIS	1101.014.881	1087.700.136	Oil pan
8HP50 HIS	1101.014.882	1087.700.079	Mechatronic
8HP50 HIS	1101.014.882	1102.700.034	Mechatronic
8HP50 HIS	1101.014.882	1090.700.133	Oil supply
8HP50 HIS	1101.014.882	1087.700.136	Oil pan
8HP50 HIS	1101.014.883	1087.700.079	Mechatronic
8HP50 HIS	1101.014.883	1102.700.034	Mechatronic
8HP50 HIS	1101.014.883	1090.700.133	Oil supply
8HP50 HIS	1101.014.883	1087.700.136	Oil pan
8HP50 HIS	1101.014.884	1087.700.079	Mechatronic
8HP50 HIS	1101.014.884	1102.700.034	Mechatronic
8HP50 HIS	1101.014.884	1090.700.133	Oil supply
8HP50 HIS	1101.014.884	1087.700.136	Oil pan
8HP50 HIS	1101.014.885	1087.700.079	Mechatronic
8HP50 HIS	1101.014.885	1102.700.034	Mechatronic
8HP50 HIS	1101.014.885	1090.700.133	Oil supply
8HP50 HIS	1101.014.885	1087.700.136	Oil pan
8HP50X	1101.020.006	1087.700.079	Mechatronic
8HP50X	1101.020.006	1102.700.034	Mechatronic
8HP50X	1101.020.006	1090.700.133	Oil supply
8HP50X	1101.020.006	1087.700.136	Oil pan
8HP50X	1101.020.006	1090.700.141	Verlängerung
8HP50X	1101.020.011	1087.700.079	Mechatronic
8HP50X	1101.020.011	1102.700.034	Mechatronic
8HP50X	1101.020.011	1090.700.133	Oil supply
8HP50X	1101.020.011	1087.700.136	Oil pan
8HP50X	1101.020.012	1087.700.079	Mechatronic
8HP50X	1101.020.012	1102.700.034	Mechatronic
8HP50X	1101.020.012	1090.700.133	Oil supply
8HP50X	1101.020.012	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
160/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X	1101.020.014	1087.700.079	Mechatronic
8HP50X	1101.020.014	1102.700.034	Mechatronic
8HP50X	1101.020.014	1090.700.133	Oil supply
8HP50X	1101.020.014	1087.700.136	Oil pan
8HP50X	1101.020.015	1087.700.079	Mechatronic
8HP50X	1101.020.015	1102.700.034	Mechatronic
8HP50X	1101.020.015	1090.700.133	Oil supply
8HP50X	1101.020.015	1087.700.136	Oil pan
8HP50X	1101.020.016	1087.700.079	Mechatronic
8HP50X	1101.020.016	1102.700.034	Mechatronic
8HP50X	1101.020.016	1090.700.133	Oil supply
8HP50X	1101.020.016	1087.700.136	Oil pan
8HP50X	1101.020.020	1087.700.079	Mechatronic
8HP50X	1101.020.020	1102.700.034	Mechatronic
8HP50X	1101.020.020	1090.700.133	Oil supply
8HP50X	1101.020.020	1087.700.136	Oil pan
8HP50X	1101.020.025	1087.700.079	Mechatronic
8HP50X	1101.020.025	1102.700.034	Mechatronic
8HP50X	1101.020.025	1090.700.133	Oil supply
8HP50X	1101.020.025	1087.700.136	Oil pan
8HP50X	1101.020.026	1087.700.079	Mechatronic
8HP50X	1101.020.026	1102.700.034	Mechatronic
8HP50X	1101.020.026	1090.700.133	Oil supply
8HP50X	1101.020.026	1087.700.136	Oil pan
8HP50X	1101.020.027	1087.700.079	Mechatronic
8HP50X	1101.020.027	1102.700.034	Mechatronic
8HP50X	1101.020.027	1090.700.133	Oil supply
8HP50X	1101.020.027	1087.700.136	Oil pan
8HP50X	1101.020.030	1087.700.079	Mechatronic
8HP50X	1101.020.030	1102.700.034	Mechatronic
8HP50X	1101.020.030	1090.700.133	Oil supply
8HP50X	1101.020.030	1087.700.136	Oil pan
8HP50X	1101.020.032	1087.700.079	Mechatronic
8HP50X	1101.020.032	1102.700.034	Mechatronic
8HP50X	1101.020.032	1090.700.133	Oil supply
8HP50X	1101.020.032	1087.700.136	Oil pan
8HP50X	1101.020.033	1087.700.079	Mechatronic
8HP50X	1101.020.033	1102.700.034	Mechatronic
8HP50X	1101.020.033	1090.700.133	Oil supply
8HP50X	1101.020.033	1087.700.136	Oil pan
8HP50X	1101.020.034	1087.700.079	Mechatronic
8HP50X	1101.020.034	1102.700.034	Mechatronic
8HP50X	1101.020.034	1090.700.133	Oil supply
8HP50X	1101.020.034	1087.700.136	Oil pan
8HP50X	1101.020.035	1087.700.079	Mechatronic
8HP50X	1101.020.035	1102.700.034	Mechatronic
8HP50X	1101.020.035	1090.700.133	Oil supply
8HP50X	1101.020.035	1087.700.136	Oil pan
8HP50X	1101.020.038	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X	1101.020.038	1102.700.034	Mechatronic
8HP50X	1101.020.038	1090.700.133	Oil supply
8HP50X	1101.020.038	1087.700.136	Oil pan
8HP50X	1101.020.039	1087.700.079	Mechatronic
8HP50X	1101.020.039	1102.700.034	Mechatronic
8HP50X	1101.020.039	1090.700.133	Oil supply
8HP50X	1101.020.039	1087.700.136	Oil pan
8HP50X	1101.020.040	1087.700.079	Mechatronic
8HP50X	1101.020.040	1102.700.034	Mechatronic
8HP50X	1101.020.040	1090.700.133	Oil supply
8HP50X	1101.020.040	1087.700.136	Oil pan
8HP50X	1101.020.041	1087.700.079	Mechatronic
8HP50X	1101.020.041	1102.700.034	Mechatronic
8HP50X	1101.020.041	1090.700.133	Oil supply
8HP50X	1101.020.041	1087.700.136	Oil pan
8HP50X	1101.020.042	1087.700.079	Mechatronic
8HP50X	1101.020.042	1102.700.034	Mechatronic
8HP50X	1101.020.042	1090.700.133	Oil supply
8HP50X	1101.020.042	1087.700.136	Oil pan
8HP50X	1101.020.043	1087.700.079	Mechatronic
8HP50X	1101.020.043	1102.700.034	Mechatronic
8HP50X	1101.020.043	1090.700.133	Oil supply
8HP50X	1101.020.043	1087.700.136	Oil pan
8HP50X	1101.020.044	1087.700.079	Mechatronic
8HP50X	1101.020.044	1102.700.034	Mechatronic
8HP50X	1101.020.044	1090.700.133	Oil supply
8HP50X	1101.020.044	1087.700.136	Oil pan
8HP50X	1101.020.045	1087.700.079	Mechatronic
8HP50X	1101.020.045	1102.700.034	Mechatronic
8HP50X	1101.020.045	1090.700.133	Oil supply
8HP50X	1101.020.045	1087.700.136	Oil pan
8HP50X	1101.020.046	1087.700.079	Mechatronic
8HP50X	1101.020.046	1102.700.034	Mechatronic
8HP50X	1101.020.046	1090.700.133	Oil supply
8HP50X	1101.020.046	1087.700.136	Oil pan
8HP50X	1101.020.047	1087.700.079	Mechatronic
8HP50X	1101.020.047	1102.700.034	Mechatronic
8HP50X	1101.020.047	1090.700.133	Oil supply
8HP50X	1101.020.047	1087.700.136	Oil pan
8HP50X	1101.020.048	1087.700.079	Mechatronic
8HP50X	1101.020.048	1102.700.034	Mechatronic
8HP50X	1101.020.048	1090.700.133	Oil supply
8HP50X	1101.020.048	1087.700.136	Oil pan
8HP50X	1101.020.049	1087.700.079	Mechatronic
8HP50X	1101.020.049	1102.700.034	Mechatronic
8HP50X	1101.020.049	1090.700.133	Oil supply
8HP50X	1101.020.049	1087.700.136	Oil pan
8HP50X	1101.020.050	1087.700.079	Mechatronic
8HP50X	1101.020.050	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X	1101.020.050	1090.700.133	Oil supply
8HP50X	1101.020.050	1087.700.136	Oil pan
8HP50X	1101.020.051	1087.700.079	Mechatronic
8HP50X	1101.020.051	1102.700.034	Mechatronic
8HP50X	1101.020.051	1090.700.133	Oil supply
8HP50X	1101.020.051	1087.700.136	Oil pan
8HP50X	1101.020.052	1087.700.079	Mechatronic
8HP50X	1101.020.052	1102.700.034	Mechatronic
8HP50X	1101.020.052	1090.700.133	Oil supply
8HP50X	1101.020.052	1087.700.136	Oil pan
8HP50X	1101.020.053	1087.700.079	Mechatronic
8HP50X	1101.020.053	1102.700.034	Mechatronic
8HP50X	1101.020.053	1090.700.133	Oil supply
8HP50X	1101.020.053	1087.700.136	Oil pan
8HP50X	1101.020.054	1087.700.079	Mechatronic
8HP50X	1101.020.054	1102.700.034	Mechatronic
8HP50X	1101.020.054	1090.700.133	Oil supply
8HP50X	1101.020.054	1087.700.136	Oil pan
8HP50X	1101.020.056	1087.700.079	Mechatronic
8HP50X	1101.020.056	1102.700.034	Mechatronic
8HP50X	1101.020.056	1090.700.133	Oil supply
8HP50X	1101.020.056	1087.700.136	Oil pan
8HP50X	1101.020.057	1087.700.079	Mechatronic
8HP50X	1101.020.057	1102.700.034	Mechatronic
8HP50X	1101.020.057	1090.700.133	Oil supply
8HP50X	1101.020.057	1087.700.136	Oil pan
8HP50X	1101.020.059	1087.700.079	Mechatronic
8HP50X	1101.020.059	1102.700.034	Mechatronic
8HP50X	1101.020.059	1090.700.133	Oil supply
8HP50X	1101.020.059	1087.700.136	Oil pan
8HP50X	1101.020.060	1087.700.079	Mechatronic
8HP50X	1101.020.060	1102.700.034	Mechatronic
8HP50X	1101.020.060	1090.700.133	Oil supply
8HP50X	1101.020.060	1087.700.136	Oil pan
8HP50X	1101.020.062	1087.700.079	Mechatronic
8HP50X	1101.020.062	1102.700.034	Mechatronic
8HP50X	1101.020.062	1090.700.133	Oil supply
8HP50X	1101.020.062	1087.700.136	Oil pan
8HP50X	1101.020.063	1087.700.079	Mechatronic
8HP50X	1101.020.063	1102.700.034	Mechatronic
8HP50X	1101.020.063	1090.700.133	Oil supply
8HP50X	1101.020.063	1087.700.136	Oil pan
8HP50X	1101.020.064	1087.700.079	Mechatronic
8HP50X	1101.020.064	1102.700.034	Mechatronic
8HP50X	1101.020.064	1090.700.133	Oil supply
8HP50X	1101.020.064	1087.700.136	Oil pan
8HP50X	1101.020.065	1087.700.079	Mechatronic
8HP50X	1101.020.065	1102.700.034	Mechatronic
8HP50X	1101.020.065	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X	1101.020.065	1087.700.136	Oil pan
8HP50X	1101.020.066	1087.700.079	Mechatronic
8HP50X	1101.020.066	1102.700.034	Mechatronic
8HP50X	1101.020.066	1090.700.133	Oil supply
8HP50X	1101.020.066	1087.700.136	Oil pan
8HP50X	1101.020.067	1087.700.079	Mechatronic
8HP50X	1101.020.067	1102.700.034	Mechatronic
8HP50X	1101.020.067	1090.700.133	Oil supply
8HP50X	1101.020.067	1087.700.136	Oil pan
8HP50X	1101.020.069	1087.700.079	Mechatronic
8HP50X	1101.020.069	1102.700.034	Mechatronic
8HP50X	1101.020.069	1090.700.133	Oil supply
8HP50X	1101.020.069	1087.700.136	Oil pan
8HP50X	1101.020.070	1087.700.079	Mechatronic
8HP50X	1101.020.070	1102.700.034	Mechatronic
8HP50X	1101.020.070	1090.700.133	Oil supply
8HP50X	1101.020.070	1087.700.136	Oil pan
8HP50X	1101.020.071	1087.700.079	Mechatronic
8HP50X	1101.020.071	1102.700.034	Mechatronic
8HP50X	1101.020.071	1090.700.133	Oil supply
8HP50X	1101.020.071	1087.700.136	Oil pan
8HP50X	1101.020.072	1087.700.079	Mechatronic
8HP50X	1101.020.072	1102.700.034	Mechatronic
8HP50X	1101.020.072	1090.700.133	Oil supply
8HP50X	1101.020.072	1087.700.136	Oil pan
8HP50X	1101.020.073	1087.700.079	Mechatronic
8HP50X	1101.020.073	1102.700.034	Mechatronic
8HP50X	1101.020.073	1090.700.133	Oil supply
8HP50X	1101.020.073	1087.700.136	Oil pan
8HP50X	1101.020.074	1087.700.079	Mechatronic
8HP50X	1101.020.074	1102.700.034	Mechatronic
8HP50X	1101.020.074	1090.700.133	Oil supply
8HP50X	1101.020.074	1087.700.136	Oil pan
8HP50X	1101.020.075	1087.700.079	Mechatronic
8HP50X	1101.020.075	1102.700.034	Mechatronic
8HP50X	1101.020.075	1090.700.133	Oil supply
8HP50X	1101.020.075	1087.700.136	Oil pan
8HP50X	1101.020.077	1087.700.079	Mechatronic
8HP50X	1101.020.077	1102.700.034	Mechatronic
8HP50X	1101.020.077	1090.700.133	Oil supply
8HP50X	1101.020.077	1087.700.136	Oil pan
8HP50X	1101.020.078	1087.700.079	Mechatronic
8HP50X	1101.020.078	1102.700.034	Mechatronic
8HP50X	1101.020.078	1090.700.133	Oil supply
8HP50X	1101.020.078	1087.700.136	Oil pan
8HP50X	1101.020.079	1087.700.079	Mechatronic
8HP50X	1101.020.079	1102.700.034	Mechatronic
8HP50X	1101.020.079	1090.700.133	Oil supply
8HP50X	1101.020.079	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X	1101.020.080	1087.700.079	Mechatronic
8HP50X	1101.020.080	1102.700.034	Mechatronic
8HP50X	1101.020.080	1090.700.133	Oil supply
8HP50X	1101.020.080	1087.700.136	Oil pan
8HP50X	1101.020.081	1087.700.079	Mechatronic
8HP50X	1101.020.081	1102.700.034	Mechatronic
8HP50X	1101.020.081	1090.700.133	Oil supply
8HP50X	1101.020.081	1087.700.136	Oil pan
8HP50X	1101.020.083	1087.700.079	Mechatronic
8HP50X	1101.020.083	1102.700.034	Mechatronic
8HP50X	1101.020.083	1090.700.133	Oil supply
8HP50X	1101.020.083	1087.700.136	Oil pan
8HP50X	1101.020.084	1087.700.079	Mechatronic
8HP50X	1101.020.084	1102.700.034	Mechatronic
8HP50X	1101.020.084	1090.700.133	Oil supply
8HP50X	1101.020.084	1087.700.136	Oil pan
8HP50X	1101.020.085	1087.700.079	Mechatronic
8HP50X	1101.020.085	1102.700.034	Mechatronic
8HP50X	1101.020.085	1090.700.133	Oil supply
8HP50X	1101.020.085	1087.700.136	Oil pan
8HP50X	1101.020.086	1087.700.079	Mechatronic
8HP50X	1101.020.086	1102.700.034	Mechatronic
8HP50X	1101.020.086	1090.700.133	Oil supply
8HP50X	1101.020.086	1087.700.136	Oil pan
8HP50X	1101.020.087	1087.700.079	Mechatronic
8HP50X	1101.020.087	1102.700.034	Mechatronic
8HP50X	1101.020.087	1090.700.133	Oil supply
8HP50X	1101.020.087	1087.700.136	Oil pan
8HP50X	1101.020.088	1087.700.079	Mechatronic
8HP50X	1101.020.088	1102.700.034	Mechatronic
8HP50X	1101.020.088	1090.700.133	Oil supply
8HP50X	1101.020.088	1087.700.136	Oil pan
8HP50X	1101.020.089	1087.700.079	Mechatronic
8HP50X	1101.020.089	1102.700.034	Mechatronic
8HP50X	1101.020.089	1090.700.133	Oil supply
8HP50X	1101.020.089	1087.700.136	Oil pan
8HP50X	1101.020.090	1087.700.079	Mechatronic
8HP50X	1101.020.090	1102.700.034	Mechatronic
8HP50X	1101.020.090	1090.700.133	Oil supply
8HP50X	1101.020.090	1087.700.136	Oil pan
8HP50X	1101.020.091	1087.700.079	Mechatronic
8HP50X	1101.020.091	1102.700.034	Mechatronic
8HP50X	1101.020.091	1090.700.133	Oil supply
8HP50X	1101.020.091	1087.700.136	Oil pan
8HP50X	1101.020.092	1087.700.079	Mechatronic
8HP50X	1101.020.092	1102.700.034	Mechatronic
8HP50X	1101.020.092	1090.700.133	Oil supply
8HP50X	1101.020.092	1087.700.136	Oil pan
8HP50X	1101.020.095	1087.700.079	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
165/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X	1101.020.095	1102.700.034	Mechatronic
8HP50X	1101.020.095	1090.700.133	Oil supply
8HP50X	1101.020.095	1087.700.136	Oil pan
8HP50X	1101.020.096	1087.700.079	Mechatronic
8HP50X	1101.020.096	1102.700.034	Mechatronic
8HP50X	1101.020.096	1090.700.133	Oil supply
8HP50X	1101.020.096	1087.700.136	Oil pan
8HP50X	1101.020.097	1087.700.079	Mechatronic
8HP50X	1101.020.097	1102.700.034	Mechatronic
8HP50X	1101.020.097	1090.700.133	Oil supply
8HP50X	1101.020.097	1087.700.136	Oil pan
8HP50X	1101.020.098	1087.700.079	Mechatronic
8HP50X	1101.020.098	1102.700.034	Mechatronic
8HP50X	1101.020.098	1090.700.133	Oil supply
8HP50X	1101.020.098	1087.700.136	Oil pan
8HP50X	1101.020.099	1087.700.136	Oil pan
8HP50X	1101.020.101	1087.700.136	Oil pan
8HP50X HIS	1101.024.002	1087.700.079	Mechatronic
8HP50X HIS	1101.024.002	1102.700.034	Mechatronic
8HP50X HIS	1101.024.002	1090.700.133	Oil supply
8HP50X HIS	1101.024.002	1087.700.136	Oil pan
8HP50X HIS	1101.024.008	1087.700.079	Mechatronic
8HP50X HIS	1101.024.008	1102.700.034	Mechatronic
8HP50X HIS	1101.024.008	1090.700.133	Oil supply
8HP50X HIS	1101.024.008	1087.700.136	Oil pan
8HP50X HIS	1101.024.009	1087.700.079	Mechatronic
8HP50X HIS	1101.024.009	1102.700.034	Mechatronic
8HP50X HIS	1101.024.009	1090.700.133	Oil supply
8HP50X HIS	1101.024.009	1087.700.136	Oil pan
8HP50X HIS	1101.024.012	1087.700.079	Mechatronic
8HP50X HIS	1101.024.012	1102.700.034	Mechatronic
8HP50X HIS	1101.024.012	1090.700.133	Oil supply
8HP50X HIS	1101.024.012	1087.700.136	Oil pan
8HP50X HIS	1101.024.016	1087.700.079	Mechatronic
8HP50X HIS	1101.024.016	1102.700.034	Mechatronic
8HP50X HIS	1101.024.016	1090.700.133	Oil supply
8HP50X HIS	1101.024.016	1087.700.136	Oil pan
8HP50X HIS	1101.024.017	1087.700.079	Mechatronic
8HP50X HIS	1101.024.017	1102.700.034	Mechatronic
8HP50X HIS	1101.024.017	1090.700.133	Oil supply
8HP50X HIS	1101.024.017	1087.700.136	Oil pan
8HP50X HIS	1101.024.018	1087.700.079	Mechatronic
8HP50X HIS	1101.024.018	1102.700.034	Mechatronic
8HP50X HIS	1101.024.018	1090.700.133	Oil supply
8HP50X HIS	1101.024.018	1087.700.136	Oil pan
8HP50X HIS	1101.024.020	1087.700.079	Mechatronic
8HP50X HIS	1101.024.020	1102.700.034	Mechatronic
8HP50X HIS	1101.024.020	1090.700.133	Oil supply
8HP50X HIS	1101.024.020	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.021	1087.700.079	Mechatronic
8HP50X HIS	1101.024.021	1102.700.034	Mechatronic
8HP50X HIS	1101.024.021	1090.700.133	Oil supply
8HP50X HIS	1101.024.021	1087.700.136	Oil pan
8HP50X HIS	1101.024.024	1087.700.079	Mechatronic
8HP50X HIS	1101.024.024	1102.700.034	Mechatronic
8HP50X HIS	1101.024.024	1090.700.133	Oil supply
8HP50X HIS	1101.024.024	1087.700.136	Oil pan
8HP50X HIS	1101.024.032	1087.700.079	Mechatronic
8HP50X HIS	1101.024.032	1102.700.034	Mechatronic
8HP50X HIS	1101.024.032	1090.700.133	Oil supply
8HP50X HIS	1101.024.032	1087.700.136	Oil pan
8HP50X HIS	1101.024.033	1087.700.079	Mechatronic
8HP50X HIS	1101.024.033	1102.700.034	Mechatronic
8HP50X HIS	1101.024.033	1090.700.133	Oil supply
8HP50X HIS	1101.024.033	1087.700.136	Oil pan
8HP50X HIS	1101.024.034	1087.700.079	Mechatronic
8HP50X HIS	1101.024.034	1102.700.034	Mechatronic
8HP50X HIS	1101.024.034	1090.700.133	Oil supply
8HP50X HIS	1101.024.034	1087.700.136	Oil pan
8HP50X HIS	1101.024.035	1087.700.079	Mechatronic
8HP50X HIS	1101.024.035	1102.700.034	Mechatronic
8HP50X HIS	1101.024.035	1090.700.133	Oil supply
8HP50X HIS	1101.024.035	1087.700.136	Oil pan
8HP50X HIS	1101.024.036	1087.700.079	Mechatronic
8HP50X HIS	1101.024.036	1102.700.034	Mechatronic
8HP50X HIS	1101.024.036	1090.700.133	Oil supply
8HP50X HIS	1101.024.036	1087.700.136	Oil pan
8HP50X HIS	1101.024.039	1087.700.079	Mechatronic
8HP50X HIS	1101.024.039	1102.700.034	Mechatronic
8HP50X HIS	1101.024.039	1090.700.133	Oil supply
8HP50X HIS	1101.024.039	1087.700.136	Oil pan
8HP50X HIS	1101.024.044	1087.700.079	Mechatronic
8HP50X HIS	1101.024.044	1102.700.034	Mechatronic
8HP50X HIS	1101.024.044	1090.700.133	Oil supply
8HP50X HIS	1101.024.044	1087.700.136	Oil pan
8HP50X HIS	1101.024.047	1087.700.079	Mechatronic
8HP50X HIS	1101.024.047	1102.700.034	Mechatronic
8HP50X HIS	1101.024.047	1090.700.133	Oil supply
8HP50X HIS	1101.024.047	1087.700.136	Oil pan
8HP50X HIS	1101.024.048	1087.700.079	Mechatronic
8HP50X HIS	1101.024.048	1102.700.034	Mechatronic
8HP50X HIS	1101.024.048	1090.700.133	Oil supply
8HP50X HIS	1101.024.048	1087.700.136	Oil pan
8HP50X HIS	1101.024.052	1087.700.079	Mechatronic
8HP50X HIS	1101.024.052	1102.700.034	Mechatronic
8HP50X HIS	1101.024.052	1090.700.133	Oil supply
8HP50X HIS	1101.024.052	1087.700.136	Oil pan
8HP50X HIS	1101.024.053	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.053	1102.700.034	Mechatronic
8HP50X HIS	1101.024.053	1090.700.133	Oil supply
8HP50X HIS	1101.024.053	1087.700.136	Oil pan
8HP50X HIS	1101.024.055	1087.700.079	Mechatronic
8HP50X HIS	1101.024.055	1102.700.034	Mechatronic
8HP50X HIS	1101.024.055	1090.700.133	Oil supply
8HP50X HIS	1101.024.055	1087.700.136	Oil pan
8HP50X HIS	1101.024.057	1087.700.079	Mechatronic
8HP50X HIS	1101.024.057	1102.700.034	Mechatronic
8HP50X HIS	1101.024.057	1090.700.133	Oil supply
8HP50X HIS	1101.024.057	1087.700.136	Oil pan
8HP50X HIS	1101.024.058	1087.700.079	Mechatronic
8HP50X HIS	1101.024.058	1102.700.034	Mechatronic
8HP50X HIS	1101.024.058	1090.700.133	Oil supply
8HP50X HIS	1101.024.058	1087.700.136	Oil pan
8HP50X HIS	1101.024.059	1087.700.079	Mechatronic
8HP50X HIS	1101.024.059	1102.700.034	Mechatronic
8HP50X HIS	1101.024.059	1090.700.133	Oil supply
8HP50X HIS	1101.024.059	1087.700.136	Oil pan
8HP50X HIS	1101.024.060	1087.700.079	Mechatronic
8HP50X HIS	1101.024.060	1102.700.034	Mechatronic
8HP50X HIS	1101.024.060	1090.700.133	Oil supply
8HP50X HIS	1101.024.060	1087.700.136	Oil pan
8HP50X HIS	1101.024.061	1087.700.079	Mechatronic
8HP50X HIS	1101.024.061	1102.700.034	Mechatronic
8HP50X HIS	1101.024.061	1090.700.133	Oil supply
8HP50X HIS	1101.024.061	1087.700.136	Oil pan
8HP50X HIS	1101.024.062	1087.700.079	Mechatronic
8HP50X HIS	1101.024.062	1102.700.034	Mechatronic
8HP50X HIS	1101.024.062	1090.700.133	Oil supply
8HP50X HIS	1101.024.062	1087.700.136	Oil pan
8HP50X HIS	1101.024.063	1087.700.079	Mechatronic
8HP50X HIS	1101.024.063	1102.700.034	Mechatronic
8HP50X HIS	1101.024.063	1090.700.133	Oil supply
8HP50X HIS	1101.024.063	1087.700.136	Oil pan
8HP50X HIS	1101.024.064	1087.700.079	Mechatronic
8HP50X HIS	1101.024.064	1102.700.034	Mechatronic
8HP50X HIS	1101.024.064	1090.700.133	Oil supply
8HP50X HIS	1101.024.064	1087.700.136	Oil pan
8HP50X HIS	1101.024.065	1087.700.079	Mechatronic
8HP50X HIS	1101.024.065	1102.700.034	Mechatronic
8HP50X HIS	1101.024.065	1090.700.133	Oil supply
8HP50X HIS	1101.024.065	1087.700.136	Oil pan
8HP50X HIS	1101.024.066	1087.700.079	Mechatronic
8HP50X HIS	1101.024.066	1102.700.034	Mechatronic
8HP50X HIS	1101.024.066	1090.700.133	Oil supply
8HP50X HIS	1101.024.066	1087.700.136	Oil pan
8HP50X HIS	1101.024.067	1087.700.079	Mechatronic
8HP50X HIS	1101.024.067	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.067	1090.700.133	Oil supply
8HP50X HIS	1101.024.067	1087.700.136	Oil pan
8HP50X HIS	1101.024.068	1087.700.079	Mechatronic
8HP50X HIS	1101.024.068	1102.700.034	Mechatronic
8HP50X HIS	1101.024.068	1090.700.133	Oil supply
8HP50X HIS	1101.024.068	1087.700.136	Oil pan
8HP50X HIS	1101.024.069	1087.700.079	Mechatronic
8HP50X HIS	1101.024.069	1102.700.034	Mechatronic
8HP50X HIS	1101.024.069	1090.700.133	Oil supply
8HP50X HIS	1101.024.069	1087.700.136	Oil pan
8HP50X HIS	1101.024.070	1087.700.079	Mechatronic
8HP50X HIS	1101.024.070	1102.700.034	Mechatronic
8HP50X HIS	1101.024.070	1090.700.133	Oil supply
8HP50X HIS	1101.024.070	1087.700.136	Oil pan
8HP50X HIS	1101.024.071	1087.700.079	Mechatronic
8HP50X HIS	1101.024.071	1102.700.034	Mechatronic
8HP50X HIS	1101.024.071	1090.700.133	Oil supply
8HP50X HIS	1101.024.071	1087.700.136	Oil pan
8HP50X HIS	1101.024.073	1087.700.079	Mechatronic
8HP50X HIS	1101.024.073	1102.700.034	Mechatronic
8HP50X HIS	1101.024.073	1090.700.133	Oil supply
8HP50X HIS	1101.024.073	1087.700.136	Oil pan
8HP50X HIS	1101.024.075	1087.700.079	Mechatronic
8HP50X HIS	1101.024.075	1102.700.034	Mechatronic
8HP50X HIS	1101.024.075	1090.700.133	Oil supply
8HP50X HIS	1101.024.075	1087.700.136	Oil pan
8HP50X HIS	1101.024.083	1087.700.079	Mechatronic
8HP50X HIS	1101.024.083	1102.700.034	Mechatronic
8HP50X HIS	1101.024.083	1090.700.133	Oil supply
8HP50X HIS	1101.024.083	1087.700.136	Oil pan
8HP50X HIS	1101.024.084	1087.700.079	Mechatronic
8HP50X HIS	1101.024.084	1102.700.034	Mechatronic
8HP50X HIS	1101.024.084	1090.700.133	Oil supply
8HP50X HIS	1101.024.084	1087.700.136	Oil pan
8HP50X HIS	1101.024.085	1087.700.079	Mechatronic
8HP50X HIS	1101.024.085	1102.700.034	Mechatronic
8HP50X HIS	1101.024.085	1090.700.133	Oil supply
8HP50X HIS	1101.024.085	1087.700.136	Oil pan
8HP50X HIS	1101.024.086	1087.700.079	Mechatronic
8HP50X HIS	1101.024.086	1102.700.034	Mechatronic
8HP50X HIS	1101.024.086	1090.700.133	Oil supply
8HP50X HIS	1101.024.086	1087.700.136	Oil pan
8HP50X HIS	1101.024.089	1087.700.079	Mechatronic
8HP50X HIS	1101.024.089	1102.700.034	Mechatronic
8HP50X HIS	1101.024.089	1090.700.133	Oil supply
8HP50X HIS	1101.024.089	1087.700.136	Oil pan
8HP50X HIS	1101.024.090	1087.700.079	Mechatronic
8HP50X HIS	1101.024.090	1102.700.034	Mechatronic
8HP50X HIS	1101.024.090	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.090	1087.700.136	Oil pan
8HP50X HIS	1101.024.091	1087.700.079	Mechatronic
8HP50X HIS	1101.024.091	1102.700.034	Mechatronic
8HP50X HIS	1101.024.091	1090.700.133	Oil supply
8HP50X HIS	1101.024.091	1087.700.136	Oil pan
8HP50X HIS	1101.024.092	1087.700.079	Mechatronic
8HP50X HIS	1101.024.092	1102.700.034	Mechatronic
8HP50X HIS	1101.024.092	1090.700.133	Oil supply
8HP50X HIS	1101.024.092	1087.700.136	Oil pan
8HP50X HIS	1101.024.093	1087.700.079	Mechatronic
8HP50X HIS	1101.024.093	1102.700.034	Mechatronic
8HP50X HIS	1101.024.093	1090.700.133	Oil supply
8HP50X HIS	1101.024.093	1087.700.136	Oil pan
8HP50X HIS	1101.024.094	1087.700.079	Mechatronic
8HP50X HIS	1101.024.094	1102.700.034	Mechatronic
8HP50X HIS	1101.024.094	1090.700.133	Oil supply
8HP50X HIS	1101.024.094	1087.700.136	Oil pan
8HP50X HIS	1101.024.096	1087.700.079	Mechatronic
8HP50X HIS	1101.024.096	1102.700.034	Mechatronic
8HP50X HIS	1101.024.096	1090.700.133	Oil supply
8HP50X HIS	1101.024.096	1087.700.136	Oil pan
8HP50X HIS	1101.024.097	1087.700.079	Mechatronic
8HP50X HIS	1101.024.097	1102.700.034	Mechatronic
8HP50X HIS	1101.024.097	1090.700.133	Oil supply
8HP50X HIS	1101.024.097	1087.700.136	Oil pan
8HP50X HIS	1101.024.106	1087.700.079	Mechatronic
8HP50X HIS	1101.024.106	1102.700.034	Mechatronic
8HP50X HIS	1101.024.106	1090.700.133	Oil supply
8HP50X HIS	1101.024.106	1087.700.136	Oil pan
8HP50X HIS	1101.024.114	1087.700.079	Mechatronic
8HP50X HIS	1101.024.114	1102.700.034	Mechatronic
8HP50X HIS	1101.024.114	1090.700.133	Oil supply
8HP50X HIS	1101.024.114	1087.700.136	Oil pan
8HP50X HIS	1101.024.115	1087.700.079	Mechatronic
8HP50X HIS	1101.024.115	1102.700.034	Mechatronic
8HP50X HIS	1101.024.115	1090.700.133	Oil supply
8HP50X HIS	1101.024.115	1087.700.136	Oil pan
8HP50X HIS	1101.024.116	1087.700.079	Mechatronic
8HP50X HIS	1101.024.116	1102.700.034	Mechatronic
8HP50X HIS	1101.024.116	1090.700.133	Oil supply
8HP50X HIS	1101.024.116	1087.700.136	Oil pan
8HP50X HIS	1101.024.117	1087.700.079	Mechatronic
8HP50X HIS	1101.024.117	1102.700.034	Mechatronic
8HP50X HIS	1101.024.117	1090.700.133	Oil supply
8HP50X HIS	1101.024.117	1087.700.136	Oil pan
8HP50X HIS	1101.024.122	1087.700.079	Mechatronic
8HP50X HIS	1101.024.122	1102.700.034	Mechatronic
8HP50X HIS	1101.024.122	1090.700.133	Oil supply
8HP50X HIS	1101.024.122	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.124	1087.700.079	Mechatronic
8HP50X HIS	1101.024.124	1102.700.034	Mechatronic
8HP50X HIS	1101.024.124	1090.700.133	Oil supply
8HP50X HIS	1101.024.124	1087.700.136	Oil pan
8HP50X HIS	1101.024.126	1087.700.079	Mechatronic
8HP50X HIS	1101.024.126	1102.700.034	Mechatronic
8HP50X HIS	1101.024.126	1090.700.133	Oil supply
8HP50X HIS	1101.024.126	1087.700.136	Oil pan
8HP50X HIS	1101.024.127	1087.700.079	Mechatronic
8HP50X HIS	1101.024.127	1102.700.034	Mechatronic
8HP50X HIS	1101.024.127	1090.700.133	Oil supply
8HP50X HIS	1101.024.127	1087.700.136	Oil pan
8HP50X HIS	1101.024.128	1087.700.079	Mechatronic
8HP50X HIS	1101.024.128	1102.700.034	Mechatronic
8HP50X HIS	1101.024.128	1090.700.133	Oil supply
8HP50X HIS	1101.024.128	1087.700.136	Oil pan
8HP50X HIS	1101.024.136	1087.700.079	Mechatronic
8HP50X HIS	1101.024.136	1102.700.034	Mechatronic
8HP50X HIS	1101.024.136	1090.700.133	Oil supply
8HP50X HIS	1101.024.136	1087.700.136	Oil pan
8HP50X HIS	1101.024.139	1087.700.079	Mechatronic
8HP50X HIS	1101.024.139	1102.700.034	Mechatronic
8HP50X HIS	1101.024.139	1090.700.133	Oil supply
8HP50X HIS	1101.024.139	1087.700.136	Oil pan
8HP50X HIS	1101.024.155	1087.700.079	Mechatronic
8HP50X HIS	1101.024.155	1102.700.034	Mechatronic
8HP50X HIS	1101.024.155	1090.700.133	Oil supply
8HP50X HIS	1101.024.155	1087.700.136	Oil pan
8HP50X HIS	1101.024.156	1087.700.079	Mechatronic
8HP50X HIS	1101.024.156	1102.700.034	Mechatronic
8HP50X HIS	1101.024.156	1090.700.133	Oil supply
8HP50X HIS	1101.024.156	1087.700.136	Oil pan
8HP50X HIS	1101.024.165	1087.700.079	Mechatronic
8HP50X HIS	1101.024.165	1102.700.034	Mechatronic
8HP50X HIS	1101.024.165	1090.700.133	Oil supply
8HP50X HIS	1101.024.165	1087.700.136	Oil pan
8HP50X HIS	1101.024.167	1087.700.079	Mechatronic
8HP50X HIS	1101.024.167	1102.700.034	Mechatronic
8HP50X HIS	1101.024.167	1090.700.133	Oil supply
8HP50X HIS	1101.024.167	1087.700.136	Oil pan
8HP50X HIS	1101.024.169	1087.700.079	Mechatronic
8HP50X HIS	1101.024.169	1102.700.034	Mechatronic
8HP50X HIS	1101.024.169	1090.700.133	Oil supply
8HP50X HIS	1101.024.169	1087.700.136	Oil pan
8HP50X HIS	1101.024.173	1087.700.079	Mechatronic
8HP50X HIS	1101.024.173	1102.700.034	Mechatronic
8HP50X HIS	1101.024.173	1090.700.133	Oil supply
8HP50X HIS	1101.024.173	1087.700.136	Oil pan
8HP50X HIS	1101.024.175	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.175	1102.700.034	Mechatronic
8HP50X HIS	1101.024.175	1090.700.133	Oil supply
8HP50X HIS	1101.024.175	1087.700.136	Oil pan
8HP50X HIS	1101.024.178	1087.700.079	Mechatronic
8HP50X HIS	1101.024.178	1102.700.034	Mechatronic
8HP50X HIS	1101.024.178	1090.700.133	Oil supply
8HP50X HIS	1101.024.178	1087.700.136	Oil pan
8HP50X HIS	1101.024.183	1087.700.079	Mechatronic
8HP50X HIS	1101.024.183	1102.700.034	Mechatronic
8HP50X HIS	1101.024.183	1090.700.133	Oil supply
8HP50X HIS	1101.024.183	1087.700.136	Oil pan
8HP50X HIS	1101.024.186	1087.700.079	Mechatronic
8HP50X HIS	1101.024.186	1102.700.034	Mechatronic
8HP50X HIS	1101.024.186	1090.700.133	Oil supply
8HP50X HIS	1101.024.186	1087.700.136	Oil pan
8HP50X HIS	1101.024.187	1087.700.079	Mechatronic
8HP50X HIS	1101.024.187	1102.700.034	Mechatronic
8HP50X HIS	1101.024.187	1090.700.133	Oil supply
8HP50X HIS	1101.024.187	1087.700.136	Oil pan
8HP50X HIS	1101.024.188	1087.700.079	Mechatronic
8HP50X HIS	1101.024.188	1102.700.034	Mechatronic
8HP50X HIS	1101.024.188	1090.700.133	Oil supply
8HP50X HIS	1101.024.188	1087.700.136	Oil pan
8HP50X HIS	1101.024.192	1087.700.079	Mechatronic
8HP50X HIS	1101.024.192	1102.700.034	Mechatronic
8HP50X HIS	1101.024.192	1090.700.133	Oil supply
8HP50X HIS	1101.024.192	1087.700.136	Oil pan
8HP50X HIS	1101.024.193	1087.700.079	Mechatronic
8HP50X HIS	1101.024.193	1102.700.034	Mechatronic
8HP50X HIS	1101.024.193	1090.700.133	Oil supply
8HP50X HIS	1101.024.193	1087.700.136	Oil pan
8HP50X HIS	1101.024.193	1090.700.141	Verlängerung
8HP50X HIS	1101.024.195	1087.700.079	Mechatronic
8HP50X HIS	1101.024.195	1102.700.034	Mechatronic
8HP50X HIS	1101.024.195	1090.700.133	Oil supply
8HP50X HIS	1101.024.195	1087.700.136	Oil pan
8HP50X HIS	1101.024.196	1087.700.079	Mechatronic
8HP50X HIS	1101.024.196	1102.700.034	Mechatronic
8HP50X HIS	1101.024.196	1090.700.133	Oil supply
8HP50X HIS	1101.024.196	1087.700.136	Oil pan
8HP50X HIS	1101.024.197	1087.700.079	Mechatronic
8HP50X HIS	1101.024.197	1102.700.034	Mechatronic
8HP50X HIS	1101.024.197	1090.700.133	Oil supply
8HP50X HIS	1101.024.197	1087.700.136	Oil pan
8HP50X HIS	1101.024.199	1087.700.079	Mechatronic
8HP50X HIS	1101.024.199	1102.700.034	Mechatronic
8HP50X HIS	1101.024.199	1090.700.133	Oil supply
8HP50X HIS	1101.024.199	1087.700.136	Oil pan
8HP50X HIS	1101.024.201	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.201	1102.700.034	Mechatronic
8HP50X HIS	1101.024.201	1090.700.133	Oil supply
8HP50X HIS	1101.024.201	1087.700.136	Oil pan
8HP50X HIS	1101.024.203	1087.700.079	Mechatronic
8HP50X HIS	1101.024.203	1102.700.034	Mechatronic
8HP50X HIS	1101.024.203	1090.700.133	Oil supply
8HP50X HIS	1101.024.203	1087.700.136	Oil pan
8HP50X HIS	1101.024.204	1087.700.079	Mechatronic
8HP50X HIS	1101.024.204	1102.700.034	Mechatronic
8HP50X HIS	1101.024.204	1090.700.133	Oil supply
8HP50X HIS	1101.024.204	1087.700.136	Oil pan
8HP50X HIS	1101.024.205	1087.700.079	Mechatronic
8HP50X HIS	1101.024.205	1102.700.034	Mechatronic
8HP50X HIS	1101.024.205	1090.700.133	Oil supply
8HP50X HIS	1101.024.205	1087.700.136	Oil pan
8HP50X HIS	1101.024.206	1087.700.079	Mechatronic
8HP50X HIS	1101.024.206	1102.700.034	Mechatronic
8HP50X HIS	1101.024.206	1090.700.133	Oil supply
8HP50X HIS	1101.024.206	1087.700.136	Oil pan
8HP50X HIS	1101.024.208	1087.700.079	Mechatronic
8HP50X HIS	1101.024.208	1102.700.034	Mechatronic
8HP50X HIS	1101.024.208	1090.700.133	Oil supply
8HP50X HIS	1101.024.208	1087.700.136	Oil pan
8HP50X HIS	1101.024.209	1087.700.079	Mechatronic
8HP50X HIS	1101.024.209	1102.700.034	Mechatronic
8HP50X HIS	1101.024.209	1090.700.133	Oil supply
8HP50X HIS	1101.024.209	1087.700.136	Oil pan
8HP50X HIS	1101.024.211	1087.700.079	Mechatronic
8HP50X HIS	1101.024.211	1102.700.034	Mechatronic
8HP50X HIS	1101.024.211	1090.700.133	Oil supply
8HP50X HIS	1101.024.211	1087.700.136	Oil pan
8HP50X HIS	1101.024.214	1087.700.079	Mechatronic
8HP50X HIS	1101.024.214	1102.700.034	Mechatronic
8HP50X HIS	1101.024.214	1090.700.133	Oil supply
8HP50X HIS	1101.024.214	1087.700.136	Oil pan
8HP50X HIS	1101.024.217	1087.700.079	Mechatronic
8HP50X HIS	1101.024.217	1102.700.034	Mechatronic
8HP50X HIS	1101.024.217	1090.700.133	Oil supply
8HP50X HIS	1101.024.217	1087.700.136	Oil pan
8HP50X HIS	1101.024.220	1087.700.079	Mechatronic
8HP50X HIS	1101.024.220	1102.700.034	Mechatronic
8HP50X HIS	1101.024.220	1090.700.133	Oil supply
8HP50X HIS	1101.024.220	1087.700.136	Oil pan
8HP50X HIS	1101.024.221	1087.700.079	Mechatronic
8HP50X HIS	1101.024.221	1102.700.034	Mechatronic
8HP50X HIS	1101.024.221	1090.700.133	Oil supply
8HP50X HIS	1101.024.221	1087.700.136	Oil pan
8HP50X HIS	1101.024.222	1087.700.079	Mechatronic
8HP50X HIS	1101.024.222	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.222	1090.700.133	Oil supply
8HP50X HIS	1101.024.222	1087.700.136	Oil pan
8HP50X HIS	1101.024.223	1087.700.079	Mechatronic
8HP50X HIS	1101.024.223	1102.700.034	Mechatronic
8HP50X HIS	1101.024.223	1090.700.133	Oil supply
8HP50X HIS	1101.024.223	1087.700.136	Oil pan
8HP50X HIS	1101.024.224	1087.700.079	Mechatronic
8HP50X HIS	1101.024.224	1102.700.034	Mechatronic
8HP50X HIS	1101.024.224	1090.700.133	Oil supply
8HP50X HIS	1101.024.224	1087.700.136	Oil pan
8HP50X HIS	1101.024.225	1087.700.079	Mechatronic
8HP50X HIS	1101.024.225	1102.700.034	Mechatronic
8HP50X HIS	1101.024.225	1090.700.133	Oil supply
8HP50X HIS	1101.024.225	1087.700.136	Oil pan
8HP50X HIS	1101.024.226	1087.700.079	Mechatronic
8HP50X HIS	1101.024.226	1102.700.034	Mechatronic
8HP50X HIS	1101.024.226	1090.700.133	Oil supply
8HP50X HIS	1101.024.226	1087.700.136	Oil pan
8HP50X HIS	1101.024.228	1087.700.079	Mechatronic
8HP50X HIS	1101.024.228	1102.700.034	Mechatronic
8HP50X HIS	1101.024.228	1090.700.133	Oil supply
8HP50X HIS	1101.024.228	1087.700.136	Oil pan
8HP50X HIS	1101.024.229	1087.700.079	Mechatronic
8HP50X HIS	1101.024.229	1102.700.034	Mechatronic
8HP50X HIS	1101.024.229	1090.700.133	Oil supply
8HP50X HIS	1101.024.229	1087.700.136	Oil pan
8HP50X HIS	1101.024.231	1087.700.079	Mechatronic
8HP50X HIS	1101.024.231	1102.700.034	Mechatronic
8HP50X HIS	1101.024.231	1090.700.133	Oil supply
8HP50X HIS	1101.024.231	1087.700.136	Oil pan
8HP50X HIS	1101.024.231	1090.700.141	Verlängerung
8HP50X HIS	1101.024.233	1087.700.079	Mechatronic
8HP50X HIS	1101.024.233	1102.700.034	Mechatronic
8HP50X HIS	1101.024.233	1090.700.133	Oil supply
8HP50X HIS	1101.024.233	1087.700.136	Oil pan
8HP50X HIS	1101.024.233	1090.700.141	Verlängerung
8HP50X HIS	1101.024.234	1087.700.079	Mechatronic
8HP50X HIS	1101.024.234	1102.700.034	Mechatronic
8HP50X HIS	1101.024.234	1090.700.133	Oil supply
8HP50X HIS	1101.024.234	1087.700.136	Oil pan
8HP50X HIS	1101.024.235	1087.700.079	Mechatronic
8HP50X HIS	1101.024.235	1102.700.034	Mechatronic
8HP50X HIS	1101.024.235	1090.700.133	Oil supply
8HP50X HIS	1101.024.235	1087.700.136	Oil pan
8HP50X HIS	1101.024.236	1087.700.079	Mechatronic
8HP50X HIS	1101.024.236	1102.700.034	Mechatronic
8HP50X HIS	1101.024.236	1090.700.133	Oil supply
8HP50X HIS	1101.024.236	1087.700.136	Oil pan
8HP50X HIS	1101.024.238	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.238	1102.700.034	Mechatronic
8HP50X HIS	1101.024.238	1090.700.133	Oil supply
8HP50X HIS	1101.024.238	1087.700.136	Oil pan
8HP50X HIS	1101.024.239	1087.700.079	Mechatronic
8HP50X HIS	1101.024.239	1102.700.034	Mechatronic
8HP50X HIS	1101.024.239	1090.700.133	Oil supply
8HP50X HIS	1101.024.239	1087.700.136	Oil pan
8HP50X HIS	1101.024.240	1087.700.079	Mechatronic
8HP50X HIS	1101.024.240	1102.700.034	Mechatronic
8HP50X HIS	1101.024.240	1090.700.133	Oil supply
8HP50X HIS	1101.024.240	1087.700.136	Oil pan
8HP50X HIS	1101.024.241	1087.700.079	Mechatronic
8HP50X HIS	1101.024.241	1102.700.034	Mechatronic
8HP50X HIS	1101.024.241	1090.700.133	Oil supply
8HP50X HIS	1101.024.241	1087.700.136	Oil pan
8HP50X HIS	1101.024.242	1087.700.079	Mechatronic
8HP50X HIS	1101.024.242	1102.700.034	Mechatronic
8HP50X HIS	1101.024.242	1090.700.133	Oil supply
8HP50X HIS	1101.024.242	1087.700.136	Oil pan
8HP50X HIS	1101.024.243	1087.700.079	Mechatronic
8HP50X HIS	1101.024.243	1102.700.034	Mechatronic
8HP50X HIS	1101.024.243	1090.700.133	Oil supply
8HP50X HIS	1101.024.243	1087.700.136	Oil pan
8HP50X HIS	1101.024.244	1087.700.079	Mechatronic
8HP50X HIS	1101.024.244	1102.700.034	Mechatronic
8HP50X HIS	1101.024.244	1090.700.133	Oil supply
8HP50X HIS	1101.024.244	1087.700.136	Oil pan
8HP50X HIS	1101.024.245	1087.700.079	Mechatronic
8HP50X HIS	1101.024.245	1102.700.034	Mechatronic
8HP50X HIS	1101.024.245	1090.700.133	Oil supply
8HP50X HIS	1101.024.245	1087.700.136	Oil pan
8HP50X HIS	1101.024.247	1087.700.079	Mechatronic
8HP50X HIS	1101.024.247	1102.700.034	Mechatronic
8HP50X HIS	1101.024.247	1090.700.133	Oil supply
8HP50X HIS	1101.024.247	1087.700.136	Oil pan
8HP50X HIS	1101.024.248	1087.700.079	Mechatronic
8HP50X HIS	1101.024.248	1102.700.034	Mechatronic
8HP50X HIS	1101.024.248	1090.700.133	Oil supply
8HP50X HIS	1101.024.248	1087.700.136	Oil pan
8HP50X HIS	1101.024.249	1087.700.079	Mechatronic
8HP50X HIS	1101.024.249	1102.700.034	Mechatronic
8HP50X HIS	1101.024.249	1090.700.133	Oil supply
8HP50X HIS	1101.024.249	1087.700.136	Oil pan
8HP50X HIS	1101.024.250	1087.700.079	Mechatronic
8HP50X HIS	1101.024.250	1102.700.034	Mechatronic
8HP50X HIS	1101.024.250	1090.700.133	Oil supply
8HP50X HIS	1101.024.250	1087.700.136	Oil pan
8HP50X HIS	1101.024.251	1087.700.079	Mechatronic
8HP50X HIS	1101.024.251	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP50X HIS	1101.024.251	1090.700.133	Oil supply
8HP50X HIS	1101.024.251	1087.700.136	Oil pan
8HP50X HIS	1101.024.252	1087.700.079	Mechatronic
8HP50X HIS	1101.024.252	1102.700.034	Mechatronic
8HP50X HIS	1101.024.252	1090.700.133	Oil supply
8HP50X HIS	1101.024.252	1087.700.136	Oil pan
8HP50X HIS	1101.024.253	1087.700.079	Mechatronic
8HP50X HIS	1101.024.253	1102.700.034	Mechatronic
8HP50X HIS	1101.024.253	1090.700.133	Oil supply
8HP50X HIS	1101.024.253	1087.700.136	Oil pan
8HP50X HIS	1101.024.254	1087.700.079	Mechatronic
8HP50X HIS	1101.024.254	1102.700.034	Mechatronic
8HP50X HIS	1101.024.254	1090.700.133	Oil supply
8HP50X HIS	1101.024.254	1087.700.136	Oil pan
8HP50X HIS	1101.024.256	1087.700.079	Mechatronic
8HP50X HIS	1101.024.256	1102.700.034	Mechatronic
8HP50X HIS	1101.024.256	1090.700.133	Oil supply
8HP50X HIS	1101.024.256	1087.700.136	Oil pan
8HP50X HIS	1101.024.257	1087.700.079	Mechatronic
8HP50X HIS	1101.024.257	1102.700.034	Mechatronic
8HP50X HIS	1101.024.257	1090.700.133	Oil supply
8HP50X HIS	1101.024.257	1087.700.136	Oil pan
8HP50X HIS	1101.024.258	1087.700.079	Mechatronic
8HP50X HIS	1101.024.258	1102.700.034	Mechatronic
8HP50X HIS	1101.024.258	1090.700.133	Oil supply
8HP50X HIS	1101.024.258	1087.700.136	Oil pan
8HP50X HIS	1101.024.259	1087.700.079	Mechatronic
8HP50X HIS	1101.024.259	1102.700.034	Mechatronic
8HP50X HIS	1101.024.259	1090.700.133	Oil supply
8HP50X HIS	1101.024.259	1087.700.136	Oil pan

Tab. 29 Model 1101



ZF Aftermarket Service Information

22.6 Model 1102

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75	1102.010.002	1087.700.079	Mechatronic
8HP75	1102.010.002	1102.700.034	Mechatronic
8HP75	1102.010.002	1087.700.136	Oil pan
8HP75	1102.010.002	1102.700.067	Intermediate plate
8HP75	1102.010.003	1087.700.079	Mechatronic
8HP75	1102.010.003	1102.700.034	Mechatronic
8HP75	1102.010.003	1087.700.136	Oil pan
8HP75	1102.010.003	1087.700.133	Intermediate plate
8HP75	1102.010.004	1087.700.079	Mechatronic
8HP75	1102.010.004	1102.700.034	Mechatronic
8HP75	1102.010.004	1087.700.136	Oil pan
8HP75	1102.010.004	1102.700.067	Intermediate plate
8HP75	1102.010.016	1087.700.079	Mechatronic
8HP75	1102.010.016	1102.700.034	Mechatronic
8HP75	1102.010.016	1087.700.136	Oil pan
8HP75	1102.010.016	1102.700.067	Intermediate plate
8HP75	1102.010.017	1087.700.079	Mechatronic
8HP75	1102.010.017	1102.700.034	Mechatronic
8HP75	1102.010.017	1087.700.136	Oil pan
8HP75	1102.010.017	1102.700.067	Intermediate plate
8HP75	1102.010.020	1087.700.079	Mechatronic
8HP75	1102.010.020	1102.700.034	Mechatronic
8HP75	1102.010.020	1087.700.136	Oil pan
8HP75	1102.010.020	1102.700.067	Intermediate plate
8HP75	1102.010.022	1087.700.079	Mechatronic
8HP75	1102.010.022	1102.700.034	Mechatronic
8HP75	1102.010.022	1087.700.136	Oil pan
8HP75	1102.010.022	1102.700.067	Intermediate plate
8HP75	1102.010.024	1087.700.079	Mechatronic
8HP75	1102.010.024	1102.700.034	Mechatronic
8HP75	1102.010.024	1087.700.136	Oil pan
8HP75	1102.010.024	1087.700.133	Intermediate plate
8HP75	1102.010.025	1087.700.079	Mechatronic
8HP75	1102.010.025	1102.700.034	Mechatronic
8HP75	1102.010.025	1087.700.136	Oil pan
8HP75	1102.010.025	1087.700.133	Intermediate plate
8HP75	1102.010.026	1087.700.079	Mechatronic
8HP75	1102.010.026	1102.700.034	Mechatronic
8HP75	1102.010.026	1087.700.136	Oil pan
8HP75	1102.010.026	1102.700.067	Intermediate plate
8HP75	1102.010.027	1087.700.079	Mechatronic
8HP75	1102.010.027	1102.700.034	Mechatronic
8HP75	1102.010.027	1087.700.136	Oil pan
8HP75	1102.010.027	1087.700.133	Intermediate plate
8HP75	1102.010.028	1087.700.079	Mechatronic
8HP75	1102.010.028	1102.700.034	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
177/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75	1102.010.028	1087.700.136	Oil pan
8HP75	1102.010.028	1102.700.067	Intermediate plate
8HP75	1102.010.029	1087.700.079	Mechatronic
8HP75	1102.010.029	1102.700.034	Mechatronic
8HP75	1102.010.029	1087.700.136	Oil pan
8HP75	1102.010.029	1102.700.067	Intermediate plate
8HP75	1102.010.030	1087.700.079	Mechatronic
8HP75	1102.010.030	1102.700.034	Mechatronic
8HP75	1102.010.030	1087.700.136	Oil pan
8HP75	1102.010.030	1102.700.067	Intermediate plate
8HP75	1102.010.031	1087.700.079	Mechatronic
8HP75	1102.010.031	1102.700.034	Mechatronic
8HP75	1102.010.031	1087.700.136	Oil pan
8HP75	1102.010.031	1087.700.133	Intermediate plate
8HP75	1102.010.032	1087.700.079	Mechatronic
8HP75	1102.010.032	1102.700.034	Mechatronic
8HP75	1102.010.032	1087.700.136	Oil pan
8HP75	1102.010.032	1102.700.067	Intermediate plate
8HP75	1102.010.033	1087.700.079	Mechatronic
8HP75	1102.010.033	1102.700.034	Mechatronic
8HP75	1102.010.033	1087.700.136	Oil pan
8HP75	1102.010.033	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.005	1087.700.079	Mechatronic
8HP75 HIS	1102.014.005	1102.700.034	Mechatronic
8HP75 HIS	1102.014.005	1087.700.136	Oil pan
8HP75 HIS	1102.014.005	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.006	1087.700.079	Mechatronic
8HP75 HIS	1102.014.006	1102.700.034	Mechatronic
8HP75 HIS	1102.014.006	1087.700.136	Oil pan
8HP75 HIS	1102.014.006	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.007	1087.700.079	Mechatronic
8HP75 HIS	1102.014.007	1102.700.034	Mechatronic
8HP75 HIS	1102.014.007	1087.700.136	Oil pan
8HP75 HIS	1102.014.007	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.010	1087.700.079	Mechatronic
8HP75 HIS	1102.014.010	1102.700.034	Mechatronic
8HP75 HIS	1102.014.010	1087.700.136	Oil pan
8HP75 HIS	1102.014.010	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.011	1087.700.079	Mechatronic
8HP75 HIS	1102.014.011	1102.700.034	Mechatronic
8HP75 HIS	1102.014.011	1087.700.136	Oil pan
8HP75 HIS	1102.014.011	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.012	1087.700.079	Mechatronic
8HP75 HIS	1102.014.012	1102.700.034	Mechatronic
8HP75 HIS	1102.014.012	1087.700.136	Oil pan
8HP75 HIS	1102.014.012	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.014	1087.700.079	Mechatronic
8HP75 HIS	1102.014.014	1102.700.034	Mechatronic
8HP75 HIS	1102.014.014	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
178/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75 HIS	1102.014.014	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.017	1087.700.079	Mechatronic
8HP75 HIS	1102.014.017	1102.700.034	Mechatronic
8HP75 HIS	1102.014.017	1087.700.136	Oil pan
8HP75 HIS	1102.014.017	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.023	1087.700.079	Mechatronic
8HP75 HIS	1102.014.023	1102.700.034	Mechatronic
8HP75 HIS	1102.014.023	1087.700.136	Oil pan
8HP75 HIS	1102.014.023	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.025	1087.700.079	Mechatronic
8HP75 HIS	1102.014.025	1102.700.034	Mechatronic
8HP75 HIS	1102.014.025	1087.700.136	Oil pan
8HP75 HIS	1102.014.025	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.026	1087.700.079	Mechatronic
8HP75 HIS	1102.014.026	1102.700.034	Mechatronic
8HP75 HIS	1102.014.026	1087.700.136	Oil pan
8HP75 HIS	1102.014.026	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.027	1087.700.079	Mechatronic
8HP75 HIS	1102.014.027	1102.700.034	Mechatronic
8HP75 HIS	1102.014.027	1087.700.136	Oil pan
8HP75 HIS	1102.014.027	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.028	1087.700.079	Mechatronic
8HP75 HIS	1102.014.028	1102.700.034	Mechatronic
8HP75 HIS	1102.014.028	1087.700.136	Oil pan
8HP75 HIS	1102.014.028	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.029	1087.700.079	Mechatronic
8HP75 HIS	1102.014.029	1102.700.034	Mechatronic
8HP75 HIS	1102.014.029	1087.700.136	Oil pan
8HP75 HIS	1102.014.029	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.032	1087.700.079	Mechatronic
8HP75 HIS	1102.014.032	1102.700.034	Mechatronic
8HP75 HIS	1102.014.032	1087.700.136	Oil pan
8HP75 HIS	1102.014.032	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.036	1102.700.034	Mechatronic
8HP75 HIS	1102.014.036	1102.700.035	Mechatronic
8HP75 HIS	1102.014.036	1087.700.136	Oil pan
8HP75 HIS	1102.014.036	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.039	1087.700.079	Mechatronic
8HP75 HIS	1102.014.039	1102.700.034	Mechatronic
8HP75 HIS	1102.014.039	1087.700.136	Oil pan
8HP75 HIS	1102.014.039	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.044	1087.700.079	Mechatronic
8HP75 HIS	1102.014.044	1102.700.034	Mechatronic
8HP75 HIS	1102.014.044	1087.700.136	Oil pan
8HP75 HIS	1102.014.044	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.045	1087.700.079	Mechatronic
8HP75 HIS	1102.014.045	1102.700.034	Mechatronic
8HP75 HIS	1102.014.045	1087.700.136	Oil pan
8HP75 HIS	1102.014.045	1087.700.133	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75 HIS	1102.014.048	1087.700.079	Mechatronic
8HP75 HIS	1102.014.048	1102.700.034	Mechatronic
8HP75 HIS	1102.014.048	1087.700.136	Oil pan
8HP75 HIS	1102.014.048	1102.700.067	Intermediate plate
8HP75 HIS	1102.014.050	1087.700.079	Mechatronic
8HP75 HIS	1102.014.050	1102.700.034	Mechatronic
8HP75 HIS	1102.014.050	1087.700.136	Oil pan
8HP75 HIS	1102.014.050	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.051	1087.700.079	Mechatronic
8HP75 HIS	1102.014.051	1102.700.034	Mechatronic
8HP75 HIS	1102.014.051	1087.700.136	Oil pan
8HP75 HIS	1102.014.051	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.052	1087.700.079	Mechatronic
8HP75 HIS	1102.014.052	1102.700.034	Mechatronic
8HP75 HIS	1102.014.052	1087.700.136	Oil pan
8HP75 HIS	1102.014.052	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.053	1087.700.079	Mechatronic
8HP75 HIS	1102.014.053	1102.700.034	Mechatronic
8HP75 HIS	1102.014.053	1087.700.136	Oil pan
8HP75 HIS	1102.014.053	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.054	1087.700.079	Mechatronic
8HP75 HIS	1102.014.054	1102.700.034	Mechatronic
8HP75 HIS	1102.014.054	1087.700.136	Oil pan
8HP75 HIS	1102.014.054	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.055	1087.700.079	Mechatronic
8HP75 HIS	1102.014.055	1102.700.034	Mechatronic
8HP75 HIS	1102.014.055	1087.700.136	Oil pan
8HP75 HIS	1102.014.055	1087.700.133	Intermediate plate
8HP75 HIS	1102.014.058	1087.700.079	Mechatronic
8HP75 HIS	1102.014.058	1102.700.034	Mechatronic
8HP75 HIS	1102.014.058	1087.700.136	Oil pan
8HP75 HIS	1102.014.058	1102.700.067	Intermediate plate
8HP75X	1102.020.001	1087.700.079	Mechatronic
8HP75X	1102.020.001	1102.700.034	Mechatronic
8HP75X	1102.020.001	1087.700.136	Oil pan
8HP75X	1102.020.001	1090.700.141	Extension
8HP75X	1102.020.001	1102.700.067	Intermediate plate
8HP75X	1102.020.002	1087.700.079	Mechatronic
8HP75X	1102.020.002	1102.700.034	Mechatronic
8HP75X	1102.020.002	1087.700.136	Oil pan
8HP75X	1102.020.002	1090.700.141	Extension
8HP75X	1102.020.002	1087.700.133	Intermediate plate
8HP75X	1102.020.003	1087.700.079	Mechatronic
8HP75X	1102.020.003	1102.700.034	Mechatronic
8HP75X	1102.020.003	1087.700.136	Oil pan
8HP75X	1102.020.003	1090.700.141	Extension
8HP75X	1102.020.003	1102.700.067	Intermediate plate
8HP75X	1102.020.011	1087.700.079	Mechatronic
8HP75X	1102.020.011	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X	1102.020.011	1087.700.136	Oil pan
8HP75X	1102.020.011	1090.700.141	Extension
8HP75X	1102.020.011	1102.700.067	Intermediate plate
8HP75X	1102.020.017	1087.700.079	Mechatronic
8HP75X	1102.020.017	1102.700.034	Mechatronic
8HP75X	1102.020.017	1087.700.136	Oil pan
8HP75X	1102.020.017	1090.700.141	Extension
8HP75X	1102.020.017	1102.700.067	Intermediate plate
8HP75X	1102.020.018	1087.700.079	Mechatronic
8HP75X	1102.020.018	1102.700.034	Mechatronic
8HP75X	1102.020.018	1087.700.136	Oil pan
8HP75X	1102.020.018	1090.700.141	Extension
8HP75X	1102.020.018	1102.700.067	Intermediate plate
8HP75X	1102.020.023	1087.700.079	Mechatronic
8HP75X	1102.020.023	1102.700.034	Mechatronic
8HP75X	1102.020.023	1087.700.136	Oil pan
8HP75X	1102.020.023	1090.700.141	Extension
8HP75X	1102.020.023	1087.700.133	Intermediate plate
8HP75X	1102.020.024	1087.700.079	Mechatronic
8HP75X	1102.020.024	1102.700.034	Mechatronic
8HP75X	1102.020.024	1087.700.136	Oil pan
8HP75X	1102.020.024	1102.700.067	Intermediate plate
8HP75X	1102.020.025	1087.700.079	Mechatronic
8HP75X	1102.020.025	1102.700.034	Mechatronic
8HP75X	1102.020.025	1087.700.136	Oil pan
8HP75X	1102.020.025	1102.700.067	Intermediate plate
8HP75X	1102.020.026	1087.700.079	Mechatronic
8HP75X	1102.020.026	1102.700.034	Mechatronic
8HP75X	1102.020.026	1087.700.136	Oil pan
8HP75X	1102.020.026	1090.700.141	Extension
8HP75X	1102.020.026	1087.700.133	Intermediate plate
8HP75X	1102.020.027	1087.700.079	Mechatronic
8HP75X	1102.020.027	1102.700.034	Mechatronic
8HP75X	1102.020.027	1087.700.136	Oil pan
8HP75X	1102.020.027	1090.700.141	Extension
8HP75X	1102.020.027	1087.700.133	Intermediate plate
8HP75X	1102.020.028	1087.700.079	Mechatronic
8HP75X	1102.020.028	1102.700.034	Mechatronic
8HP75X	1102.020.028	1087.700.136	Oil pan
8HP75X	1102.020.028	1102.700.067	Intermediate plate
8HP75X	1102.020.029	1087.700.079	Mechatronic
8HP75X	1102.020.029	1102.700.034	Mechatronic
8HP75X	1102.020.029	1087.700.136	Oil pan
8HP75X	1102.020.029	1090.700.141	Extension
8HP75X	1102.020.029	1087.700.133	Intermediate plate
8HP75X	1102.020.030	1087.700.079	Mechatronic
8HP75X	1102.020.030	1102.700.034	Mechatronic
8HP75X	1102.020.030	1087.700.136	Oil pan
8HP75X	1102.020.030	1090.700.141	Extension



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
181/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X	1102.020.030	1102.700.067	Intermediate plate
8HP75X	1102.020.031	1087.700.079	Mechatronic
8HP75X	1102.020.031	1102.700.034	Mechatronic
8HP75X	1102.020.031	1087.700.136	Oil pan
8HP75X	1102.020.031	1090.700.141	Extension
8HP75X	1102.020.031	1102.700.067	Intermediate plate
8HP75X	1102.020.032	1087.700.079	Mechatronic
8HP75X	1102.020.032	1102.700.034	Mechatronic
8HP75X	1102.020.032	1087.700.136	Oil pan
8HP75X	1102.020.032	1090.700.141	Extension
8HP75X	1102.020.032	1102.700.067	Intermediate plate
8HP75X	1102.020.033	1087.700.079	Mechatronic
8HP75X	1102.020.033	1102.700.034	Mechatronic
8HP75X	1102.020.033	1087.700.136	Oil pan
8HP75X	1102.020.033	1090.700.141	Extension
8HP75X	1102.020.033	1087.700.133	Intermediate plate
8HP75X	1102.020.034	1087.700.079	Mechatronic
8HP75X	1102.020.034	1102.700.034	Mechatronic
8HP75X	1102.020.034	1087.700.136	Oil pan
8HP75X	1102.020.034	1102.700.067	Intermediate plate
8HP75X	1102.020.035	1087.700.079	Mechatronic
8HP75X	1102.020.035	1102.700.034	Mechatronic
8HP75X	1102.020.035	1087.700.136	Oil pan
8HP75X	1102.020.035	1102.700.067	Intermediate plate
8HP75X	1102.020.036	1087.700.079	Mechatronic
8HP75X	1102.020.036	1102.700.034	Mechatronic
8HP75X	1102.020.036	1087.700.136	Oil pan
8HP75X	1102.020.036	1090.700.141	Extension
8HP75X	1102.020.036	1102.700.067	Intermediate plate
8HP75X	1102.020.037	1087.700.079	Mechatronic
8HP75X	1102.020.037	1102.700.034	Mechatronic
8HP75X	1102.020.037	1087.700.136	Oil pan
8HP75X	1102.020.037	1090.700.141	Extension
8HP75X	1102.020.037	1102.700.067	Intermediate plate
8HP75X SW	1102.022.005	1087.700.136	Oil pan
8HP75X SW	1102.022.006	1087.700.136	Oil pan
8HP75X SW	1102.022.012	1087.700.136	Oil pan
8HP75X SW	1102.022.013	1087.700.136	Oil pan
8HP75X SW	1102.022.014	1087.700.136	Oil pan
8HP75X SW	1102.022.015	1087.700.136	Oil pan
8HP75X SW	1102.022.021	1087.700.136	Oil pan
8HP75X SW	1102.022.023	1087.700.136	Oil pan
8HP75X SW	1102.022.025	1087.700.136	Oil pan
8HP75X SW	1102.022.026	1087.700.136	Oil pan
8HP75X SW	1102.022.027	1087.700.136	Oil pan
8HP75X SW	1102.022.030	1087.700.136	Oil pan
8HP75X SW	1102.022.031	1087.700.136	Oil pan
8HP75X SW	1102.022.032	1087.700.136	Oil pan
8HP75X SW	1102.022.033	1087.700.136	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X SW	1102.022.034	1087.700.136	Oil pan
8HP75X SW	1102.022.035	1087.700.136	Oil pan
8HP75X SW	1102.022.036	1087.700.136	Oil pan
8HP75X SW	1102.022.037	1087.700.136	Oil pan
8HP75X SW	1102.022.038	1087.700.136	Oil pan
8HP75X SW	1102.022.039	1087.700.136	Oil pan
8HP75X SW	1102.022.040	1087.700.136	Oil pan
8HP75X SW	1102.022.042	1087.700.136	Oil pan
8HP75X HIS	1102.024.022	1087.700.079	Mechatronic
8HP75X HIS	1102.024.022	1102.700.034	Mechatronic
8HP75X HIS	1102.024.022	1087.700.136	Oil pan
8HP75X HIS	1102.024.022	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.023	1087.700.079	Mechatronic
8HP75X HIS	1102.024.023	1102.700.034	Mechatronic
8HP75X HIS	1102.024.023	1087.700.136	Oil pan
8HP75X HIS	1102.024.023	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.024	1087.700.079	Mechatronic
8HP75X HIS	1102.024.024	1102.700.034	Mechatronic
8HP75X HIS	1102.024.024	1087.700.136	Oil pan
8HP75X HIS	1102.024.024	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.025	1087.700.079	Mechatronic
8HP75X HIS	1102.024.025	1102.700.034	Mechatronic
8HP75X HIS	1102.024.025	1087.700.136	Oil pan
8HP75X HIS	1102.024.025	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.026	1087.700.079	Mechatronic
8HP75X HIS	1102.024.026	1102.700.034	Mechatronic
8HP75X HIS	1102.024.026	1087.700.136	Oil pan
8HP75X HIS	1102.024.026	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.027	1087.700.079	Mechatronic
8HP75X HIS	1102.024.027	1102.700.034	Mechatronic
8HP75X HIS	1102.024.027	1087.700.136	Oil pan
8HP75X HIS	1102.024.027	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.028	1087.700.079	Mechatronic
8HP75X HIS	1102.024.028	1102.700.034	Mechatronic
8HP75X HIS	1102.024.028	1087.700.136	Oil pan
8HP75X HIS	1102.024.028	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.032	1087.700.079	Mechatronic
8HP75X HIS	1102.024.032	1102.700.034	Mechatronic
8HP75X HIS	1102.024.032	1087.700.136	Oil pan
8HP75X HIS	1102.024.032	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.033	1087.700.079	Mechatronic
8HP75X HIS	1102.024.033	1102.700.034	Mechatronic
8HP75X HIS	1102.024.033	1087.700.136	Oil pan
8HP75X HIS	1102.024.033	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.034	1087.700.079	Mechatronic
8HP75X HIS	1102.024.034	1102.700.034	Mechatronic
8HP75X HIS	1102.024.034	1087.700.136	Oil pan
8HP75X HIS	1102.024.034	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.035	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.035	1102.700.034	Mechatronic
8HP75X HIS	1102.024.035	1087.700.136	Oil pan
8HP75X HIS	1102.024.035	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.036	1087.700.079	Mechatronic
8HP75X HIS	1102.024.036	1102.700.034	Mechatronic
8HP75X HIS	1102.024.036	1087.700.136	Oil pan
8HP75X HIS	1102.024.036	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.037	1087.700.079	Mechatronic
8HP75X HIS	1102.024.037	1102.700.034	Mechatronic
8HP75X HIS	1102.024.037	1087.700.136	Oil pan
8HP75X HIS	1102.024.037	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.039	1087.700.079	Mechatronic
8HP75X HIS	1102.024.039	1102.700.034	Mechatronic
8HP75X HIS	1102.024.039	1087.700.136	Oil pan
8HP75X HIS	1102.024.039	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.040	1087.700.079	Mechatronic
8HP75X HIS	1102.024.040	1102.700.034	Mechatronic
8HP75X HIS	1102.024.040	1087.700.136	Oil pan
8HP75X HIS	1102.024.040	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.041	1087.700.079	Mechatronic
8HP75X HIS	1102.024.041	1102.700.034	Mechatronic
8HP75X HIS	1102.024.041	1087.700.136	Oil pan
8HP75X HIS	1102.024.041	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.042	1087.700.079	Mechatronic
8HP75X HIS	1102.024.042	1102.700.034	Mechatronic
8HP75X HIS	1102.024.042	1087.700.136	Oil pan
8HP75X HIS	1102.024.042	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.043	1087.700.079	Mechatronic
8HP75X HIS	1102.024.043	1102.700.034	Mechatronic
8HP75X HIS	1102.024.043	1087.700.136	Oil pan
8HP75X HIS	1102.024.043	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.044	1087.700.079	Mechatronic
8HP75X HIS	1102.024.044	1102.700.034	Mechatronic
8HP75X HIS	1102.024.044	1087.700.136	Oil pan
8HP75X HIS	1102.024.044	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.045	1087.700.079	Mechatronic
8HP75X HIS	1102.024.045	1102.700.034	Mechatronic
8HP75X HIS	1102.024.045	1087.700.136	Oil pan
8HP75X HIS	1102.024.045	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.046	1087.700.079	Mechatronic
8HP75X HIS	1102.024.046	1102.700.034	Mechatronic
8HP75X HIS	1102.024.046	1087.700.136	Oil pan
8HP75X HIS	1102.024.046	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.047	1087.700.079	Mechatronic
8HP75X HIS	1102.024.047	1102.700.034	Mechatronic
8HP75X HIS	1102.024.047	1087.700.136	Oil pan
8HP75X HIS	1102.024.047	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.048	1087.700.079	Mechatronic
8HP75X HIS	1102.024.048	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.048	1087.700.136	Oil pan
8HP75X HIS	1102.024.048	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.049	1102.700.034	Mechatronic
8HP75X HIS	1102.024.049	1102.700.035	Mechatronic
8HP75X HIS	1102.024.049	1087.700.136	Oil pan
8HP75X HIS	1102.024.049	1090.700.141	Extension
8HP75X HIS	1102.024.049	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.050	1087.700.079	Mechatronic
8HP75X HIS	1102.024.050	1102.700.034	Mechatronic
8HP75X HIS	1102.024.050	1087.700.136	Oil pan
8HP75X HIS	1102.024.050	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.051	1087.700.079	Mechatronic
8HP75X HIS	1102.024.051	1102.700.034	Mechatronic
8HP75X HIS	1102.024.051	1087.700.136	Oil pan
8HP75X HIS	1102.024.051	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.054	1087.700.079	Mechatronic
8HP75X HIS	1102.024.054	1102.700.034	Mechatronic
8HP75X HIS	1102.024.054	1087.700.136	Oil pan
8HP75X HIS	1102.024.054	1090.700.141	Extension
8HP75X HIS	1102.024.054	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.055	1087.700.079	Mechatronic
8HP75X HIS	1102.024.055	1102.700.034	Mechatronic
8HP75X HIS	1102.024.055	1087.700.136	Oil pan
8HP75X HIS	1102.024.055	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.057	1087.700.079	Mechatronic
8HP75X HIS	1102.024.057	1102.700.034	Mechatronic
8HP75X HIS	1102.024.057	1087.700.136	Oil pan
8HP75X HIS	1102.024.057	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.058	1087.700.079	Mechatronic
8HP75X HIS	1102.024.058	1102.700.034	Mechatronic
8HP75X HIS	1102.024.058	1087.700.136	Oil pan
8HP75X HIS	1102.024.058	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.060	1087.700.079	Mechatronic
8HP75X HIS	1102.024.060	1102.700.034	Mechatronic
8HP75X HIS	1102.024.060	1087.700.136	Oil pan
8HP75X HIS	1102.024.060	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.061	1087.700.079	Mechatronic
8HP75X HIS	1102.024.061	1102.700.034	Mechatronic
8HP75X HIS	1102.024.061	1087.700.136	Oil pan
8HP75X HIS	1102.024.061	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.062	1087.700.079	Mechatronic
8HP75X HIS	1102.024.062	1102.700.034	Mechatronic
8HP75X HIS	1102.024.062	1087.700.136	Oil pan
8HP75X HIS	1102.024.062	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.067	1087.700.079	Mechatronic
8HP75X HIS	1102.024.067	1102.700.034	Mechatronic
8HP75X HIS	1102.024.067	1087.700.136	Oil pan
8HP75X HIS	1102.024.067	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.068	1087.700.079	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.068	1102.700.034	Mechatronic
8HP75X HIS	1102.024.068	1087.700.136	Oil pan
8HP75X HIS	1102.024.068	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.072	1087.700.079	Mechatronic
8HP75X HIS	1102.024.072	1102.700.034	Mechatronic
8HP75X HIS	1102.024.072	1087.700.136	Oil pan
8HP75X HIS	1102.024.072	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.076	1087.700.079	Mechatronic
8HP75X HIS	1102.024.076	1102.700.034	Mechatronic
8HP75X HIS	1102.024.076	1087.700.136	Oil pan
8HP75X HIS	1102.024.076	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.077	1087.700.079	Mechatronic
8HP75X HIS	1102.024.077	1102.700.034	Mechatronic
8HP75X HIS	1102.024.077	1087.700.136	Oil pan
8HP75X HIS	1102.024.077	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.078	1087.700.079	Mechatronic
8HP75X HIS	1102.024.078	1102.700.034	Mechatronic
8HP75X HIS	1102.024.078	1087.700.136	Oil pan
8HP75X HIS	1102.024.078	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.079	1087.700.079	Mechatronic
8HP75X HIS	1102.024.079	1102.700.034	Mechatronic
8HP75X HIS	1102.024.079	1087.700.136	Oil pan
8HP75X HIS	1102.024.079	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.083	1087.700.079	Mechatronic
8HP75X HIS	1102.024.083	1102.700.034	Mechatronic
8HP75X HIS	1102.024.083	1087.700.136	Oil pan
8HP75X HIS	1102.024.083	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.084	1087.700.079	Mechatronic
8HP75X HIS	1102.024.084	1102.700.034	Mechatronic
8HP75X HIS	1102.024.084	1087.700.136	Oil pan
8HP75X HIS	1102.024.084	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.086	1087.700.079	Mechatronic
8HP75X HIS	1102.024.086	1102.700.034	Mechatronic
8HP75X HIS	1102.024.086	1087.700.136	Oil pan
8HP75X HIS	1102.024.086	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.087	1087.700.079	Mechatronic
8HP75X HIS	1102.024.087	1102.700.034	Mechatronic
8HP75X HIS	1102.024.087	1087.700.136	Oil pan
8HP75X HIS	1102.024.087	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.088	1087.700.079	Mechatronic
8HP75X HIS	1102.024.088	1102.700.034	Mechatronic
8HP75X HIS	1102.024.088	1087.700.136	Oil pan
8HP75X HIS	1102.024.088	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.089	1087.700.079	Mechatronic
8HP75X HIS	1102.024.089	1102.700.034	Mechatronic
8HP75X HIS	1102.024.089	1087.700.136	Oil pan
8HP75X HIS	1102.024.089	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.091	1087.700.079	Mechatronic
8HP75X HIS	1102.024.091	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.091	1087.700.136	Oil pan
8HP75X HIS	1102.024.091	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.094	1102.700.034	Mechatronic
8HP75X HIS	1102.024.094	1102.700.035	Mechatronic
8HP75X HIS	1102.024.094	1087.700.136	Oil pan
8HP75X HIS	1102.024.094	1090.700.141	Extension
8HP75X HIS	1102.024.094	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.095	1087.700.079	Mechatronic
8HP75X HIS	1102.024.095	1102.700.034	Mechatronic
8HP75X HIS	1102.024.095	1087.700.136	Oil pan
8HP75X HIS	1102.024.095	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.096	1087.700.079	Mechatronic
8HP75X HIS	1102.024.096	1102.700.034	Mechatronic
8HP75X HIS	1102.024.096	1087.700.136	Oil pan
8HP75X HIS	1102.024.096	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.097	1087.700.079	Mechatronic
8HP75X HIS	1102.024.097	1102.700.034	Mechatronic
8HP75X HIS	1102.024.097	1087.700.136	Oil pan
8HP75X HIS	1102.024.097	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.098	1087.700.079	Mechatronic
8HP75X HIS	1102.024.098	1102.700.034	Mechatronic
8HP75X HIS	1102.024.098	1087.700.136	Oil pan
8HP75X HIS	1102.024.098	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.099	1087.700.079	Mechatronic
8HP75X HIS	1102.024.099	1102.700.034	Mechatronic
8HP75X HIS	1102.024.099	1087.700.136	Oil pan
8HP75X HIS	1102.024.099	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.102	1087.700.079	Mechatronic
8HP75X HIS	1102.024.102	1102.700.034	Mechatronic
8HP75X HIS	1102.024.102	1087.700.136	Oil pan
8HP75X HIS	1102.024.102	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.103	1087.700.079	Mechatronic
8HP75X HIS	1102.024.103	1102.700.034	Mechatronic
8HP75X HIS	1102.024.103	1087.700.136	Oil pan
8HP75X HIS	1102.024.103	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.105	1087.700.079	Mechatronic
8HP75X HIS	1102.024.105	1102.700.034	Mechatronic
8HP75X HIS	1102.024.105	1087.700.136	Oil pan
8HP75X HIS	1102.024.105	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.106	1087.700.079	Mechatronic
8HP75X HIS	1102.024.106	1102.700.034	Mechatronic
8HP75X HIS	1102.024.106	1087.700.136	Oil pan
8HP75X HIS	1102.024.106	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.107	1102.700.034	Mechatronic
8HP75X HIS	1102.024.107	1102.700.035	Mechatronic
8HP75X HIS	1102.024.107	1087.700.136	Oil pan
8HP75X HIS	1102.024.107	1090.700.141	Extension
8HP75X HIS	1102.024.107	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.112	1087.700.079	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.112	1102.700.034	Mechatronic
8HP75X HIS	1102.024.112	1087.700.136	Oil pan
8HP75X HIS	1102.024.112	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.114	1087.700.079	Mechatronic
8HP75X HIS	1102.024.114	1102.700.034	Mechatronic
8HP75X HIS	1102.024.114	1087.700.136	Oil pan
8HP75X HIS	1102.024.114	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.115	1087.700.079	Mechatronic
8HP75X HIS	1102.024.115	1102.700.034	Mechatronic
8HP75X HIS	1102.024.115	1087.700.136	Oil pan
8HP75X HIS	1102.024.115	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.122	1087.700.079	Mechatronic
8HP75X HIS	1102.024.122	1102.700.034	Mechatronic
8HP75X HIS	1102.024.122	1087.700.136	Oil pan
8HP75X HIS	1102.024.122	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.123	1087.700.079	Mechatronic
8HP75X HIS	1102.024.123	1102.700.034	Mechatronic
8HP75X HIS	1102.024.123	1087.700.136	Oil pan
8HP75X HIS	1102.024.123	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.125	1087.700.079	Mechatronic
8HP75X HIS	1102.024.125	1102.700.034	Mechatronic
8HP75X HIS	1102.024.125	1087.700.136	Oil pan
8HP75X HIS	1102.024.125	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.126	1087.700.079	Mechatronic
8HP75X HIS	1102.024.126	1102.700.034	Mechatronic
8HP75X HIS	1102.024.126	1087.700.136	Oil pan
8HP75X HIS	1102.024.126	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.127	1087.700.079	Mechatronic
8HP75X HIS	1102.024.127	1102.700.034	Mechatronic
8HP75X HIS	1102.024.127	1087.700.136	Oil pan
8HP75X HIS	1102.024.127	1090.700.141	Extension
8HP75X HIS	1102.024.127	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.128	1087.700.079	Mechatronic
8HP75X HIS	1102.024.128	1102.700.034	Mechatronic
8HP75X HIS	1102.024.128	1087.700.136	Oil pan
8HP75X HIS	1102.024.128	1090.700.141	Extension
8HP75X HIS	1102.024.128	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.135	1087.700.079	Mechatronic
8HP75X HIS	1102.024.135	1102.700.034	Mechatronic
8HP75X HIS	1102.024.135	1087.700.136	Oil pan
8HP75X HIS	1102.024.135	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.136	1087.700.079	Mechatronic
8HP75X HIS	1102.024.136	1102.700.034	Mechatronic
8HP75X HIS	1102.024.136	1087.700.136	Oil pan
8HP75X HIS	1102.024.136	1090.700.141	Extension
8HP75X HIS	1102.024.136	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.137	1087.700.079	Mechatronic
8HP75X HIS	1102.024.137	1102.700.034	Mechatronic
8HP75X HIS	1102.024.137	1087.700.136	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.137	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.139	1087.700.079	Mechatronic
8HP75X HIS	1102.024.139	1102.700.034	Mechatronic
8HP75X HIS	1102.024.139	1087.700.136	Oil pan
8HP75X HIS	1102.024.139	1090.700.141	Extension
8HP75X HIS	1102.024.139	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.140	1087.700.079	Mechatronic
8HP75X HIS	1102.024.140	1102.700.034	Mechatronic
8HP75X HIS	1102.024.140	1087.700.136	Oil pan
8HP75X HIS	1102.024.140	1090.700.141	Extension
8HP75X HIS	1102.024.140	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.142	1102.700.034	Mechatronic
8HP75X HIS	1102.024.142	1102.700.035	Mechatronic
8HP75X HIS	1102.024.142	1087.700.136	Oil pan
8HP75X HIS	1102.024.142	1102.700.067	Intermediate plate
8HP75T HIS	1102.024.143	1087.700.079	Mechatronic
8HP75T HIS	1102.024.143	1102.700.034	Mechatronic
8HP75T HIS	1102.024.143	1087.700.136	Oil pan
8HP75T HIS	1102.024.143	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.144	1087.700.079	Mechatronic
8HP75X HIS	1102.024.144	1102.700.034	Mechatronic
8HP75X HIS	1102.024.144	1087.700.136	Oil pan
8HP75X HIS	1102.024.144	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.145	1087.700.079	Mechatronic
8HP75X HIS	1102.024.145	1102.700.034	Mechatronic
8HP75X HIS	1102.024.145	1087.700.136	Oil pan
8HP75X HIS	1102.024.145	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.147	1087.700.079	Mechatronic
8HP75X HIS	1102.024.147	1102.700.034	Mechatronic
8HP75X HIS	1102.024.147	1087.700.136	Oil pan
8HP75X HIS	1102.024.147	1090.700.141	Extension
8HP75X HIS	1102.024.147	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.148	1087.700.079	Mechatronic
8HP75X HIS	1102.024.148	1102.700.034	Mechatronic
8HP75X HIS	1102.024.148	1087.700.136	Oil pan
8HP75X HIS	1102.024.148	1090.700.141	Extension
8HP75X HIS	1102.024.148	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.149	1087.700.079	Mechatronic
8HP75X HIS	1102.024.149	1102.700.034	Mechatronic
8HP75X HIS	1102.024.149	1087.700.136	Oil pan
8HP75X HIS	1102.024.149	1090.700.141	Extension
8HP75X HIS	1102.024.149	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.150	1087.700.079	Mechatronic
8HP75X HIS	1102.024.150	1102.700.034	Mechatronic
8HP75X HIS	1102.024.150	1087.700.136	Oil pan
8HP75X HIS	1102.024.150	1090.700.141	Extension
8HP75X HIS	1102.024.150	1087.700.133	Intermediate plate
8HP75X HIS	1102.024.153	1087.700.079	Mechatronic
8HP75X HIS	1102.024.153	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP75X HIS	1102.024.153	1087.700.136	Oil pan
8HP75X HIS	1102.024.153	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.154	1087.700.079	Mechatronic
8HP75X HIS	1102.024.154	1102.700.034	Mechatronic
8HP75X HIS	1102.024.154	1087.700.136	Oil pan
8HP75X HIS	1102.024.154	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.156	1087.700.079	Mechatronic
8HP75X HIS	1102.024.156	1102.700.034	Mechatronic
8HP75X HIS	1102.024.156	1087.700.136	Oil pan
8HP75X HIS	1102.024.156	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.157	1087.700.079	Mechatronic
8HP75X HIS	1102.024.157	1102.700.034	Mechatronic
8HP75X HIS	1102.024.157	1087.700.136	Oil pan
8HP75X HIS	1102.024.157	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.158	1087.700.079	Mechatronic
8HP75X HIS	1102.024.158	1102.700.034	Mechatronic
8HP75X HIS	1102.024.158	1087.700.136	Oil pan
8HP75X HIS	1102.024.158	1102.700.067	Intermediate plate
8HP75X HIS	1102.024.159	1087.700.079	Mechatronic
8HP75X HIS	1102.024.159	1102.700.034	Mechatronic
8HP75X HIS	1102.024.159	1087.700.136	Oil pan
8HP75X HIS	1102.024.159	1090.700.141	Extension
8HP75X HIS	1102.024.159	1087.700.133	Intermediate plate
8HP75T HIS	1102.024.160	1087.700.079	Mechatronic
8HP75T HIS	1102.024.160	1102.700.034	Mechatronic
8HP75T HIS	1102.024.160	1087.700.136	Oil pan
8HP75T HIS	1102.024.160	1102.700.067	Intermediate plate
8P75PH	1102.060.004	1102.700.034	Mechatronic
8P75PH	1102.060.004	1102.700.035	Mechatronic
8P75PH	1102.060.004	1102.700.113	Oil pan
8P75PH	1102.060.004	1102.700.021	Rotor position sensor
8P75PH	1102.060.004	1102.700.067	Intermediate plate
8P75PH	1102.060.005	1102.700.167	Power connection
8P75PH	1102.060.006	1102.700.167	Power connection
8P75PH	1102.060.006	1102.700.034	Mechatronic
8P75PH	1102.060.006	1102.700.035	Mechatronic
8P75PH	1102.060.006	1102.700.113	Oil pan
8P75PH	1102.060.006	1102.700.021	Rotor position sensor
8P75PH	1102.060.006	1102.700.067	Intermediate plate
8P75PH	1102.060.007	1102.700.034	Mechatronic
8P75PH	1102.060.007	1102.700.035	Mechatronic
8P75PH	1102.060.007	1102.700.113	Oil pan
8P75PH	1102.060.007	1102.700.021	Rotor position sensor
8P75PH	1102.060.007	1102.700.067	Intermediate plate
8P75PH	1102.060.008	1102.700.167	Power connection
8P75PH	1102.060.009	1102.700.167	Power connection
8P75PH	1102.060.009	1102.700.034	Mechatronic
8P75PH	1102.060.009	1102.700.035	Mechatronic
8P75PH	1102.060.009	1102.700.113	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75PH	1102.060.009	1102.700.021	Rotor position sensor
8P75PH	1102.060.009	1102.700.067	Intermediate plate
8P75PH	1102.060.011	1102.700.034	Mechatronic
8P75PH	1102.060.011	1102.700.035	Mechatronic
8P75PH	1102.060.011	1102.700.113	Oil pan
8P75PH	1102.060.011	1102.700.021	Rotor position sensor
8P75PH	1102.060.011	1102.700.067	Intermediate plate
8P75PH	1102.060.012	1102.700.034	Mechatronic
8P75PH	1102.060.012	1102.700.035	Mechatronic
8P75PH	1102.060.012	1102.700.113	Oil pan
8P75PH	1102.060.012	1102.700.021	Rotor position sensor
8P75PH	1102.060.012	1102.700.067	Intermediate plate
8P75PH	1102.060.014	1102.700.167	Power connection
8P75PH	1102.060.014	1102.700.034	Mechatronic
8P75PH	1102.060.014	1102.700.035	Mechatronic
8P75PH	1102.060.014	1102.700.113	Oil pan
8P75PH	1102.060.014	1102.700.021	Rotor position sensor
8P75PH	1102.060.014	1102.700.067	Intermediate plate
8P75PH	1102.060.015	1102.700.034	Mechatronic
8P75PH	1102.060.015	1102.700.035	Mechatronic
8P75PH	1102.060.015	1102.700.113	Oil pan
8P75PH	1102.060.015	1102.700.021	Rotor position sensor
8P75PH	1102.060.015	1102.700.067	Intermediate plate
8P75PH	1102.060.016	1102.700.034	Mechatronic
8P75PH	1102.060.016	1102.700.035	Mechatronic
8P75PH	1102.060.016	1102.700.113	Oil pan
8P75PH	1102.060.016	1102.700.021	Rotor position sensor
8P75PH	1102.060.016	1102.700.067	Intermediate plate
8P75PH	1102.060.017	1102.700.167	Power connection
8P75PH	1102.060.017	1102.700.034	Mechatronic
8P75PH	1102.060.017	1102.700.035	Mechatronic
8P75PH	1102.060.017	1102.700.113	Oil pan
8P75PH	1102.060.017	1102.700.021	Rotor position sensor
8P75PH	1102.060.017	1102.700.067	Intermediate plate
8P75PH	1102.060.018	1102.700.167	Power connection
8P75PH	1102.060.018	1102.700.034	Mechatronic
8P75PH	1102.060.018	1102.700.035	Mechatronic
8P75PH	1102.060.018	1102.700.113	Oil pan
8P75PH	1102.060.018	1102.700.021	Rotor position sensor
8P75PH	1102.060.018	1102.700.067	Intermediate plate
8P75PH	1102.060.019	1102.700.167	Power connection
8P75PH	1102.060.020	1102.700.167	Power connection
8P75PH	1102.060.021	1102.700.167	Power connection
8P75PH	1102.060.021	1102.700.034	Mechatronic
8P75PH	1102.060.021	1102.700.035	Mechatronic
8P75PH	1102.060.021	1102.700.113	Oil pan
8P75PH	1102.060.021	1102.700.021	Rotor position sensor
8P75PH	1102.060.021	1102.700.067	Intermediate plate
8P75PH	1102.060.022	1102.700.167	Power connection



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
191/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75PH	1102.060.023	1102.700.167	Power connection
8P75PH	1102.060.024	1102.700.167	Power connection
8P75PH	1102.060.025	1102.700.167	Power connection
8P75PH	1102.060.028	1102.700.167	Power connection
8P75PH	1102.060.028	1102.700.034	Mechatronic
8P75PH	1102.060.028	1102.700.035	Mechatronic
8P75PH	1102.060.028	1102.700.113	Oil pan
8P75PH	1102.060.028	1102.700.021	Rotor position sensor
8P75PH	1102.060.028	1102.700.067	Intermediate plate
8P75PH	1102.060.029	1102.700.167	Power connection
8P75PH	1102.060.029	1102.700.034	Mechatronic
8P75PH	1102.060.029	1102.700.035	Mechatronic
8P75PH	1102.060.029	1102.700.113	Oil pan
8P75PH	1102.060.029	1102.700.021	Rotor position sensor
8P75PH	1102.060.029	1102.700.067	Intermediate plate
8P75PH	1102.060.030	1102.700.167	Power connection
8P75PH	1102.060.030	1102.700.034	Mechatronic
8P75PH	1102.060.030	1102.700.035	Mechatronic
8P75PH	1102.060.030	1102.700.113	Oil pan
8P75PH	1102.060.030	1102.700.021	Rotor position sensor
8P75PH	1102.060.030	1102.700.067	Intermediate plate
8P75PH	1102.060.031	1102.700.167	Power connection
8P75PH	1102.060.031	1102.700.034	Mechatronic
8P75PH	1102.060.031	1102.700.035	Mechatronic
8P75PH	1102.060.031	1102.700.113	Oil pan
8P75PH	1102.060.031	1102.700.021	Rotor position sensor
8P75PH	1102.060.031	1102.700.067	Intermediate plate
8P75PH	1102.060.032	1102.700.167	Power connection
8P75PH	1102.060.033	1102.700.167	Power connection
8P75PH	1102.060.033	1102.700.034	Mechatronic
8P75PH	1102.060.033	1102.700.035	Mechatronic
8P75PH	1102.060.033	1102.700.113	Oil pan
8P75PH	1102.060.033	1102.700.021	Rotor position sensor
8P75PH	1102.060.033	1102.700.067	Intermediate plate
8P75PH	1102.060.034	1102.700.167	Power connection
8P75PH	1102.060.034	1102.700.034	Mechatronic
8P75PH	1102.060.034	1102.700.035	Mechatronic
8P75PH	1102.060.034	1102.700.113	Oil pan
8P75PH	1102.060.034	1102.700.021	Rotor position sensor
8P75PH	1102.060.034	1102.700.067	Intermediate plate
8P75PH	1102.060.035	1102.700.167	Power connection
8P75PH	1102.060.035	1102.700.034	Mechatronic
8P75PH	1102.060.035	1102.700.035	Mechatronic
8P75PH	1102.060.035	1102.700.113	Oil pan
8P75PH	1102.060.035	1102.700.021	Rotor position sensor
8P75PH	1102.060.035	1102.700.067	Intermediate plate
8P75XPH	1102.074.001	1102.700.034	Mechatronic
8P75XPH	1102.074.001	1102.700.035	Mechatronic
8P75XPH	1102.074.001	1102.700.113	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75XPH	1102.074.001	1102.700.021	Rotor position sensor
8P75XPH	1102.074.001	1102.700.067	Intermediate plate
8P75XPH	1102.074.002	1102.700.034	Mechatronic
8P75XPH	1102.074.002	1102.700.035	Mechatronic
8P75XPH	1102.074.002	1102.700.113	Oil pan
8P75XPH	1102.074.002	1102.700.021	Rotor position sensor
8P75XPH	1102.074.002	1102.700.067	Intermediate plate
8P75XPH	1102.074.003	1102.700.034	Mechatronic
8P75XPH	1102.074.003	1102.700.035	Mechatronic
8P75XPH	1102.074.003	1102.700.113	Oil pan
8P75XPH	1102.074.003	1102.700.021	Rotor position sensor
8P75XPH	1102.074.003	1102.700.067	Intermediate plate
8P75XPH	1102.074.004	1102.700.167	Power connection
8P75XPH	1102.074.006	1102.700.034	Mechatronic
8P75XPH	1102.074.006	1102.700.035	Mechatronic
8P75XPH	1102.074.006	1102.700.113	Oil pan
8P75XPH	1102.074.006	1102.700.021	Rotor position sensor
8P75XPH	1102.074.006	1102.700.067	Intermediate plate
8P75XPH	1102.074.007	1102.700.034	Mechatronic
8P75XPH	1102.074.007	1102.700.035	Mechatronic
8P75XPH	1102.074.007	1102.700.113	Oil pan
8P75XPH	1102.074.007	1102.700.021	Rotor position sensor
8P75XPH	1102.074.007	1102.700.067	Intermediate plate
8P75XPH	1102.074.008	1102.700.167	Power connection
8P75XPH	1102.074.009	1102.700.034	Mechatronic
8P75XPH	1102.074.009	1102.700.035	Mechatronic
8P75XPH	1102.074.009	1102.700.113	Oil pan
8P75XPH	1102.074.009	1102.700.021	Rotor position sensor
8P75XPH	1102.074.009	1102.700.067	Intermediate plate
8P75XPH	1102.074.010	1102.700.167	Power connection
8P75XPH	1102.074.010	1102.700.034	Mechatronic
8P75XPH	1102.074.010	1102.700.035	Mechatronic
8P75XPH	1102.074.010	1102.700.113	Oil pan
8P75XPH	1102.074.010	1102.700.021	Rotor position sensor
8P75XPH	1102.074.010	1102.700.067	Intermediate plate
8P75XPH	1102.074.011	1102.700.167	Power connection
8P75XPH	1102.074.011	1102.700.034	Mechatronic
8P75XPH	1102.074.011	1102.700.035	Mechatronic
8P75XPH	1102.074.011	1102.700.113	Oil pan
8P75XPH	1102.074.011	1102.700.021	Rotor position sensor
8P75XPH	1102.074.011	1102.700.067	Intermediate plate
8P75XPH	1102.074.012	1102.700.167	Power connection
8P75XPH	1102.074.012	1102.700.034	Mechatronic
8P75XPH	1102.074.012	1102.700.035	Mechatronic
8P75XPH	1102.074.012	1102.700.192	Oil pan
8P75XPH	1102.074.012	1102.700.021	Rotor position sensor
8P75XPH	1102.074.012	1102.700.067	Intermediate plate
8P75XPH	1102.074.014	1102.700.167	Power connection
8P75XPH	1102.074.015	1102.700.167	Power connection



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75XPH	1102.074.015	1102.700.034	Mechatronic
8P75XPH	1102.074.015	1102.700.035	Mechatronic
8P75XPH	1102.074.015	1102.700.113	Oil pan
8P75XPH	1102.074.015	1102.700.021	Rotor position sensor
8P75XPH	1102.074.015	1102.700.067	Intermediate plate
8P75XPH	1102.074.016	1102.700.167	Power connection
8P75XPH	1102.074.017	1102.700.167	Power connection
8P75XPH	1102.074.018	1102.700.167	Power connection
8P75XPH	1102.074.019	1102.700.167	Power connection
8P75XPH	1102.074.022	1102.700.167	Power connection
8P75XPH	1102.074.023	1102.700.167	Power connection
8P75XPH	1102.074.023	1102.700.034	Mechatronic
8P75XPH	1102.074.023	1102.700.035	Mechatronic
8P75XPH	1102.074.023	1102.700.113	Oil pan
8P75XPH	1102.074.023	1102.700.021	Rotor position sensor
8P75XPH	1102.074.023	1102.700.067	Intermediate plate
8P75XPH	1102.074.024	1102.700.167	Power connection
8P75XPH	1102.074.024	1102.700.034	Mechatronic
8P75XPH	1102.074.024	1102.700.035	Mechatronic
8P75XPH	1102.074.024	1102.700.113	Oil pan
8P75XPH	1102.074.024	1102.700.021	Rotor position sensor
8P75XPH	1102.074.024	1102.700.067	Intermediate plate
8P75XPH	1102.074.025	1102.700.167	Power connection
8P75XPH	1102.074.026	1102.700.167	Power connection
8P75XPH	1102.074.027	1102.700.167	Power connection
8P75XPH	1102.074.029	1102.700.167	Power connection
8P75XPH	1102.074.029	1102.700.034	Mechatronic
8P75XPH	1102.074.029	1102.700.035	Mechatronic
8P75XPH	1102.074.029	1102.700.113	Oil pan
8P75XPH	1102.074.029	1102.700.021	Rotor position sensor
8P75XPH	1102.074.029	1102.700.067	Intermediate plate
8P75XPH	1102.074.031	1102.700.167	Power connection
8P75XPH	1102.074.032	1102.700.167	Power connection
8P75XPH	1102.074.033	1102.700.167	Power connection
8P75XPH	1102.074.034	1102.700.167	Power connection
8P75XPH	1102.074.035	1102.700.167	Power connection
8P75XPH	1102.074.036	1102.700.167	Power connection
8P75XPH	1102.074.039	1102.700.167	Power connection
8P75XPH	1102.074.040	1102.700.167	Power connection
8P75XPH	1102.074.041	1102.700.167	Power connection
8P75XPH	1102.074.042	1102.700.167	Power connection
8P75XPH	1102.074.042	1102.700.034	Mechatronic
8P75XPH	1102.074.042	1102.700.035	Mechatronic
8P75XPH	1102.074.042	1102.700.192	Oil pan
8P75XPH	1102.074.042	1102.700.021	Rotor position sensor
8P75XPH	1102.074.042	1102.700.067	Intermediate plate
8P75XPH	1102.074.043	1102.700.167	Power connection
8P75XPH	1102.074.043	1102.700.034	Mechatronic
8P75XPH	1102.074.043	1102.700.035	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75XPH	1102.074.043	1102.700.192	Oil pan
8P75XPH	1102.074.043	1102.700.021	Rotor position sensor
8P75XPH	1102.074.043	1102.700.067	Intermediate plate
8P75XPH	1102.074.044	1102.700.167	Power connection
8P75XPH	1102.074.045	1102.700.167	Power connection
8P75XPH	1102.074.045	1102.700.034	Mechatronic
8P75XPH	1102.074.045	1102.700.035	Mechatronic
8P75XPH	1102.074.045	1102.700.192	Oil pan
8P75XPH	1102.074.045	1102.700.021	Rotor position sensor
8P75XPH	1102.074.045	1102.700.067	Intermediate plate
8P75XPH	1102.074.050	1102.700.167	Power connection
8P75XPH	1102.074.051	1102.700.167	Power connection
8P75XPH	1102.074.051	1102.700.034	Mechatronic
8P75XPH	1102.074.051	1102.700.035	Mechatronic
8P75XPH	1102.074.051	1102.700.192	Oil pan
8P75XPH	1102.074.051	1102.700.021	Rotor position sensor
8P75XPH	1102.074.051	1102.700.067	Intermediate plate
8P75XPH	1102.074.052	1102.700.167	Power connection
8P75XPH	1102.074.052	1102.700.034	Mechatronic
8P75XPH	1102.074.052	1102.700.035	Mechatronic
8P75XPH	1102.074.052	1102.700.192	Oil pan
8P75XPH	1102.074.052	1102.700.021	Rotor position sensor
8P75XPH	1102.074.052	1102.700.067	Intermediate plate
8P75XPH	1102.074.053	1102.700.167	Power connection
8P75XPH	1102.074.053	1102.700.034	Mechatronic
8P75XPH	1102.074.053	1102.700.035	Mechatronic
8P75XPH	1102.074.053	1102.700.113	Oil pan
8P75XPH	1102.074.053	1102.700.021	Rotor position sensor
8P75XPH	1102.074.053	1102.700.067	Intermediate plate
8P75XPH	1102.074.054	1102.700.167	Power connection
8P75XPH	1102.074.055	1102.700.167	Power connection
8P75XPH	1102.074.055	1102.700.034	Mechatronic
8P75XPH	1102.074.055	1102.700.035	Mechatronic
8P75XPH	1102.074.055	1102.700.192	Oil pan
8P75XPH	1102.074.055	1102.700.021	Rotor position sensor
8P75XPH	1102.074.055	1102.700.067	Intermediate plate
8P75XPH	1102.074.056	1102.700.167	Power connection
8P75XPH	1102.074.056	1102.700.034	Mechatronic
8P75XPH	1102.074.056	1102.700.035	Mechatronic
8P75XPH	1102.074.056	1102.700.192	Oil pan
8P75XPH	1102.074.056	1102.700.021	Rotor position sensor
8P75XPH	1102.074.056	1102.700.067	Intermediate plate
8P75XPH	1102.074.057	1102.700.167	Power connection
8P75XPH	1102.074.058	1102.700.167	Power connection
8P75XPH	1102.074.058	1102.700.034	Mechatronic
8P75XPH	1102.074.058	1102.700.035	Mechatronic
8P75XPH	1102.074.058	1102.700.192	Oil pan
8P75XPH	1102.074.058	1102.700.021	Rotor position sensor
8P75XPH	1102.074.058	1102.700.067	Intermediate plate



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75XPH	1102.074.059	1102.700.167	Power connection
8P75XPH	1102.074.059	1102.700.034	Mechatronic
8P75XPH	1102.074.059	1102.700.035	Mechatronic
8P75XPH	1102.074.059	1102.700.192	Oil pan
8P75XPH	1102.074.059	1102.700.021	Rotor position sensor
8P75XPH	1102.074.059	1102.700.067	Intermediate plate
8P75XPH	1102.074.060	1102.700.167	Power connection
8P75XPH	1102.074.060	1102.700.034	Mechatronic
8P75XPH	1102.074.060	1102.700.035	Mechatronic
8P75XPH	1102.074.060	1102.700.192	Oil pan
8P75XPH	1102.074.060	1102.700.021	Rotor position sensor
8P75XPH	1102.074.060	1102.700.067	Intermediate plate
8P75XPH	1102.074.061	1102.700.167	Power connection
8P75XPH	1102.074.061	1102.700.034	Mechatronic
8P75XPH	1102.074.061	1102.700.035	Mechatronic
8P75XPH	1102.074.061	1102.700.113	Oil pan
8P75XPH	1102.074.061	1102.700.021	Rotor position sensor
8P75XPH	1102.074.061	1102.700.067	Intermediate plate
8P75XPH	1102.074.062	1102.700.167	Power connection
8P75XPH	1102.074.062	1102.700.034	Mechatronic
8P75XPH	1102.074.062	1102.700.035	Mechatronic
8P75XPH	1102.074.062	1102.700.113	Oil pan
8P75XPH	1102.074.062	1102.700.021	Rotor position sensor
8P75XPH	1102.074.062	1102.700.067	Intermediate plate
8P75XPH	1102.074.063	1102.700.167	Power connection
8P75XPH	1102.074.063	1102.700.034	Mechatronic
8P75XPH	1102.074.063	1102.700.035	Mechatronic
8P75XPH	1102.074.063	1102.700.192	Oil pan
8P75XPH	1102.074.063	1102.700.021	Rotor position sensor
8P75XPH	1102.074.063	1102.700.067	Intermediate plate
8P75XPH	1102.074.064	1102.700.167	Power connection
8P75XPH	1102.074.064	1102.700.034	Mechatronic
8P75XPH	1102.074.064	1102.700.035	Mechatronic
8P75XPH	1102.074.064	1102.700.192	Oil pan
8P75XPH	1102.074.064	1102.700.021	Rotor position sensor
8P75XPH	1102.074.064	1102.700.067	Intermediate plate
8P75XPH	1102.074.065	1102.700.167	Power connection
8P75XPH	1102.074.065	1102.700.034	Mechatronic
8P75XPH	1102.074.065	1102.700.035	Mechatronic
8P75XPH	1102.074.065	1102.700.192	Oil pan
8P75XPH	1102.074.065	1102.700.021	Rotor position sensor
8P75XPH	1102.074.065	1102.700.067	Intermediate plate
8P75XPH	1102.074.066	1102.700.167	Power connection
8P75XPH	1102.074.066	1102.700.034	Mechatronic
8P75XPH	1102.074.066	1102.700.035	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P75XPH	1102.074.066	1102.700.192	Oil pan
8P75XPH	1102.074.066	1102.700.021	Rotor position sensor
8P75XPH	1102.074.066	1102.700.067	Intermediate plate

Tab. 30 Model 1102



ZF Aftermarket

Service Information

22.7 Model 1103

Transmission type	Parts list (BoM)	Specification	Assembly
8HP66APH	1103.010.007	1104.700.054	Hybrid drive
8HP66APH	1103.010.007	1102.700.034	Mechatronic
8HP66APH	1103.010.007	1102.700.035	Mechatronic
8HP66APH	1103.010.007	1103.700.010	Oil pan
8HP66APH	1103.010.007	1103.700.097	Converter
8HP66APH	1103.010.007	1103.700.033	Intermediate housing
8HP66APH	1103.010.007	1102.700.067	Intermediate plate
8HP66APH	1103.010.008	1104.700.054	Hybrid drive
8HP66APH	1103.010.008	1102.700.034	Mechatronic
8HP66APH	1103.010.008	1102.700.035	Mechatronic
8HP66APH	1103.010.008	1103.700.010	Oil pan
8HP66APH	1103.010.008	1103.700.097	Converter
8HP66APH	1103.010.008	1103.700.033	Intermediate housing
8HP66APH	1103.010.008	1102.700.067	Intermediate plate
8HP66APH	1103.010.009	1104.700.054	Hybrid drive
8HP66APH	1103.010.009	1102.700.034	Mechatronic
8HP66APH	1103.010.009	1102.700.035	Mechatronic
8HP66APH	1103.010.009	1103.700.010	Oil pan
8HP66APH	1103.010.009	1103.700.097	Converter
8HP66APH	1103.010.009	1103.700.033	Intermediate housing
8HP66APH	1103.010.009	1102.700.067	Intermediate plate
8HP66APH	1103.010.010	1104.700.054	Hybrid drive
8HP66APH	1103.010.010	1102.700.034	Mechatronic
8HP66APH	1103.010.010	1102.700.035	Mechatronic
8HP66APH	1103.010.010	1103.700.010	Oil pan
8HP66APH	1103.010.010	1103.700.097	Converter
8HP66APH	1103.010.010	1103.700.033	Intermediate housing
8HP66APH	1103.010.010	1102.700.067	Intermediate plate
8HP66APH	1103.010.011	1104.700.054	Hybrid drive
8HP66APH	1103.010.011	1102.700.034	Mechatronic
8HP66APH	1103.010.011	1102.700.035	Mechatronic
8HP66APH	1103.010.011	1103.700.010	Oil pan
8HP66APH	1103.010.011	1103.700.097	Converter
8HP66APH	1103.010.011	1103.700.033	Intermediate housing
8HP66APH	1103.010.011	1102.700.067	Intermediate plate
8HP66APH	1103.010.012	1104.700.054	Hybrid drive
8HP66APH	1103.010.012	1102.700.034	Mechatronic
8HP66APH	1103.010.012	1102.700.035	Mechatronic
8HP66APH	1103.010.012	1103.700.010	Oil pan
8HP66APH	1103.010.012	1103.700.097	Converter
8HP66APH	1103.010.012	1103.700.033	Intermediate housing
8HP66APH	1103.010.012	1102.700.067	Intermediate plate
8HP66APH	1103.010.014	1104.700.054	Hybrid drive
8HP66APH	1103.010.014	1102.700.034	Mechatronic
8HP66APH	1103.010.014	1102.700.035	Mechatronic
8HP66APH	1103.010.014	1103.700.010	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
198/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP66APH	1103.010.014	1103.700.097	Converter
8HP66APH	1103.010.014	1103.700.033	Intermediate housing
8HP66APH	1103.010.014	1102.700.067	Intermediate plate
8HP66APH	1103.010.015	1104.700.054	Hybrid drive
8HP66APH	1103.010.015	1102.700.034	Mechatronic
8HP66APH	1103.010.015	1102.700.035	Mechatronic
8HP66APH	1103.010.015	1103.700.010	Oil pan
8HP66APH	1103.010.015	1103.700.097	Converter
8HP66APH	1103.010.015	1103.700.033	Intermediate housing
8HP66APH	1103.010.015	1102.700.067	Intermediate plate
8HP66APH	1103.010.016	1104.700.054	Hybrid drive
8HP66APH	1103.010.016	1103.700.097	Converter
8HP66APH	1103.010.017	1104.700.054	Hybrid drive
8HP66APH	1103.010.017	1103.700.097	Converter
8HP66APH	1103.010.018	1104.700.054	Hybrid drive
8HP66APH	1103.010.018	1102.700.034	Mechatronic
8HP66APH	1103.010.018	1102.700.035	Mechatronic
8HP66APH	1103.010.018	1103.700.010	Oil pan
8HP66APH	1103.010.018	1103.700.097	Converter
8HP66APH	1103.010.018	1103.700.033	Intermediate housing
8HP66APH	1103.010.018	1102.700.067	Intermediate plate
8HP66APH	1103.010.019	1104.700.054	Hybrid drive
8HP66APH	1103.010.019	1103.700.097	Converter
8HP66APH	1103.010.020	1104.700.054	Hybrid drive
8HP66APH	1103.010.020	1102.700.034	Mechatronic
8HP66APH	1103.010.020	1102.700.035	Mechatronic
8HP66APH	1103.010.020	1103.700.010	Oil pan
8HP66APH	1103.010.020	1103.700.097	Converter
8HP66APH	1103.010.020	1103.700.033	Intermediate housing
8HP66APH	1103.010.020	1102.700.067	Intermediate plate
8HP66APH	1103.010.021	1104.700.054	Hybrid drive
8HP66APH	1103.010.021	1102.700.034	Mechatronic
8HP66APH	1103.010.021	1103.700.010	Oil pan
8HP66APH	1103.010.021	1103.700.097	Converter
8HP66APH	1103.010.021	1103.700.033	Intermediate housing
8HP66APH	1103.010.021	1102.700.067	Intermediate plate
8HP66APH	1103.010.022	1104.700.054	Hybrid drive
8HP66APH	1103.010.022	1102.700.034	Mechatronic
8HP66APH	1103.010.022	1103.700.010	Oil pan
8HP66APH	1103.010.022	1103.700.097	Converter
8HP66APH	1103.010.022	1103.700.033	Intermediate housing
8HP66APH	1103.010.022	1102.700.067	Intermediate plate
8HP66APH	1103.010.023	1104.700.054	Hybrid drive
8HP66APH	1103.010.023	1102.700.034	Mechatronic
8HP66APH	1103.010.023	1102.700.035	Mechatronic
8HP66APH	1103.010.023	1103.700.010	Oil pan
8HP66APH	1103.010.023	1103.700.097	Converter
8HP66APH	1103.010.023	1103.700.033	Intermediate housing
8HP66APH	1103.010.023	1102.700.067	Intermediate plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
199/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP66APH	1103.010.024	1104.700.054	Hybrid drive
8HP66APH	1103.010.024	1102.700.034	Mechatronic
8HP66APH	1103.010.024	1102.700.035	Mechatronic
8HP66APH	1103.010.024	1103.700.010	Oil pan
8HP66APH	1103.010.024	1103.700.097	Converter
8HP66APH	1103.010.024	1103.700.033	Intermediate housing
8HP66APH	1103.010.024	1102.700.067	Intermediate plate
8HP66APH	1103.010.025	1104.700.054	Hybrid drive
8HP66APH	1103.010.025	1102.700.034	Mechatronic
8HP66APH	1103.010.025	1102.700.035	Mechatronic
8HP66APH	1103.010.025	1103.700.010	Oil pan
8HP66APH	1103.010.025	1103.700.097	Converter
8HP66APH	1103.010.025	1103.700.033	Intermediate housing
8HP66APH	1103.010.025	1102.700.067	Intermediate plate
8HP66APH	1103.010.026	1104.700.054	Hybrid drive
8HP66APH	1103.010.026	1102.700.034	Mechatronic
8HP66APH	1103.010.026	1103.700.010	Oil pan
8HP66APH	1103.010.026	1103.700.097	Converter
8HP66APH	1103.010.026	1103.700.033	Intermediate housing
8HP66APH	1103.010.026	1102.700.067	Intermediate plate
8HP66APH	1103.010.027	1104.700.054	Hybrid drive
8HP66APH	1103.010.027	1102.700.034	Mechatronic
8HP66APH	1103.010.027	1103.700.010	Oil pan
8HP66APH	1103.010.027	1103.700.097	Converter
8HP66APH	1103.010.027	1103.700.033	Intermediate housing
8HP66APH	1103.010.027	1102.700.067	Intermediate plate
8HP66APH	1103.010.028	1104.700.054	Hybrid drive
8HP66APH	1103.010.028	1102.700.034	Mechatronic
8HP66APH	1103.010.028	1103.700.010	Oil pan
8HP66APH	1103.010.028	1103.700.097	Converter
8HP66APH	1103.010.028	1103.700.033	Intermediate housing
8HP66APH	1103.010.028	1102.700.067	Intermediate plate
8HP66APH	1103.010.029	1104.700.054	Hybrid drive
8HP66APH	1103.010.029	1102.700.034	Mechatronic
8HP66APH	1103.010.029	1102.700.035	Mechatronic
8HP66APH	1103.010.029	1103.700.010	Oil pan
8HP66APH	1103.010.029	1103.700.097	Converter
8HP66APH	1103.010.029	1103.700.033	Intermediate housing
8HP66APH	1103.010.029	1102.700.067	Intermediate plate
8HP66APH	1103.010.030	1104.700.054	Hybrid drive
8HP66APH	1103.010.030	1102.700.034	Mechatronic
8HP66APH	1103.010.030	1102.700.035	Mechatronic
8HP66APH	1103.010.030	1103.700.010	Oil pan
8HP66APH	1103.010.030	1103.700.097	Converter
8HP66APH	1103.010.030	1103.700.033	Intermediate housing
8HP66APH	1103.010.030	1102.700.067	Intermediate plate
8HP65A	1103.020.001	1102.700.034	Mechatronic
8HP65A	1103.020.001	1102.700.035	Mechatronic
8HP65A	1103.020.001	1103.700.010	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
200/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.020.001	1104.700.039	Converter bell
8HP65A	1103.020.001	1102.700.067	Intermediate plate
8HP65A	1103.020.002	1102.700.034	Mechatronic
8HP65A	1103.020.002	1102.700.035	Mechatronic
8HP65A	1103.020.002	1103.700.010	Oil pan
8HP65A	1103.020.002	1104.700.039	Converter bell
8HP65A	1103.020.002	1102.700.067	Intermediate plate
8HP65A	1103.020.003	1102.700.034	Mechatronic
8HP65A	1103.020.003	1102.700.035	Mechatronic
8HP65A	1103.020.003	1103.700.010	Oil pan
8HP65A	1103.020.003	1104.700.039	Converter bell
8HP65A	1103.020.003	1102.700.067	Intermediate plate
8HP65A	1103.020.004	1102.700.034	Mechatronic
8HP65A	1103.020.004	1102.700.035	Mechatronic
8HP65A	1103.020.004	1103.700.010	Oil pan
8HP65A	1103.020.004	1104.700.039	Converter bell
8HP65A	1103.020.004	1102.700.067	Intermediate plate
8HP65A	1103.020.005	1102.700.034	Mechatronic
8HP65A	1103.020.005	1102.700.035	Mechatronic
8HP65A	1103.020.005	1103.700.010	Oil pan
8HP65A	1103.020.005	1104.700.039	Converter bell
8HP65A	1103.020.005	1102.700.067	Intermediate plate
8HP65A	1103.020.006	1102.700.034	Mechatronic
8HP65A	1103.020.006	1102.700.035	Mechatronic
8HP65A	1103.020.006	1103.700.010	Oil pan
8HP65A	1103.020.006	1104.700.039	Converter bell
8HP65A	1103.020.006	1102.700.067	Intermediate plate
8HP65A	1103.020.008	1102.700.034	Mechatronic
8HP65A	1103.020.008	1102.700.035	Mechatronic
8HP65A	1103.020.008	1103.700.010	Oil pan
8HP65A	1103.020.008	1104.700.039	Converter bell
8HP65A	1103.020.008	1102.700.067	Intermediate plate
8HP65A	1103.020.009	1102.700.034	Mechatronic
8HP65A	1103.020.009	1102.700.035	Mechatronic
8HP65A	1103.020.009	1103.700.010	Oil pan
8HP65A	1103.020.009	1104.700.039	Converter bell
8HP65A	1103.020.009	1102.700.067	Intermediate plate
8HP65APH	1103.030.008	1102.700.034	Mechatronic
8HP65APH	1103.030.008	1102.700.035	Mechatronic
8HP65APH	1103.030.008	1103.700.010	Oil pan
8HP65APH	1103.030.008	1103.700.097	Converter
8HP65APH	1103.030.008	1103.700.033	Intermediate housing
8HP65APH	1103.030.008	1102.700.067	Intermediate plate
8HP65APH	1103.030.010	1104.700.054	Hybrid drive
8HP65APH	1103.030.010	1102.700.034	Mechatronic
8HP65APH	1103.030.010	1102.700.035	Mechatronic
8HP65APH	1103.030.010	1103.700.010	Oil pan
8HP65APH	1103.030.010	1103.700.097	Converter
8HP65APH	1103.030.010	1103.700.033	Intermediate housing



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
201/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65APH	1103.030.010	1102.700.067	Intermediate plate
8HP65APH	1103.030.011	1103.700.097	Converter
8HP65APH	1103.030.012	1102.700.034	Mechatronic
8HP65APH	1103.030.012	1102.700.035	Mechatronic
8HP65APH	1103.030.012	1103.700.010	Oil pan
8HP65APH	1103.030.012	1103.700.097	Converter
8HP65APH	1103.030.012	1103.700.033	Intermediate housing
8HP65APH	1103.030.012	1102.700.067	Intermediate plate
8HP65APH	1103.030.013	1104.700.054	Hybrid drive
8HP65APH	1103.030.013	1102.700.034	Mechatronic
8HP65APH	1103.030.013	1102.700.035	Mechatronic
8HP65APH	1103.030.013	1103.700.010	Oil pan
8HP65APH	1103.030.013	1103.700.097	Converter
8HP65APH	1103.030.013	1103.700.033	Intermediate housing
8HP65APH	1103.030.013	1102.700.067	Intermediate plate
8HP65APH	1103.030.014	1104.700.054	Hybrid drive
8HP65APH	1103.030.014	1102.700.034	Mechatronic
8HP65APH	1103.030.014	1102.700.035	Mechatronic
8HP65APH	1103.030.014	1103.700.010	Oil pan
8HP65APH	1103.030.014	1103.700.097	Converter
8HP65APH	1103.030.014	1103.700.033	Intermediate housing
8HP65APH	1103.030.014	1102.700.067	Intermediate plate
8HP65APH	1103.030.015	1103.700.097	Converter
8HP65APH	1103.030.016	1102.700.034	Mechatronic
8HP65APH	1103.030.016	1102.700.035	Mechatronic
8HP65APH	1103.030.016	1103.700.010	Oil pan
8HP65APH	1103.030.016	1103.700.097	Converter
8HP65APH	1103.030.016	1103.700.033	Intermediate housing
8HP65APH	1103.030.016	1102.700.067	Intermediate plate
8HP65APH	1103.030.018	1102.700.034	Mechatronic
8HP65APH	1103.030.018	1102.700.035	Mechatronic
8HP65APH	1103.030.018	1103.700.010	Oil pan
8HP65APH	1103.030.018	1103.700.097	Converter
8HP65APH	1103.030.018	1103.700.033	Intermediate housing
8HP65APH	1103.030.018	1102.700.067	Intermediate plate
8HP65APH	1103.030.019	1103.700.097	Converter
8HP65APH	1103.030.020	1104.700.054	Hybrid drive
8HP65APH	1103.030.020	1102.700.034	Mechatronic
8HP65APH	1103.030.020	1102.700.035	Mechatronic
8HP65APH	1103.030.020	1103.700.010	Oil pan
8HP65APH	1103.030.020	1103.700.097	Converter
8HP65APH	1103.030.020	1103.700.033	Intermediate housing
8HP65APH	1103.030.020	1102.700.067	Intermediate plate
8HP65APH	1103.030.021	1102.700.034	Mechatronic
8HP65APH	1103.030.021	1102.700.035	Mechatronic
8HP65APH	1103.030.021	1103.700.010	Oil pan
8HP65APH	1103.030.021	1103.700.097	Converter
8HP65APH	1103.030.021	1103.700.033	Intermediate housing
8HP65APH	1103.030.021	1102.700.067	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65APH	1103.030.024	1102.700.034	Mechatronic
8HP65APH	1103.030.024	1102.700.035	Mechatronic
8HP65APH	1103.030.024	1103.700.010	Oil pan
8HP65APH	1103.030.024	1103.700.097	Converter
8HP65APH	1103.030.024	1103.700.033	Intermediate housing
8HP65APH	1103.030.024	1102.700.067	Intermediate plate
8HP65APH	1103.030.025	1104.700.054	Hybrid drive
8HP65APH	1103.030.025	1102.700.034	Mechatronic
8HP65APH	1103.030.025	1102.700.035	Mechatronic
8HP65APH	1103.030.025	1103.700.010	Oil pan
8HP65APH	1103.030.025	1103.700.097	Converter
8HP65APH	1103.030.025	1103.700.033	Intermediate housing
8HP65APH	1103.030.025	1102.700.067	Intermediate plate
8HP65APH	1103.030.027	1104.700.054	Hybrid drive
8HP65APH	1103.030.027	1103.700.097	Converter
8HP65APH	1103.030.028	1104.700.054	Hybrid drive
8HP65APH	1103.030.028	1102.700.034	Mechatronic
8HP65APH	1103.030.028	1102.700.035	Mechatronic
8HP65APH	1103.030.028	1103.700.010	Oil pan
8HP65APH	1103.030.028	1103.700.097	Converter
8HP65APH	1103.030.028	1103.700.033	Intermediate housing
8HP65APH	1103.030.028	1102.700.067	Intermediate plate
8HP65APH	1103.030.029	1104.700.054	Hybrid drive
8HP65APH	1103.030.029	1102.700.034	Mechatronic
8HP65APH	1103.030.029	1102.700.035	Mechatronic
8HP65APH	1103.030.029	1103.700.010	Oil pan
8HP65APH	1103.030.029	1103.700.097	Converter
8HP65APH	1103.030.029	1103.700.033	Intermediate housing
8HP65APH	1103.030.029	1102.700.067	Intermediate plate
8HP65APH	1103.030.030	1104.700.054	Hybrid drive
8HP65APH	1103.030.030	1102.700.034	Mechatronic
8HP65APH	1103.030.030	1102.700.035	Mechatronic
8HP65APH	1103.030.030	1103.700.010	Oil pan
8HP65APH	1103.030.030	1103.700.097	Converter
8HP65APH	1103.030.030	1103.700.033	Intermediate housing
8HP65APH	1103.030.030	1102.700.067	Intermediate plate
8HP65APH	1103.030.031	1103.700.097	Converter
8HP65APH	1103.030.032	1104.700.054	Hybrid drive
8HP65APH	1103.030.032	1102.700.034	Mechatronic
8HP65APH	1103.030.032	1102.700.035	Mechatronic
8HP65APH	1103.030.032	1103.700.010	Oil pan
8HP65APH	1103.030.032	1103.700.097	Converter
8HP65APH	1103.030.032	1103.700.033	Intermediate housing
8HP65APH	1103.030.032	1102.700.067	Intermediate plate
8HP65APH	1103.030.033	1104.700.054	Hybrid drive
8HP65APH	1103.030.033	1102.700.034	Mechatronic
8HP65APH	1103.030.033	1102.700.035	Mechatronic
8HP65APH	1103.030.033	1103.700.010	Oil pan
8HP65APH	1103.030.033	1103.700.097	Converter



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65APH	1103.030.033	1103.700.033	Intermediate housing
8HP65APH	1103.030.033	1102.700.067	Intermediate plate
8HP65APH	1103.030.034	1104.700.054	Hybrid drive
8HP65APH	1103.030.034	1102.700.034	Mechatronic
8HP65APH	1103.030.034	1102.700.035	Mechatronic
8HP65APH	1103.030.034	1103.700.010	Oil pan
8HP65APH	1103.030.034	1103.700.097	Converter
8HP65APH	1103.030.034	1103.700.033	Intermediate housing
8HP65APH	1103.030.034	1102.700.067	Intermediate plate
8HP65APH	1103.030.035	1104.700.054	Hybrid drive
8HP65APH	1103.030.035	1102.700.034	Mechatronic
8HP65APH	1103.030.035	1102.700.035	Mechatronic
8HP65APH	1103.030.035	1103.700.097	Converter
8HP65APH	1103.030.036	1104.700.054	Hybrid drive
8HP65APH	1103.030.036	1102.700.034	Mechatronic
8HP65APH	1103.030.036	1102.700.035	Mechatronic
8HP65APH	1103.030.036	1103.700.010	Oil pan
8HP65APH	1103.030.036	1103.700.097	Converter
8HP65APH	1103.030.036	1103.700.033	Intermediate housing
8HP65APH	1103.030.036	1102.700.067	Intermediate plate
8HP65APH	1103.030.037	1104.700.054	Hybrid drive
8HP65APH	1103.030.037	1102.700.034	Mechatronic
8HP65APH	1103.030.037	1102.700.035	Mechatronic
8HP65APH	1103.030.037	1103.700.010	Oil pan
8HP65APH	1103.030.037	1103.700.097	Converter
8HP65APH	1103.030.037	1103.700.033	Intermediate housing
8HP65APH	1103.030.037	1102.700.067	Intermediate plate
8HP65APH	1103.030.038	1104.700.054	Hybrid drive
8HP65APH	1103.030.038	1103.700.097	Converter
8HP65APH	1103.030.039	1104.700.054	Hybrid drive
8HP65APH	1103.030.039	1103.700.097	Converter
8HP65APH	1103.030.040	1104.700.054	Hybrid drive
8HP65APH	1103.030.040	1102.700.034	Mechatronic
8HP65APH	1103.030.040	1102.700.035	Mechatronic
8HP65APH	1103.030.040	1103.700.010	Oil pan
8HP65APH	1103.030.040	1103.700.097	Converter
8HP65APH	1103.030.040	1103.700.033	Intermediate housing
8HP65APH	1103.030.040	1102.700.067	Intermediate plate
8HP65APH	1103.030.041	1104.700.054	Hybrid drive
8HP65APH	1103.030.041	1102.700.034	Mechatronic
8HP65APH	1103.030.041	1102.700.035	Mechatronic
8HP65APH	1103.030.041	1103.700.010	Oil pan
8HP65APH	1103.030.041	1103.700.097	Converter
8HP65APH	1103.030.041	1103.700.033	Intermediate housing
8HP65APH	1103.030.041	1102.700.067	Intermediate plate
8HP65APH	1103.030.042	1104.700.054	Hybrid drive
8HP65APH	1103.030.042	1103.700.097	Converter
8HP65APH	1103.030.043	1104.700.054	Hybrid drive
8HP65APH	1103.030.043	1103.700.097	Converter



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
204/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65APH	1103.030.044	1104.700.054	Hybrid drive
8HP65APH	1103.030.044	1102.700.034	Mechatronic
8HP65APH	1103.030.044	1102.700.035	Mechatronic
8HP65APH	1103.030.044	1103.700.010	Oil pan
8HP65APH	1103.030.044	1103.700.097	Converter
8HP65APH	1103.030.044	1103.700.033	Intermediate housing
8HP65APH	1103.030.044	1102.700.067	Intermediate plate
8HP65APH	1103.030.045	1104.700.054	Hybrid drive
8HP65APH	1103.030.045	1103.700.097	Converter
8HP65APH	1103.030.046	1104.700.054	Hybrid drive
8HP65APH	1103.030.046	1102.700.034	Mechatronic
8HP65APH	1103.030.046	1102.700.035	Mechatronic
8HP65APH	1103.030.046	1103.700.010	Oil pan
8HP65APH	1103.030.046	1103.700.097	Converter
8HP65APH	1103.030.046	1103.700.033	Intermediate housing
8HP65APH	1103.030.046	1102.700.067	Intermediate plate
8HP65APH	1103.030.047	1104.700.054	Hybrid drive
8HP65APH	1103.030.047	1102.700.034	Mechatronic
8HP65APH	1103.030.047	1102.700.035	Mechatronic
8HP65APH	1103.030.047	1103.700.010	Oil pan
8HP65APH	1103.030.047	1103.700.097	Converter
8HP65APH	1103.030.047	1103.700.033	Intermediate housing
8HP65APH	1103.030.047	1102.700.067	Intermediate plate
8HP65APH	1103.030.051	1102.700.034	Mechatronic
8HP65APH	1103.030.051	1102.700.035	Mechatronic
8HP65APH	1103.030.051	1103.700.010	Oil pan
8HP65APH	1103.030.051	1103.700.097	Converter
8HP65APH	1103.030.051	1103.700.033	Intermediate housing
8HP65APH	1103.030.051	1102.700.067	Intermediate plate
8HP65APH	1103.030.052	1104.700.054	Hybrid drive
8HP65APH	1103.030.052	1102.700.034	Mechatronic
8HP65APH	1103.030.052	1102.700.035	Mechatronic
8HP65APH	1103.030.052	1103.700.010	Oil pan
8HP65APH	1103.030.052	1103.700.097	Converter
8HP65APH	1103.030.052	1103.700.033	Intermediate housing
8HP65APH	1103.030.052	1102.700.067	Intermediate plate
8HP65APH	1103.030.053	1104.700.054	Hybrid drive
8HP65APH	1103.030.053	1102.700.034	Mechatronic
8HP65APH	1103.030.053	1102.700.035	Mechatronic
8HP65APH	1103.030.053	1103.700.010	Oil pan
8HP65APH	1103.030.053	1103.700.097	Converter
8HP65APH	1103.030.053	1103.700.033	Intermediate housing
8HP65APH	1103.030.053	1102.700.067	Intermediate plate
8HP65APH	1103.030.054	1104.700.054	Hybrid drive
8HP65APH	1103.030.054	1102.700.034	Mechatronic
8HP65APH	1103.030.054	1102.700.035	Mechatronic
8HP65APH	1103.030.054	1103.700.010	Oil pan
8HP65APH	1103.030.054	1103.700.097	Converter
8HP65APH	1103.030.054	1103.700.033	Intermediate housing



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
205/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65APH	1103.030.054	1102.700.067	Intermediate plate
8HP65APH	1103.030.055	1104.700.054	Hybrid drive
8HP65APH	1103.030.055	1102.700.034	Mechatronic
8HP65APH	1103.030.055	1102.700.035	Mechatronic
8HP65APH	1103.030.055	1103.700.010	Oil pan
8HP65APH	1103.030.055	1103.700.097	Converter
8HP65APH	1103.030.055	1103.700.033	Intermediate housing
8HP65APH	1103.030.055	1102.700.067	Intermediate plate
8HP65APH	1103.030.056	1104.700.054	Hybrid drive
8HP65APH	1103.030.056	1102.700.034	Mechatronic
8HP65APH	1103.030.056	1102.700.035	Mechatronic
8HP65APH	1103.030.056	1103.700.010	Oil pan
8HP65APH	1103.030.056	1103.700.097	Converter
8HP65APH	1103.030.056	1103.700.033	Intermediate housing
8HP65APH	1103.030.056	1102.700.067	Intermediate plate
8HP65APH	1103.030.057	1104.700.054	Hybrid drive
8HP65APH	1103.030.057	1102.700.034	Mechatronic
8HP65APH	1103.030.057	1103.700.010	Oil pan
8HP65APH	1103.030.057	1103.700.097	Converter
8HP65APH	1103.030.057	1103.700.033	Intermediate housing
8HP65APH	1103.030.057	1102.700.067	Intermediate plate
8HP65APH	1103.030.058	1102.700.034	Mechatronic
8HP65APH	1103.030.058	1103.700.010	Oil pan
8HP65APH	1103.030.058	1103.700.033	Intermediate housing
8HP65APH	1103.030.058	1102.700.067	Intermediate plate
8HP65APH	1103.030.059	1104.700.054	Hybrid drive
8HP65APH	1103.030.059	1102.700.034	Mechatronic
8HP65APH	1103.030.059	1102.700.035	Mechatronic
8HP65APH	1103.030.059	1103.700.010	Oil pan
8HP65APH	1103.030.059	1103.700.097	Converter
8HP65APH	1103.030.059	1103.700.033	Intermediate housing
8HP65APH	1103.030.059	1102.700.067	Intermediate plate
8HP65APH	1103.030.060	1104.700.054	Hybrid drive
8HP65APH	1103.030.060	1102.700.034	Mechatronic
8HP65APH	1103.030.060	1102.700.035	Mechatronic
8HP65APH	1103.030.060	1103.700.010	Oil pan
8HP65APH	1103.030.060	1103.700.097	Converter
8HP65APH	1103.030.060	1103.700.033	Intermediate housing
8HP65APH	1103.030.060	1102.700.067	Intermediate plate
8HP65APH	1103.030.061	1102.700.034	Mechatronic
8HP65APH	1103.030.061	1102.700.035	Mechatronic
8HP65APH	1103.030.061	1103.700.010	Oil pan
8HP65APH	1103.030.061	1103.700.097	Converter
8HP65APH	1103.030.061	1103.700.033	Intermediate housing
8HP65APH	1103.030.061	1102.700.067	Intermediate plate
8HP65APH	1103.030.062	1104.700.054	Hybrid drive
8HP65APH	1103.030.062	1102.700.034	Mechatronic
8HP65APH	1103.030.062	1102.700.035	Mechatronic
8HP65APH	1103.030.062	1103.700.010	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65APH	1103.030.062	1103.700.097	Converter
8HP65APH	1103.030.062	1103.700.033	Intermediate housing
8HP65APH	1103.030.062	1102.700.067	Intermediate plate
8HP65APH	1103.030.063	1104.700.054	Hybrid drive
8HP65APH	1103.030.063	1102.700.034	Mechatronic
8HP65APH	1103.030.063	1102.700.035	Mechatronic
8HP65APH	1103.030.063	1103.700.010	Oil pan
8HP65APH	1103.030.063	1103.700.097	Converter
8HP65APH	1103.030.063	1103.700.033	Intermediate housing
8HP65APH	1103.030.063	1102.700.067	Intermediate plate
8HP65APH	1103.030.064	1104.700.054	Hybrid drive
8HP65APH	1103.030.064	1102.700.034	Mechatronic
8HP65APH	1103.030.064	1102.700.035	Mechatronic
8HP65APH	1103.030.064	1103.700.010	Oil pan
8HP65APH	1103.030.064	1103.700.097	Converter
8HP65APH	1103.030.064	1103.700.033	Intermediate housing
8HP65APH	1103.030.064	1102.700.067	Intermediate plate
8HP65A	1103.034.006	1102.700.034	Mechatronic
8HP65A	1103.034.006	1102.700.035	Mechatronic
8HP65A	1103.034.006	1103.700.010	Oil pan
8HP65A	1103.034.006	1104.700.039	Converter bell
8HP65A	1103.034.006	1102.700.067	Intermediate plate
8HP65A	1103.034.007	1102.700.034	Mechatronic
8HP65A	1103.034.007	1102.700.035	Mechatronic
8HP65A	1103.034.007	1103.700.010	Oil pan
8HP65A	1103.034.007	1104.700.039	Converter bell
8HP65A	1103.034.007	1102.700.067	Intermediate plate
8HP65A	1103.034.009	1102.700.034	Mechatronic
8HP65A	1103.034.009	1102.700.035	Mechatronic
8HP65A	1103.034.009	1103.700.010	Oil pan
8HP65A	1103.034.009	1104.700.039	Converter bell
8HP65A	1103.034.009	1102.700.067	Intermediate plate
8HP65A	1103.034.010	1102.700.034	Mechatronic
8HP65A	1103.034.010	1102.700.035	Mechatronic
8HP65A	1103.034.010	1103.700.010	Oil pan
8HP65A	1103.034.010	1104.700.039	Converter bell
8HP65A	1103.034.010	1102.700.067	Intermediate plate
8HP65A	1103.034.011	1102.700.034	Mechatronic
8HP65A	1103.034.011	1102.700.035	Mechatronic
8HP65A	1103.034.011	1103.700.010	Oil pan
8HP65A	1103.034.011	1104.700.039	Converter bell
8HP65A	1103.034.011	1102.700.067	Intermediate plate
8HP65A	1103.034.012	1102.700.034	Mechatronic
8HP65A	1103.034.012	1102.700.035	Mechatronic
8HP65A	1103.034.012	1103.700.010	Oil pan
8HP65A	1103.034.012	1104.700.039	Converter bell
8HP65A	1103.034.012	1102.700.067	Intermediate plate
8HP65A	1103.034.014	1087.700.079	Mechatronic
8HP65A	1103.034.014	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.014	1103.700.010	Oil pan
8HP65A	1103.034.014	1104.700.039	Converter bell
8HP65A	1103.034.014	1102.700.067	Intermediate plate
8HP65A	1103.034.016	1102.700.034	Mechatronic
8HP65A	1103.034.016	1102.700.035	Mechatronic
8HP65A	1103.034.016	1103.700.010	Oil pan
8HP65A	1103.034.016	1104.700.039	Converter bell
8HP65A	1103.034.016	1102.700.067	Intermediate plate
8HP65A	1103.034.017	1102.700.034	Mechatronic
8HP65A	1103.034.017	1102.700.035	Mechatronic
8HP65A	1103.034.017	1103.700.010	Oil pan
8HP65A	1103.034.017	1104.700.039	Converter bell
8HP65A	1103.034.017	1102.700.067	Intermediate plate
8HP65A	1103.034.023	1102.700.034	Mechatronic
8HP65A	1103.034.023	1102.700.035	Mechatronic
8HP65A	1103.034.023	1103.700.010	Oil pan
8HP65A	1103.034.023	1104.700.039	Converter bell
8HP65A	1103.034.023	1102.700.067	Intermediate plate
8HP65A	1103.034.024	1102.700.034	Mechatronic
8HP65A	1103.034.024	1102.700.035	Mechatronic
8HP65A	1103.034.024	1103.700.010	Oil pan
8HP65A	1103.034.024	1104.700.039	Converter bell
8HP65A	1103.034.024	1102.700.067	Intermediate plate
8HP65A	1103.034.025	1102.700.034	Mechatronic
8HP65A	1103.034.025	1102.700.035	Mechatronic
8HP65A	1103.034.025	1103.700.010	Oil pan
8HP65A	1103.034.025	1104.700.039	Converter bell
8HP65A	1103.034.025	1102.700.067	Intermediate plate
8HP65A	1103.034.027	1102.700.034	Mechatronic
8HP65A	1103.034.027	1102.700.035	Mechatronic
8HP65A	1103.034.027	1103.700.010	Oil pan
8HP65A	1103.034.027	1104.700.039	Converter bell
8HP65A	1103.034.027	1102.700.067	Intermediate plate
8HP65A	1103.034.028	1102.700.034	Mechatronic
8HP65A	1103.034.028	1102.700.035	Mechatronic
8HP65A	1103.034.028	1103.700.010	Oil pan
8HP65A	1103.034.028	1104.700.039	Converter bell
8HP65A	1103.034.028	1102.700.067	Intermediate plate
8HP65A	1103.034.029	1102.700.034	Mechatronic
8HP65A	1103.034.029	1102.700.035	Mechatronic
8HP65A	1103.034.029	1103.700.010	Oil pan
8HP65A	1103.034.029	1104.700.039	Converter bell
8HP65A	1103.034.029	1102.700.067	Intermediate plate
8HP65A	1103.034.033	1102.700.034	Mechatronic
8HP65A	1103.034.033	1102.700.035	Mechatronic
8HP65A	1103.034.033	1103.700.010	Oil pan
8HP65A	1103.034.033	1104.700.039	Converter bell
8HP65A	1103.034.033	1102.700.067	Intermediate plate
8HP65A	1103.034.034	1087.700.079	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.034	1102.700.034	Mechatronic
8HP65A	1103.034.034	1103.700.010	Oil pan
8HP65A	1103.034.034	1104.700.039	Converter bell
8HP65A	1103.034.034	1102.700.067	Intermediate plate
8HP65A	1103.034.039	1102.700.034	Mechatronic
8HP65A	1103.034.039	1102.700.035	Mechatronic
8HP65A	1103.034.039	1103.700.010	Oil pan
8HP65A	1103.034.039	1104.700.039	Converter bell
8HP65A	1103.034.039	1102.700.067	Intermediate plate
8HP65A	1103.034.040	1102.700.034	Mechatronic
8HP65A	1103.034.040	1102.700.035	Mechatronic
8HP65A	1103.034.040	1103.700.010	Oil pan
8HP65A	1103.034.040	1104.700.039	Converter bell
8HP65A	1103.034.040	1102.700.067	Intermediate plate
8HP65A	1103.034.046	1102.700.034	Mechatronic
8HP65A	1103.034.046	1102.700.035	Mechatronic
8HP65A	1103.034.046	1103.700.010	Oil pan
8HP65A	1103.034.046	1104.700.039	Converter bell
8HP65A	1103.034.046	1102.700.067	Intermediate plate
8HP65A	1103.034.047	1102.700.034	Mechatronic
8HP65A	1103.034.047	1102.700.035	Mechatronic
8HP65A	1103.034.047	1103.700.010	Oil pan
8HP65A	1103.034.047	1104.700.039	Converter bell
8HP65A	1103.034.047	1102.700.067	Intermediate plate
8HP65A	1103.034.058	1102.700.034	Mechatronic
8HP65A	1103.034.058	1102.700.035	Mechatronic
8HP65A	1103.034.058	1103.700.010	Oil pan
8HP65A	1103.034.058	1104.700.039	Converter bell
8HP65A	1103.034.058	1102.700.067	Intermediate plate
8HP65A	1103.034.060	1102.700.034	Mechatronic
8HP65A	1103.034.060	1102.700.035	Mechatronic
8HP65A	1103.034.060	1103.700.010	Oil pan
8HP65A	1103.034.060	1104.700.039	Converter bell
8HP65A	1103.034.060	1102.700.067	Intermediate plate
8HP65A	1103.034.061	1102.700.034	Mechatronic
8HP65A	1103.034.061	1102.700.035	Mechatronic
8HP65A	1103.034.061	1103.700.010	Oil pan
8HP65A	1103.034.061	1104.700.039	Converter bell
8HP65A	1103.034.061	1102.700.067	Intermediate plate
8HP65A	1103.034.062	1102.700.034	Mechatronic
8HP65A	1103.034.062	1102.700.035	Mechatronic
8HP65A	1103.034.062	1103.700.010	Oil pan
8HP65A	1103.034.062	1104.700.039	Converter bell
8HP65A	1103.034.062	1102.700.067	Intermediate plate
8HP65A	1103.034.063	1102.700.034	Mechatronic
8HP65A	1103.034.063	1102.700.035	Mechatronic
8HP65A	1103.034.063	1103.700.010	Oil pan
8HP65A	1103.034.063	1104.700.039	Converter bell
8HP65A	1103.034.063	1102.700.067	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.064	1102.700.034	Mechatronic
8HP65A	1103.034.064	1102.700.035	Mechatronic
8HP65A	1103.034.064	1103.700.010	Oil pan
8HP65A	1103.034.064	1104.700.039	Converter bell
8HP65A	1103.034.064	1102.700.067	Intermediate plate
8HP65A	1103.034.065	1102.700.034	Mechatronic
8HP65A	1103.034.065	1102.700.035	Mechatronic
8HP65A	1103.034.065	1103.700.010	Oil pan
8HP65A	1103.034.065	1104.700.039	Converter bell
8HP65A	1103.034.065	1102.700.067	Intermediate plate
8HP65A	1103.034.067	1087.700.079	Mechatronic
8HP65A	1103.034.067	1102.700.034	Mechatronic
8HP65A	1103.034.067	1103.700.010	Oil pan
8HP65A	1103.034.067	1104.700.039	Converter bell
8HP65A	1103.034.067	1102.700.067	Intermediate plate
8HP65A	1103.034.086	1102.700.034	Mechatronic
8HP65A	1103.034.086	1102.700.035	Mechatronic
8HP65A	1103.034.086	1103.700.010	Oil pan
8HP65A	1103.034.086	1104.700.039	Converter bell
8HP65A	1103.034.086	1102.700.067	Intermediate plate
8HP65A	1103.034.091	1102.700.034	Mechatronic
8HP65A	1103.034.091	1102.700.035	Mechatronic
8HP65A	1103.034.091	1103.700.010	Oil pan
8HP65A	1103.034.091	1104.700.039	Converter bell
8HP65A	1103.034.091	1102.700.067	Intermediate plate
8HP65A	1103.034.092	1102.700.034	Mechatronic
8HP65A	1103.034.092	1102.700.035	Mechatronic
8HP65A	1103.034.092	1103.700.010	Oil pan
8HP65A	1103.034.092	1104.700.039	Converter bell
8HP65A	1103.034.092	1102.700.067	Intermediate plate
8HP65A	1103.034.094	1102.700.034	Mechatronic
8HP65A	1103.034.094	1102.700.035	Mechatronic
8HP65A	1103.034.094	1103.700.010	Oil pan
8HP65A	1103.034.094	1104.700.039	Converter bell
8HP65A	1103.034.094	1102.700.067	Intermediate plate
8HP65A	1103.034.095	1102.700.034	Mechatronic
8HP65A	1103.034.095	1102.700.035	Mechatronic
8HP65A	1103.034.095	1103.700.010	Oil pan
8HP65A	1103.034.095	1104.700.039	Converter bell
8HP65A	1103.034.095	1102.700.067	Intermediate plate
8HP65A	1103.034.096	1102.700.034	Mechatronic
8HP65A	1103.034.096	1102.700.035	Mechatronic
8HP65A	1103.034.096	1103.700.010	Oil pan
8HP65A	1103.034.096	1104.700.039	Converter bell
8HP65A	1103.034.096	1102.700.067	Intermediate plate
8HP65A	1103.034.097	1102.700.034	Mechatronic
8HP65A	1103.034.097	1102.700.035	Mechatronic
8HP65A	1103.034.097	1103.700.010	Oil pan
8HP65A	1103.034.097	1104.700.039	Converter bell



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.097	1102.700.067	Intermediate plate
8HP65A	1103.034.098	1102.700.034	Mechatronic
8HP65A	1103.034.098	1102.700.035	Mechatronic
8HP65A	1103.034.098	1103.700.010	Oil pan
8HP65A	1103.034.098	1104.700.039	Converter bell
8HP65A	1103.034.098	1102.700.067	Intermediate plate
8HP65A	1103.034.099	1102.700.034	Mechatronic
8HP65A	1103.034.099	1102.700.035	Mechatronic
8HP65A	1103.034.099	1103.700.010	Oil pan
8HP65A	1103.034.099	1104.700.039	Converter bell
8HP65A	1103.034.099	1102.700.067	Intermediate plate
8HP65A	1103.034.100	1102.700.034	Mechatronic
8HP65A	1103.034.100	1102.700.035	Mechatronic
8HP65A	1103.034.100	1103.700.010	Oil pan
8HP65A	1103.034.100	1104.700.039	Converter bell
8HP65A	1103.034.100	1102.700.067	Intermediate plate
8HP65A	1103.034.101	1102.700.034	Mechatronic
8HP65A	1103.034.101	1102.700.035	Mechatronic
8HP65A	1103.034.101	1103.700.010	Oil pan
8HP65A	1103.034.101	1104.700.039	Converter bell
8HP65A	1103.034.101	1102.700.067	Intermediate plate
8HP65A	1103.034.102	1102.700.034	Mechatronic
8HP65A	1103.034.102	1102.700.035	Mechatronic
8HP65A	1103.034.102	1103.700.010	Oil pan
8HP65A	1103.034.102	1104.700.039	Converter bell
8HP65A	1103.034.102	1102.700.067	Intermediate plate
8HP65A	1103.034.104	1102.700.034	Mechatronic
8HP65A	1103.034.104	1102.700.035	Mechatronic
8HP65A	1103.034.104	1103.700.010	Oil pan
8HP65A	1103.034.104	1104.700.039	Converter bell
8HP65A	1103.034.104	1102.700.067	Intermediate plate
8HP65A	1103.034.106	1102.700.034	Mechatronic
8HP65A	1103.034.106	1102.700.035	Mechatronic
8HP65A	1103.034.106	1103.700.010	Oil pan
8HP65A	1103.034.106	1104.700.039	Converter bell
8HP65A	1103.034.106	1102.700.067	Intermediate plate
8HP65A	1103.034.109	1102.700.034	Mechatronic
8HP65A	1103.034.109	1102.700.035	Mechatronic
8HP65A	1103.034.109	1103.700.010	Oil pan
8HP65A	1103.034.109	1104.700.039	Converter bell
8HP65A	1103.034.109	1102.700.067	Intermediate plate
8HP65A	1103.034.110	1102.700.034	Mechatronic
8HP65A	1103.034.110	1102.700.035	Mechatronic
8HP65A	1103.034.110	1103.700.010	Oil pan
8HP65A	1103.034.110	1104.700.039	Converter bell
8HP65A	1103.034.110	1102.700.067	Intermediate plate
8HP65A	1103.034.111	1102.700.034	Mechatronic
8HP65A	1103.034.111	1102.700.035	Mechatronic
8HP65A	1103.034.111	1103.700.010	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.111	1104.700.039	Converter bell
8HP65A	1103.034.111	1102.700.067	Intermediate plate
8HP65A	1103.034.112	1102.700.034	Mechatronic
8HP65A	1103.034.112	1102.700.035	Mechatronic
8HP65A	1103.034.112	1103.700.010	Oil pan
8HP65A	1103.034.112	1104.700.039	Converter bell
8HP65A	1103.034.112	1102.700.067	Intermediate plate
8HP65A	1103.034.115	1102.700.034	Mechatronic
8HP65A	1103.034.115	1102.700.035	Mechatronic
8HP65A	1103.034.115	1103.700.010	Oil pan
8HP65A	1103.034.115	1104.700.039	Converter bell
8HP65A	1103.034.115	1102.700.067	Intermediate plate
8HP65A	1103.034.116	1102.700.034	Mechatronic
8HP65A	1103.034.116	1102.700.035	Mechatronic
8HP65A	1103.034.116	1103.700.010	Oil pan
8HP65A	1103.034.116	1104.700.039	Converter bell
8HP65A	1103.034.116	1102.700.067	Intermediate plate
8HP65A	1103.034.117	1102.700.034	Mechatronic
8HP65A	1103.034.117	1102.700.035	Mechatronic
8HP65A	1103.034.117	1103.700.010	Oil pan
8HP65A	1103.034.117	1104.700.039	Converter bell
8HP65A	1103.034.117	1102.700.067	Intermediate plate
8HP65A	1103.034.118	1102.700.034	Mechatronic
8HP65A	1103.034.118	1102.700.035	Mechatronic
8HP65A	1103.034.118	1103.700.010	Oil pan
8HP65A	1103.034.118	1104.700.039	Converter bell
8HP65A	1103.034.118	1102.700.067	Intermediate plate
8HP65A	1103.034.119	1102.700.034	Mechatronic
8HP65A	1103.034.119	1102.700.035	Mechatronic
8HP65A	1103.034.119	1103.700.010	Oil pan
8HP65A	1103.034.119	1104.700.039	Converter bell
8HP65A	1103.034.119	1102.700.067	Intermediate plate
8HP65A	1103.034.120	1102.700.034	Mechatronic
8HP65A	1103.034.120	1102.700.035	Mechatronic
8HP65A	1103.034.120	1103.700.010	Oil pan
8HP65A	1103.034.120	1104.700.039	Converter bell
8HP65A	1103.034.120	1102.700.067	Intermediate plate
8HP65A	1103.034.122	1102.700.034	Mechatronic
8HP65A	1103.034.122	1102.700.035	Mechatronic
8HP65A	1103.034.122	1103.700.010	Oil pan
8HP65A	1103.034.122	1104.700.039	Converter bell
8HP65A	1103.034.122	1102.700.067	Intermediate plate
8HP65A	1103.034.123	1102.700.034	Mechatronic
8HP65A	1103.034.123	1102.700.035	Mechatronic
8HP65A	1103.034.123	1103.700.010	Oil pan
8HP65A	1103.034.123	1104.700.039	Converter bell
8HP65A	1103.034.123	1102.700.067	Intermediate plate
8HP65A	1103.034.126	1102.700.034	Mechatronic
8HP65A	1103.034.126	1102.700.035	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
212/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.126	1103.700.010	Oil pan
8HP65A	1103.034.126	1104.700.039	Converter bell
8HP65A	1103.034.126	1102.700.067	Intermediate plate
8HP65A	1103.034.127	1102.700.034	Mechatronic
8HP65A	1103.034.127	1102.700.035	Mechatronic
8HP65A	1103.034.127	1103.700.010	Oil pan
8HP65A	1103.034.127	1104.700.039	Converter bell
8HP65A	1103.034.127	1102.700.067	Intermediate plate
8HP65A	1103.034.129	1102.700.034	Mechatronic
8HP65A	1103.034.129	1102.700.035	Mechatronic
8HP65A	1103.034.129	1103.700.010	Oil pan
8HP65A	1103.034.129	1104.700.039	Converter bell
8HP65A	1103.034.129	1102.700.067	Intermediate plate
8HP65A	1103.034.130	1102.700.034	Mechatronic
8HP65A	1103.034.130	1102.700.035	Mechatronic
8HP65A	1103.034.130	1103.700.010	Oil pan
8HP65A	1103.034.130	1104.700.039	Converter bell
8HP65A	1103.034.130	1102.700.067	Intermediate plate
8HP65A	1103.034.131	1102.700.034	Mechatronic
8HP65A	1103.034.131	1102.700.035	Mechatronic
8HP65A	1103.034.131	1103.700.010	Oil pan
8HP65A	1103.034.131	1104.700.039	Converter bell
8HP65A	1103.034.131	1102.700.067	Intermediate plate
8HP65A	1103.034.132	1102.700.034	Mechatronic
8HP65A	1103.034.132	1102.700.035	Mechatronic
8HP65A	1103.034.132	1103.700.010	Oil pan
8HP65A	1103.034.132	1104.700.039	Converter bell
8HP65A	1103.034.132	1102.700.067	Intermediate plate
8HP65A	1103.034.134	1102.700.034	Mechatronic
8HP65A	1103.034.134	1102.700.035	Mechatronic
8HP65A	1103.034.134	1103.700.010	Oil pan
8HP65A	1103.034.134	1104.700.039	Converter bell
8HP65A	1103.034.134	1102.700.067	Intermediate plate
8HP65A	1103.034.135	1102.700.034	Mechatronic
8HP65A	1103.034.135	1102.700.035	Mechatronic
8HP65A	1103.034.135	1103.700.010	Oil pan
8HP65A	1103.034.135	1104.700.039	Converter bell
8HP65A	1103.034.135	1102.700.067	Intermediate plate
8HP65A	1103.034.136	1102.700.034	Mechatronic
8HP65A	1103.034.136	1102.700.035	Mechatronic
8HP65A	1103.034.136	1103.700.010	Oil pan
8HP65A	1103.034.136	1104.700.039	Converter bell
8HP65A	1103.034.136	1102.700.067	Intermediate plate
8HP65A	1103.034.137	1102.700.034	Mechatronic
8HP65A	1103.034.137	1102.700.035	Mechatronic
8HP65A	1103.034.137	1103.700.010	Oil pan
8HP65A	1103.034.137	1104.700.039	Converter bell
8HP65A	1103.034.137	1102.700.067	Intermediate plate
8HP65A	1103.034.139	1102.700.034	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
213/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.139	1102.700.035	Mechatronic
8HP65A	1103.034.139	1103.700.010	Oil pan
8HP65A	1103.034.139	1104.700.039	Converter bell
8HP65A	1103.034.139	1102.700.067	Intermediate plate
8HP65A	1103.034.140	1102.700.034	Mechatronic
8HP65A	1103.034.140	1102.700.035	Mechatronic
8HP65A	1103.034.140	1103.700.010	Oil pan
8HP65A	1103.034.140	1104.700.039	Converter bell
8HP65A	1103.034.140	1102.700.067	Intermediate plate
8HP65A	1103.034.141	1102.700.034	Mechatronic
8HP65A	1103.034.141	1102.700.035	Mechatronic
8HP65A	1103.034.141	1103.700.010	Oil pan
8HP65A	1103.034.141	1104.700.039	Converter bell
8HP65A	1103.034.141	1102.700.067	Intermediate plate
8HP65A	1103.034.143	1102.700.034	Mechatronic
8HP65A	1103.034.143	1102.700.035	Mechatronic
8HP65A	1103.034.143	1103.700.010	Oil pan
8HP65A	1103.034.143	1104.700.039	Converter bell
8HP65A	1103.034.143	1102.700.067	Intermediate plate
8HP65A	1103.034.144	1102.700.034	Mechatronic
8HP65A	1103.034.144	1102.700.035	Mechatronic
8HP65A	1103.034.144	1103.700.010	Oil pan
8HP65A	1103.034.144	1104.700.039	Converter bell
8HP65A	1103.034.144	1102.700.067	Intermediate plate
8HP65A	1103.034.149	1102.700.034	Mechatronic
8HP65A	1103.034.149	1102.700.035	Mechatronic
8HP65A	1103.034.149	1103.700.010	Oil pan
8HP65A	1103.034.149	1104.700.039	Converter bell
8HP65A	1103.034.149	1102.700.067	Intermediate plate
8HP65A	1103.034.150	1102.700.034	Mechatronic
8HP65A	1103.034.150	1102.700.035	Mechatronic
8HP65A	1103.034.150	1103.700.010	Oil pan
8HP65A	1103.034.150	1104.700.039	Converter bell
8HP65A	1103.034.150	1102.700.067	Intermediate plate
8HP65A	1103.034.151	1102.700.034	Mechatronic
8HP65A	1103.034.151	1102.700.035	Mechatronic
8HP65A	1103.034.151	1103.700.010	Oil pan
8HP65A	1103.034.151	1104.700.039	Converter bell
8HP65A	1103.034.151	1102.700.067	Intermediate plate
8HP65A	1103.034.152	1102.700.034	Mechatronic
8HP65A	1103.034.152	1102.700.035	Mechatronic
8HP65A	1103.034.152	1103.700.010	Oil pan
8HP65A	1103.034.152	1104.700.039	Converter bell
8HP65A	1103.034.152	1102.700.067	Intermediate plate
8HP65A	1103.034.153	1102.700.034	Mechatronic
8HP65A	1103.034.153	1102.700.035	Mechatronic
8HP65A	1103.034.153	1103.700.010	Oil pan
8HP65A	1103.034.153	1104.700.039	Converter bell
8HP65A	1103.034.153	1102.700.067	Intermediate plate



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.156	1102.700.034	Mechatronic
8HP65A	1103.034.156	1102.700.035	Mechatronic
8HP65A	1103.034.156	1103.700.010	Oil pan
8HP65A	1103.034.156	1104.700.039	Converter bell
8HP65A	1103.034.156	1102.700.067	Intermediate plate
8HP65A	1103.034.157	1102.700.034	Mechatronic
8HP65A	1103.034.157	1102.700.035	Mechatronic
8HP65A	1103.034.157	1103.700.010	Oil pan
8HP65A	1103.034.157	1104.700.039	Converter bell
8HP65A	1103.034.157	1102.700.067	Intermediate plate
8HP65A	1103.034.158	1102.700.034	Mechatronic
8HP65A	1103.034.158	1102.700.035	Mechatronic
8HP65A	1103.034.158	1103.700.010	Oil pan
8HP65A	1103.034.158	1104.700.039	Converter bell
8HP65A	1103.034.158	1102.700.067	Intermediate plate
8HP65A	1103.034.159	1102.700.034	Mechatronic
8HP65A	1103.034.159	1102.700.035	Mechatronic
8HP65A	1103.034.159	1103.700.010	Oil pan
8HP65A	1103.034.159	1104.700.039	Converter bell
8HP65A	1103.034.159	1102.700.067	Intermediate plate
8HP65A	1103.034.161	1102.700.034	Mechatronic
8HP65A	1103.034.161	1102.700.035	Mechatronic
8HP65A	1103.034.161	1103.700.010	Oil pan
8HP65A	1103.034.161	1104.700.039	Converter bell
8HP65A	1103.034.161	1102.700.067	Intermediate plate
8HP65A	1103.034.162	1102.700.034	Mechatronic
8HP65A	1103.034.162	1102.700.035	Mechatronic
8HP65A	1103.034.162	1103.700.010	Oil pan
8HP65A	1103.034.162	1104.700.039	Converter bell
8HP65A	1103.034.162	1102.700.067	Intermediate plate
8HP65A	1103.034.163	1102.700.034	Mechatronic
8HP65A	1103.034.163	1102.700.035	Mechatronic
8HP65A	1103.034.163	1103.700.010	Oil pan
8HP65A	1103.034.163	1104.700.039	Converter bell
8HP65A	1103.034.163	1102.700.067	Intermediate plate
8HP65A	1103.034.164	1102.700.034	Mechatronic
8HP65A	1103.034.164	1102.700.035	Mechatronic
8HP65A	1103.034.164	1103.700.010	Oil pan
8HP65A	1103.034.164	1104.700.039	Converter bell
8HP65A	1103.034.164	1102.700.067	Intermediate plate
8HP65A	1103.034.165	1102.700.034	Mechatronic
8HP65A	1103.034.165	1102.700.035	Mechatronic
8HP65A	1103.034.165	1103.700.010	Oil pan
8HP65A	1103.034.165	1104.700.039	Converter bell
8HP65A	1103.034.165	1102.700.067	Intermediate plate
8HP65A	1103.034.166	1102.700.034	Mechatronic
8HP65A	1103.034.166	1102.700.035	Mechatronic
8HP65A	1103.034.166	1103.700.010	Oil pan
8HP65A	1103.034.166	1104.700.039	Converter bell



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.166	1102.700.067	Intermediate plate
8HP65A	1103.034.167	1102.700.034	Mechatronic
8HP65A	1103.034.167	1102.700.035	Mechatronic
8HP65A	1103.034.167	1103.700.010	Oil pan
8HP65A	1103.034.167	1104.700.039	Converter bell
8HP65A	1103.034.167	1102.700.067	Intermediate plate
8HP65A	1103.034.168	1102.700.034	Mechatronic
8HP65A	1103.034.168	1102.700.035	Mechatronic
8HP65A	1103.034.168	1103.700.010	Oil pan
8HP65A	1103.034.168	1104.700.039	Converter bell
8HP65A	1103.034.168	1102.700.067	Intermediate plate
8HP65A	1103.034.170	1102.700.034	Mechatronic
8HP65A	1103.034.170	1102.700.035	Mechatronic
8HP65A	1103.034.170	1103.700.010	Oil pan
8HP65A	1103.034.170	1104.700.039	Converter bell
8HP65A	1103.034.170	1102.700.067	Intermediate plate
8HP65A	1103.034.172	1102.700.034	Mechatronic
8HP65A	1103.034.172	1102.700.035	Mechatronic
8HP65A	1103.034.172	1103.700.010	Oil pan
8HP65A	1103.034.172	1104.700.039	Converter bell
8HP65A	1103.034.172	1102.700.067	Intermediate plate
8HP65A	1103.034.173	1102.700.034	Mechatronic
8HP65A	1103.034.173	1102.700.035	Mechatronic
8HP65A	1103.034.173	1103.700.010	Oil pan
8HP65A	1103.034.173	1104.700.039	Converter bell
8HP65A	1103.034.173	1102.700.067	Intermediate plate
8HP65A	1103.034.174	1102.700.034	Mechatronic
8HP65A	1103.034.174	1102.700.035	Mechatronic
8HP65A	1103.034.174	1103.700.010	Oil pan
8HP65A	1103.034.174	1104.700.039	Converter bell
8HP65A	1103.034.174	1102.700.067	Intermediate plate
8HP65A	1103.034.175	1102.700.034	Mechatronic
8HP65A	1103.034.175	1102.700.035	Mechatronic
8HP65A	1103.034.175	1103.700.010	Oil pan
8HP65A	1103.034.175	1104.700.039	Converter bell
8HP65A	1103.034.175	1102.700.067	Intermediate plate
8HP65A	1103.034.176	1102.700.034	Mechatronic
8HP65A	1103.034.176	1102.700.035	Mechatronic
8HP65A	1103.034.176	1103.700.010	Oil pan
8HP65A	1103.034.176	1104.700.039	Converter bell
8HP65A	1103.034.176	1102.700.067	Intermediate plate
8HP65A	1103.034.177	1102.700.034	Mechatronic
8HP65A	1103.034.177	1102.700.035	Mechatronic
8HP65A	1103.034.177	1103.700.010	Oil pan
8HP65A	1103.034.177	1104.700.039	Converter bell
8HP65A	1103.034.177	1102.700.067	Intermediate plate
8HP65A	1103.034.178	1102.700.034	Mechatronic
8HP65A	1103.034.178	1102.700.035	Mechatronic
8HP65A	1103.034.178	1103.700.010	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.178	1104.700.039	Converter bell
8HP65A	1103.034.178	1102.700.067	Intermediate plate
8HP65A	1103.034.179	1102.700.034	Mechatronic
8HP65A	1103.034.179	1102.700.035	Mechatronic
8HP65A	1103.034.179	1103.700.010	Oil pan
8HP65A	1103.034.179	1104.700.039	Converter bell
8HP65A	1103.034.179	1102.700.067	Intermediate plate
8HP65A	1103.034.182	1102.700.034	Mechatronic
8HP65A	1103.034.182	1102.700.035	Mechatronic
8HP65A	1103.034.182	1103.700.010	Oil pan
8HP65A	1103.034.182	1104.700.039	Converter bell
8HP65A	1103.034.182	1102.700.067	Intermediate plate
8HP65A	1103.034.184	1102.700.034	Mechatronic
8HP65A	1103.034.184	1102.700.035	Mechatronic
8HP65A	1103.034.184	1103.700.010	Oil pan
8HP65A	1103.034.184	1104.700.039	Converter bell
8HP65A	1103.034.184	1102.700.067	Intermediate plate
8HP65A	1103.034.185	1102.700.034	Mechatronic
8HP65A	1103.034.185	1102.700.035	Mechatronic
8HP65A	1103.034.185	1103.700.010	Oil pan
8HP65A	1103.034.185	1104.700.039	Converter bell
8HP65A	1103.034.185	1102.700.067	Intermediate plate
8HP65A	1103.034.186	1102.700.034	Mechatronic
8HP65A	1103.034.186	1102.700.035	Mechatronic
8HP65A	1103.034.186	1103.700.010	Oil pan
8HP65A	1103.034.186	1104.700.039	Converter bell
8HP65A	1103.034.186	1102.700.067	Intermediate plate
8HP65A	1103.034.187	1102.700.034	Mechatronic
8HP65A	1103.034.187	1102.700.035	Mechatronic
8HP65A	1103.034.187	1103.700.010	Oil pan
8HP65A	1103.034.187	1104.700.039	Converter bell
8HP65A	1103.034.187	1102.700.067	Intermediate plate
8HP65A	1103.034.188	1102.700.034	Mechatronic
8HP65A	1103.034.188	1102.700.035	Mechatronic
8HP65A	1103.034.188	1103.700.010	Oil pan
8HP65A	1103.034.188	1104.700.039	Converter bell
8HP65A	1103.034.188	1102.700.067	Intermediate plate
8HP65A	1103.034.189	1102.700.034	Mechatronic
8HP65A	1103.034.189	1102.700.035	Mechatronic
8HP65A	1103.034.189	1103.700.010	Oil pan
8HP65A	1103.034.189	1104.700.039	Converter bell
8HP65A	1103.034.189	1102.700.067	Intermediate plate
8HP65A	1103.034.190	1102.700.034	Mechatronic
8HP65A	1103.034.190	1102.700.035	Mechatronic
8HP65A	1103.034.190	1103.700.010	Oil pan
8HP65A	1103.034.190	1104.700.039	Converter bell
8HP65A	1103.034.190	1102.700.067	Intermediate plate
8HP65A	1103.034.191	1102.700.034	Mechatronic
8HP65A	1103.034.191	1102.700.035	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
217/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.191	1103.700.010	Oil pan
8HP65A	1103.034.191	1104.700.039	Converter bell
8HP65A	1103.034.191	1102.700.067	Intermediate plate
8HP65A	1103.034.192	1102.700.034	Mechatronic
8HP65A	1103.034.192	1102.700.035	Mechatronic
8HP65A	1103.034.192	1103.700.010	Oil pan
8HP65A	1103.034.192	1104.700.039	Converter bell
8HP65A	1103.034.192	1102.700.067	Intermediate plate
8HP65A	1103.034.193	1102.700.034	Mechatronic
8HP65A	1103.034.193	1102.700.035	Mechatronic
8HP65A	1103.034.193	1103.700.010	Oil pan
8HP65A	1103.034.193	1104.700.039	Converter bell
8HP65A	1103.034.193	1102.700.067	Intermediate plate
8HP65A	1103.034.194	1102.700.034	Mechatronic
8HP65A	1103.034.194	1102.700.035	Mechatronic
8HP65A	1103.034.194	1103.700.010	Oil pan
8HP65A	1103.034.194	1104.700.039	Converter bell
8HP65A	1103.034.194	1102.700.067	Intermediate plate
8HP65A	1103.034.195	1102.700.034	Mechatronic
8HP65A	1103.034.195	1102.700.035	Mechatronic
8HP65A	1103.034.195	1103.700.010	Oil pan
8HP65A	1103.034.195	1104.700.039	Converter bell
8HP65A	1103.034.195	1102.700.067	Intermediate plate
8HP65A	1103.034.196	1102.700.034	Mechatronic
8HP65A	1103.034.196	1102.700.035	Mechatronic
8HP65A	1103.034.196	1103.700.010	Oil pan
8HP65A	1103.034.196	1104.700.039	Converter bell
8HP65A	1103.034.196	1102.700.067	Intermediate plate
8HP65A	1103.034.197	1102.700.034	Mechatronic
8HP65A	1103.034.197	1102.700.035	Mechatronic
8HP65A	1103.034.197	1103.700.010	Oil pan
8HP65A	1103.034.197	1104.700.039	Converter bell
8HP65A	1103.034.197	1102.700.067	Intermediate plate
8HP65A	1103.034.198	1102.700.034	Mechatronic
8HP65A	1103.034.198	1102.700.035	Mechatronic
8HP65A	1103.034.198	1103.700.010	Oil pan
8HP65A	1103.034.198	1104.700.039	Converter bell
8HP65A	1103.034.198	1102.700.067	Intermediate plate
8HP65A	1103.034.199	1102.700.034	Mechatronic
8HP65A	1103.034.199	1102.700.035	Mechatronic
8HP65A	1103.034.199	1103.700.010	Oil pan
8HP65A	1103.034.199	1104.700.039	Converter bell
8HP65A	1103.034.199	1102.700.067	Intermediate plate
8HP65A	1103.034.200	1102.700.034	Mechatronic
8HP65A	1103.034.200	1102.700.035	Mechatronic
8HP65A	1103.034.200	1103.700.010	Oil pan
8HP65A	1103.034.200	1104.700.039	Converter bell
8HP65A	1103.034.200	1102.700.067	Intermediate plate
8HP65A	1103.034.201	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.201	1102.700.035	Mechatronic
8HP65A	1103.034.201	1103.700.010	Oil pan
8HP65A	1103.034.201	1104.700.039	Converter bell
8HP65A	1103.034.201	1102.700.067	Intermediate plate
8HP65A	1103.034.202	1102.700.034	Mechatronic
8HP65A	1103.034.202	1102.700.035	Mechatronic
8HP65A	1103.034.202	1103.700.010	Oil pan
8HP65A	1103.034.202	1104.700.039	Converter bell
8HP65A	1103.034.202	1102.700.067	Intermediate plate
8HP65A	1103.034.203	1102.700.034	Mechatronic
8HP65A	1103.034.203	1102.700.035	Mechatronic
8HP65A	1103.034.203	1103.700.010	Oil pan
8HP65A	1103.034.203	1104.700.039	Converter bell
8HP65A	1103.034.203	1102.700.067	Intermediate plate
8HP65A	1103.034.204	1102.700.034	Mechatronic
8HP65A	1103.034.204	1102.700.035	Mechatronic
8HP65A	1103.034.204	1103.700.010	Oil pan
8HP65A	1103.034.204	1104.700.039	Converter bell
8HP65A	1103.034.204	1102.700.067	Intermediate plate
8HP65A	1103.034.205	1102.700.034	Mechatronic
8HP65A	1103.034.205	1102.700.035	Mechatronic
8HP65A	1103.034.205	1103.700.010	Oil pan
8HP65A	1103.034.205	1104.700.039	Converter bell
8HP65A	1103.034.205	1102.700.067	Intermediate plate
8HP65A	1103.034.206	1102.700.034	Mechatronic
8HP65A	1103.034.206	1102.700.035	Mechatronic
8HP65A	1103.034.206	1103.700.010	Oil pan
8HP65A	1103.034.206	1104.700.039	Converter bell
8HP65A	1103.034.206	1102.700.067	Intermediate plate
8HP65A	1103.034.207	1102.700.034	Mechatronic
8HP65A	1103.034.207	1102.700.035	Mechatronic
8HP65A	1103.034.207	1103.700.010	Oil pan
8HP65A	1103.034.207	1104.700.039	Converter bell
8HP65A	1103.034.207	1102.700.067	Intermediate plate
8HP65A	1103.034.208	1102.700.034	Mechatronic
8HP65A	1103.034.208	1102.700.035	Mechatronic
8HP65A	1103.034.208	1103.700.010	Oil pan
8HP65A	1103.034.208	1104.700.039	Converter bell
8HP65A	1103.034.208	1102.700.067	Intermediate plate
8HP65A	1103.034.209	1102.700.034	Mechatronic
8HP65A	1103.034.209	1102.700.035	Mechatronic
8HP65A	1103.034.209	1103.700.010	Oil pan
8HP65A	1103.034.209	1104.700.039	Converter bell
8HP65A	1103.034.209	1102.700.067	Intermediate plate
8HP65A	1103.034.210	1102.700.034	Mechatronic
8HP65A	1103.034.210	1102.700.035	Mechatronic
8HP65A	1103.034.210	1103.700.010	Oil pan
8HP65A	1103.034.210	1104.700.039	Converter bell
8HP65A	1103.034.210	1102.700.067	Intermediate plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
219/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.211	1102.700.034	Mechatronic
8HP65A	1103.034.211	1102.700.035	Mechatronic
8HP65A	1103.034.211	1103.700.010	Oil pan
8HP65A	1103.034.211	1104.700.039	Converter bell
8HP65A	1103.034.211	1102.700.067	Intermediate plate
8HP65A	1103.034.212	1102.700.034	Mechatronic
8HP65A	1103.034.212	1102.700.035	Mechatronic
8HP65A	1103.034.212	1103.700.010	Oil pan
8HP65A	1103.034.212	1104.700.039	Converter bell
8HP65A	1103.034.212	1102.700.067	Intermediate plate
8HP65A	1103.034.213	1102.700.034	Mechatronic
8HP65A	1103.034.213	1102.700.035	Mechatronic
8HP65A	1103.034.213	1103.700.010	Oil pan
8HP65A	1103.034.213	1104.700.039	Converter bell
8HP65A	1103.034.213	1102.700.067	Intermediate plate
8HP65A	1103.034.214	1102.700.034	Mechatronic
8HP65A	1103.034.214	1102.700.035	Mechatronic
8HP65A	1103.034.214	1103.700.010	Oil pan
8HP65A	1103.034.214	1104.700.039	Converter bell
8HP65A	1103.034.214	1102.700.067	Intermediate plate
8HP65A	1103.034.215	1102.700.034	Mechatronic
8HP65A	1103.034.215	1102.700.035	Mechatronic
8HP65A	1103.034.215	1103.700.010	Oil pan
8HP65A	1103.034.215	1104.700.039	Converter bell
8HP65A	1103.034.215	1102.700.067	Intermediate plate
8HP65A	1103.034.216	1102.700.034	Mechatronic
8HP65A	1103.034.216	1102.700.035	Mechatronic
8HP65A	1103.034.216	1103.700.010	Oil pan
8HP65A	1103.034.216	1104.700.039	Converter bell
8HP65A	1103.034.216	1102.700.067	Intermediate plate
8HP65A	1103.034.217	1102.700.034	Mechatronic
8HP65A	1103.034.217	1102.700.035	Mechatronic
8HP65A	1103.034.217	1103.700.010	Oil pan
8HP65A	1103.034.217	1104.700.039	Converter bell
8HP65A	1103.034.217	1102.700.067	Intermediate plate
8HP65A	1103.034.218	1102.700.034	Mechatronic
8HP65A	1103.034.218	1102.700.035	Mechatronic
8HP65A	1103.034.218	1103.700.010	Oil pan
8HP65A	1103.034.218	1104.700.039	Converter bell
8HP65A	1103.034.218	1102.700.067	Intermediate plate
8HP65A	1103.034.219	1102.700.034	Mechatronic
8HP65A	1103.034.219	1102.700.035	Mechatronic
8HP65A	1103.034.219	1103.700.010	Oil pan
8HP65A	1103.034.219	1104.700.039	Converter bell
8HP65A	1103.034.219	1102.700.067	Intermediate plate
8HP65A	1103.034.220	1102.700.034	Mechatronic
8HP65A	1103.034.220	1102.700.035	Mechatronic
8HP65A	1103.034.220	1103.700.010	Oil pan
8HP65A	1103.034.220	1104.700.039	Converter bell



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.220	1102.700.067	Intermediate plate
8HP65A	1103.034.221	1102.700.034	Mechatronic
8HP65A	1103.034.221	1102.700.035	Mechatronic
8HP65A	1103.034.221	1103.700.010	Oil pan
8HP65A	1103.034.221	1104.700.039	Converter bell
8HP65A	1103.034.221	1102.700.067	Intermediate plate
8HP65A	1103.034.222	1102.700.034	Mechatronic
8HP65A	1103.034.222	1102.700.035	Mechatronic
8HP65A	1103.034.222	1103.700.010	Oil pan
8HP65A	1103.034.222	1104.700.039	Converter bell
8HP65A	1103.034.222	1102.700.067	Intermediate plate
8HP65A	1103.034.223	1102.700.034	Mechatronic
8HP65A	1103.034.223	1102.700.035	Mechatronic
8HP65A	1103.034.223	1103.700.010	Oil pan
8HP65A	1103.034.223	1104.700.039	Converter bell
8HP65A	1103.034.223	1102.700.067	Intermediate plate
8HP65A	1103.034.224	1102.700.034	Mechatronic
8HP65A	1103.034.224	1102.700.035	Mechatronic
8HP65A	1103.034.224	1103.700.010	Oil pan
8HP65A	1103.034.224	1104.700.039	Converter bell
8HP65A	1103.034.224	1102.700.067	Intermediate plate
8HP65A	1103.034.225	1102.700.034	Mechatronic
8HP65A	1103.034.225	1102.700.035	Mechatronic
8HP65A	1103.034.225	1103.700.010	Oil pan
8HP65A	1103.034.225	1104.700.039	Converter bell
8HP65A	1103.034.225	1102.700.067	Intermediate plate
8HP65A	1103.034.226	1102.700.034	Mechatronic
8HP65A	1103.034.226	1102.700.035	Mechatronic
8HP65A	1103.034.226	1103.700.010	Oil pan
8HP65A	1103.034.226	1104.700.039	Converter bell
8HP65A	1103.034.226	1102.700.067	Intermediate plate
8HP65A	1103.034.227	1102.700.034	Mechatronic
8HP65A	1103.034.227	1102.700.035	Mechatronic
8HP65A	1103.034.227	1103.700.010	Oil pan
8HP65A	1103.034.227	1104.700.039	Converter bell
8HP65A	1103.034.227	1102.700.067	Intermediate plate
8HP65A	1103.034.228	1102.700.034	Mechatronic
8HP65A	1103.034.228	1102.700.035	Mechatronic
8HP65A	1103.034.228	1103.700.010	Oil pan
8HP65A	1103.034.228	1104.700.039	Converter bell
8HP65A	1103.034.228	1102.700.067	Intermediate plate
8HP65A	1103.034.229	1102.700.034	Mechatronic
8HP65A	1103.034.229	1102.700.035	Mechatronic
8HP65A	1103.034.229	1103.700.010	Oil pan
8HP65A	1103.034.229	1104.700.039	Converter bell
8HP65A	1103.034.229	1102.700.067	Intermediate plate
8HP65A	1103.034.230	1102.700.034	Mechatronic
8HP65A	1103.034.230	1102.700.035	Mechatronic
8HP65A	1103.034.230	1103.700.010	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65A	1103.034.230	1104.700.039	Converter bell
8HP65A	1103.034.230	1102.700.067	Intermediate plate
8HP65A	1103.034.231	1102.700.034	Mechatronic
8HP65A	1103.034.231	1102.700.035	Mechatronic
8HP65A	1103.034.231	1103.700.010	Oil pan
8HP65A	1103.034.231	1104.700.039	Converter bell
8HP65A	1103.034.231	1102.700.067	Intermediate plate
8HP65A	1103.034.232	1102.700.034	Mechatronic
8HP65A	1103.034.232	1102.700.035	Mechatronic
8HP65A	1103.034.232	1103.700.010	Oil pan
8HP65A	1103.034.232	1104.700.039	Converter bell
8HP65A	1103.034.232	1102.700.067	Intermediate plate
8HP65A	1103.034.233	1102.700.034	Mechatronic
8HP65A	1103.034.233	1103.700.010	Oil pan
8HP65A	1103.034.233	1104.700.039	Converter bell
8HP65A	1103.034.233	1102.700.067	Intermediate plate
8HP65A	1103.034.234	1102.700.034	Mechatronic
8HP65A	1103.034.234	1102.700.035	Mechatronic
8HP65A	1103.034.234	1103.700.010	Oil pan
8HP65A	1103.034.234	1104.700.039	Converter bell
8HP65A	1103.034.234	1102.700.067	Intermediate plate
8HP65A	1103.034.237	1102.700.034	Mechatronic
8HP65A	1103.034.237	1102.700.035	Mechatronic
8HP65A	1103.034.237	1103.700.010	Oil pan
8HP65A	1103.034.237	1104.700.039	Converter bell
8HP65A	1103.034.237	1102.700.067	Intermediate plate
8HP65A	1103.034.238	1102.700.034	Mechatronic
8HP65A	1103.034.238	1103.700.010	Oil pan
8HP65A	1103.034.238	1104.700.039	Converter bell
8HP65A	1103.034.238	1102.700.067	Intermediate plate
8HP65A	1103.034.239	1102.700.034	Mechatronic
8HP65A	1103.034.239	1102.700.035	Mechatronic
8HP65A	1103.034.239	1103.700.010	Oil pan
8HP65A	1103.034.239	1104.700.039	Converter bell
8HP65A	1103.034.239	1102.700.067	Intermediate plate
8HP65AX	1103.040.005	1102.700.034	Mechatronic
8HP65AX	1103.040.005	1102.700.035	Mechatronic
8HP65AX	1103.040.005	1103.700.010	Oil pan
8HP65AX	1103.040.005	1104.700.039	Converter bell
8HP65AX	1103.040.005	1102.700.067	Intermediate plate
8HP65AX	1103.040.011	1102.700.034	Mechatronic
8HP65AX	1103.040.011	1102.700.035	Mechatronic
8HP65AX	1103.040.011	1103.700.010	Oil pan
8HP65AX	1103.040.011	1104.700.039	Converter bell
8HP65AX	1103.040.011	1102.700.067	Intermediate plate
8HP65AX	1103.040.012	1102.700.034	Mechatronic
8HP65AX	1103.040.012	1102.700.035	Mechatronic
8HP65AX	1103.040.012	1103.700.010	Oil pan
8HP65AX	1103.040.012	1104.700.039	Converter bell



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
222/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AX	1103.040.012	1102.700.067	Intermediate plate
8HP65AX	1103.040.013	1102.700.034	Mechatronic
8HP65AX	1103.040.013	1102.700.035	Mechatronic
8HP65AX	1103.040.013	1103.700.010	Oil pan
8HP65AX	1103.040.013	1104.700.039	Converter bell
8HP65AX	1103.040.013	1102.700.067	Intermediate plate
8HP65AX	1103.040.014	1102.700.034	Mechatronic
8HP65AX	1103.040.014	1102.700.035	Mechatronic
8HP65AX	1103.040.014	1103.700.010	Oil pan
8HP65AX	1103.040.014	1104.700.039	Converter bell
8HP65AX	1103.040.014	1102.700.067	Intermediate plate
8HP65AX	1103.040.019	1102.700.034	Mechatronic
8HP65AX	1103.040.019	1102.700.035	Mechatronic
8HP65AX	1103.040.019	1103.700.010	Oil pan
8HP65AX	1103.040.019	1104.700.039	Converter bell
8HP65AX	1103.040.019	1102.700.067	Intermediate plate
8HP65AX	1103.040.024	1102.700.034	Mechatronic
8HP65AX	1103.040.024	1102.700.035	Mechatronic
8HP65AX	1103.040.024	1103.700.010	Oil pan
8HP65AX	1103.040.024	1104.700.039	Converter bell
8HP65AX	1103.040.024	1102.700.067	Intermediate plate
8HP65AX	1103.040.025	1102.700.034	Mechatronic
8HP65AX	1103.040.025	1102.700.035	Mechatronic
8HP65AX	1103.040.025	1103.700.010	Oil pan
8HP65AX	1103.040.025	1104.700.039	Converter bell
8HP65AX	1103.040.025	1102.700.067	Intermediate plate
8HP65AX	1103.040.026	1102.700.034	Mechatronic
8HP65AX	1103.040.026	1102.700.035	Mechatronic
8HP65AX	1103.040.026	1103.700.010	Oil pan
8HP65AX	1103.040.026	1104.700.039	Converter bell
8HP65AX	1103.040.026	1102.700.067	Intermediate plate
8HP65AX	1103.040.027	1102.700.034	Mechatronic
8HP65AX	1103.040.027	1102.700.035	Mechatronic
8HP65AX	1103.040.027	1103.700.010	Oil pan
8HP65AX	1103.040.027	1104.700.039	Converter bell
8HP65AX	1103.040.027	1102.700.067	Intermediate plate
8HP65AX	1103.040.028	1102.700.034	Mechatronic
8HP65AX	1103.040.028	1102.700.035	Mechatronic
8HP65AX	1103.040.028	1103.700.010	Oil pan
8HP65AX	1103.040.028	1104.700.039	Converter bell
8HP65AX	1103.040.028	1102.700.067	Intermediate plate
8HP65AX	1103.040.029	1102.700.034	Mechatronic
8HP65AX	1103.040.029	1102.700.035	Mechatronic
8HP65AX	1103.040.029	1103.700.010	Oil pan
8HP65AX	1103.040.029	1104.700.039	Converter bell
8HP65AX	1103.040.029	1102.700.067	Intermediate plate
8HP65AX	1103.040.036	1102.700.034	Mechatronic
8HP65AX	1103.040.036	1102.700.035	Mechatronic
8HP65AX	1103.040.036	1103.700.010	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AX	1103.040.036	1104.700.039	Converter bell
8HP65AX	1103.040.036	1102.700.067	Intermediate plate
8HP65AX	1103.040.037	1102.700.034	Mechatronic
8HP65AX	1103.040.037	1102.700.035	Mechatronic
8HP65AX	1103.040.037	1103.700.010	Oil pan
8HP65AX	1103.040.037	1104.700.039	Converter bell
8HP65AX	1103.040.037	1102.700.067	Intermediate plate
8HP65AX	1103.040.038	1102.700.034	Mechatronic
8HP65AX	1103.040.038	1102.700.035	Mechatronic
8HP65AX	1103.040.038	1103.700.010	Oil pan
8HP65AX	1103.040.038	1104.700.039	Converter bell
8HP65AX	1103.040.038	1102.700.067	Intermediate plate
8HP65AX	1103.040.039	1102.700.034	Mechatronic
8HP65AX	1103.040.039	1102.700.035	Mechatronic
8HP65AX	1103.040.039	1103.700.010	Oil pan
8HP65AX	1103.040.039	1104.700.039	Converter bell
8HP65AX	1103.040.039	1102.700.067	Intermediate plate
8HP65AX	1103.040.040	1102.700.034	Mechatronic
8HP65AX	1103.040.040	1102.700.035	Mechatronic
8HP65AX	1103.040.040	1103.700.010	Oil pan
8HP65AX	1103.040.040	1104.700.039	Converter bell
8HP65AX	1103.040.040	1102.700.067	Intermediate plate
8HP65AX	1103.040.041	1102.700.034	Mechatronic
8HP65AX	1103.040.041	1102.700.035	Mechatronic
8HP65AX	1103.040.041	1103.700.010	Oil pan
8HP65AX	1103.040.041	1104.700.039	Converter bell
8HP65AX	1103.040.041	1102.700.067	Intermediate plate
8HP65AX	1103.040.047	1102.700.034	Mechatronic
8HP65AX	1103.040.047	1102.700.035	Mechatronic
8HP65AX	1103.040.047	1103.700.010	Oil pan
8HP65AX	1103.040.047	1104.700.039	Converter bell
8HP65AX	1103.040.047	1102.700.067	Intermediate plate
8HP65AX	1103.040.048	1102.700.034	Mechatronic
8HP65AX	1103.040.048	1102.700.035	Mechatronic
8HP65AX	1103.040.048	1103.700.010	Oil pan
8HP65AX	1103.040.048	1104.700.039	Converter bell
8HP65AX	1103.040.048	1102.700.067	Intermediate plate
8HP65AX	1103.040.049	1102.700.034	Mechatronic
8HP65AX	1103.040.049	1102.700.035	Mechatronic
8HP65AX	1103.040.049	1103.700.010	Oil pan
8HP65AX	1103.040.049	1104.700.039	Converter bell
8HP65AX	1103.040.049	1102.700.067	Intermediate plate
8HP65AX	1103.040.050	1102.700.034	Mechatronic
8HP65AX	1103.040.050	1103.700.010	Oil pan
8HP65AX	1103.040.050	1104.700.039	Converter bell
8HP65AX	1103.040.050	1102.700.067	Intermediate plate
8HP65AX	1103.040.051	1102.700.034	Mechatronic
8HP65AX	1103.040.051	1103.700.010	Oil pan
8HP65AX	1103.040.051	1104.700.039	Converter bell



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AX	1103.040.051	1102.700.067	Intermediate plate
8HP65AX	1103.040.052	1102.700.034	Mechatronic
8HP65AX	1103.040.052	1102.700.035	Mechatronic
8HP65AX	1103.040.052	1103.700.010	Oil pan
8HP65AX	1103.040.052	1104.700.039	Converter bell
8HP65AX	1103.040.052	1102.700.067	Intermediate plate
8HP65AX	1103.040.053	1102.700.034	Mechatronic
8HP65AX	1103.040.053	1103.700.010	Oil pan
8HP65AX	1103.040.053	1104.700.039	Converter bell
8HP65AX	1103.040.053	1102.700.067	Intermediate plate
8HP65AX	1103.040.054	1102.700.034	Mechatronic
8HP65AX	1103.040.054	1103.700.010	Oil pan
8HP65AX	1103.040.054	1104.700.039	Converter bell
8HP65AX	1103.040.054	1102.700.067	Intermediate plate
8P65FLPH	1103.050.002	1104.700.038	Differential cover
8P65FLPH	1103.050.003	1104.700.038	Differential cover
8P65FLPH	1103.050.004	1104.700.038	Differential cover
8P65FLPH	1103.050.004	1102.700.034	Mechatronic
8P65FLPH	1103.050.004	1102.700.035	Mechatronic
8P65FLPH	1103.050.004	1103.700.053	Oil pan
8P65FLPH	1103.050.004	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.004	1104.700.039	Converter bell
8P65FLPH	1103.050.004	1103.700.033	Intermediate housing
8P65FLPH	1103.050.004	1102.700.067	Intermediate plate
8P65FLPH	1103.050.005	1104.700.038	Differential cover
8P65FLPH	1103.050.005	1102.700.034	Mechatronic
8P65FLPH	1103.050.005	1102.700.035	Mechatronic
8P65FLPH	1103.050.005	1103.700.053	Oil pan
8P65FLPH	1103.050.005	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.005	1104.700.039	Converter bell
8P65FLPH	1103.050.005	1103.700.033	Intermediate housing
8P65FLPH	1103.050.005	1102.700.067	Intermediate plate
8P65FLPH	1103.050.006	1104.700.038	Differential cover
8P65FLPH	1103.050.006	1102.700.034	Mechatronic
8P65FLPH	1103.050.006	1102.700.035	Mechatronic
8P65FLPH	1103.050.006	1103.700.053	Oil pan
8P65FLPH	1103.050.006	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.006	1104.700.039	Converter bell
8P65FLPH	1103.050.006	1103.700.033	Intermediate housing
8P65FLPH	1103.050.006	1102.700.067	Intermediate plate
8P65FLPH	1103.050.007	1104.700.038	Differential cover
8P65FLPH	1103.050.007	1102.700.034	Mechatronic
8P65FLPH	1103.050.007	1102.700.035	Mechatronic
8P65FLPH	1103.050.007	1103.700.053	Oil pan
8P65FLPH	1103.050.007	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.007	1104.700.039	Converter bell
8P65FLPH	1103.050.007	1103.700.033	Intermediate housing
8P65FLPH	1103.050.007	1102.700.067	Intermediate plate
8P65FLPH	1103.050.008	1104.700.038	Differential cover



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P65FLPH	1103.050.008	1102.700.034	Mechatronic
8P65FLPH	1103.050.008	1102.700.035	Mechatronic
8P65FLPH	1103.050.008	1103.700.053	Oil pan
8P65FLPH	1103.050.008	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.008	1104.700.039	Converter bell
8P65FLPH	1103.050.008	1103.700.033	Intermediate housing
8P65FLPH	1103.050.008	1102.700.067	Intermediate plate
8P65FLPH	1103.050.009	1104.700.038	Differential cover
8P65FLPH	1103.050.009	1102.700.034	Mechatronic
8P65FLPH	1103.050.009	1102.700.035	Mechatronic
8P65FLPH	1103.050.009	1103.700.053	Oil pan
8P65FLPH	1103.050.009	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.009	1104.700.039	Converter bell
8P65FLPH	1103.050.009	1103.700.033	Intermediate housing
8P65FLPH	1103.050.009	1102.700.067	Intermediate plate
8P65FLPH	1103.050.010	1104.700.038	Differential cover
8P65FLPH	1103.050.010	1102.700.034	Mechatronic
8P65FLPH	1103.050.010	1102.700.035	Mechatronic
8P65FLPH	1103.050.010	1103.700.053	Oil pan
8P65FLPH	1103.050.010	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.010	1104.700.039	Converter bell
8P65FLPH	1103.050.010	1103.700.033	Intermediate housing
8P65FLPH	1103.050.010	1102.700.067	Intermediate plate
8P65FLPH	1103.050.011	1104.700.038	Differential cover
8P65FLPH	1103.050.011	1102.700.034	Mechatronic
8P65FLPH	1103.050.011	1102.700.035	Mechatronic
8P65FLPH	1103.050.011	1103.700.053	Oil pan
8P65FLPH	1103.050.011	1102.700.021	Rotor position sensor
8P65FLPH	1103.050.011	1104.700.039	Converter bell
8P65FLPH	1103.050.011	1103.700.033	Intermediate housing
8P65FLPH	1103.050.011	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.002	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.003	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.003	1103.700.097	Converter
8HP65AXPH	1103.060.004	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.005	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.005	1103.700.097	Converter
8HP65AXPH	1103.060.006	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.007	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.007	1103.700.097	Converter
8HP65AXPH	1103.060.008	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.009	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.009	1103.700.097	Converter
8HP65AXPH	1103.060.010	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.011	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.011	1103.700.097	Converter
8HP65AXPH	1103.060.012	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.012	1103.700.097	Converter
8HP65AXPH	1103.060.013	1104.700.054	Hybrid drive



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
226/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AXPH	1103.060.014	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.014	1102.700.034	Mechatronic
8HP65AXPH	1103.060.014	1102.700.035	Mechatronic
8HP65AXPH	1103.060.014	1103.700.010	Oil pan
8HP65AXPH	1103.060.014	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.014	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.015	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.015	1102.700.034	Mechatronic
8HP65AXPH	1103.060.015	1102.700.035	Mechatronic
8HP65AXPH	1103.060.015	1103.700.010	Oil pan
8HP65AXPH	1103.060.015	1103.700.097	Converter
8HP65AXPH	1103.060.015	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.015	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.016	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.016	1102.700.034	Mechatronic
8HP65AXPH	1103.060.016	1102.700.035	Mechatronic
8HP65AXPH	1103.060.016	1103.700.010	Oil pan
8HP65AXPH	1103.060.016	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.016	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.017	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.017	1102.700.034	Mechatronic
8HP65AXPH	1103.060.017	1102.700.035	Mechatronic
8HP65AXPH	1103.060.017	1103.700.010	Oil pan
8HP65AXPH	1103.060.017	1103.700.097	Converter
8HP65AXPH	1103.060.017	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.017	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.018	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.018	1102.700.034	Mechatronic
8HP65AXPH	1103.060.018	1102.700.035	Mechatronic
8HP65AXPH	1103.060.018	1103.700.010	Oil pan
8HP65AXPH	1103.060.018	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.018	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.019	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.019	1102.700.034	Mechatronic
8HP65AXPH	1103.060.019	1102.700.035	Mechatronic
8HP65AXPH	1103.060.019	1103.700.010	Oil pan
8HP65AXPH	1103.060.019	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.019	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.020	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.020	1102.700.034	Mechatronic
8HP65AXPH	1103.060.020	1102.700.035	Mechatronic
8HP65AXPH	1103.060.020	1103.700.010	Oil pan
8HP65AXPH	1103.060.020	1103.700.097	Converter
8HP65AXPH	1103.060.020	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.020	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.021	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.021	1102.700.034	Mechatronic
8HP65AXPH	1103.060.021	1102.700.035	Mechatronic
8HP65AXPH	1103.060.021	1103.700.010	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AXPH	1103.060.021	1103.700.097	Converter
8HP65AXPH	1103.060.021	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.021	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.022	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.022	1103.700.097	Converter
8HP65AXPH	1103.060.023	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.023	1103.700.097	Converter
8HP65AXPH	1103.060.024	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.024	1102.700.034	Mechatronic
8HP65AXPH	1103.060.024	1102.700.035	Mechatronic
8HP65AXPH	1103.060.024	1103.700.010	Oil pan
8HP65AXPH	1103.060.024	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.024	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.025	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.025	1102.700.034	Mechatronic
8HP65AXPH	1103.060.025	1102.700.035	Mechatronic
8HP65AXPH	1103.060.025	1103.700.010	Oil pan
8HP65AXPH	1103.060.025	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.025	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.026	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.026	1102.700.034	Mechatronic
8HP65AXPH	1103.060.026	1102.700.035	Mechatronic
8HP65AXPH	1103.060.026	1103.700.010	Oil pan
8HP65AXPH	1103.060.026	1103.700.097	Converter
8HP65AXPH	1103.060.026	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.026	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.027	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.027	1102.700.034	Mechatronic
8HP65AXPH	1103.060.027	1102.700.035	Mechatronic
8HP65AXPH	1103.060.027	1103.700.010	Oil pan
8HP65AXPH	1103.060.027	1103.700.097	Converter
8HP65AXPH	1103.060.027	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.027	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.028	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.028	1102.700.034	Mechatronic
8HP65AXPH	1103.060.028	1102.700.035	Mechatronic
8HP65AXPH	1103.060.028	1103.700.010	Oil pan
8HP65AXPH	1103.060.028	1103.700.097	Converter
8HP65AXPH	1103.060.028	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.028	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.029	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.029	1102.700.034	Mechatronic
8HP65AXPH	1103.060.029	1102.700.035	Mechatronic
8HP65AXPH	1103.060.029	1103.700.010	Oil pan
8HP65AXPH	1103.060.029	1103.700.097	Converter
8HP65AXPH	1103.060.029	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.029	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.031	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.031	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AXPH	1103.060.031	1102.700.035	Mechatronic
8HP65AXPH	1103.060.031	1103.700.010	Oil pan
8HP65AXPH	1103.060.031	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.031	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.032	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.032	1102.700.034	Mechatronic
8HP65AXPH	1103.060.032	1102.700.035	Mechatronic
8HP65AXPH	1103.060.032	1103.700.010	Oil pan
8HP65AXPH	1103.060.032	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.032	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.033	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.033	1102.700.034	Mechatronic
8HP65AXPH	1103.060.033	1102.700.035	Mechatronic
8HP65AXPH	1103.060.033	1103.700.010	Oil pan
8HP65AXPH	1103.060.033	1103.700.097	Converter
8HP65AXPH	1103.060.033	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.033	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.034	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.034	1102.700.034	Mechatronic
8HP65AXPH	1103.060.034	1103.700.010	Oil pan
8HP65AXPH	1103.060.034	1103.700.097	Converter
8HP65AXPH	1103.060.034	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.034	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.035	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.035	1102.700.034	Mechatronic
8HP65AXPH	1103.060.035	1102.700.035	Mechatronic
8HP65AXPH	1103.060.035	1103.700.010	Oil pan
8HP65AXPH	1103.060.035	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.035	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.036	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.036	1102.700.034	Mechatronic
8HP65AXPH	1103.060.036	1102.700.035	Mechatronic
8HP65AXPH	1103.060.036	1103.700.010	Oil pan
8HP65AXPH	1103.060.036	1103.700.097	Converter
8HP65AXPH	1103.060.036	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.036	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.037	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.037	1102.700.034	Mechatronic
8HP65AXPH	1103.060.037	1102.700.035	Mechatronic
8HP65AXPH	1103.060.037	1103.700.010	Oil pan
8HP65AXPH	1103.060.037	1103.700.097	Converter
8HP65AXPH	1103.060.037	1103.700.033	Intermediate housing
8HP65AXPH	1103.060.037	1102.700.067	Intermediate plate
8HP65AXPH	1103.060.038	1104.700.054	Hybrid drive
8HP65AXPH	1103.060.038	1102.700.034	Mechatronic
8HP65AXPH	1103.060.038	1102.700.035	Mechatronic
8HP65AXPH	1103.060.038	1103.700.010	Oil pan
8HP65AXPH	1103.060.038	1103.700.097	Converter
8HP65AXPH	1103.060.038	1103.700.033	Intermediate housing



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP65AXPH	1103.060.038	1102.700.067	Intermediate plate
8HP65AX	1103.070.001	1102.700.034	Mechatronic
8HP65AX	1103.070.001	1102.700.035	Mechatronic
8HP65AX	1103.070.001	1103.700.010	Oil pan
8HP65AX	1103.070.001	1104.700.039	Converter bell
8HP65AX	1103.070.001	1102.700.067	Intermediate plate
8HP65AX	1103.070.002	1102.700.034	Mechatronic
8HP65AX	1103.070.002	1102.700.035	Mechatronic
8HP65AX	1103.070.002	1103.700.010	Oil pan
8HP65AX	1103.070.002	1104.700.039	Converter bell
8HP65AX	1103.070.002	1102.700.067	Intermediate plate
8HP65AX	1103.070.003	1102.700.034	Mechatronic
8HP65AX	1103.070.003	1102.700.035	Mechatronic
8HP65AX	1103.070.003	1103.700.010	Oil pan
8HP65AX	1103.070.003	1104.700.039	Converter bell
8HP65AX	1103.070.003	1102.700.067	Intermediate plate
8HP65AX	1103.070.004	1102.700.034	Mechatronic
8HP65AX	1103.070.004	1102.700.035	Mechatronic
8HP65AX	1103.070.004	1103.700.010	Oil pan
8HP65AX	1103.070.004	1104.700.039	Converter bell
8HP65AX	1103.070.004	1102.700.067	Intermediate plate

Tab. 31 Model 1103



ZF Aftermarket Service Information

22.8 Model 1104

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95	1104.010.005	1087.700.079	Mechatronic
8HP95	1104.010.005	1102.700.034	Mechatronic
8HP95	1104.010.005	1087.700.136	Oil pan
8HP95	1104.010.005	1091.700.118	Intermediate plate
8HP95	1104.010.006	1087.700.079	Mechatronic
8HP95	1104.010.006	1102.700.034	Mechatronic
8HP95	1104.010.006	1087.700.136	Oil pan
8HP95	1104.010.006	1091.700.118	Intermediate plate
8HP95	1104.010.007	1087.700.079	Mechatronic
8HP95	1104.010.007	1102.700.034	Mechatronic
8HP95	1104.010.007	1087.700.136	Oil pan
8HP95	1104.010.007	1091.700.118	Intermediate plate
8HP95	1104.010.008	1087.700.079	Mechatronic
8HP95	1104.010.008	1102.700.034	Mechatronic
8HP95	1104.010.008	1087.700.136	Oil pan
8HP95	1104.010.008	1091.700.118	Intermediate plate
8HP95	1104.010.010	1087.700.079	Mechatronic
8HP95	1104.010.010	1102.700.034	Mechatronic
8HP95	1104.010.010	1091.700.115	Oil pan
8HP95	1104.010.010	1091.700.115	Oil pan
8HP95	1104.010.010	1091.700.118	Intermediate plate
8HP95	1104.010.011	1087.700.079	Mechatronic
8HP95	1104.010.011	1102.700.034	Mechatronic
8HP95	1104.010.011	1091.700.115	Oil pan
8HP95	1104.010.011	1091.700.115	Oil pan
8HP95	1104.010.011	1091.700.118	Intermediate plate
8HP95	1104.010.012	1087.700.079	Mechatronic
8HP95	1104.010.012	1102.700.034	Mechatronic
8HP95	1104.010.012	1087.700.136	Oil pan
8HP95	1104.010.012	1091.700.118	Intermediate plate
8HP95	1104.010.013	1087.700.079	Mechatronic
8HP95	1104.010.013	1102.700.034	Mechatronic
8HP95	1104.010.013	1087.700.136	Oil pan
8HP95	1104.010.013	1091.700.118	Intermediate plate
8HP95X	1104.020.005	1087.700.079	Mechatronic
8HP95X	1104.020.005	1102.700.034	Mechatronic
8HP95X	1104.020.005	1087.700.136	Oil pan
8HP95X	1104.020.005	1091.700.118	Intermediate plate
8HP95X	1104.020.006	1087.700.079	Mechatronic
8HP95X	1104.020.006	1102.700.034	Mechatronic
8HP95X	1104.020.006	1091.700.115	Oil pan
8HP95X	1104.020.006	1091.700.115	Oil pan
8HP95X	1104.020.006	1090.700.141	Extension
8HP95X	1104.020.006	1091.700.118	Intermediate plate
8HP95X	1104.020.009	1087.700.079	Mechatronic
8HP95X	1104.020.009	1102.700.034	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
231/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95X	1104.020.009	1087.700.136	Oil pan
8HP95X	1104.020.009	1091.700.118	Intermediate plate
8HP95X	1104.020.011	1087.700.079	Mechatronic
8HP95X	1104.020.011	1102.700.034	Mechatronic
8HP95X	1104.020.011	1091.700.115	Oil pan
8HP95X	1104.020.011	1091.700.115	Oil pan
8HP95X	1104.020.011	1090.700.141	Extension
8HP95X	1104.020.011	1091.700.118	Intermediate plate
8HP95X	1104.020.012	1087.700.079	Mechatronic
8HP95X	1104.020.012	1102.700.034	Mechatronic
8HP95X	1104.020.012	1087.700.136	Oil pan
8HP95X	1104.020.012	1091.700.118	Intermediate plate
8HP95X	1104.020.013	1087.700.079	Mechatronic
8HP95X	1104.020.013	1102.700.034	Mechatronic
8HP95X	1104.020.013	1091.700.115	Oil pan
8HP95X	1104.020.013	1090.700.141	Extension
8HP95X	1104.020.013	1091.700.118	Intermediate plate
8HP95X	1104.020.014	1087.700.079	Mechatronic
8HP95X	1104.020.014	1102.700.034	Mechatronic
8HP95X	1104.020.014	1091.700.115	Oil pan
8HP95X	1104.020.014	1090.700.141	Extension
8HP95X	1104.020.014	1091.700.118	Intermediate plate
8HP95X	1104.020.015	1087.700.079	Mechatronic
8HP95X	1104.020.015	1102.700.034	Mechatronic
8HP95X	1104.020.015	1087.700.136	Oil pan
8HP95X	1104.020.015	1091.700.118	Intermediate plate
8HP95X	1104.020.016	1087.700.079	Mechatronic
8HP95X	1104.020.016	1102.700.034	Mechatronic
8HP95X	1104.020.016	1087.700.136	Oil pan
8HP95X	1104.020.016	1091.700.118	Intermediate plate
8HP95X HIS	1104.024.009	1087.700.079	Mechatronic
8HP95X HIS	1104.024.009	1102.700.034	Mechatronic
8HP95X HIS	1104.024.009	1087.700.136	Oil pan
8HP95X HIS	1104.024.009	1091.700.118	Intermediate plate
8HP95T HIS	1104.024.010	1087.700.079	Mechatronic
8HP95T HIS	1104.024.010	1102.700.034	Mechatronic
8HP95T HIS	1104.024.010	1091.700.115	Oil pan
8HP95T HIS	1104.024.010	1091.700.115	Oil pan
8HP95T HIS	1104.024.010	1091.700.118	Intermediate plate
8HP95X HIS	1104.024.011	1087.700.079	Mechatronic
8HP95X HIS	1104.024.011	1102.700.034	Mechatronic
8HP95X HIS	1104.024.011	1087.700.136	Oil pan
8HP95X HIS	1104.024.011	1091.700.118	Intermediate plate
8HP95X HIS	1104.024.013	1087.700.079	Mechatronic
8HP95X HIS	1104.024.013	1102.700.034	Mechatronic
8HP95X HIS	1104.024.013	1087.700.136	Oil pan
8HP95X HIS	1104.024.013	1091.700.118	Intermediate plate
8HP95X HIS	1104.024.014	1087.700.079	Mechatronic
8HP95X HIS	1104.024.014	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95X HIS	1104.024.014	1087.700.136	Oil pan
8HP95X HIS	1104.024.014	1091.700.118	Intermediate plate
8HP95X HIS	1104.024.015	1087.700.079	Mechatronic
8HP95X HIS	1104.024.015	1102.700.034	Mechatronic
8HP95X HIS	1104.024.015	1087.700.136	Oil pan
8HP95X HIS	1104.024.015	1091.700.118	Intermediate plate
8HP95A	1104.034.001	1104.700.038	Differential cover
8HP95A	1104.034.002	1104.700.038	Differential cover
8HP95A	1104.034.003	1104.700.038	Differential cover
8HP95A	1104.034.003	1087.700.079	Mechatronic
8HP95A	1104.034.003	1102.700.034	Mechatronic
8HP95A	1104.034.003	1102.700.035	Mechatronic
8HP95A	1104.034.003	1104.700.043	Oil pan
8HP95A	1104.034.003	1104.700.039	Converter Bell
8HP95A	1104.034.003	1103.700.033	Intermediate housing
8HP95A	1104.034.003	1104.700.084	Intermediate housing
8HP95A	1104.034.003	1091.700.118	Intermediate plate
8HP95A	1104.034.004	1104.700.038	Differential cover
8HP95A	1104.034.004	1087.700.079	Mechatronic
8HP95A	1104.034.004	1102.700.034	Mechatronic
8HP95A	1104.034.004	1102.700.035	Mechatronic
8HP95A	1104.034.004	1104.700.043	Oil pan
8HP95A	1104.034.004	1104.700.039	Converter Bell
8HP95A	1104.034.004	1103.700.033	Intermediate housing
8HP95A	1104.034.004	1104.700.084	Intermediate housing
8HP95A	1104.034.004	1091.700.118	Intermediate plate
8HP95A	1104.034.005	1104.700.038	Differential cover
8HP95A	1104.034.006	1104.700.038	Differential cover
8HP95A	1104.034.007	1104.700.038	Differential cover
8HP95A	1104.034.007	1087.700.079	Mechatronic
8HP95A	1104.034.007	1102.700.034	Mechatronic
8HP95A	1104.034.007	1102.700.035	Mechatronic
8HP95A	1104.034.007	1104.700.043	Oil pan
8HP95A	1104.034.007	1104.700.039	Converter Bell
8HP95A	1104.034.007	1103.700.033	Intermediate housing
8HP95A	1104.034.007	1104.700.084	Intermediate housing
8HP95A	1104.034.007	1091.700.118	Intermediate plate
8HP95A	1104.034.008	1104.700.038	Differential cover
8HP95A	1104.034.008	1087.700.079	Mechatronic
8HP95A	1104.034.008	1102.700.034	Mechatronic
8HP95A	1104.034.008	1102.700.035	Mechatronic
8HP95A	1104.034.008	1104.700.043	Oil pan
8HP95A	1104.034.008	1104.700.039	Converter Bell
8HP95A	1104.034.008	1103.700.033	Intermediate housing
8HP95A	1104.034.008	1104.700.084	Intermediate housing
8HP95A	1104.034.008	1091.700.118	Intermediate plate
8HP95A	1104.034.009	1104.700.038	Differential cover
8HP95A	1104.034.009	1087.700.079	Mechatronic
8HP95A	1104.034.009	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.009	1102.700.035	Mechatronic
8HP95A	1104.034.009	1104.700.043	Oil pan
8HP95A	1104.034.009	1104.700.039	Converter Bell
8HP95A	1104.034.009	1103.700.033	Intermediate housing
8HP95A	1104.034.009	1104.700.084	Intermediate housing
8HP95A	1104.034.009	1091.700.118	Intermediate plate
8HP95A	1104.034.010	1104.700.038	Differential cover
8HP95A	1104.034.011	1104.700.038	Differential cover
8HP95A	1104.034.011	1087.700.079	Mechatronic
8HP95A	1104.034.011	1102.700.034	Mechatronic
8HP95A	1104.034.011	1102.700.035	Mechatronic
8HP95A	1104.034.011	1104.700.043	Oil pan
8HP95A	1104.034.011	1104.700.039	Converter Bell
8HP95A	1104.034.011	1103.700.033	Intermediate housing
8HP95A	1104.034.011	1104.700.084	Intermediate housing
8HP95A	1104.034.011	1091.700.118	Intermediate plate
8HP95A	1104.034.012	1104.700.038	Differential cover
8HP95A	1104.034.013	1104.700.038	Differential cover
8HP95A	1104.034.014	1104.700.038	Differential cover
8HP95A	1104.034.014	1102.700.034	Mechatronic
8HP95A	1104.034.014	1102.700.035	Mechatronic
8HP95A	1104.034.014	1104.700.043	Oil pan
8HP95A	1104.034.014	1104.700.039	Converter Bell
8HP95A	1104.034.014	1103.700.033	Intermediate housing
8HP95A	1104.034.014	1104.700.084	Intermediate housing
8HP95A	1104.034.014	1091.700.118	Intermediate plate
8HP95A	1104.034.015	1104.700.038	Differential cover
8HP95A	1104.034.015	1087.700.079	Mechatronic
8HP95A	1104.034.015	1102.700.034	Mechatronic
8HP95A	1104.034.015	1102.700.035	Mechatronic
8HP95A	1104.034.015	1104.700.043	Oil pan
8HP95A	1104.034.015	1104.700.039	Converter Bell
8HP95A	1104.034.015	1103.700.033	Intermediate housing
8HP95A	1104.034.015	1104.700.084	Intermediate housing
8HP95A	1104.034.015	1091.700.118	Intermediate plate
8HP95A	1104.034.016	1104.700.038	Differential cover
8HP95A	1104.034.016	1087.700.079	Mechatronic
8HP95A	1104.034.016	1102.700.034	Mechatronic
8HP95A	1104.034.016	1102.700.035	Mechatronic
8HP95A	1104.034.016	1104.700.043	Oil pan
8HP95A	1104.034.016	1104.700.039	Converter Bell
8HP95A	1104.034.016	1103.700.033	Intermediate housing
8HP95A	1104.034.016	1104.700.084	Intermediate housing
8HP95A	1104.034.016	1091.700.118	Intermediate plate
8HP95A	1104.034.017	1104.700.038	Differential cover
8HP95A	1104.034.017	1087.700.079	Mechatronic
8HP95A	1104.034.017	1102.700.034	Mechatronic
8HP95A	1104.034.017	1102.700.035	Mechatronic
8HP95A	1104.034.017	1104.700.043	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.017	1104.700.039	Converter Bell
8HP95A	1104.034.017	1103.700.033	Intermediate housing
8HP95A	1104.034.017	1104.700.084	Intermediate housing
8HP95A	1104.034.017	1091.700.118	Intermediate plate
8HP95A	1104.034.018	1104.700.038	Differential cover
8HP95A	1104.034.018	1087.700.079	Mechatronic
8HP95A	1104.034.018	1102.700.034	Mechatronic
8HP95A	1104.034.018	1102.700.035	Mechatronic
8HP95A	1104.034.018	1104.700.043	Oil pan
8HP95A	1104.034.018	1104.700.039	Converter Bell
8HP95A	1104.034.018	1103.700.033	Intermediate housing
8HP95A	1104.034.018	1104.700.084	Intermediate housing
8HP95A	1104.034.018	1091.700.118	Intermediate plate
8HP95A	1104.034.019	1104.700.038	Differential cover
8HP95A	1104.034.019	1102.700.034	Mechatronic
8HP95A	1104.034.019	1102.700.035	Mechatronic
8HP95A	1104.034.019	1104.700.043	Oil pan
8HP95A	1104.034.019	1104.700.039	Converter Bell
8HP95A	1104.034.019	1103.700.033	Intermediate housing
8HP95A	1104.034.019	1104.700.084	Intermediate housing
8HP95A	1104.034.019	1091.700.118	Intermediate plate
8HP95A	1104.034.020	1104.700.038	Differential cover
8HP95A	1104.034.020	1087.700.079	Mechatronic
8HP95A	1104.034.020	1102.700.034	Mechatronic
8HP95A	1104.034.020	1102.700.035	Mechatronic
8HP95A	1104.034.020	1104.700.043	Oil pan
8HP95A	1104.034.020	1104.700.039	Converter Bell
8HP95A	1104.034.020	1103.700.033	Intermediate housing
8HP95A	1104.034.020	1104.700.084	Intermediate housing
8HP95A	1104.034.020	1091.700.118	Intermediate plate
8HP95A	1104.034.021	1104.700.038	Differential cover
8HP95A	1104.034.021	1087.700.079	Mechatronic
8HP95A	1104.034.021	1102.700.034	Mechatronic
8HP95A	1104.034.021	1102.700.035	Mechatronic
8HP95A	1104.034.021	1104.700.043	Oil pan
8HP95A	1104.034.021	1104.700.039	Converter Bell
8HP95A	1104.034.021	1103.700.033	Intermediate housing
8HP95A	1104.034.021	1104.700.084	Intermediate housing
8HP95A	1104.034.021	1091.700.118	Intermediate plate
8HP95A	1104.034.022	1104.700.038	Differential cover
8HP95A	1104.034.022	1102.700.034	Mechatronic
8HP95A	1104.034.022	1102.700.035	Mechatronic
8HP95A	1104.034.022	1104.700.043	Oil pan
8HP95A	1104.034.022	1104.700.039	Converter Bell
8HP95A	1104.034.022	1103.700.033	Intermediate housing
8HP95A	1104.034.022	1104.700.084	Intermediate housing
8HP95A	1104.034.022	1091.700.118	Intermediate plate
8HP95A	1104.034.023	1104.700.038	Differential cover
8HP95A	1104.034.023	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.023	1102.700.035	Mechatronic
8HP95A	1104.034.023	1104.700.043	Oil pan
8HP95A	1104.034.023	1104.700.039	Converter Bell
8HP95A	1104.034.023	1103.700.033	Intermediate housing
8HP95A	1104.034.023	1104.700.084	Intermediate housing
8HP95A	1104.034.023	1091.700.118	Intermediate plate
8HP95A	1104.034.024	1104.700.038	Differential cover
8HP95A	1104.034.024	1102.700.034	Mechatronic
8HP95A	1104.034.024	1102.700.035	Mechatronic
8HP95A	1104.034.024	1104.700.043	Oil pan
8HP95A	1104.034.024	1104.700.039	Converter Bell
8HP95A	1104.034.024	1103.700.033	Intermediate housing
8HP95A	1104.034.024	1104.700.084	Intermediate housing
8HP95A	1104.034.024	1091.700.118	Intermediate plate
8HP95A	1104.034.025	1104.700.038	Differential cover
8HP95A	1104.034.025	1102.700.034	Mechatronic
8HP95A	1104.034.025	1102.700.035	Mechatronic
8HP95A	1104.034.025	1104.700.043	Oil pan
8HP95A	1104.034.025	1104.700.039	Converter Bell
8HP95A	1104.034.025	1103.700.033	Intermediate housing
8HP95A	1104.034.025	1104.700.084	Intermediate housing
8HP95A	1104.034.025	1091.700.118	Intermediate plate
8HP95A	1104.034.026	1104.700.038	Differential cover
8HP95A	1104.034.026	1087.700.079	Mechatronic
8HP95A	1104.034.026	1102.700.034	Mechatronic
8HP95A	1104.034.026	1102.700.035	Mechatronic
8HP95A	1104.034.026	1104.700.043	Oil pan
8HP95A	1104.034.026	1104.700.039	Converter Bell
8HP95A	1104.034.026	1103.700.033	Intermediate housing
8HP95A	1104.034.026	1104.700.084	Intermediate housing
8HP95A	1104.034.026	1091.700.118	Intermediate plate
8HP95A	1104.034.027	1104.700.038	Differential cover
8HP95A	1104.034.027	1102.700.034	Mechatronic
8HP95A	1104.034.027	1102.700.035	Mechatronic
8HP95A	1104.034.027	1104.700.043	Oil pan
8HP95A	1104.034.027	1104.700.039	Converter Bell
8HP95A	1104.034.027	1103.700.033	Intermediate housing
8HP95A	1104.034.027	1104.700.084	Intermediate housing
8HP95A	1104.034.027	1091.700.118	Intermediate plate
8HP95A	1104.034.028	1104.700.038	Differential cover
8HP95A	1104.034.028	1087.700.079	Mechatronic
8HP95A	1104.034.028	1102.700.034	Mechatronic
8HP95A	1104.034.028	1102.700.035	Mechatronic
8HP95A	1104.034.028	1104.700.043	Oil pan
8HP95A	1104.034.028	1104.700.039	Converter Bell
8HP95A	1104.034.028	1103.700.033	Intermediate housing
8HP95A	1104.034.028	1104.700.084	Intermediate housing
8HP95A	1104.034.028	1091.700.118	Intermediate plate
8HP95A	1104.034.029	1104.700.038	Differential cover



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.029	1102.700.034	Mechatronic
8HP95A	1104.034.029	1102.700.035	Mechatronic
8HP95A	1104.034.029	1104.700.043	Oil pan
8HP95A	1104.034.029	1104.700.039	Converter Bell
8HP95A	1104.034.029	1103.700.033	Intermediate housing
8HP95A	1104.034.029	1104.700.084	Intermediate housing
8HP95A	1104.034.029	1091.700.118	Intermediate plate
8HP95A	1104.034.030	1104.700.038	Differential cover
8HP95A	1104.034.031	1104.700.038	Differential cover
8HP95A	1104.034.032	1104.700.038	Differential cover
8HP95A	1104.034.032	1102.700.034	Mechatronic
8HP95A	1104.034.032	1102.700.035	Mechatronic
8HP95A	1104.034.032	1104.700.043	Oil pan
8HP95A	1104.034.032	1104.700.039	Converter Bell
8HP95A	1104.034.032	1103.700.033	Intermediate housing
8HP95A	1104.034.032	1104.700.084	Intermediate housing
8HP95A	1104.034.032	1091.700.118	Intermediate plate
8HP95A	1104.034.033	1104.700.038	Differential cover
8HP95A	1104.034.033	1102.700.034	Mechatronic
8HP95A	1104.034.033	1102.700.035	Mechatronic
8HP95A	1104.034.033	1104.700.043	Oil pan
8HP95A	1104.034.033	1104.700.039	Converter Bell
8HP95A	1104.034.033	1103.700.033	Intermediate housing
8HP95A	1104.034.033	1104.700.084	Intermediate housing
8HP95A	1104.034.033	1091.700.118	Intermediate plate
8HP95A	1104.034.034	1104.700.038	Differential cover
8HP95A	1104.034.034	1102.700.034	Mechatronic
8HP95A	1104.034.034	1102.700.035	Mechatronic
8HP95A	1104.034.034	1104.700.043	Oil pan
8HP95A	1104.034.034	1104.700.039	Converter Bell
8HP95A	1104.034.034	1103.700.033	Intermediate housing
8HP95A	1104.034.034	1104.700.084	Intermediate housing
8HP95A	1104.034.034	1091.700.118	Intermediate plate
8HP95A	1104.034.035	1104.700.038	Differential cover
8HP95A	1104.034.035	1102.700.034	Mechatronic
8HP95A	1104.034.035	1102.700.035	Mechatronic
8HP95A	1104.034.035	1104.700.043	Oil pan
8HP95A	1104.034.035	1104.700.039	Converter Bell
8HP95A	1104.034.035	1103.700.033	Intermediate housing
8HP95A	1104.034.035	1104.700.084	Intermediate housing
8HP95A	1104.034.035	1091.700.118	Intermediate plate
8HP95A	1104.034.036	1104.700.038	Differential cover
8HP95A	1104.034.036	1102.700.034	Mechatronic
8HP95A	1104.034.036	1102.700.035	Mechatronic
8HP95A	1104.034.036	1104.700.043	Oil pan
8HP95A	1104.034.036	1104.700.039	Converter Bell
8HP95A	1104.034.036	1103.700.033	Intermediate housing
8HP95A	1104.034.036	1104.700.084	Intermediate housing
8HP95A	1104.034.036	1091.700.118	Intermediate plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.037	1104.700.038	Differential cover
8HP95A	1104.034.037	1102.700.034	Mechatronic
8HP95A	1104.034.037	1102.700.035	Mechatronic
8HP95A	1104.034.037	1104.700.043	Oil pan
8HP95A	1104.034.037	1104.700.039	Converter Bell
8HP95A	1104.034.037	1103.700.033	Intermediate housing
8HP95A	1104.034.037	1104.700.084	Intermediate housing
8HP95A	1104.034.037	1091.700.118	Intermediate plate
8HP95A	1104.034.038	1104.700.038	Differential cover
8HP95A	1104.034.038	1087.700.079	Mechatronic
8HP95A	1104.034.038	1102.700.034	Mechatronic
8HP95A	1104.034.038	1102.700.035	Mechatronic
8HP95A	1104.034.038	1104.700.043	Oil pan
8HP95A	1104.034.038	1104.700.039	Converter Bell
8HP95A	1104.034.038	1103.700.033	Intermediate housing
8HP95A	1104.034.038	1104.700.084	Intermediate housing
8HP95A	1104.034.038	1091.700.118	Intermediate plate
8HP95A	1104.034.039	1104.700.038	Differential cover
8HP95A	1104.034.039	1087.700.079	Mechatronic
8HP95A	1104.034.039	1102.700.034	Mechatronic
8HP95A	1104.034.039	1102.700.035	Mechatronic
8HP95A	1104.034.039	1104.700.043	Oil pan
8HP95A	1104.034.039	1104.700.039	Converter Bell
8HP95A	1104.034.039	1103.700.033	Intermediate housing
8HP95A	1104.034.039	1104.700.084	Intermediate housing
8HP95A	1104.034.039	1091.700.118	Intermediate plate
8HP95A	1104.034.040	1104.700.038	Differential cover
8HP95A	1104.034.042	1104.700.038	Differential cover
8HP95A	1104.034.042	1102.700.034	Mechatronic
8HP95A	1104.034.042	1102.700.035	Mechatronic
8HP95A	1104.034.042	1104.700.043	Oil pan
8HP95A	1104.034.042	1104.700.039	Converter Bell
8HP95A	1104.034.042	1103.700.033	Intermediate housing
8HP95A	1104.034.042	1104.700.084	Intermediate housing
8HP95A	1104.034.042	1091.700.118	Intermediate plate
8HP95A	1104.034.043	1104.700.038	Differential cover
8HP95A	1104.034.043	1102.700.034	Mechatronic
8HP95A	1104.034.043	1102.700.035	Mechatronic
8HP95A	1104.034.043	1104.700.043	Oil pan
8HP95A	1104.034.043	1104.700.039	Converter Bell
8HP95A	1104.034.043	1103.700.033	Intermediate housing
8HP95A	1104.034.043	1104.700.084	Intermediate housing
8HP95A	1104.034.043	1091.700.118	Intermediate plate
8HP95A	1104.034.044	1104.700.038	Differential cover
8HP95A	1104.034.044	1102.700.034	Mechatronic
8HP95A	1104.034.044	1102.700.035	Mechatronic
8HP95A	1104.034.044	1104.700.043	Oil pan
8HP95A	1104.034.044	1104.700.039	Converter Bell
8HP95A	1104.034.044	1103.700.033	Intermediate housing



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.044	1104.700.084	Intermediate housing
8HP95A	1104.034.044	1091.700.118	Intermediate plate
8HP95A	1104.034.045	1104.700.038	Differential cover
8HP95A	1104.034.045	1087.700.079	Mechatronic
8HP95A	1104.034.045	1102.700.034	Mechatronic
8HP95A	1104.034.045	1102.700.035	Mechatronic
8HP95A	1104.034.045	1104.700.043	Oil pan
8HP95A	1104.034.045	1104.700.039	Converter Bell
8HP95A	1104.034.045	1103.700.033	Intermediate housing
8HP95A	1104.034.045	1104.700.084	Intermediate housing
8HP95A	1104.034.045	1091.700.118	Intermediate plate
8HP95A	1104.034.046	1104.700.038	Differential cover
8HP95A	1104.034.047	1104.700.038	Differential cover
8HP95A	1104.034.047	1087.700.079	Mechatronic
8HP95A	1104.034.047	1102.700.034	Mechatronic
8HP95A	1104.034.047	1102.700.035	Mechatronic
8HP95A	1104.034.047	1104.700.043	Oil pan
8HP95A	1104.034.047	1104.700.039	Converter Bell
8HP95A	1104.034.047	1103.700.033	Intermediate housing
8HP95A	1104.034.047	1104.700.084	Intermediate housing
8HP95A	1104.034.047	1091.700.118	Intermediate plate
8HP95A	1104.034.048	1104.700.038	Differential cover
8HP95A	1104.034.048	1087.700.079	Mechatronic
8HP95A	1104.034.048	1102.700.034	Mechatronic
8HP95A	1104.034.048	1102.700.035	Mechatronic
8HP95A	1104.034.048	1104.700.043	Oil pan
8HP95A	1104.034.048	1104.700.039	Converter Bell
8HP95A	1104.034.048	1103.700.033	Intermediate housing
8HP95A	1104.034.048	1104.700.084	Intermediate housing
8HP95A	1104.034.048	1091.700.118	Intermediate plate
8HP95A	1104.034.049	1104.700.038	Differential cover
8HP95A	1104.034.049	1102.700.034	Mechatronic
8HP95A	1104.034.049	1102.700.035	Mechatronic
8HP95A	1104.034.049	1104.700.043	Oil pan
8HP95A	1104.034.049	1104.700.039	Converter Bell
8HP95A	1104.034.049	1103.700.033	Intermediate housing
8HP95A	1104.034.049	1104.700.084	Intermediate housing
8HP95A	1104.034.049	1091.700.118	Intermediate plate
8HP95A	1104.034.050	1104.700.038	Differential cover
8HP95A	1104.034.050	1102.700.034	Mechatronic
8HP95A	1104.034.050	1102.700.035	Mechatronic
8HP95A	1104.034.050	1104.700.043	Oil pan
8HP95A	1104.034.050	1104.700.039	Converter Bell
8HP95A	1104.034.050	1103.700.033	Intermediate housing
8HP95A	1104.034.050	1104.700.084	Intermediate housing
8HP95A	1104.034.050	1091.700.118	Intermediate plate
8HP95A	1104.034.051	1104.700.038	Differential cover
8HP95A	1104.034.051	1102.700.034	Mechatronic
8HP95A	1104.034.051	1102.700.035	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.051	1104.700.043	Oil pan
8HP95A	1104.034.051	1104.700.039	Converter Bell
8HP95A	1104.034.051	1103.700.033	Intermediate housing
8HP95A	1104.034.051	1104.700.084	Intermediate housing
8HP95A	1104.034.051	1091.700.118	Intermediate plate
8HP95A	1104.034.052	1104.700.038	Differential cover
8HP95A	1104.034.052	1087.700.079	Mechatronic
8HP95A	1104.034.052	1102.700.034	Mechatronic
8HP95A	1104.034.052	1102.700.035	Mechatronic
8HP95A	1104.034.052	1104.700.043	Oil pan
8HP95A	1104.034.052	1104.700.039	Converter Bell
8HP95A	1104.034.052	1103.700.033	Intermediate housing
8HP95A	1104.034.052	1104.700.084	Intermediate housing
8HP95A	1104.034.052	1091.700.118	Intermediate plate
8HP95A	1104.034.053	1104.700.038	Differential cover
8HP95A	1104.034.053	1102.700.034	Mechatronic
8HP95A	1104.034.053	1102.700.035	Mechatronic
8HP95A	1104.034.053	1104.700.043	Oil pan
8HP95A	1104.034.053	1104.700.039	Converter Bell
8HP95A	1104.034.053	1103.700.033	Intermediate housing
8HP95A	1104.034.053	1104.700.084	Intermediate housing
8HP95A	1104.034.053	1091.700.118	Intermediate plate
8HP95A	1104.034.054	1104.700.038	Differential cover
8HP95A	1104.034.055	1104.700.038	Differential cover
8HP95A	1104.034.055	1102.700.034	Mechatronic
8HP95A	1104.034.055	1102.700.035	Mechatronic
8HP95A	1104.034.055	1104.700.043	Oil pan
8HP95A	1104.034.055	1104.700.039	Converter Bell
8HP95A	1104.034.055	1103.700.033	Intermediate housing
8HP95A	1104.034.055	1104.700.084	Intermediate housing
8HP95A	1104.034.055	1091.700.118	Intermediate plate
8HP95A	1104.034.056	1104.700.038	Differential cover
8HP95A	1104.034.056	1102.700.034	Mechatronic
8HP95A	1104.034.056	1102.700.035	Mechatronic
8HP95A	1104.034.056	1104.700.043	Oil pan
8HP95A	1104.034.056	1104.700.039	Converter Bell
8HP95A	1104.034.056	1103.700.033	Intermediate housing
8HP95A	1104.034.056	1104.700.084	Intermediate housing
8HP95A	1104.034.056	1091.700.118	Intermediate plate
8HP95A	1104.034.057	1104.700.038	Differential cover
8HP95A	1104.034.057	1102.700.034	Mechatronic
8HP95A	1104.034.057	1102.700.035	Mechatronic
8HP95A	1104.034.057	1104.700.043	Oil pan
8HP95A	1104.034.057	1104.700.039	Converter Bell
8HP95A	1104.034.057	1103.700.033	Intermediate housing
8HP95A	1104.034.057	1104.700.084	Intermediate housing
8HP95A	1104.034.057	1091.700.118	Intermediate plate
8HP95A	1104.034.058	1104.700.038	Differential cover
8HP95A	1104.034.058	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95A	1104.034.058	1102.700.035	Mechatronic
8HP95A	1104.034.058	1104.700.043	Oil pan
8HP95A	1104.034.058	1104.700.039	Converter Bell
8HP95A	1104.034.058	1103.700.033	Intermediate housing
8HP95A	1104.034.058	1104.700.084	Intermediate housing
8HP95A	1104.034.058	1091.700.118	Intermediate plate
8HP95A	1104.034.059	1104.700.038	Differential cover
8HP95A	1104.034.059	1102.700.034	Mechatronic
8HP95A	1104.034.059	1102.700.035	Mechatronic
8HP95A	1104.034.059	1104.700.043	Oil pan
8HP95A	1104.034.059	1104.700.039	Converter Bell
8HP95A	1104.034.059	1103.700.033	Intermediate housing
8HP95A	1104.034.059	1104.700.084	Intermediate housing
8HP95A	1104.034.059	1091.700.118	Intermediate plate
8HP95AX	1104.040.001	1104.700.038	Differential cover
8HP95AX	1104.040.001	1102.700.034	Mechatronic
8HP95AX	1104.040.001	1102.700.035	Mechatronic
8HP95AX	1104.040.001	1104.700.043	Oil pan
8HP95AX	1104.040.001	1104.700.039	Converter Bell
8HP95AX	1104.040.001	1103.700.033	Intermediate housing
8HP95AX	1104.040.001	1104.700.084	Intermediate housing
8HP95AX	1104.040.001	1091.700.118	Intermediate plate
8HP95AX	1104.040.005	1104.700.038	Differential cover
8HP95AX	1104.040.006	1104.700.038	Differential cover
8HP95AX	1104.040.007	1104.700.038	Differential cover
8HP95AX	1104.040.008	1104.700.038	Differential cover
8HP95AX	1104.040.008	1102.700.034	Mechatronic
8HP95AX	1104.040.008	1102.700.035	Mechatronic
8HP95AX	1104.040.008	1104.700.043	Oil pan
8HP95AX	1104.040.008	1104.700.039	Converter Bell
8HP95AX	1104.040.008	1103.700.033	Intermediate housing
8HP95AX	1104.040.008	1104.700.084	Intermediate housing
8HP95AX	1104.040.008	1091.700.118	Intermediate plate
8HP95AX	1104.040.009	1104.700.038	Differential cover
8HP95AX	1104.040.010	1104.700.038	Differential cover
8HP95AX	1104.040.010	1102.700.034	Mechatronic
8HP95AX	1104.040.010	1102.700.035	Mechatronic
8HP95AX	1104.040.010	1104.700.043	Oil pan
8HP95AX	1104.040.010	1104.700.039	Converter Bell
8HP95AX	1104.040.010	1103.700.033	Intermediate housing
8HP95AX	1104.040.010	1104.700.084	Intermediate housing
8HP95AX	1104.040.010	1091.700.118	Intermediate plate
8HP95AX	1104.040.011	1104.700.038	Differential cover
8HP95AX	1104.040.011	1102.700.034	Mechatronic
8HP95AX	1104.040.011	1102.700.035	Mechatronic
8HP95AX	1104.040.011	1104.700.043	Oil pan
8HP95AX	1104.040.011	1104.700.039	Converter Bell
8HP95AX	1104.040.011	1103.700.033	Intermediate housing
8HP95AX	1104.040.011	1104.700.084	Intermediate housing



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95AX	1104.040.011	1091.700.118	Intermediate plate
8HP95AX	1104.040.012	1104.700.038	Differential cover
8HP95AX	1104.040.013	1104.700.038	Differential cover
8HP95AX	1104.040.013	1102.700.034	Mechatronic
8HP95AX	1104.040.013	1102.700.035	Mechatronic
8HP95AX	1104.040.013	1104.700.043	Oil pan
8HP95AX	1104.040.013	1104.700.039	Converter Bell
8HP95AX	1104.040.013	1103.700.033	Intermediate housing
8HP95AX	1104.040.013	1104.700.084	Intermediate housing
8HP95AX	1104.040.014	1104.700.038	Differential cover
8HP95AX	1104.040.015	1104.700.038	Differential cover
8HP95AX	1104.040.015	1102.700.034	Mechatronic
8HP95AX	1104.040.015	1102.700.035	Mechatronic
8HP95AX	1104.040.015	1104.700.043	Oil pan
8HP95AX	1104.040.015	1104.700.039	Converter Bell
8HP95AX	1104.040.015	1103.700.033	Intermediate housing
8HP95AX	1104.040.015	1104.700.084	Intermediate housing
8HP95AX	1104.040.015	1091.700.118	Intermediate plate
8HP95AX	1104.040.016	1104.700.038	Differential cover
8HP95AX	1104.040.017	1104.700.038	Differential cover
8HP95AX	1104.040.017	1102.700.034	Mechatronic
8HP95AX	1104.040.017	1102.700.035	Mechatronic
8HP95AX	1104.040.017	1104.700.043	Oil pan
8HP95AX	1104.040.017	1104.700.039	Converter Bell
8HP95AX	1104.040.017	1103.700.033	Intermediate housing
8HP95AX	1104.040.017	1104.700.084	Intermediate housing
8HP95AX	1104.040.017	1091.700.118	Intermediate plate
8HP95AX	1104.040.018	1104.700.038	Differential cover
8HP95AX	1104.040.018	1102.700.034	Mechatronic
8HP95AX	1104.040.018	1102.700.035	Mechatronic
8HP95AX	1104.040.018	1104.700.043	Oil pan
8HP95AX	1104.040.018	1104.700.039	Converter Bell
8HP95AX	1104.040.018	1103.700.033	Intermediate housing
8HP95AX	1104.040.018	1104.700.084	Intermediate housing
8HP95AX	1104.040.018	1091.700.118	Intermediate plate
8HP95AX	1104.040.019	1104.700.038	Differential cover
8HP95AX	1104.040.020	1104.700.038	Differential cover
8HP95AX	1104.040.020	1102.700.034	Mechatronic
8HP95AX	1104.040.020	1102.700.035	Mechatronic
8HP95AX	1104.040.020	1104.700.043	Oil pan
8HP95AX	1104.040.020	1104.700.039	Converter Bell
8HP95AX	1104.040.020	1103.700.033	Intermediate housing
8HP95AX	1104.040.020	1104.700.084	Intermediate housing
8HP95AX	1104.040.020	1091.700.118	Intermediate plate
8HP95AX	1104.040.021	1104.700.038	Differential cover
8HP95AX	1104.040.021	1102.700.034	Mechatronic
8HP95AX	1104.040.021	1102.700.035	Mechatronic
8HP95AX	1104.040.021	1104.700.043	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
242/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95AX	1104.040.021	1104.700.039	Converter Bell
8HP95AX	1104.040.021	1103.700.033	Intermediate housing
8HP95AX	1104.040.021	1104.700.084	Intermediate housing
8HP95AX	1104.040.021	1091.700.118	Intermediate plate
8HP95AX	1104.040.022	1104.700.038	Differential cover
8HP95AX	1104.040.022	1087.700.079	Mechatronic
8HP95AX	1104.040.022	1102.700.034	Mechatronic
8HP95AX	1104.040.022	1102.700.035	Mechatronic
8HP95AX	1104.040.022	1104.700.043	Oil pan
8HP95AX	1104.040.022	1104.700.039	Converter Bell
8HP95AX	1104.040.022	1103.700.033	Intermediate housing
8HP95AX	1104.040.022	1104.700.084	Intermediate housing
8HP95AX	1104.040.022	1091.700.118	Intermediate plate
8HP95AX	1104.040.023	1104.700.038	Differential cover
8HP95AX	1104.040.023	1102.700.034	Mechatronic
8HP95AX	1104.040.023	1104.700.043	Oil pan
8HP95AX	1104.040.023	1104.700.039	Converter Bell
8HP95AX	1104.040.023	1103.700.033	Intermediate housing
8HP95AX	1104.040.023	1104.700.084	Intermediate housing
8HP95AX	1104.040.023	1091.700.118	Intermediate plate
8HP95AX	1104.040.026	1104.700.038	Differential cover
8HP95AX	1104.040.026	1087.700.079	Mechatronic
8HP95AX	1104.040.026	1102.700.034	Mechatronic
8HP95AX	1104.040.026	1102.700.035	Mechatronic
8HP95AX	1104.040.026	1104.700.043	Oil pan
8HP95AX	1104.040.026	1104.700.039	Converter Bell
8HP95AX	1104.040.026	1103.700.033	Intermediate housing
8HP95AX	1104.040.026	1104.700.084	Intermediate housing
8HP95AX	1104.040.026	1091.700.118	Intermediate plate
8HP95AX	1104.040.027	1104.700.038	Differential cover
8HP95AX	1104.040.027	1102.700.034	Mechatronic
8HP95AX	1104.040.027	1104.700.043	Oil pan
8HP95AX	1104.040.027	1104.700.039	Converter Bell
8HP95AX	1104.040.027	1103.700.033	Intermediate housing
8HP95AX	1104.040.027	1104.700.084	Intermediate housing
8HP95AX	1104.040.027	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.001	1104.700.038	Differential cover
8HP95AXPH	1104.060.001	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.001	1103.700.097	Converter
8HP95AXPH	1104.060.002	1104.700.038	Differential cover
8HP95AXPH	1104.060.002	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.002	1103.700.097	Converter
8HP95AXPH	1104.060.003	1104.700.038	Differential cover
8HP95AXPH	1104.060.003	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.003	1103.700.097	Converter
8HP95AXPH	1104.060.004	1104.700.038	Differential cover
8HP95AXPH	1104.060.004	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.004	1103.700.097	Converter
8HP95AXPH	1104.060.005	1104.700.038	Differential cover



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
243/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95AXPH	1104.060.005	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.005	1103.700.097	Converter
8HP95AXPH	1104.060.006	1104.700.038	Differential cover
8HP95AXPH	1104.060.006	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.006	1103.700.097	Converter
8HP95AXPH	1104.060.007	1104.700.038	Differential cover
8HP95AXPH	1104.060.007	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.007	1102.700.034	Mechatronic
8HP95AXPH	1104.060.007	1102.700.035	Mechatronic
8HP95AXPH	1104.060.007	1104.700.043	Oil pan
8HP95AXPH	1104.060.007	1103.700.097	Converter
8HP95AXPH	1104.060.007	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.007	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.007	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.008	1104.700.038	Differential cover
8HP95AXPH	1104.060.008	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.008	1102.700.034	Mechatronic
8HP95AXPH	1104.060.008	1102.700.035	Mechatronic
8HP95AXPH	1104.060.008	1104.700.043	Oil pan
8HP95AXPH	1104.060.008	1103.700.097	Converter
8HP95AXPH	1104.060.008	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.008	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.008	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.009	1104.700.038	Differential cover
8HP95AXPH	1104.060.009	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.009	1103.700.097	Converter
8HP95AXPH	1104.060.010	1104.700.038	Differential cover
8HP95AXPH	1104.060.010	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.010	1102.700.034	Mechatronic
8HP95AXPH	1104.060.010	1102.700.035	Mechatronic
8HP95AXPH	1104.060.010	1104.700.043	Oil pan
8HP95AXPH	1104.060.010	1103.700.097	Converter
8HP95AXPH	1104.060.010	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.010	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.010	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.011	1104.700.038	Differential cover
8HP95AXPH	1104.060.011	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.011	1102.700.034	Mechatronic
8HP95AXPH	1104.060.011	1102.700.035	Mechatronic
8HP95AXPH	1104.060.011	1104.700.043	Oil pan
8HP95AXPH	1104.060.011	1103.700.097	Converter
8HP95AXPH	1104.060.011	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.011	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.011	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.012	1104.700.038	Differential cover
8HP95AXPH	1104.060.012	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.012	1102.700.034	Mechatronic
8HP95AXPH	1104.060.012	1102.700.035	Mechatronic
8HP95AXPH	1104.060.012	1104.700.043	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP95AXPH	1104.060.012	1103.700.097	Converter
8HP95AXPH	1104.060.012	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.012	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.012	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.013	1104.700.038	Differential cover
8HP95AXPH	1104.060.013	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.013	1102.700.034	Mechatronic
8HP95AXPH	1104.060.013	1102.700.035	Mechatronic
8HP95AXPH	1104.060.013	1104.700.043	Oil pan
8HP95AXPH	1104.060.013	1103.700.097	Converter
8HP95AXPH	1104.060.013	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.013	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.013	1091.700.118	Intermediate plate
8HP95AXPH	1104.060.016	1104.700.038	Differential cover
8HP95AXPH	1104.060.016	1104.700.054	Hybrid drive
8HP95AXPH	1104.060.016	1102.700.034	Mechatronic
8HP95AXPH	1104.060.016	1102.700.035	Mechatronic
8HP95AXPH	1104.060.016	1104.700.043	Oil pan
8HP95AXPH	1104.060.016	1103.700.097	Converter
8HP95AXPH	1104.060.016	1103.700.033	Intermediate housing
8HP95AXPH	1104.060.016	1104.700.084	Intermediate housing
8HP95AXPH	1104.060.016	1091.700.118	Intermediate plate

Tab. 32 Model 1104



ZF Aftermarket Service Information

22.9 Model 1105

Transmission type	Parts list (BoM)	Specification	Assembly
8HP70L	1105.010.004	1087.700.079	Mechatronic
8HP70L	1105.010.004	1087.700.136	Oil pan
8HP70L	1105.010.004	1087.700.133	Intermediate plate
8HP70L	1105.010.005	1087.700.079	Mechatronic
8HP70L	1105.010.005	1087.700.136	Oil pan
8HP70L	1105.010.005	1087.700.133	Intermediate plate
8HP70L	1105.010.008	1087.700.079	Mechatronic
8HP70L	1105.010.008	1087.700.136	Oil pan
8HP70L	1105.010.008	1087.700.133	Intermediate plate
8HP70L	1105.010.009	1087.700.079	Mechatronic
8HP70L	1105.010.009	1087.700.136	Oil pan
8HP70L	1105.010.009	1087.700.133	Intermediate plate
8HP70L	1105.010.010	1087.700.079	Mechatronic
8HP70L	1105.010.010	1087.700.136	Oil pan
8HP70L	1105.010.010	1087.700.133	Intermediate plate
8HP70L	1105.010.011	1087.700.079	Mechatronic
8HP70L	1105.010.011	1087.700.136	Oil pan
8HP70L	1105.010.011	1087.700.133	Intermediate plate
8HP70L	1105.010.012	1087.700.079	Mechatronic
8HP70L	1105.010.012	1087.700.136	Oil pan
8HP70L	1105.010.012	1087.700.133	Intermediate plate
8HP70L	1105.010.015	1087.700.079	Mechatronic
8HP70L	1105.010.015	1087.700.136	Oil pan
8HP70L	1105.010.015	1087.700.133	Intermediate plate
8HP70L	1105.010.017	1087.700.079	Mechatronic
8HP70L	1105.010.017	1087.700.136	Oil pan
8HP70L	1105.010.017	1087.700.133	Intermediate plate
8HP70L	1105.010.021	1087.700.079	Mechatronic
8HP70L	1105.010.021	1087.700.136	Oil pan
8HP70L	1105.010.021	1087.700.133	Intermediate plate
8HP70L	1105.010.022	1087.700.079	Mechatronic
8HP70L	1105.010.022	1087.700.136	Oil pan
8HP70L	1105.010.022	1087.700.133	Intermediate plate
8HP70L HIS	1105.014.002	1087.700.079	Mechatronic
8HP70L HIS	1105.014.002	1087.700.136	Oil pan
8HP70L HIS	1105.014.002	1087.700.133	Intermediate plate
8HP70L HIS	1105.014.005	1087.700.079	Mechatronic
8HP70L HIS	1105.014.005	1087.700.136	Oil pan
8HP70L HIS	1105.014.005	1087.700.133	Intermediate plate
8HP470L	1105.030.001	1102.700.034	Mechatronic
8HP470L	1105.030.001	1102.700.035	Mechatronic
8HP470L	1105.030.001	1087.700.136	Oil pan
8HP470L	1105.030.001	1102.700.067	Intermediate plate
8HP470L	1105.030.002	1102.700.034	Mechatronic
8HP470L	1105.030.002	1102.700.035	Mechatronic
8HP470L	1105.030.002	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
246/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP470L	1105.030.002	1102.700.067	Intermediate plate
8HP470L	1105.030.004	1102.700.034	Mechatronic
8HP470L	1105.030.004	1102.700.035	Mechatronic
8HP470L	1105.030.004	1087.700.136	Oil pan
8HP470L	1105.030.004	1102.700.067	Intermediate plate
8HP470L	1105.030.005	1102.700.034	Mechatronic
8HP470L	1105.030.005	1102.700.035	Mechatronic
8HP470L	1105.030.005	1087.700.136	Oil pan
8HP470L	1105.030.005	1102.700.067	Intermediate plate
8HP470L HIS	1105.034.001	1102.700.034	Mechatronic
8HP470L HIS	1105.034.001	1102.700.035	Mechatronic
8HP470L HIS	1105.034.001	1087.700.136	Oil pan
8HP470L HIS	1105.034.001	1102.700.067	Intermediate plate
8HP470L HIS	1105.034.002	1102.700.034	Mechatronic
8HP470L HIS	1105.034.002	1102.700.035	Mechatronic
8HP470L HIS	1105.034.002	1087.700.136	Oil pan
8HP470L HIS	1105.034.002	1102.700.067	Intermediate plate
8HP470LX	1105.040.001	1102.700.034	Mechatronic
8HP470LX	1105.040.001	1102.700.035	Mechatronic
8HP470LX	1105.040.001	1087.700.136	Oil pan
8HP470LX	1105.040.001	1102.700.067	Intermediate plate
8HP470LX	1105.040.003	1102.700.034	Mechatronic
8HP470LX	1105.040.003	1102.700.035	Mechatronic
8HP470LX	1105.040.003	1087.700.136	Oil pan
8HP470LX	1105.040.003	1102.700.067	Intermediate plate
8HP470LX	1105.040.004	1102.700.034	Mechatronic
8HP470LX	1105.040.004	1102.700.035	Mechatronic
8HP470LX	1105.040.004	1087.700.136	Oil pan
8HP470LX	1105.040.004	1102.700.067	Intermediate plate
8HP470LX	1105.040.005	1102.700.034	Mechatronic
8HP470LX	1105.040.005	1102.700.035	Mechatronic
8HP470LX	1105.040.005	1087.700.136	Oil pan
8HP470LX	1105.040.005	1102.700.067	Intermediate plate
8HP470LX	1105.040.006	1102.700.034	Mechatronic
8HP470LX	1105.040.006	1102.700.035	Mechatronic
8HP470LX	1105.040.006	1087.700.136	Oil pan
8HP470LX	1105.040.006	1102.700.067	Intermediate plate

Tab. 33 Model 1105



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
247/312

ZF Aftermarket Service Information

22.10 Model 1109

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76	1109.014.003	1102.700.034	Mechatronic
8HP76	1109.014.003	1102.700.035	Mechatronic
8HP76	1109.014.003	1087.700.136	Oil pan
8HP76	1109.014.003	1102.700.067	Intermediate plate
8HP76	1109.014.004	1102.700.034	Mechatronic
8HP76	1109.014.004	1102.700.035	Mechatronic
8HP76	1109.014.004	1087.700.136	Oil pan
8HP76	1109.014.004	1102.700.067	Intermediate plate
8HP76	1109.014.012	1102.700.034	Mechatronic
8HP76	1109.014.012	1102.700.035	Mechatronic
8HP76	1109.014.012	1087.700.136	Oil pan
8HP76	1109.014.012	1102.700.067	Intermediate plate
8HP76	1109.014.013	1102.700.034	Mechatronic
8HP76	1109.014.013	1102.700.035	Mechatronic
8HP76	1109.014.013	1087.700.136	Oil pan
8HP76	1109.014.013	1102.700.067	Intermediate plate
8HP76	1109.014.014	1102.700.034	Mechatronic
8HP76	1109.014.014	1102.700.035	Mechatronic
8HP76	1109.014.014	1087.700.136	Oil pan
8HP76	1109.014.014	1102.700.067	Intermediate plate
8HP76	1109.014.018	1102.700.034	Mechatronic
8HP76	1109.014.018	1102.700.035	Mechatronic
8HP76	1109.014.018	1087.700.136	Oil pan
8HP76	1109.014.018	1102.700.067	Intermediate plate
8HP76	1109.014.019	1102.700.034	Mechatronic
8HP76	1109.014.019	1102.700.035	Mechatronic
8HP76	1109.014.019	1087.700.136	Oil pan
8HP76	1109.014.019	1102.700.067	Intermediate plate
8HP76	1109.014.020	1102.700.034	Mechatronic
8HP76	1109.014.020	1102.700.035	Mechatronic
8HP76	1109.014.020	1087.700.136	Oil pan
8HP76	1109.014.020	1102.700.067	Intermediate plate
8HP76	1109.014.021	1102.700.034	Mechatronic
8HP76	1109.014.021	1102.700.035	Mechatronic
8HP76	1109.014.021	1087.700.136	Oil pan
8HP76	1109.014.021	1102.700.067	Intermediate plate
8HP76	1109.014.022	1102.700.034	Mechatronic
8HP76	1109.014.022	1102.700.035	Mechatronic
8HP76	1109.014.022	1087.700.136	Oil pan
8HP76	1109.014.022	1102.700.067	Intermediate plate
8HP76	1109.014.023	1102.700.034	Mechatronic
8HP76	1109.014.023	1102.700.035	Mechatronic
8HP76	1109.014.023	1087.700.136	Oil pan
8HP76	1109.014.023	1102.700.067	Intermediate plate
8HP76	1109.014.024	1102.700.034	Mechatronic
8HP76	1109.014.024	1102.700.035	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
248/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76	1109.014.024	1087.700.136	Oil pan
8HP76	1109.014.024	1102.700.067	Intermediate plate
8HP76	1109.014.026	1102.700.034	Mechatronic
8HP76	1109.014.026	1102.700.035	Mechatronic
8HP76	1109.014.026	1087.700.136	Oil pan
8HP76	1109.014.026	1102.700.067	Intermediate plate
8HP76X	1109.024.014	1102.700.034	Mechatronic
8HP76X	1109.024.014	1102.700.035	Mechatronic
8HP76X	1109.024.014	1087.700.136	Oil pan
8HP76X	1109.024.014	1102.700.067	Intermediate plate
8HP76X	1109.024.019	1102.700.034	Mechatronic
8HP76X	1109.024.019	1102.700.035	Mechatronic
8HP76X	1109.024.019	1087.700.136	Oil pan
8HP76X	1109.024.019	1102.700.067	Intermediate plate
8HP76X	1109.024.030	1102.700.034	Mechatronic
8HP76X	1109.024.030	1102.700.035	Mechatronic
8HP76X	1109.024.030	1087.700.136	Oil pan
8HP76X	1109.024.030	1102.700.067	Intermediate plate
8HP76X	1109.024.031	1102.700.034	Mechatronic
8HP76X	1109.024.031	1102.700.035	Mechatronic
8HP76X	1109.024.031	1087.700.136	Oil pan
8HP76X	1109.024.031	1102.700.067	Intermediate plate
8HP76X	1109.024.032	1102.700.034	Mechatronic
8HP76X	1109.024.032	1102.700.035	Mechatronic
8HP76X	1109.024.032	1087.700.136	Oil pan
8HP76X	1109.024.032	1102.700.067	Intermediate plate
8HP76X	1109.024.033	1102.700.034	Mechatronic
8HP76X	1109.024.033	1102.700.035	Mechatronic
8HP76X	1109.024.033	1087.700.136	Oil pan
8HP76X	1109.024.033	1102.700.067	Intermediate plate
8HP76X	1109.024.034	1102.700.034	Mechatronic
8HP76X	1109.024.034	1102.700.035	Mechatronic
8HP76X	1109.024.034	1087.700.136	Oil pan
8HP76X	1109.024.034	1102.700.067	Intermediate plate
8HP76X	1109.024.035	1102.700.034	Mechatronic
8HP76X	1109.024.035	1102.700.035	Mechatronic
8HP76X	1109.024.035	1087.700.136	Oil pan
8HP76X	1109.024.035	1102.700.067	Intermediate plate
8HP76X	1109.024.039	1102.700.034	Mechatronic
8HP76X	1109.024.039	1102.700.035	Mechatronic
8HP76X	1109.024.039	1087.700.136	Oil pan
8HP76X	1109.024.039	1102.700.067	Intermediate plate
8HP76X	1109.024.040	1102.700.034	Mechatronic
8HP76X	1109.024.040	1102.700.035	Mechatronic
8HP76X	1109.024.040	1087.700.136	Oil pan
8HP76X	1109.024.040	1102.700.067	Intermediate plate
8HP76X	1109.024.043	1102.700.034	Mechatronic
8HP76X	1109.024.043	1102.700.035	Mechatronic
8HP76X	1109.024.043	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76X	1109.024.043	1102.700.067	Intermediate plate
8HP76X	1109.024.044	1102.700.034	Mechatronic
8HP76X	1109.024.044	1102.700.035	Mechatronic
8HP76X	1109.024.044	1087.700.136	Oil pan
8HP76X	1109.024.044	1102.700.067	Intermediate plate
8HP76X	1109.024.045	1102.700.034	Mechatronic
8HP76X	1109.024.045	1102.700.035	Mechatronic
8HP76X	1109.024.045	1087.700.136	Oil pan
8HP76X	1109.024.045	1102.700.067	Intermediate plate
8HP76X	1109.024.052	1102.700.034	Mechatronic
8HP76X	1109.024.052	1102.700.035	Mechatronic
8HP76X	1109.024.052	1087.700.136	Oil pan
8HP76X	1109.024.052	1102.700.067	Intermediate plate
8HP76X	1109.024.062	1102.700.034	Mechatronic
8HP76X	1109.024.062	1102.700.035	Mechatronic
8HP76X	1109.024.062	1087.700.136	Oil pan
8HP76X	1109.024.062	1102.700.067	Intermediate plate
8HP76X	1109.024.064	1102.700.034	Mechatronic
8HP76X	1109.024.064	1102.700.035	Mechatronic
8HP76X	1109.024.064	1087.700.136	Oil pan
8HP76X	1109.024.064	1102.700.067	Intermediate plate
8HP76X	1109.024.082	1102.700.034	Mechatronic
8HP76X	1109.024.082	1102.700.035	Mechatronic
8HP76X	1109.024.082	1087.700.136	Oil pan
8HP76X	1109.024.082	1102.700.067	Intermediate plate
8HP76X	1109.024.083	1102.700.034	Mechatronic
8HP76X	1109.024.083	1102.700.035	Mechatronic
8HP76X	1109.024.083	1087.700.136	Oil pan
8HP76X	1109.024.083	1102.700.067	Intermediate plate
8HP76X	1109.024.088	1102.700.034	Mechatronic
8HP76X	1109.024.088	1102.700.035	Mechatronic
8HP76X	1109.024.088	1087.700.136	Oil pan
8HP76X	1109.024.088	1102.700.067	Intermediate plate
8HP76X	1109.024.089	1102.700.034	Mechatronic
8HP76X	1109.024.089	1102.700.035	Mechatronic
8HP76X	1109.024.089	1087.700.136	Oil pan
8HP76X	1109.024.089	1102.700.067	Intermediate plate
8HP76X	1109.024.094	1102.700.034	Mechatronic
8HP76X	1109.024.094	1102.700.035	Mechatronic
8HP76X	1109.024.094	1087.700.136	Oil pan
8HP76X	1109.024.094	1102.700.067	Intermediate plate
8HP76X	1109.024.095	1102.700.034	Mechatronic
8HP76X	1109.024.095	1102.700.035	Mechatronic
8HP76X	1109.024.095	1087.700.136	Oil pan
8HP76X	1109.024.095	1102.700.067	Intermediate plate
8HP76X	1109.024.096	1102.700.034	Mechatronic
8HP76X	1109.024.096	1102.700.035	Mechatronic
8HP76X	1109.024.096	1087.700.136	Oil pan
8HP76X	1109.024.096	1102.700.067	Intermediate plate



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76X	1109.024.097	1102.700.034	Mechatronic
8HP76X	1109.024.097	1102.700.035	Mechatronic
8HP76X	1109.024.097	1087.700.136	Oil pan
8HP76X	1109.024.097	1102.700.067	Intermediate plate
8HP76X	1109.024.098	1102.700.034	Mechatronic
8HP76X	1109.024.098	1102.700.035	Mechatronic
8HP76X	1109.024.098	1087.700.136	Oil pan
8HP76X	1109.024.098	1102.700.067	Intermediate plate
8HP76X	1109.024.100	1102.700.034	Mechatronic
8HP76X	1109.024.100	1102.700.035	Mechatronic
8HP76X	1109.024.100	1087.700.136	Oil pan
8HP76X	1109.024.100	1102.700.067	Intermediate plate
8HP76X	1109.024.103	1102.700.034	Mechatronic
8HP76X	1109.024.103	1102.700.035	Mechatronic
8HP76X	1109.024.103	1087.700.136	Oil pan
8HP76X	1109.024.103	1102.700.067	Intermediate plate
8HP76X	1109.024.104	1102.700.034	Mechatronic
8HP76X	1109.024.104	1102.700.035	Mechatronic
8HP76X	1109.024.104	1087.700.136	Oil pan
8HP76X	1109.024.104	1102.700.067	Intermediate plate
8HP76X	1109.024.105	1102.700.034	Mechatronic
8HP76X	1109.024.105	1102.700.035	Mechatronic
8HP76X	1109.024.105	1087.700.136	Oil pan
8HP76X	1109.024.105	1102.700.067	Intermediate plate
8HP76X	1109.024.106	1102.700.034	Mechatronic
8HP76X	1109.024.106	1102.700.035	Mechatronic
8HP76X	1109.024.106	1087.700.136	Oil pan
8HP76X	1109.024.106	1102.700.067	Intermediate plate
8HP76X	1109.024.109	1102.700.034	Mechatronic
8HP76X	1109.024.109	1102.700.035	Mechatronic
8HP76X	1109.024.109	1087.700.136	Oil pan
8HP76X	1109.024.109	1102.700.067	Intermediate plate
8HP76X	1109.024.110	1102.700.034	Mechatronic
8HP76X	1109.024.110	1102.700.035	Mechatronic
8HP76X	1109.024.110	1087.700.136	Oil pan
8HP76X	1109.024.110	1102.700.067	Intermediate plate
8HP76X	1109.024.111	1102.700.034	Mechatronic
8HP76X	1109.024.111	1102.700.035	Mechatronic
8HP76X	1109.024.111	1087.700.136	Oil pan
8HP76X	1109.024.111	1102.700.067	Intermediate plate
8HP76X	1109.024.112	1102.700.034	Mechatronic
8HP76X	1109.024.112	1102.700.035	Mechatronic
8HP76X	1109.024.112	1087.700.136	Oil pan
8HP76X	1109.024.112	1102.700.067	Intermediate plate
8HP76X	1109.024.117	1102.700.034	Mechatronic
8HP76X	1109.024.117	1102.700.035	Mechatronic
8HP76X	1109.024.117	1087.700.136	Oil pan
8HP76X	1109.024.117	1102.700.067	Intermediate plate
8HP76X	1109.024.118	1102.700.034	Mechatronic



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76X	1109.024.118	1102.700.035	Mechatronic
8HP76X	1109.024.118	1087.700.136	Oil pan
8HP76X	1109.024.118	1102.700.067	Intermediate plate
8HP76X	1109.024.119	1102.700.034	Mechatronic
8HP76X	1109.024.119	1102.700.035	Mechatronic
8HP76X	1109.024.119	1087.700.136	Oil pan
8HP76X	1109.024.119	1102.700.067	Intermediate plate
8HP76X	1109.024.120	1102.700.034	Mechatronic
8HP76X	1109.024.120	1102.700.035	Mechatronic
8HP76X	1109.024.120	1087.700.136	Oil pan
8HP76X	1109.024.120	1102.700.067	Intermediate plate
8HP76X	1109.024.121	1102.700.034	Mechatronic
8HP76X	1109.024.121	1102.700.035	Mechatronic
8HP76X	1109.024.121	1087.700.136	Oil pan
8HP76X	1109.024.121	1102.700.067	Intermediate plate
8HP76X	1109.024.122	1102.700.034	Mechatronic
8HP76X	1109.024.122	1102.700.035	Mechatronic
8HP76X	1109.024.122	1087.700.136	Oil pan
8HP76X	1109.024.122	1102.700.067	Intermediate plate
8HP76X	1109.024.123	1102.700.034	Mechatronic
8HP76X	1109.024.123	1102.700.035	Mechatronic
8HP76X	1109.024.123	1087.700.136	Oil pan
8HP76X	1109.024.123	1102.700.067	Intermediate plate
8HP76X	1109.024.124	1102.700.034	Mechatronic
8HP76X	1109.024.124	1102.700.035	Mechatronic
8HP76X	1109.024.124	1087.700.136	Oil pan
8HP76X	1109.024.124	1102.700.067	Intermediate plate
8HP76X	1109.024.125	1102.700.034	Mechatronic
8HP76X	1109.024.125	1102.700.035	Mechatronic
8HP76X	1109.024.125	1087.700.136	Oil pan
8HP76X	1109.024.125	1102.700.067	Intermediate plate
8HP76X	1109.024.126	1102.700.034	Mechatronic
8HP76X	1109.024.126	1102.700.035	Mechatronic
8HP76X	1109.024.126	1087.700.136	Oil pan
8HP76X	1109.024.126	1102.700.067	Intermediate plate
8HP76X	1109.024.127	1102.700.034	Mechatronic
8HP76X	1109.024.127	1102.700.035	Mechatronic
8HP76X	1109.024.127	1087.700.136	Oil pan
8HP76X	1109.024.127	1102.700.067	Intermediate plate
8HP76X	1109.024.128	1102.700.034	Mechatronic
8HP76X	1109.024.128	1102.700.035	Mechatronic
8HP76X	1109.024.128	1087.700.136	Oil pan
8HP76X	1109.024.128	1102.700.067	Intermediate plate
8HP76X	1109.024.133	1102.700.034	Mechatronic
8HP76X	1109.024.133	1102.700.035	Mechatronic
8HP76X	1109.024.133	1087.700.136	Oil pan
8HP76X	1109.024.133	1102.700.067	Intermediate plate
8HP76X	1109.024.134	1102.700.034	Mechatronic
8HP76X	1109.024.134	1102.700.035	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76X	1109.024.134	1087.700.136	Oil pan
8HP76X	1109.024.134	1102.700.067	Intermediate plate
8HP76X	1109.024.135	1102.700.034	Mechatronic
8HP76X	1109.024.135	1102.700.035	Mechatronic
8HP76X	1109.024.135	1087.700.136	Oil pan
8HP76X	1109.024.135	1102.700.067	Intermediate plate
8HP76X	1109.024.136	1102.700.034	Mechatronic
8HP76X	1109.024.136	1102.700.035	Mechatronic
8HP76X	1109.024.136	1087.700.136	Oil pan
8HP76X	1109.024.136	1102.700.067	Intermediate plate
8HP76X	1109.024.137	1102.700.034	Mechatronic
8HP76X	1109.024.137	1102.700.035	Mechatronic
8HP76X	1109.024.137	1087.700.136	Oil pan
8HP76X	1109.024.137	1102.700.067	Intermediate plate
8HP76X	1109.024.138	1102.700.034	Mechatronic
8HP76X	1109.024.138	1102.700.035	Mechatronic
8HP76X	1109.024.138	1087.700.136	Oil pan
8HP76X	1109.024.138	1102.700.067	Intermediate plate
8HP76X	1109.024.139	1102.700.034	Mechatronic
8HP76X	1109.024.139	1102.700.035	Mechatronic
8HP76X	1109.024.139	1087.700.136	Oil pan
8HP76X	1109.024.139	1102.700.067	Intermediate plate
8HP76X	1109.024.140	1102.700.034	Mechatronic
8HP76X	1109.024.140	1102.700.035	Mechatronic
8HP76X	1109.024.140	1087.700.136	Oil pan
8HP76X	1109.024.140	1102.700.067	Intermediate plate
8HP76X	1109.024.141	1102.700.034	Mechatronic
8HP76X	1109.024.141	1102.700.035	Mechatronic
8HP76X	1109.024.141	1087.700.136	Oil pan
8HP76X	1109.024.141	1102.700.067	Intermediate plate
8HP76X	1109.024.142	1102.700.034	Mechatronic
8HP76X	1109.024.142	1102.700.035	Mechatronic
8HP76X	1109.024.142	1087.700.136	Oil pan
8HP76X	1109.024.142	1102.700.067	Intermediate plate
8HP76X	1109.024.143	1102.700.034	Mechatronic
8HP76X	1109.024.143	1102.700.035	Mechatronic
8HP76X	1109.024.143	1087.700.136	Oil pan
8HP76X	1109.024.143	1102.700.067	Intermediate plate
8HP76X	1109.024.144	1102.700.034	Mechatronic
8HP76X	1109.024.144	1102.700.035	Mechatronic
8HP76X	1109.024.144	1087.700.136	Oil pan
8HP76X	1109.024.144	1102.700.067	Intermediate plate
8HP76X	1109.024.145	1102.700.034	Mechatronic
8HP76X	1109.024.145	1102.700.035	Mechatronic
8HP76X	1109.024.145	1087.700.136	Oil pan
8HP76X	1109.024.145	1102.700.067	Intermediate plate
8HP76X	1109.024.146	1102.700.034	Mechatronic
8HP76X	1109.024.146	1102.700.035	Mechatronic
8HP76X	1109.024.146	1087.700.136	Oil pan



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP76X	1109.024.146	1102.700.067	Intermediate plate
8HP76X	1109.024.147	1102.700.034	Mechatronic
8HP76X	1109.024.147	1102.700.035	Mechatronic
8HP76X	1109.024.147	1087.700.136	Oil pan
8HP76X	1109.024.147	1102.700.067	Intermediate plate
8HP76X	1109.024.148	1102.700.034	Mechatronic
8HP76X	1109.024.148	1102.700.035	Mechatronic
8HP76X	1109.024.148	1087.700.136	Oil pan
8HP76X	1109.024.148	1102.700.067	Intermediate plate
8HP76X	1109.024.149	1102.700.034	Mechatronic
8HP76X	1109.024.149	1102.700.035	Mechatronic
8HP76X	1109.024.149	1087.700.136	Oil pan
8HP76X	1109.024.149	1102.700.067	Intermediate plate
8HP76X	1109.024.150	1102.700.034	Mechatronic
8HP76X	1109.024.150	1102.700.035	Mechatronic
8HP76X	1109.024.150	1087.700.136	Oil pan
8HP76X	1109.024.150	1102.700.067	Intermediate plate
8HP76X	1109.024.151	1102.700.034	Mechatronic
8HP76X	1109.024.151	1102.700.035	Mechatronic
8HP76X	1109.024.151	1087.700.136	Oil pan
8HP76X	1109.024.151	1102.700.067	Intermediate plate
8HP76X	1109.024.152	1102.700.034	Mechatronic
8HP76X	1109.024.152	1102.700.035	Mechatronic
8HP76X	1109.024.152	1087.700.136	Oil pan
8HP76X	1109.024.152	1102.700.067	Intermediate plate
8HP76X	1109.024.153	1102.700.034	Mechatronic
8HP76X	1109.024.153	1102.700.035	Mechatronic
8HP76X	1109.024.153	1087.700.136	Oil pan
8HP76X	1109.024.153	1102.700.067	Intermediate plate
8HP76X	1109.024.154	1102.700.034	Mechatronic
8HP76X	1109.024.154	1102.700.035	Mechatronic
8HP76X	1109.024.154	1087.700.136	Oil pan
8HP76X	1109.024.154	1102.700.067	Intermediate plate

Tab. 34 Model 1109



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
254/312

ZF Aftermarket Service Information

22.11 Model 1111

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.002	1102.700.034	Mechatronic
8HP51	1111.014.002	1102.700.035	Mechatronic
8HP51	1111.014.002	1090.700.133	Oil supply
8HP51	1111.014.002	1087.700.136	Oil pan
8HP51	1111.014.024	1102.700.034	Mechatronic
8HP51	1111.014.024	1102.700.035	Mechatronic
8HP51	1111.014.024	1090.700.133	Oil supply
8HP51	1111.014.024	1087.700.136	Oil pan
8HP51	1111.014.038	1102.700.034	Mechatronic
8HP51	1111.014.038	1102.700.035	Mechatronic
8HP51	1111.014.038	1090.700.133	Oil supply
8HP51	1111.014.038	1087.700.136	Oil pan
8HP51	1111.014.043	1102.700.034	Mechatronic
8HP51	1111.014.043	1102.700.035	Mechatronic
8HP51	1111.014.043	1090.700.133	Oil supply
8HP51	1111.014.043	1087.700.136	Oil pan
8HP51	1111.014.045	1102.700.034	Mechatronic
8HP51	1111.014.045	1102.700.035	Mechatronic
8HP51	1111.014.045	1090.700.133	Oil supply
8HP51	1111.014.045	1087.700.136	Oil pan
8HP51	1111.014.048	1102.700.034	Mechatronic
8HP51	1111.014.048	1102.700.035	Mechatronic
8HP51	1111.014.048	1090.700.133	Oil supply
8HP51	1111.014.048	1087.700.136	Oil pan
8HP51	1111.014.050	1102.700.034	Mechatronic
8HP51	1111.014.050	1102.700.035	Mechatronic
8HP51	1111.014.050	1090.700.133	Oil supply
8HP51	1111.014.050	1087.700.136	Oil pan
8HP51	1111.014.051	1102.700.034	Mechatronic
8HP51	1111.014.051	1102.700.035	Mechatronic
8HP51	1111.014.051	1090.700.133	Oil supply
8HP51	1111.014.051	1087.700.136	Oil pan
8HP51	1111.014.053	1102.700.034	Mechatronic
8HP51	1111.014.053	1102.700.035	Mechatronic
8HP51	1111.014.053	1090.700.133	Oil supply
8HP51	1111.014.053	1087.700.136	Oil pan
8HP51	1111.014.055	1102.700.034	Mechatronic
8HP51	1111.014.055	1102.700.035	Mechatronic
8HP51	1111.014.055	1090.700.133	Oil supply
8HP51	1111.014.055	1087.700.136	Oil pan
8HP51	1111.014.056	1102.700.034	Mechatronic
8HP51	1111.014.056	1102.700.035	Mechatronic
8HP51	1111.014.056	1090.700.133	Oil supply
8HP51	1111.014.056	1087.700.136	Oil pan
8HP51	1111.014.057	1102.700.034	Mechatronic
8HP51	1111.014.057	1102.700.035	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
255/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.057	1090.700.133	Oil supply
8HP51	1111.014.057	1087.700.136	Oil pan
8HP51	1111.014.058	1102.700.034	Mechatronic
8HP51	1111.014.058	1102.700.035	Mechatronic
8HP51	1111.014.058	1090.700.133	Oil supply
8HP51	1111.014.058	1087.700.136	Oil pan
8HP51	1111.014.059	1102.700.034	Mechatronic
8HP51	1111.014.059	1102.700.035	Mechatronic
8HP51	1111.014.059	1090.700.133	Oil supply
8HP51	1111.014.059	1087.700.136	Oil pan
8HP51	1111.014.060	1102.700.034	Mechatronic
8HP51	1111.014.060	1102.700.035	Mechatronic
8HP51	1111.014.060	1090.700.133	Oil supply
8HP51	1111.014.060	1087.700.136	Oil pan
8HP51	1111.014.061	1102.700.034	Mechatronic
8HP51	1111.014.061	1102.700.035	Mechatronic
8HP51	1111.014.061	1090.700.133	Oil supply
8HP51	1111.014.061	1087.700.136	Oil pan
8HP51	1111.014.062	1102.700.034	Mechatronic
8HP51	1111.014.062	1102.700.035	Mechatronic
8HP51	1111.014.062	1090.700.133	Oil supply
8HP51	1111.014.062	1087.700.136	Oil pan
8HP51	1111.014.063	1102.700.034	Mechatronic
8HP51	1111.014.063	1102.700.035	Mechatronic
8HP51	1111.014.063	1090.700.133	Oil supply
8HP51	1111.014.063	1087.700.136	Oil pan
8HP51	1111.014.064	1102.700.034	Mechatronic
8HP51	1111.014.064	1102.700.035	Mechatronic
8HP51	1111.014.064	1090.700.133	Oil supply
8HP51	1111.014.064	1087.700.136	Oil pan
8HP51	1111.014.065	1102.700.034	Mechatronic
8HP51	1111.014.065	1102.700.035	Mechatronic
8HP51	1111.014.065	1090.700.133	Oil supply
8HP51	1111.014.065	1087.700.136	Oil pan
8HP51	1111.014.067	1102.700.034	Mechatronic
8HP51	1111.014.067	1102.700.035	Mechatronic
8HP51	1111.014.067	1090.700.133	Oil supply
8HP51	1111.014.067	1087.700.136	Oil pan
8HP51	1111.014.068	1102.700.034	Mechatronic
8HP51	1111.014.068	1102.700.035	Mechatronic
8HP51	1111.014.068	1090.700.133	Oil supply
8HP51	1111.014.068	1087.700.136	Oil pan
8HP51	1111.014.069	1102.700.034	Mechatronic
8HP51	1111.014.069	1102.700.035	Mechatronic
8HP51	1111.014.069	1090.700.133	Oil supply
8HP51	1111.014.069	1087.700.136	Oil pan
8HP51	1111.014.070	1102.700.034	Mechatronic
8HP51	1111.014.070	1102.700.035	Mechatronic
8HP51	1111.014.070	1090.700.133	Oil supply



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
256/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.070	1087.700.136	Oil pan
8HP51	1111.014.074	1102.700.034	Mechatronic
8HP51	1111.014.074	1102.700.035	Mechatronic
8HP51	1111.014.074	1090.700.133	Oil supply
8HP51	1111.014.074	1087.700.136	Oil pan
8HP51	1111.014.077	1102.700.034	Mechatronic
8HP51	1111.014.077	1102.700.035	Mechatronic
8HP51	1111.014.077	1090.700.133	Oil supply
8HP51	1111.014.077	1087.700.136	Oil pan
8HP51	1111.014.078	1102.700.034	Mechatronic
8HP51	1111.014.078	1102.700.035	Mechatronic
8HP51	1111.014.078	1090.700.133	Oil supply
8HP51	1111.014.078	1087.700.136	Oil pan
8HP51	1111.014.081	1102.700.034	Mechatronic
8HP51	1111.014.081	1102.700.035	Mechatronic
8HP51	1111.014.081	1090.700.133	Oil supply
8HP51	1111.014.081	1087.700.136	Oil pan
8HP51	1111.014.084	1102.700.034	Mechatronic
8HP51	1111.014.084	1102.700.035	Mechatronic
8HP51	1111.014.084	1090.700.133	Oil supply
8HP51	1111.014.084	1087.700.136	Oil pan
8HP51	1111.014.085	1102.700.034	Mechatronic
8HP51	1111.014.085	1102.700.035	Mechatronic
8HP51	1111.014.085	1090.700.133	Oil supply
8HP51	1111.014.085	1087.700.136	Oil pan
8HP51	1111.014.086	1102.700.034	Mechatronic
8HP51	1111.014.086	1102.700.035	Mechatronic
8HP51	1111.014.086	1090.700.133	Oil supply
8HP51	1111.014.086	1087.700.136	Oil pan
8HP51	1111.014.098	1102.700.034	Mechatronic
8HP51	1111.014.098	1102.700.035	Mechatronic
8HP51	1111.014.098	1090.700.133	Oil supply
8HP51	1111.014.098	1087.700.136	Oil pan
8HP51	1111.014.099	1102.700.034	Mechatronic
8HP51	1111.014.099	1102.700.035	Mechatronic
8HP51	1111.014.099	1090.700.133	Oil supply
8HP51	1111.014.099	1087.700.136	Oil pan
8HP51	1111.014.100	1102.700.034	Mechatronic
8HP51	1111.014.100	1102.700.035	Mechatronic
8HP51	1111.014.100	1090.700.133	Oil supply
8HP51	1111.014.100	1087.700.136	Oil pan
8HP51	1111.014.101	1102.700.034	Mechatronic
8HP51	1111.014.101	1102.700.035	Mechatronic
8HP51	1111.014.101	1090.700.133	Oil supply
8HP51	1111.014.101	1087.700.136	Oil pan
8HP51	1111.014.105	1102.700.034	Mechatronic
8HP51	1111.014.105	1090.700.133	Oil supply
8HP51	1111.014.105	1087.700.136	Oil pan
8HP51	1111.014.106	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.106	1102.700.035	Mechatronic
8HP51	1111.014.106	1090.700.133	Oil supply
8HP51	1111.014.106	1087.700.136	Oil pan
8HP51	1111.014.107	1102.700.034	Mechatronic
8HP51	1111.014.107	1102.700.035	Mechatronic
8HP51	1111.014.107	1090.700.133	Oil supply
8HP51	1111.014.107	1087.700.136	Oil pan
8HP51	1111.014.108	1102.700.034	Mechatronic
8HP51	1111.014.108	1102.700.035	Mechatronic
8HP51	1111.014.108	1090.700.133	Oil supply
8HP51	1111.014.108	1087.700.136	Oil pan
8HP51	1111.014.110	1102.700.034	Mechatronic
8HP51	1111.014.110	1102.700.035	Mechatronic
8HP51	1111.014.110	1090.700.133	Oil supply
8HP51	1111.014.110	1087.700.136	Oil pan
8HP51	1111.014.111	1102.700.034	Mechatronic
8HP51	1111.014.111	1102.700.035	Mechatronic
8HP51	1111.014.111	1090.700.133	Oil supply
8HP51	1111.014.111	1087.700.136	Oil pan
8HP51	1111.014.112	1102.700.034	Mechatronic
8HP51	1111.014.112	1102.700.035	Mechatronic
8HP51	1111.014.112	1090.700.133	Oil supply
8HP51	1111.014.112	1087.700.136	Oil pan
8HP51	1111.014.113	1102.700.034	Mechatronic
8HP51	1111.014.113	1102.700.035	Mechatronic
8HP51	1111.014.113	1090.700.133	Oil supply
8HP51	1111.014.113	1087.700.136	Oil pan
8HP51	1111.014.114	1102.700.034	Mechatronic
8HP51	1111.014.114	1102.700.035	Mechatronic
8HP51	1111.014.114	1090.700.133	Oil supply
8HP51	1111.014.114	1087.700.136	Oil pan
8HP51	1111.014.115	1102.700.034	Mechatronic
8HP51	1111.014.115	1102.700.035	Mechatronic
8HP51	1111.014.115	1090.700.133	Oil supply
8HP51	1111.014.115	1087.700.136	Oil pan
8HP51	1111.014.117	1102.700.034	Mechatronic
8HP51	1111.014.117	1102.700.035	Mechatronic
8HP51	1111.014.117	1090.700.133	Oil supply
8HP51	1111.014.117	1087.700.136	Oil pan
8HP51	1111.014.118	1102.700.034	Mechatronic
8HP51	1111.014.118	1102.700.035	Mechatronic
8HP51	1111.014.118	1090.700.133	Oil supply
8HP51	1111.014.118	1087.700.136	Oil pan
8HP51	1111.014.119	1102.700.034	Mechatronic
8HP51	1111.014.119	1102.700.035	Mechatronic
8HP51	1111.014.119	1090.700.133	Oil supply
8HP51	1111.014.119	1087.700.136	Oil pan
8HP51	1111.014.125	1102.700.034	Mechatronic
8HP51	1111.014.125	1102.700.035	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
258/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.125	1090.700.133	Oil supply
8HP51	1111.014.125	1087.700.136	Oil pan
8HP51	1111.014.135	1102.700.034	Mechatronic
8HP51	1111.014.135	1102.700.035	Mechatronic
8HP51	1111.014.135	1090.700.133	Oil supply
8HP51	1111.014.135	1087.700.136	Oil pan
8HP51	1111.014.136	1102.700.034	Mechatronic
8HP51	1111.014.136	1102.700.035	Mechatronic
8HP51	1111.014.136	1090.700.133	Oil supply
8HP51	1111.014.136	1087.700.136	Oil pan
8HP51	1111.014.137	1102.700.034	Mechatronic
8HP51	1111.014.137	1102.700.035	Mechatronic
8HP51	1111.014.137	1090.700.133	Oil supply
8HP51	1111.014.137	1087.700.136	Oil pan
8HP51	1111.014.138	1102.700.034	Mechatronic
8HP51	1111.014.138	1102.700.035	Mechatronic
8HP51	1111.014.138	1090.700.133	Oil supply
8HP51	1111.014.138	1087.700.136	Oil pan
8HP51	1111.014.141	1102.700.034	Mechatronic
8HP51	1111.014.141	1102.700.035	Mechatronic
8HP51	1111.014.141	1090.700.133	Oil supply
8HP51	1111.014.141	1087.700.136	Oil pan
8HP51	1111.014.144	1102.700.034	Mechatronic
8HP51	1111.014.144	1102.700.035	Mechatronic
8HP51	1111.014.144	1090.700.133	Oil supply
8HP51	1111.014.144	1087.700.136	Oil pan
8HP51	1111.014.146	1102.700.034	Mechatronic
8HP51	1111.014.146	1102.700.035	Mechatronic
8HP51	1111.014.146	1090.700.133	Oil supply
8HP51	1111.014.146	1087.700.136	Oil pan
8HP51	1111.014.147	1102.700.034	Mechatronic
8HP51	1111.014.147	1102.700.035	Mechatronic
8HP51	1111.014.147	1090.700.133	Oil supply
8HP51	1111.014.147	1087.700.136	Oil pan
8HP51	1111.014.149	1102.700.034	Mechatronic
8HP51	1111.014.149	1102.700.035	Mechatronic
8HP51	1111.014.149	1090.700.133	Oil supply
8HP51	1111.014.149	1087.700.136	Oil pan
8HP51	1111.014.150	1102.700.034	Mechatronic
8HP51	1111.014.150	1102.700.035	Mechatronic
8HP51	1111.014.150	1090.700.133	Oil supply
8HP51	1111.014.150	1087.700.136	Oil pan
8HP51	1111.014.152	1102.700.034	Mechatronic
8HP51	1111.014.152	1102.700.035	Mechatronic
8HP51	1111.014.152	1090.700.133	Oil supply
8HP51	1111.014.152	1087.700.136	Oil pan
8HP51	1111.014.153	1102.700.034	Mechatronic
8HP51	1111.014.153	1102.700.035	Mechatronic
8HP51	1111.014.153	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.153	1087.700.136	Oil pan
8HP51	1111.014.155	1102.700.034	Mechatronic
8HP51	1111.014.155	1102.700.035	Mechatronic
8HP51	1111.014.155	1090.700.133	Oil supply
8HP51	1111.014.155	1087.700.136	Oil pan
8HP51	1111.014.156	1102.700.034	Mechatronic
8HP51	1111.014.156	1102.700.035	Mechatronic
8HP51	1111.014.156	1090.700.133	Oil supply
8HP51	1111.014.156	1087.700.136	Oil pan
8HP51	1111.014.157	1102.700.034	Mechatronic
8HP51	1111.014.157	1102.700.035	Mechatronic
8HP51	1111.014.157	1090.700.133	Oil supply
8HP51	1111.014.157	1087.700.136	Oil pan
8HP51	1111.014.158	1102.700.034	Mechatronic
8HP51	1111.014.158	1102.700.035	Mechatronic
8HP51	1111.014.158	1090.700.133	Oil supply
8HP51	1111.014.158	1087.700.136	Oil pan
8HP51	1111.014.159	1102.700.034	Mechatronic
8HP51	1111.014.159	1102.700.035	Mechatronic
8HP51	1111.014.159	1090.700.133	Oil supply
8HP51	1111.014.159	1087.700.136	Oil pan
8HP51	1111.014.160	1102.700.034	Mechatronic
8HP51	1111.014.160	1102.700.035	Mechatronic
8HP51	1111.014.160	1090.700.133	Oil supply
8HP51	1111.014.160	1087.700.136	Oil pan
8HP51	1111.014.161	1102.700.034	Mechatronic
8HP51	1111.014.161	1102.700.035	Mechatronic
8HP51	1111.014.161	1090.700.133	Oil supply
8HP51	1111.014.161	1087.700.136	Oil pan
8HP51	1111.014.162	1102.700.034	Mechatronic
8HP51	1111.014.162	1102.700.035	Mechatronic
8HP51	1111.014.162	1090.700.133	Oil supply
8HP51	1111.014.162	1087.700.136	Oil pan
8HP51	1111.014.163	1102.700.034	Mechatronic
8HP51	1111.014.163	1102.700.035	Mechatronic
8HP51	1111.014.163	1090.700.133	Oil supply
8HP51	1111.014.163	1087.700.136	Oil pan
8HP51	1111.014.164	1102.700.034	Mechatronic
8HP51	1111.014.164	1102.700.035	Mechatronic
8HP51	1111.014.164	1090.700.133	Oil supply
8HP51	1111.014.164	1087.700.136	Oil pan
8HP51	1111.014.165	1102.700.034	Mechatronic
8HP51	1111.014.165	1102.700.035	Mechatronic
8HP51	1111.014.165	1090.700.133	Oil supply
8HP51	1111.014.165	1087.700.136	Oil pan
8HP51	1111.014.166	1102.700.034	Mechatronic
8HP51	1111.014.166	1102.700.035	Mechatronic
8HP51	1111.014.166	1090.700.133	Oil supply
8HP51	1111.014.166	1087.700.136	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
260/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.167	1102.700.034	Mechatronic
8HP51	1111.014.167	1102.700.035	Mechatronic
8HP51	1111.014.167	1090.700.133	Oil supply
8HP51	1111.014.167	1087.700.136	Oil pan
8HP51	1111.014.168	1102.700.034	Mechatronic
8HP51	1111.014.168	1102.700.035	Mechatronic
8HP51	1111.014.168	1090.700.133	Oil supply
8HP51	1111.014.168	1087.700.136	Oil pan
8HP51	1111.014.169	1102.700.034	Mechatronic
8HP51	1111.014.169	1102.700.035	Mechatronic
8HP51	1111.014.169	1090.700.133	Oil supply
8HP51	1111.014.169	1087.700.136	Oil pan
8HP51	1111.014.170	1102.700.034	Mechatronic
8HP51	1111.014.170	1102.700.035	Mechatronic
8HP51	1111.014.170	1090.700.133	Oil supply
8HP51	1111.014.170	1087.700.136	Oil pan
8HP51	1111.014.171	1102.700.034	Mechatronic
8HP51	1111.014.171	1102.700.035	Mechatronic
8HP51	1111.014.171	1090.700.133	Oil supply
8HP51	1111.014.171	1087.700.136	Oil pan
8HP51	1111.014.172	1102.700.034	Mechatronic
8HP51	1111.014.172	1102.700.035	Mechatronic
8HP51	1111.014.172	1090.700.133	Oil supply
8HP51	1111.014.172	1087.700.136	Oil pan
8HP51	1111.014.173	1102.700.034	Mechatronic
8HP51	1111.014.173	1102.700.035	Mechatronic
8HP51	1111.014.173	1090.700.133	Oil supply
8HP51	1111.014.173	1087.700.136	Oil pan
8HP51	1111.014.174	1102.700.034	Mechatronic
8HP51	1111.014.174	1102.700.035	Mechatronic
8HP51	1111.014.174	1090.700.133	Oil supply
8HP51	1111.014.174	1087.700.136	Oil pan
8HP51	1111.014.175	1102.700.034	Mechatronic
8HP51	1111.014.175	1102.700.035	Mechatronic
8HP51	1111.014.175	1090.700.133	Oil supply
8HP51	1111.014.175	1087.700.136	Oil pan
8HP51	1111.014.176	1102.700.034	Mechatronic
8HP51	1111.014.176	1102.700.035	Mechatronic
8HP51	1111.014.176	1090.700.133	Oil supply
8HP51	1111.014.176	1087.700.136	Oil pan
8HP51	1111.014.177	1102.700.034	Mechatronic
8HP51	1111.014.177	1102.700.035	Mechatronic
8HP51	1111.014.177	1090.700.133	Oil supply
8HP51	1111.014.177	1087.700.136	Oil pan
8HP51	1111.014.178	1102.700.034	Mechatronic
8HP51	1111.014.178	1102.700.035	Mechatronic
8HP51	1111.014.178	1090.700.133	Oil supply
8HP51	1111.014.178	1087.700.136	Oil pan
8HP51	1111.014.179	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.179	1102.700.035	Mechatronic
8HP51	1111.014.179	1090.700.133	Oil supply
8HP51	1111.014.179	1087.700.136	Oil pan
8HP51	1111.014.180	1102.700.034	Mechatronic
8HP51	1111.014.180	1102.700.035	Mechatronic
8HP51	1111.014.180	1090.700.133	Oil supply
8HP51	1111.014.180	1087.700.136	Oil pan
8HP51	1111.014.181	1102.700.034	Mechatronic
8HP51	1111.014.181	1102.700.035	Mechatronic
8HP51	1111.014.181	1090.700.133	Oil supply
8HP51	1111.014.181	1087.700.136	Oil pan
8HP51	1111.014.182	1102.700.034	Mechatronic
8HP51	1111.014.182	1102.700.035	Mechatronic
8HP51	1111.014.182	1090.700.133	Oil supply
8HP51	1111.014.182	1087.700.136	Oil pan
8HP51	1111.014.183	1102.700.034	Mechatronic
8HP51	1111.014.183	1102.700.035	Mechatronic
8HP51	1111.014.183	1090.700.133	Oil supply
8HP51	1111.014.183	1087.700.136	Oil pan
8HP51	1111.014.184	1102.700.034	Mechatronic
8HP51	1111.014.184	1102.700.035	Mechatronic
8HP51	1111.014.184	1090.700.133	Oil supply
8HP51	1111.014.184	1087.700.136	Oil pan
8HP51	1111.014.185	1102.700.034	Mechatronic
8HP51	1111.014.185	1102.700.035	Mechatronic
8HP51	1111.014.185	1090.700.133	Oil supply
8HP51	1111.014.185	1087.700.136	Oil pan
8HP51	1111.014.186	1102.700.034	Mechatronic
8HP51	1111.014.186	1102.700.035	Mechatronic
8HP51	1111.014.186	1090.700.133	Oil supply
8HP51	1111.014.186	1087.700.136	Oil pan
8HP51	1111.014.187	1102.700.034	Mechatronic
8HP51	1111.014.187	1102.700.035	Mechatronic
8HP51	1111.014.187	1090.700.133	Oil supply
8HP51	1111.014.187	1087.700.136	Oil pan
8HP51	1111.014.188	1102.700.034	Mechatronic
8HP51	1111.014.188	1102.700.035	Mechatronic
8HP51	1111.014.188	1090.700.133	Oil supply
8HP51	1111.014.188	1087.700.136	Oil pan
8HP51	1111.014.189	1102.700.034	Mechatronic
8HP51	1111.014.189	1102.700.035	Mechatronic
8HP51	1111.014.189	1090.700.133	Oil supply
8HP51	1111.014.189	1087.700.136	Oil pan
8HP51	1111.014.190	1102.700.034	Mechatronic
8HP51	1111.014.190	1102.700.035	Mechatronic
8HP51	1111.014.190	1090.700.133	Oil supply
8HP51	1111.014.190	1087.700.136	Oil pan
8HP51	1111.014.191	1102.700.034	Mechatronic
8HP51	1111.014.191	1102.700.035	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
262/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.191	1090.700.133	Oil supply
8HP51	1111.014.191	1087.700.136	Oil pan
8HP51	1111.014.192	1102.700.034	Mechatronic
8HP51	1111.014.192	1102.700.035	Mechatronic
8HP51	1111.014.192	1090.700.133	Oil supply
8HP51	1111.014.192	1087.700.136	Oil pan
8HP51	1111.014.193	1102.700.034	Mechatronic
8HP51	1111.014.193	1102.700.035	Mechatronic
8HP51	1111.014.193	1090.700.133	Oil supply
8HP51	1111.014.193	1087.700.136	Oil pan
8HP51	1111.014.194	1102.700.034	Mechatronic
8HP51	1111.014.194	1102.700.035	Mechatronic
8HP51	1111.014.194	1090.700.133	Oil supply
8HP51	1111.014.194	1087.700.136	Oil pan
8HP51	1111.014.195	1102.700.034	Mechatronic
8HP51	1111.014.195	1102.700.035	Mechatronic
8HP51	1111.014.195	1090.700.133	Oil supply
8HP51	1111.014.195	1087.700.136	Oil pan
8HP51	1111.014.196	1102.700.034	Mechatronic
8HP51	1111.014.196	1102.700.035	Mechatronic
8HP51	1111.014.196	1090.700.133	Oil supply
8HP51	1111.014.196	1087.700.136	Oil pan
8HP51	1111.014.197	1102.700.034	Mechatronic
8HP51	1111.014.197	1102.700.035	Mechatronic
8HP51	1111.014.197	1090.700.133	Oil supply
8HP51	1111.014.197	1087.700.136	Oil pan
8HP51	1111.014.198	1102.700.034	Mechatronic
8HP51	1111.014.198	1102.700.035	Mechatronic
8HP51	1111.014.198	1090.700.133	Oil supply
8HP51	1111.014.198	1087.700.136	Oil pan
8HP51	1111.014.199	1102.700.034	Mechatronic
8HP51	1111.014.199	1102.700.035	Mechatronic
8HP51	1111.014.199	1090.700.133	Oil supply
8HP51	1111.014.199	1087.700.136	Oil pan
8HP51	1111.014.200	1102.700.034	Mechatronic
8HP51	1111.014.200	1102.700.035	Mechatronic
8HP51	1111.014.200	1090.700.133	Oil supply
8HP51	1111.014.200	1087.700.136	Oil pan
8HP51	1111.014.201	1102.700.034	Mechatronic
8HP51	1111.014.201	1102.700.035	Mechatronic
8HP51	1111.014.201	1090.700.133	Oil supply
8HP51	1111.014.201	1087.700.136	Oil pan
8HP51	1111.014.202	1102.700.034	Mechatronic
8HP51	1111.014.202	1102.700.035	Mechatronic
8HP51	1111.014.202	1090.700.133	Oil supply
8HP51	1111.014.202	1087.700.136	Oil pan
8HP51	1111.014.204	1102.700.034	Mechatronic
8HP51	1111.014.204	1102.700.035	Mechatronic
8HP51	1111.014.204	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51	1111.014.204	1087.700.136	Oil pan
8HP51	1111.014.205	1102.700.034	Mechatronic
8HP51	1111.014.205	1102.700.035	Mechatronic
8HP51	1111.014.205	1090.700.133	Oil supply
8HP51	1111.014.205	1087.700.136	Oil pan
8HP51	1111.014.206	1102.700.034	Mechatronic
8HP51	1111.014.206	1102.700.035	Mechatronic
8HP51	1111.014.206	1090.700.133	Oil supply
8HP51	1111.014.206	1087.700.136	Oil pan
8HP51	1111.014.207	1102.700.034	Mechatronic
8HP51	1111.014.207	1102.700.035	Mechatronic
8HP51	1111.014.207	1090.700.133	Oil supply
8HP51	1111.014.207	1087.700.136	Oil pan
8HP51	1111.014.208	1102.700.034	Mechatronic
8HP51	1111.014.208	1102.700.035	Mechatronic
8HP51	1111.014.208	1090.700.133	Oil supply
8HP51	1111.014.208	1087.700.136	Oil pan
8HP51	1111.014.209	1102.700.034	Mechatronic
8HP51	1111.014.209	1102.700.035	Mechatronic
8HP51	1111.014.209	1090.700.133	Oil supply
8HP51	1111.014.209	1087.700.136	Oil pan
8HP51	1111.014.210	1102.700.034	Mechatronic
8HP51	1111.014.210	1102.700.035	Mechatronic
8HP51	1111.014.210	1090.700.133	Oil supply
8HP51	1111.014.210	1087.700.136	Oil pan
8HP51X	1111.024.019	1102.700.034	Mechatronic
8HP51X	1111.024.019	1102.700.035	Mechatronic
8HP51X	1111.024.019	1090.700.133	Oil supply
8HP51X	1111.024.019	1087.700.136	Oil pan
8HP51X	1111.024.029	1102.700.034	Mechatronic
8HP51X	1111.024.029	1102.700.035	Mechatronic
8HP51X	1111.024.029	1090.700.133	Oil supply
8HP51X	1111.024.029	1087.700.136	Oil pan
8HP51X	1111.024.030	1102.700.034	Mechatronic
8HP51X	1111.024.030	1102.700.035	Mechatronic
8HP51X	1111.024.030	1090.700.133	Oil supply
8HP51X	1111.024.030	1087.700.136	Oil pan
8HP51X	1111.024.031	1102.700.034	Mechatronic
8HP51X	1111.024.031	1102.700.035	Mechatronic
8HP51X	1111.024.031	1090.700.133	Oil supply
8HP51X	1111.024.031	1087.700.136	Oil pan
8HP51X	1111.024.032	1102.700.034	Mechatronic
8HP51X	1111.024.032	1102.700.035	Mechatronic
8HP51X	1111.024.032	1090.700.133	Oil supply
8HP51X	1111.024.032	1087.700.136	Oil pan
8HP51X	1111.024.033	1102.700.034	Mechatronic
8HP51X	1111.024.033	1102.700.035	Mechatronic
8HP51X	1111.024.033	1090.700.133	Oil supply
8HP51X	1111.024.033	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.034	1102.700.034	Mechatronic
8HP51X	1111.024.034	1102.700.035	Mechatronic
8HP51X	1111.024.034	1090.700.133	Oil supply
8HP51X	1111.024.034	1087.700.136	Oil pan
8HP51X	1111.024.035	1102.700.034	Mechatronic
8HP51X	1111.024.035	1102.700.035	Mechatronic
8HP51X	1111.024.035	1090.700.133	Oil supply
8HP51X	1111.024.035	1087.700.136	Oil pan
8HP51X	1111.024.036	1102.700.034	Mechatronic
8HP51X	1111.024.036	1102.700.035	Mechatronic
8HP51X	1111.024.036	1090.700.133	Oil supply
8HP51X	1111.024.036	1087.700.136	Oil pan
8HP51X	1111.024.037	1102.700.034	Mechatronic
8HP51X	1111.024.037	1102.700.035	Mechatronic
8HP51X	1111.024.037	1090.700.133	Oil supply
8HP51X	1111.024.037	1087.700.136	Oil pan
8HP51X	1111.024.038	1102.700.034	Mechatronic
8HP51X	1111.024.038	1102.700.035	Mechatronic
8HP51X	1111.024.038	1090.700.133	Oil supply
8HP51X	1111.024.038	1087.700.136	Oil pan
8HP51X	1111.024.039	1102.700.034	Mechatronic
8HP51X	1111.024.039	1102.700.035	Mechatronic
8HP51X	1111.024.039	1090.700.133	Oil supply
8HP51X	1111.024.039	1087.700.136	Oil pan
8HP51X	1111.024.040	1102.700.034	Mechatronic
8HP51X	1111.024.040	1102.700.035	Mechatronic
8HP51X	1111.024.040	1090.700.133	Oil supply
8HP51X	1111.024.040	1087.700.136	Oil pan
8HP51X	1111.024.041	1102.700.034	Mechatronic
8HP51X	1111.024.041	1102.700.035	Mechatronic
8HP51X	1111.024.041	1090.700.133	Oil supply
8HP51X	1111.024.041	1087.700.136	Oil pan
8HP51X	1111.024.043	1102.700.034	Mechatronic
8HP51X	1111.024.043	1102.700.035	Mechatronic
8HP51X	1111.024.043	1090.700.133	Oil supply
8HP51X	1111.024.043	1087.700.136	Oil pan
8HP51X	1111.024.044	1102.700.034	Mechatronic
8HP51X	1111.024.044	1102.700.035	Mechatronic
8HP51X	1111.024.044	1090.700.133	Oil supply
8HP51X	1111.024.044	1087.700.136	Oil pan
8HP51X	1111.024.048	1102.700.034	Mechatronic
8HP51X	1111.024.048	1102.700.035	Mechatronic
8HP51X	1111.024.048	1090.700.133	Oil supply
8HP51X	1111.024.048	1087.700.136	Oil pan
8HP51X	1111.024.051	1102.700.034	Mechatronic
8HP51X	1111.024.051	1102.700.035	Mechatronic
8HP51X	1111.024.051	1090.700.133	Oil supply
8HP51X	1111.024.051	1087.700.136	Oil pan
8HP51X	1111.024.052	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.052	1102.700.035	Mechatronic
8HP51X	1111.024.052	1090.700.133	Oil supply
8HP51X	1111.024.052	1087.700.136	Oil pan
8HP51X	1111.024.053	1102.700.034	Mechatronic
8HP51X	1111.024.053	1102.700.035	Mechatronic
8HP51X	1111.024.053	1090.700.133	Oil supply
8HP51X	1111.024.053	1087.700.136	Oil pan
8HP51X	1111.024.054	1102.700.034	Mechatronic
8HP51X	1111.024.054	1102.700.035	Mechatronic
8HP51X	1111.024.054	1090.700.133	Oil supply
8HP51X	1111.024.054	1087.700.136	Oil pan
8HP51X	1111.024.061	1102.700.034	Mechatronic
8HP51X	1111.024.061	1102.700.035	Mechatronic
8HP51X	1111.024.061	1090.700.133	Oil supply
8HP51X	1111.024.061	1087.700.136	Oil pan
8HP51X	1111.024.062	1102.700.034	Mechatronic
8HP51X	1111.024.062	1102.700.035	Mechatronic
8HP51X	1111.024.062	1090.700.133	Oil supply
8HP51X	1111.024.062	1087.700.136	Oil pan
8HP51X	1111.024.064	1102.700.034	Mechatronic
8HP51X	1111.024.064	1090.700.133	Oil supply
8HP51X	1111.024.064	1087.700.136	Oil pan
8HP51X	1111.024.065	1102.700.034	Mechatronic
8HP51X	1111.024.065	1102.700.035	Mechatronic
8HP51X	1111.024.065	1090.700.133	Oil supply
8HP51X	1111.024.065	1087.700.136	Oil pan
8HP51X	1111.024.066	1102.700.034	Mechatronic
8HP51X	1111.024.066	1102.700.035	Mechatronic
8HP51X	1111.024.066	1090.700.133	Oil supply
8HP51X	1111.024.066	1087.700.136	Oil pan
8HP51X	1111.024.067	1102.700.034	Mechatronic
8HP51X	1111.024.067	1102.700.035	Mechatronic
8HP51X	1111.024.067	1090.700.133	Oil supply
8HP51X	1111.024.067	1087.700.136	Oil pan
8HP51X	1111.024.068	1102.700.034	Mechatronic
8HP51X	1111.024.068	1102.700.035	Mechatronic
8HP51X	1111.024.068	1090.700.133	Oil supply
8HP51X	1111.024.068	1087.700.136	Oil pan
8HP51X	1111.024.069	1102.700.034	Mechatronic
8HP51X	1111.024.069	1102.700.035	Mechatronic
8HP51X	1111.024.069	1090.700.133	Oil supply
8HP51X	1111.024.069	1087.700.136	Oil pan
8HP51X	1111.024.070	1102.700.034	Mechatronic
8HP51X	1111.024.070	1102.700.035	Mechatronic
8HP51X	1111.024.070	1090.700.133	Oil supply
8HP51X	1111.024.070	1087.700.136	Oil pan
8HP51X	1111.024.072	1102.700.034	Mechatronic
8HP51X	1111.024.072	1102.700.035	Mechatronic
8HP51X	1111.024.072	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.072	1087.700.136	Oil pan
8HP51X	1111.024.076	1102.700.034	Mechatronic
8HP51X	1111.024.076	1102.700.035	Mechatronic
8HP51X	1111.024.076	1090.700.133	Oil supply
8HP51X	1111.024.076	1087.700.136	Oil pan
8HP51X	1111.024.077	1102.700.034	Mechatronic
8HP51X	1111.024.077	1102.700.035	Mechatronic
8HP51X	1111.024.077	1090.700.133	Oil supply
8HP51X	1111.024.077	1087.700.136	Oil pan
8HP51X	1111.024.078	1102.700.034	Mechatronic
8HP51X	1111.024.078	1102.700.035	Mechatronic
8HP51X	1111.024.078	1090.700.133	Oil supply
8HP51X	1111.024.078	1087.700.136	Oil pan
8HP51X	1111.024.079	1102.700.034	Mechatronic
8HP51X	1111.024.079	1102.700.035	Mechatronic
8HP51X	1111.024.079	1090.700.133	Oil supply
8HP51X	1111.024.079	1087.700.136	Oil pan
8HP51X	1111.024.085	1102.700.034	Mechatronic
8HP51X	1111.024.085	1102.700.035	Mechatronic
8HP51X	1111.024.085	1090.700.133	Oil supply
8HP51X	1111.024.085	1087.700.136	Oil pan
8HP51X	1111.024.088	1102.700.034	Mechatronic
8HP51X	1111.024.088	1102.700.035	Mechatronic
8HP51X	1111.024.088	1090.700.133	Oil supply
8HP51X	1111.024.088	1087.700.136	Oil pan
8HP51X	1111.024.090	1102.700.034	Mechatronic
8HP51X	1111.024.090	1102.700.035	Mechatronic
8HP51X	1111.024.090	1090.700.133	Oil supply
8HP51X	1111.024.090	1087.700.136	Oil pan
8HP51X	1111.024.094	1102.700.034	Mechatronic
8HP51X	1111.024.094	1102.700.035	Mechatronic
8HP51X	1111.024.094	1090.700.133	Oil supply
8HP51X	1111.024.094	1087.700.136	Oil pan
8HP51X	1111.024.096	1102.700.034	Mechatronic
8HP51X	1111.024.096	1102.700.035	Mechatronic
8HP51X	1111.024.096	1090.700.133	Oil supply
8HP51X	1111.024.096	1087.700.136	Oil pan
8HP51X	1111.024.097	1102.700.034	Mechatronic
8HP51X	1111.024.097	1102.700.035	Mechatronic
8HP51X	1111.024.097	1090.700.133	Oil supply
8HP51X	1111.024.097	1087.700.136	Oil pan
8HP51X	1111.024.100	1102.700.034	Mechatronic
8HP51X	1111.024.100	1102.700.035	Mechatronic
8HP51X	1111.024.100	1090.700.133	Oil supply
8HP51X	1111.024.100	1087.700.136	Oil pan
8HP51X	1111.024.101	1102.700.034	Mechatronic
8HP51X	1111.024.101	1102.700.035	Mechatronic
8HP51X	1111.024.101	1090.700.133	Oil supply
8HP51X	1111.024.101	1087.700.136	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.102	1102.700.034	Mechatronic
8HP51X	1111.024.102	1102.700.035	Mechatronic
8HP51X	1111.024.102	1090.700.133	Oil supply
8HP51X	1111.024.102	1087.700.136	Oil pan
8HP51X	1111.024.103	1102.700.034	Mechatronic
8HP51X	1111.024.103	1102.700.035	Mechatronic
8HP51X	1111.024.103	1090.700.133	Oil supply
8HP51X	1111.024.103	1087.700.136	Oil pan
8HP51X	1111.024.104	1102.700.034	Mechatronic
8HP51X	1111.024.104	1102.700.035	Mechatronic
8HP51X	1111.024.104	1090.700.133	Oil supply
8HP51X	1111.024.104	1087.700.136	Oil pan
8HP51X	1111.024.106	1102.700.034	Mechatronic
8HP51X	1111.024.106	1102.700.035	Mechatronic
8HP51X	1111.024.106	1090.700.133	Oil supply
8HP51X	1111.024.106	1087.700.136	Oil pan
8HP51X	1111.024.108	1102.700.034	Mechatronic
8HP51X	1111.024.108	1102.700.035	Mechatronic
8HP51X	1111.024.108	1090.700.133	Oil supply
8HP51X	1111.024.108	1087.700.136	Oil pan
8HP51X	1111.024.111	1102.700.034	Mechatronic
8HP51X	1111.024.111	1102.700.035	Mechatronic
8HP51X	1111.024.111	1090.700.133	Oil supply
8HP51X	1111.024.111	1087.700.136	Oil pan
8HP51X	1111.024.112	1102.700.034	Mechatronic
8HP51X	1111.024.112	1102.700.035	Mechatronic
8HP51X	1111.024.112	1090.700.133	Oil supply
8HP51X	1111.024.112	1087.700.136	Oil pan
8HP51X	1111.024.113	1102.700.034	Mechatronic
8HP51X	1111.024.113	1102.700.035	Mechatronic
8HP51X	1111.024.113	1090.700.133	Oil supply
8HP51X	1111.024.113	1087.700.136	Oil pan
8HP51X	1111.024.114	1102.700.034	Mechatronic
8HP51X	1111.024.114	1102.700.035	Mechatronic
8HP51X	1111.024.114	1090.700.133	Oil supply
8HP51X	1111.024.114	1087.700.136	Oil pan
8HP51X	1111.024.115	1102.700.034	Mechatronic
8HP51X	1111.024.115	1102.700.035	Mechatronic
8HP51X	1111.024.115	1090.700.133	Oil supply
8HP51X	1111.024.115	1087.700.136	Oil pan
8HP51X	1111.024.116	1102.700.034	Mechatronic
8HP51X	1111.024.116	1102.700.035	Mechatronic
8HP51X	1111.024.116	1090.700.133	Oil supply
8HP51X	1111.024.116	1087.700.136	Oil pan
8HP51X	1111.024.117	1102.700.034	Mechatronic
8HP51X	1111.024.117	1102.700.035	Mechatronic
8HP51X	1111.024.117	1090.700.133	Oil supply
8HP51X	1111.024.117	1087.700.136	Oil pan
8HP51X	1111.024.118	1102.700.034	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.118	1102.700.035	Mechatronic
8HP51X	1111.024.118	1090.700.133	Oil supply
8HP51X	1111.024.118	1087.700.136	Oil pan
8HP51X	1111.024.119	1102.700.034	Mechatronic
8HP51X	1111.024.119	1102.700.035	Mechatronic
8HP51X	1111.024.119	1090.700.133	Oil supply
8HP51X	1111.024.119	1087.700.136	Oil pan
8HP51X	1111.024.120	1102.700.034	Mechatronic
8HP51X	1111.024.120	1102.700.035	Mechatronic
8HP51X	1111.024.120	1090.700.133	Oil supply
8HP51X	1111.024.120	1087.700.136	Oil pan
8HP51X	1111.024.121	1102.700.034	Mechatronic
8HP51X	1111.024.121	1102.700.035	Mechatronic
8HP51X	1111.024.121	1090.700.133	Oil supply
8HP51X	1111.024.121	1087.700.136	Oil pan
8HP51X	1111.024.122	1102.700.034	Mechatronic
8HP51X	1111.024.122	1102.700.035	Mechatronic
8HP51X	1111.024.122	1090.700.133	Oil supply
8HP51X	1111.024.122	1087.700.136	Oil pan
8HP51X	1111.024.123	1102.700.034	Mechatronic
8HP51X	1111.024.123	1102.700.035	Mechatronic
8HP51X	1111.024.123	1090.700.133	Oil supply
8HP51X	1111.024.123	1087.700.136	Oil pan
8HP51X	1111.024.124	1102.700.034	Mechatronic
8HP51X	1111.024.124	1102.700.035	Mechatronic
8HP51X	1111.024.124	1090.700.133	Oil supply
8HP51X	1111.024.124	1087.700.136	Oil pan
8HP51X	1111.024.125	1102.700.034	Mechatronic
8HP51X	1111.024.125	1102.700.035	Mechatronic
8HP51X	1111.024.125	1090.700.133	Oil supply
8HP51X	1111.024.125	1087.700.136	Oil pan
8HP51X	1111.024.127	1102.700.034	Mechatronic
8HP51X	1111.024.127	1102.700.035	Mechatronic
8HP51X	1111.024.127	1090.700.133	Oil supply
8HP51X	1111.024.127	1087.700.136	Oil pan
8HP51X	1111.024.128	1102.700.034	Mechatronic
8HP51X	1111.024.128	1102.700.035	Mechatronic
8HP51X	1111.024.128	1090.700.133	Oil supply
8HP51X	1111.024.128	1087.700.136	Oil pan
8HP51X	1111.024.129	1102.700.034	Mechatronic
8HP51X	1111.024.129	1102.700.035	Mechatronic
8HP51X	1111.024.129	1090.700.133	Oil supply
8HP51X	1111.024.129	1087.700.136	Oil pan
8HP51X	1111.024.130	1102.700.034	Mechatronic
8HP51X	1111.024.130	1102.700.035	Mechatronic
8HP51X	1111.024.130	1090.700.133	Oil supply
8HP51X	1111.024.130	1087.700.136	Oil pan
8HP51X	1111.024.131	1102.700.034	Mechatronic
8HP51X	1111.024.131	1102.700.035	Mechatronic



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.131	1090.700.133	Oil supply
8HP51X	1111.024.131	1087.700.136	Oil pan
8HP51X	1111.024.132	1102.700.034	Mechatronic
8HP51X	1111.024.132	1102.700.035	Mechatronic
8HP51X	1111.024.132	1090.700.133	Oil supply
8HP51X	1111.024.132	1087.700.136	Oil pan
8HP51X	1111.024.133	1102.700.034	Mechatronic
8HP51X	1111.024.133	1102.700.035	Mechatronic
8HP51X	1111.024.133	1090.700.133	Oil supply
8HP51X	1111.024.133	1087.700.136	Oil pan
8HP51X	1111.024.134	1102.700.034	Mechatronic
8HP51X	1111.024.134	1102.700.035	Mechatronic
8HP51X	1111.024.134	1090.700.133	Oil supply
8HP51X	1111.024.134	1087.700.136	Oil pan
8HP51X	1111.024.135	1102.700.034	Mechatronic
8HP51X	1111.024.135	1102.700.035	Mechatronic
8HP51X	1111.024.135	1090.700.133	Oil supply
8HP51X	1111.024.135	1087.700.136	Oil pan
8HP51X	1111.024.136	1102.700.034	Mechatronic
8HP51X	1111.024.136	1102.700.035	Mechatronic
8HP51X	1111.024.136	1090.700.133	Oil supply
8HP51X	1111.024.136	1087.700.136	Oil pan
8HP51X	1111.024.137	1102.700.034	Mechatronic
8HP51X	1111.024.137	1102.700.035	Mechatronic
8HP51X	1111.024.137	1090.700.133	Oil supply
8HP51X	1111.024.137	1087.700.136	Oil pan
8HP51X	1111.024.138	1102.700.034	Mechatronic
8HP51X	1111.024.138	1102.700.035	Mechatronic
8HP51X	1111.024.138	1090.700.133	Oil supply
8HP51X	1111.024.138	1087.700.136	Oil pan
8HP51X	1111.024.139	1102.700.034	Mechatronic
8HP51X	1111.024.139	1102.700.035	Mechatronic
8HP51X	1111.024.139	1090.700.133	Oil supply
8HP51X	1111.024.139	1087.700.136	Oil pan
8HP51X	1111.024.142	1102.700.034	Mechatronic
8HP51X	1111.024.142	1102.700.035	Mechatronic
8HP51X	1111.024.142	1090.700.133	Oil supply
8HP51X	1111.024.142	1087.700.136	Oil pan
8HP51X	1111.024.143	1102.700.034	Mechatronic
8HP51X	1111.024.143	1102.700.035	Mechatronic
8HP51X	1111.024.143	1090.700.133	Oil supply
8HP51X	1111.024.143	1087.700.136	Oil pan
8HP51X	1111.024.144	1102.700.034	Mechatronic
8HP51X	1111.024.144	1102.700.035	Mechatronic
8HP51X	1111.024.144	1090.700.133	Oil supply
8HP51X	1111.024.144	1087.700.136	Oil pan
8HP51X	1111.024.145	1102.700.034	Mechatronic
8HP51X	1111.024.145	1102.700.035	Mechatronic
8HP51X	1111.024.145	1090.700.133	Oil supply



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP51X	1111.024.145	1087.700.136	Oil pan
8HP51X	1111.024.146	1102.700.034	Mechatronic
8HP51X	1111.024.146	1102.700.035	Mechatronic
8HP51X	1111.024.146	1090.700.133	Oil supply
8HP51X	1111.024.146	1087.700.136	Oil pan
8HP51X	1111.024.147	1102.700.034	Mechatronic
8HP51X	1111.024.147	1102.700.035	Mechatronic
8HP51X	1111.024.147	1090.700.133	Oil supply
8HP51X	1111.024.147	1087.700.136	Oil pan
8HP51X	1111.024.148	1102.700.034	Mechatronic
8HP51X	1111.024.148	1102.700.035	Mechatronic
8HP51X	1111.024.148	1090.700.133	Oil supply
8HP51X	1111.024.148	1087.700.136	Oil pan
8HP51X	1111.024.149	1102.700.034	Mechatronic
8HP51X	1111.024.149	1102.700.035	Mechatronic
8HP51X	1111.024.149	1090.700.133	Oil supply
8HP51X	1111.024.149	1087.700.136	Oil pan
8HP51X	1111.024.150	1102.700.034	Mechatronic
8HP51X	1111.024.150	1102.700.035	Mechatronic
8HP51X	1111.024.150	1090.700.133	Oil supply
8HP51X	1111.024.150	1087.700.136	Oil pan
8HP51X	1111.024.151	1102.700.034	Mechatronic
8HP51X	1111.024.151	1102.700.035	Mechatronic
8HP51X	1111.024.151	1090.700.133	Oil supply
8HP51X	1111.024.151	1087.700.136	Oil pan

Tab. 35 Model 1111



ZF Aftermarket Service Information

22.12 Model 1116

Transmission type	Parts list (BoM)	Specification	Assembly
8P80PH	1116.010.003	1116.700.231	Power Connection
8P80PH	1116.010.003	1124.700.036	Mechatronic
8P80PH	1116.010.003	1124.700.024	Oil supply
8P80PH	1116.010.003	1124.700.028	Oil pan
8P80PH	1116.010.003	1124.700.090	Parking lock magnet
8P80PH	1116.010.003	1104.700.023	Centering plate
8P80PH	1116.010.004	1116.700.231	Power Connection
8P80PH	1116.010.004	1124.700.036	Mechatronic
8P80PH	1116.010.004	1124.700.024	Oil supply
8P80PH	1116.010.004	1124.700.028	Oil pan
8P80PH	1116.010.004	1124.700.090	Parking lock magnet
8P80PH	1116.010.004	1104.700.023	Centering plate
8P80PH	1116.010.005	1116.700.231	Power Connection
8P80PH	1116.010.005	1124.700.036	Mechatronic
8P80PH	1116.010.005	1124.700.024	Oil supply
8P80PH	1116.010.005	1124.700.028	Oil pan
8P80PH	1116.010.005	1124.700.090	Parking lock magnet
8P80PH	1116.010.005	1104.700.023	Centering plate
8P80PH	1116.010.006	1116.700.231	Power Connection
8P80PH	1116.010.006	1116.700.232	Power Connection
8P80PH	1116.010.006	1116.700.210	Power electronics
8P80PH	1116.010.006	1124.700.036	Mechatronic
8P80PH	1116.010.006	1124.700.024	Oil supply
8P80PH	1116.010.006	1124.700.028	Oil pan
8P80PH	1116.010.006	1124.700.090	Parking lock magnet
8P80PH	1116.010.006	1104.700.023	Centering plate
8P80PH	1116.010.007	1116.700.231	Power Connection
8P80PH	1116.010.007	1124.700.036	Mechatronic
8P80PH	1116.010.007	1124.700.024	Oil supply
8P80PH	1116.010.007	1124.700.028	Oil pan
8P80PH	1116.010.007	1124.700.090	Parking lock magnet
8P80PH	1116.010.007	1104.700.023	Centering plate
8P80PH	1116.010.008	1116.700.231	Power Connection
8P80PH	1116.010.008	1116.700.210	Power electronics
8P80PH	1116.010.008	1124.700.036	Mechatronic
8P80PH	1116.010.008	1124.700.024	Oil supply
8P80PH	1116.010.008	1124.700.028	Oil pan
8P80PH	1116.010.008	1124.700.090	Parking lock magnet
8P80PH	1116.010.008	1104.700.023	Centering plate
8P80PH	1116.010.009	1116.700.231	Power Connection
8P80PH	1116.010.009	1116.700.232	Power Connection
8P80PH	1116.010.009	1116.700.210	Power electronics
8P80PH	1116.010.009	1124.700.036	Mechatronic
8P80PH	1116.010.009	1124.700.024	Oil supply
8P80PH	1116.010.009	1124.700.028	Oil pan
8P80PH	1116.010.009	1124.700.090	Parking lock magnet



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
272/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80PH	1116.010.009	1104.700.023	Centering plate
8P80PH	1116.010.010	1116.700.231	Power Connection
8P80PH	1116.010.010	1116.700.232	Power Connection
8P80PH	1116.010.010	1116.700.210	Power electronics
8P80PH	1116.010.010	1124.700.036	Mechatronic
8P80PH	1116.010.010	1124.700.024	Oil supply
8P80PH	1116.010.010	1124.700.028	Oil pan
8P80PH	1116.010.010	1124.700.090	Parking lock magnet
8P80PH	1116.010.010	1104.700.023	Centering plate
8P80PH	1116.010.011	1116.700.231	Power Connection
8P80PH	1116.010.011	1124.700.036	Mechatronic
8P80PH	1116.010.011	1124.700.024	Oil supply
8P80PH	1116.010.011	1124.700.028	Oil pan
8P80PH	1116.010.011	1124.700.090	Parking lock magnet
8P80PH	1116.010.011	1104.700.023	Centering plate
8P80PH	1116.010.012	1116.700.231	Power Connection
8P80PH	1116.010.012	1116.700.210	Power electronics
8P80PH	1116.010.012	1124.700.036	Mechatronic
8P80PH	1116.010.012	1124.700.024	Oil supply
8P80PH	1116.010.012	1124.700.028	Oil pan
8P80PH	1116.010.012	1124.700.090	Parking lock magnet
8P80PH	1116.010.012	1104.700.023	Centering plate
8P80XPH	1116.050.006	1116.700.231	Power Connection
8P80XPH	1116.050.006	1124.700.036	Mechatronic
8P80XPH	1116.050.006	1124.700.024	Oil supply
8P80XPH	1116.050.006	1124.700.028	Oil pan
8P80XPH	1116.050.006	1124.700.090	Parking lock magnet
8P80XPH	1116.050.006	1104.700.023	Centering plate
8P80XPH	1116.050.019	1116.700.231	Power Connection
8P80XPH	1116.050.019	1116.700.210	Power electronics
8P80XPH	1116.050.019	1124.700.036	Mechatronic
8P80XPH	1116.050.019	1116.700.130	Cover
8P80XPH	1116.050.019	1124.700.024	Oil supply
8P80XPH	1116.050.019	1124.700.028	Oil pan
8P80XPH	1116.050.019	1124.700.090	Parking lock magnet
8P80XPH	1116.050.019	1104.700.023	Centering plate
8P80XPH	1116.050.020	1116.700.231	Power Connection
8P80XPH	1116.050.020	1116.700.210	Power electronics
8P80XPH	1116.050.020	1124.700.036	Mechatronic
8P80XPH	1116.050.020	1116.700.130	Cover
8P80XPH	1116.050.020	1124.700.024	Oil supply
8P80XPH	1116.050.020	1124.700.028	Oil pan
8P80XPH	1116.050.020	1124.700.090	Parking lock magnet
8P80XPH	1116.050.020	1104.700.023	Centering plate
8P80XPH	1116.050.021	1116.700.231	Power Connection
8P80XPH	1116.050.021	1116.700.210	Power electronics
8P80XPH	1116.050.021	1124.700.036	Mechatronic
8P80XPH	1116.050.021	1116.700.130	Cover
8P80XPH	1116.050.021	1124.700.024	Oil supply



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
273/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.021	1124.700.028	Oil pan
8P80XPH	1116.050.021	1124.700.090	Parking lock magnet
8P80XPH	1116.050.021	1104.700.023	Centering plate
8P80XPH	1116.050.022	1116.700.231	Power Connection
8P80XPH	1116.050.022	1116.700.232	Power Connection
8P80XPH	1116.050.022	1116.700.210	Power electronics
8P80XPH	1116.050.022	1124.700.036	Mechatronic
8P80XPH	1116.050.022	1116.700.130	Cover
8P80XPH	1116.050.022	1124.700.024	Oil supply
8P80XPH	1116.050.022	1124.700.028	Oil pan
8P80XPH	1116.050.022	1124.700.090	Parking lock magnet
8P80XPH	1116.050.022	1104.700.023	Centering plate
8P80XPH	1116.050.045	1116.700.231	Power Connection
8P80XPH	1116.050.045	1116.700.232	Power Connection
8P80XPH	1116.050.045	1116.700.147	Power electronics
8P80XPH	1116.050.045	1116.700.210	Power electronics
8P80XPH	1116.050.045	1124.700.036	Mechatronic
8P80XPH	1116.050.045	1124.700.024	Oil supply
8P80XPH	1116.050.045	1124.700.028	Oil pan
8P80XPH	1116.050.045	1124.700.090	Parking lock magnet
8P80XPH	1116.050.045	1104.700.023	Centering plate
8P80XPH	1116.050.046	1116.700.231	Power Connection
8P80XPH	1116.050.046	1116.700.210	Power electronics
8P80XPH	1116.050.046	1124.700.036	Mechatronic
8P80XPH	1116.050.046	1116.700.130	Cover
8P80XPH	1116.050.046	1124.700.024	Oil supply
8P80XPH	1116.050.046	1124.700.028	Oil pan
8P80XPH	1116.050.046	1124.700.090	Parking lock magnet
8P80XPH	1116.050.046	1104.700.023	Centering plate
8P80XPH	1116.050.047	1116.700.231	Power Connection
8P80XPH	1116.050.047	1116.700.232	Power Connection
8P80XPH	1116.050.047	1116.700.210	Power electronics
8P80XPH	1116.050.047	1124.700.036	Mechatronic
8P80XPH	1116.050.047	1116.700.130	Cover
8P80XPH	1116.050.047	1124.700.024	Oil supply
8P80XPH	1116.050.047	1124.700.028	Oil pan
8P80XPH	1116.050.047	1124.700.090	Parking lock magnet
8P80XPH	1116.050.047	1104.700.023	Centering plate
8P80XPH	1116.050.048	1116.700.231	Power Connection
8P80XPH	1116.050.048	1116.700.232	Power Connection
8P80XPH	1116.050.048	1116.700.210	Power electronics
8P80XPH	1116.050.048	1124.700.036	Mechatronic
8P80XPH	1116.050.048	1116.700.130	Cover
8P80XPH	1116.050.048	1124.700.024	Oil supply
8P80XPH	1116.050.048	1124.700.028	Oil pan
8P80XPH	1116.050.048	1124.700.090	Parking lock magnet
8P80XPH	1116.050.048	1104.700.023	Centering plate
8P80XPH	1116.050.049	1116.700.231	Power Connection
8P80XPH	1116.050.049	1116.700.210	Power electronics



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
274/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.049	1124.700.036	Mechatronic
8P80XPH	1116.050.049	1116.700.130	Cover
8P80XPH	1116.050.049	1124.700.024	Oil supply
8P80XPH	1116.050.049	1124.700.028	Oil pan
8P80XPH	1116.050.049	1124.700.090	Parking lock magnet
8P80XPH	1116.050.049	1104.700.023	Centering plate
8P80XPH	1116.050.052	1116.700.231	Power Connection
8P80XPH	1116.050.052	1116.700.232	Power Connection
8P80XPH	1116.050.052	1116.700.210	Power electronics
8P80XPH	1116.050.052	1124.700.036	Mechatronic
8P80XPH	1116.050.052	1116.700.130	Cover
8P80XPH	1116.050.052	1124.700.024	Oil supply
8P80XPH	1116.050.052	1124.700.028	Oil pan
8P80XPH	1116.050.052	1124.700.090	Parking lock magnet
8P80XPH	1116.050.052	1104.700.023	Centering plate
8P80XPH	1116.050.053	1116.700.231	Power Connection
8P80XPH	1116.050.053	1116.700.232	Power Connection
8P80XPH	1116.050.053	1116.700.210	Power electronics
8P80XPH	1116.050.053	1124.700.036	Mechatronic
8P80XPH	1116.050.053	1116.700.130	Cover
8P80XPH	1116.050.053	1124.700.024	Oil supply
8P80XPH	1116.050.053	1124.700.028	Oil pan
8P80XPH	1116.050.053	1124.700.090	Parking lock magnet
8P80XPH	1116.050.053	1104.700.023	Centering plate
8P80XPH	1116.050.054	1116.700.231	Power Connection
8P80XPH	1116.050.054	1116.700.232	Power Connection
8P80XPH	1116.050.054	1116.700.210	Power electronics
8P80XPH	1116.050.054	1124.700.036	Mechatronic
8P80XPH	1116.050.054	1116.700.130	Cover
8P80XPH	1116.050.054	1124.700.024	Oil supply
8P80XPH	1116.050.054	1124.700.028	Oil pan
8P80XPH	1116.050.054	1124.700.090	Parking lock magnet
8P80XPH	1116.050.054	1104.700.023	Centering plate
8P80XPH	1116.050.055	1116.700.231	Power Connection
8P80XPH	1116.050.055	1116.700.232	Power Connection
8P80XPH	1116.050.055	1116.700.210	Power electronics
8P80XPH	1116.050.055	1124.700.036	Mechatronic
8P80XPH	1116.050.055	1116.700.130	Cover
8P80XPH	1116.050.055	1124.700.024	Oil supply
8P80XPH	1116.050.055	1124.700.028	Oil pan
8P80XPH	1116.050.055	1124.700.090	Parking lock magnet
8P80XPH	1116.050.055	1104.700.023	Centering plate
8P80XPH	1116.050.056	1116.700.231	Power Connection
8P80XPH	1116.050.056	1116.700.232	Power Connection
8P80XPH	1116.050.056	1116.700.147	Power electronics
8P80XPH	1116.050.056	1116.700.210	Power electronics
8P80XPH	1116.050.056	1124.700.036	Mechatronic
8P80XPH	1116.050.056	1124.700.024	Oil supply
8P80XPH	1116.050.056	1124.700.028	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.056	1124.700.090	Parking lock magnet
8P80XPH	1116.050.056	1104.700.023	Centering plate
8P80XPH	1116.050.058	1116.700.231	Power Connection
8P80XPH	1116.050.058	1124.700.036	Mechatronic
8P80XPH	1116.050.058	1116.700.130	Cover
8P80XPH	1116.050.058	1124.700.024	Oil supply
8P80XPH	1116.050.058	1124.700.028	Oil pan
8P80XPH	1116.050.058	1124.700.090	Parking lock magnet
8P80XPH	1116.050.058	1104.700.023	Centering plate
8P80XPH	1116.050.059	1116.700.231	Power Connection
8P80XPH	1116.050.060	1116.700.231	Power Connection
8P80XPH	1116.050.061	1116.700.231	Power Connection
8P80XPH	1116.050.061	1116.700.232	Power Connection
8P80XPH	1116.050.061	1116.700.210	Power electronics
8P80XPH	1116.050.061	1124.700.036	Mechatronic
8P80XPH	1116.050.061	1116.700.130	Cover
8P80XPH	1116.050.061	1124.700.024	Oil supply
8P80XPH	1116.050.061	1124.700.028	Oil pan
8P80XPH	1116.050.061	1124.700.090	Parking lock magnet
8P80XPH	1116.050.061	1104.700.023	Centering plate
8P80XPH	1116.050.062	1116.700.231	Power Connection
8P80XPH	1116.050.062	1116.700.232	Power Connection
8P80XPH	1116.050.062	1116.700.210	Power electronics
8P80XPH	1116.050.062	1124.700.036	Mechatronic
8P80XPH	1116.050.062	1116.700.130	Cover
8P80XPH	1116.050.062	1124.700.024	Oil supply
8P80XPH	1116.050.062	1124.700.028	Oil pan
8P80XPH	1116.050.062	1124.700.090	Parking lock magnet
8P80XPH	1116.050.062	1104.700.023	Centering plate
8P80XPH	1116.050.063	1116.700.231	Power Connection
8P80XPH	1116.050.063	1116.700.232	Power Connection
8P80XPH	1116.050.063	1116.700.210	Power electronics
8P80XPH	1116.050.063	1124.700.036	Mechatronic
8P80XPH	1116.050.063	1116.700.130	Cover
8P80XPH	1116.050.063	1124.700.024	Oil supply
8P80XPH	1116.050.063	1124.700.028	Oil pan
8P80XPH	1116.050.063	1124.700.090	Parking lock magnet
8P80XPH	1116.050.063	1104.700.023	Centering plate
8P80XPH	1116.050.065	1116.700.231	Power Connection
8P80XPH	1116.050.065	1124.700.036	Mechatronic
8P80XPH	1116.050.065	1124.700.024	Oil supply
8P80XPH	1116.050.065	1124.700.028	Oil pan
8P80XPH	1116.050.065	1124.700.090	Parking lock magnet
8P80XPH	1116.050.065	1104.700.023	Centering plate
8P80XPH	1116.050.066	1116.700.231	Power Connection
8P80XPH	1116.050.066	1124.700.036	Mechatronic
8P80XPH	1116.050.066	1124.700.024	Oil supply
8P80XPH	1116.050.066	1124.700.028	Oil pan
8P80XPH	1116.050.066	1124.700.090	Parking lock magnet



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.066	1104.700.023	Centering plate
8P80XPH	1116.050.068	1116.700.231	Power Connection
8P80XPH	1116.050.068	1116.700.210	Power electronics
8P80XPH	1116.050.068	1124.700.036	Mechatronic
8P80XPH	1116.050.068	1124.700.024	Oil supply
8P80XPH	1116.050.068	1124.700.028	Oil pan
8P80XPH	1116.050.068	1124.700.090	Parking lock magnet
8P80XPH	1116.050.068	1104.700.023	Centering plate
8P80XPH	1116.050.069	1116.700.231	Power Connection
8P80XPH	1116.050.069	1116.700.210	Power electronics
8P80XPH	1116.050.069	1124.700.036	Mechatronic
8P80XPH	1116.050.069	1124.700.024	Oil supply
8P80XPH	1116.050.069	1124.700.028	Oil pan
8P80XPH	1116.050.069	1124.700.090	Parking lock magnet
8P80XPH	1116.050.069	1104.700.023	Centering plate
8P80XPH	1116.050.070	1116.700.231	Power Connection
8P80XPH	1116.050.070	1116.700.232	Power Connection
8P80XPH	1116.050.070	1116.700.210	Power electronics
8P80XPH	1116.050.070	1124.700.036	Mechatronic
8P80XPH	1116.050.070	1116.700.130	Cover
8P80XPH	1116.050.070	1124.700.024	Oil supply
8P80XPH	1116.050.070	1124.700.028	Oil pan
8P80XPH	1116.050.070	1124.700.090	Parking lock magnet
8P80XPH	1116.050.070	1104.700.023	Centering plate
8P80XPH	1116.050.071	1116.700.231	Power Connection
8P80XPH	1116.050.071	1116.700.232	Power Connection
8P80XPH	1116.050.071	1116.700.210	Power electronics
8P80XPH	1116.050.071	1124.700.036	Mechatronic
8P80XPH	1116.050.071	1116.700.130	Cover
8P80XPH	1116.050.071	1124.700.024	Oil supply
8P80XPH	1116.050.071	1124.700.028	Oil pan
8P80XPH	1116.050.071	1124.700.090	Parking lock magnet
8P80XPH	1116.050.071	1104.700.023	Centering plate
8P80XPH	1116.050.072	1116.700.231	Power Connection
8P80XPH	1116.050.072	1116.700.232	Power Connection
8P80XPH	1116.050.072	1116.700.210	Power electronics
8P80XPH	1116.050.072	1124.700.036	Mechatronic
8P80XPH	1116.050.072	1116.700.130	Cover
8P80XPH	1116.050.072	1124.700.024	Oil supply
8P80XPH	1116.050.072	1124.700.028	Oil pan
8P80XPH	1116.050.072	1124.700.090	Parking lock magnet
8P80XPH	1116.050.072	1104.700.023	Centering plate
8P80XPH	1116.050.073	1116.700.231	Power Connection
8P80XPH	1116.050.073	1116.700.232	Power Connection
8P80XPH	1116.050.073	1116.700.147	Power electronics
8P80XPH	1116.050.073	1116.700.210	Power electronics
8P80XPH	1116.050.073	1124.700.036	Mechatronic
8P80XPH	1116.050.073	1124.700.024	Oil supply
8P80XPH	1116.050.073	1124.700.028	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
277/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.073	1124.700.090	Parking lock magnet
8P80XPH	1116.050.073	1104.700.023	Centering plate
8P80XPH	1116.050.074	1116.700.231	Power Connection
8P80XPH	1116.050.074	1116.700.210	Power electronics
8P80XPH	1116.050.074	1124.700.036	Mechatronic
8P80XPH	1116.050.074	1116.700.130	Cover
8P80XPH	1116.050.074	1124.700.024	Oil supply
8P80XPH	1116.050.074	1124.700.028	Oil pan
8P80XPH	1116.050.074	1124.700.090	Parking lock magnet
8P80XPH	1116.050.074	1104.700.023	Centering plate
8P80XPH	1116.050.075	1116.700.231	Power Connection
8P80XPH	1116.050.075	1124.700.036	Mechatronic
8P80XPH	1116.050.075	1124.700.024	Oil supply
8P80XPH	1116.050.075	1124.700.028	Oil pan
8P80XPH	1116.050.075	1124.700.090	Parking lock magnet
8P80XPH	1116.050.075	1104.700.023	Centering plate
8P80XPH	1116.050.076	1116.700.231	Power Connection
8P80XPH	1116.050.076	1116.700.232	Power Connection
8P80XPH	1116.050.076	1116.700.210	Power electronics
8P80XPH	1116.050.076	1124.700.036	Mechatronic
8P80XPH	1116.050.076	1124.700.024	Oil supply
8P80XPH	1116.050.076	1124.700.028	Oil pan
8P80XPH	1116.050.076	1124.700.090	Parking lock magnet
8P80XPH	1116.050.076	1104.700.023	Centering plate
8P80XPH	1116.050.077	1116.700.231	Power Connection
8P80XPH	1116.050.077	1116.700.232	Power Connection
8P80XPH	1116.050.077	1116.700.210	Power electronics
8P80XPH	1116.050.077	1124.700.036	Mechatronic
8P80XPH	1116.050.077	1116.700.130	Cover
8P80XPH	1116.050.077	1124.700.024	Oil supply
8P80XPH	1116.050.077	1124.700.028	Oil pan
8P80XPH	1116.050.077	1124.700.090	Parking lock magnet
8P80XPH	1116.050.077	1104.700.023	Centering plate
8P80XPH	1116.050.078	1116.700.231	Power Connection
8P80XPH	1116.050.078	1116.700.232	Power Connection
8P80XPH	1116.050.078	1116.700.210	Power electronics
8P80XPH	1116.050.078	1124.700.036	Mechatronic
8P80XPH	1116.050.078	1116.700.130	Cover
8P80XPH	1116.050.078	1124.700.024	Oil supply
8P80XPH	1116.050.078	1124.700.028	Oil pan
8P80XPH	1116.050.078	1124.700.090	Parking lock magnet
8P80XPH	1116.050.078	1104.700.023	Centering plate
8P80XPH	1116.050.080	1116.700.231	Power Connection
8P80XPH	1116.050.080	1116.700.210	Power electronics
8P80XPH	1116.050.080	1124.700.036	Mechatronic
8P80XPH	1116.050.080	1124.700.024	Oil supply
8P80XPH	1116.050.080	1124.700.028	Oil pan
8P80XPH	1116.050.080	1124.700.090	Parking lock magnet
8P80XPH	1116.050.080	1104.700.023	Centering plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
278/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.081	1116.700.231	Power Connection
8P80XPH	1116.050.081	1116.700.210	Power electronics
8P80XPH	1116.050.081	1124.700.036	Mechatronic
8P80XPH	1116.050.081	1116.700.130	Cover
8P80XPH	1116.050.081	1124.700.024	Oil supply
8P80XPH	1116.050.081	1124.700.028	Oil pan
8P80XPH	1116.050.081	1124.700.090	Parking lock magnet
8P80XPH	1116.050.081	1104.700.023	Centering plate
8P80XPH	1116.050.082	1116.700.231	Power Connection
8P80XPH	1116.050.082	1116.700.210	Power electronics
8P80XPH	1116.050.082	1124.700.036	Mechatronic
8P80XPH	1116.050.082	1116.700.130	Cover
8P80XPH	1116.050.082	1124.700.024	Oil supply
8P80XPH	1116.050.082	1124.700.028	Oil pan
8P80XPH	1116.050.082	1124.700.090	Parking lock magnet
8P80XPH	1116.050.082	1104.700.023	Centering plate
8P80XPH	1116.050.083	1116.700.231	Power Connection
8P80XPH	1116.050.083	1116.700.210	Power electronics
8P80XPH	1116.050.083	1124.700.036	Mechatronic
8P80XPH	1116.050.083	1116.700.130	Cover
8P80XPH	1116.050.083	1124.700.024	Oil supply
8P80XPH	1116.050.083	1124.700.028	Oil pan
8P80XPH	1116.050.083	1124.700.090	Parking lock magnet
8P80XPH	1116.050.083	1104.700.023	Centering plate
8P80XPH	1116.050.084	1116.700.231	Power Connection
8P80XPH	1116.050.084	1116.700.210	Power electronics
8P80XPH	1116.050.084	1124.700.036	Mechatronic
8P80XPH	1116.050.084	1116.700.130	Cover
8P80XPH	1116.050.084	1124.700.024	Oil supply
8P80XPH	1116.050.084	1124.700.028	Oil pan
8P80XPH	1116.050.084	1124.700.090	Parking lock magnet
8P80XPH	1116.050.084	1104.700.023	Centering plate
8P80XPH	1116.050.087	1116.700.231	Power Connection
8P80XPH	1116.050.087	1116.700.232	Power Connection
8P80XPH	1116.050.087	1116.700.210	Power electronics
8P80XPH	1116.050.087	1124.700.036	Mechatronic
8P80XPH	1116.050.087	1116.700.130	Cover
8P80XPH	1116.050.087	1124.700.024	Oil supply
8P80XPH	1116.050.087	1124.700.028	Oil pan
8P80XPH	1116.050.087	1124.700.090	Parking lock magnet
8P80XPH	1116.050.087	1104.700.023	Centering plate
8P80XPH	1116.050.088	1116.700.231	Power Connection
8P80XPH	1116.050.088	1124.700.036	Mechatronic
8P80XPH	1116.050.088	1124.700.024	Oil supply
8P80XPH	1116.050.088	1124.700.028	Oil pan
8P80XPH	1116.050.088	1124.700.090	Parking lock magnet
8P80XPH	1116.050.088	1104.700.023	Centering plate
8P80XPH	1116.050.089	1116.700.231	Power Connection
8P80XPH	1116.050.089	1124.700.036	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
279/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.089	1124.700.024	Oil supply
8P80XPH	1116.050.089	1124.700.028	Oil pan
8P80XPH	1116.050.089	1124.700.090	Parking lock magnet
8P80XPH	1116.050.089	1104.700.023	Centering plate
8P80XPH	1116.050.091	1116.700.231	Power Connection
8P80XPH	1116.050.091	1116.700.232	Power Connection
8P80XPH	1116.050.091	1116.700.210	Power electronics
8P80XPH	1116.050.091	1124.700.036	Mechatronic
8P80XPH	1116.050.091	1124.700.024	Oil supply
8P80XPH	1116.050.091	1124.700.028	Oil pan
8P80XPH	1116.050.091	1124.700.090	Parking lock magnet
8P80XPH	1116.050.091	1104.700.023	Centering plate
8P80XPH	1116.050.092	1116.700.231	Power Connection
8P80XPH	1116.050.092	1116.700.232	Power Connection
8P80XPH	1116.050.092	1116.700.210	Power electronics
8P80XPH	1116.050.092	1124.700.036	Mechatronic
8P80XPH	1116.050.092	1124.700.024	Oil supply
8P80XPH	1116.050.092	1124.700.028	Oil pan
8P80XPH	1116.050.092	1124.700.090	Parking lock magnet
8P80XPH	1116.050.092	1104.700.023	Centering plate
8P80XPH	1116.050.093	1116.700.231	Power Connection
8P80XPH	1116.050.093	1116.700.232	Power Connection
8P80XPH	1116.050.093	1116.700.210	Power electronics
8P80XPH	1116.050.093	1124.700.036	Mechatronic
8P80XPH	1116.050.093	1124.700.024	Oil supply
8P80XPH	1116.050.093	1124.700.028	Oil pan
8P80XPH	1116.050.093	1124.700.090	Parking lock magnet
8P80XPH	1116.050.093	1104.700.023	Centering plate
8P80XPH	1116.050.094	1116.700.231	Power Connection
8P80XPH	1116.050.094	1124.700.036	Mechatronic
8P80XPH	1116.050.094	1116.700.130	Cover
8P80XPH	1116.050.094	1124.700.024	Oil supply
8P80XPH	1116.050.094	1124.700.028	Oil pan
8P80XPH	1116.050.094	1124.700.090	Parking lock magnet
8P80XPH	1116.050.094	1104.700.023	Centering plate
8P80XPH	1116.050.095	1116.700.231	Power Connection
8P80XPH	1116.050.095	1124.700.036	Mechatronic
8P80XPH	1116.050.095	1116.700.130	Cover
8P80XPH	1116.050.095	1124.700.024	Oil supply
8P80XPH	1116.050.095	1124.700.028	Oil pan
8P80XPH	1116.050.095	1124.700.090	Parking lock magnet
8P80XPH	1116.050.095	1104.700.023	Centering plate
8P80XPH	1116.050.096	1116.700.231	Power Connection
8P80XPH	1116.050.096	1124.700.036	Mechatronic
8P80XPH	1116.050.096	1116.700.130	Cover
8P80XPH	1116.050.096	1124.700.024	Oil supply
8P80XPH	1116.050.096	1124.700.028	Oil pan
8P80XPH	1116.050.096	1124.700.090	Parking lock magnet
8P80XPH	1116.050.096	1104.700.023	Centering plate



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.097	1116.700.231	Power Connection
8P80XPH	1116.050.097	1124.700.036	Mechatronic
8P80XPH	1116.050.097	1116.700.130	Cover
8P80XPH	1116.050.097	1124.700.024	Oil supply
8P80XPH	1116.050.097	1124.700.028	Oil pan
8P80XPH	1116.050.097	1124.700.090	Parking lock magnet
8P80XPH	1116.050.097	1104.700.023	Centering plate
8P80XPH	1116.050.098	1116.700.231	Power Connection
8P80XPH	1116.050.098	1116.700.147	Power electronics
8P80XPH	1116.050.098	1124.700.036	Mechatronic
8P80XPH	1116.050.098	1124.700.024	Oil supply
8P80XPH	1116.050.098	1124.700.028	Oil pan
8P80XPH	1116.050.098	1124.700.090	Parking lock magnet
8P80XPH	1116.050.098	1104.700.023	Centering plate
8P80XPH	1116.050.099	1116.700.231	Power Connection
8P80XPH	1116.050.099	1116.700.147	Power electronics
8P80XPH	1116.050.099	1124.700.036	Mechatronic
8P80XPH	1116.050.099	1124.700.024	Oil supply
8P80XPH	1116.050.099	1124.700.028	Oil pan
8P80XPH	1116.050.099	1124.700.090	Parking lock magnet
8P80XPH	1116.050.099	1104.700.023	Centering plate
8P80XPH	1116.050.100	1116.700.231	Power Connection
8P80XPH	1116.050.100	1116.700.232	Power Connection
8P80XPH	1116.050.100	1116.700.210	Power electronics
8P80XPH	1116.050.100	1124.700.036	Mechatronic
8P80XPH	1116.050.100	1124.700.024	Oil supply
8P80XPH	1116.050.100	1124.700.028	Oil pan
8P80XPH	1116.050.100	1124.700.090	Parking lock magnet
8P80XPH	1116.050.100	1104.700.023	Centering plate
8P80XPH	1116.050.101	1116.700.231	Power Connection
8P80XPH	1116.050.101	1116.700.232	Power Connection
8P80XPH	1116.050.101	1116.700.210	Power electronics
8P80XPH	1116.050.101	1124.700.036	Mechatronic
8P80XPH	1116.050.101	1124.700.024	Oil supply
8P80XPH	1116.050.101	1124.700.028	Oil pan
8P80XPH	1116.050.101	1124.700.090	Parking lock magnet
8P80XPH	1116.050.101	1104.700.023	Centering plate
8P80XPH	1116.050.102	1116.700.231	Power Connection
8P80XPH	1116.050.102	1116.700.147	Power electronics
8P80XPH	1116.050.102	1124.700.036	Mechatronic
8P80XPH	1116.050.102	1124.700.024	Oil supply
8P80XPH	1116.050.102	1124.700.028	Oil pan
8P80XPH	1116.050.102	1124.700.090	Parking lock magnet
8P80XPH	1116.050.102	1104.700.023	Centering plate
8P80XPH	1116.050.103	1116.700.231	Power Connection
8P80XPH	1116.050.103	1116.700.210	Power electronics
8P80XPH	1116.050.103	1124.700.036	Mechatronic
8P80XPH	1116.050.103	1116.700.130	Cover
8P80XPH	1116.050.103	1124.700.024	Oil supply



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P80XPH	1116.050.103	1124.700.028	Oil pan
8P80XPH	1116.050.103	1124.700.090	Parking lock magnet
8P80XPH	1116.050.103	1104.700.023	Centering plate
8P80XPH	1116.050.104	1116.700.231	Power Connection
8P80XPH	1116.050.104	1124.700.036	Mechatronic
8P80XPH	1116.050.104	1116.700.130	Cover
8P80XPH	1116.050.104	1124.700.024	Oil supply
8P80XPH	1116.050.104	1124.700.028	Oil pan
8P80XPH	1116.050.104	1124.700.090	Parking lock magnet
8P80XPH	1116.050.104	1104.700.023	Centering plate
8P80XPH	1116.050.105	1116.700.231	Power Connection
8P80XPH	1116.050.105	1124.700.036	Mechatronic
8P80XPH	1116.050.105	1116.700.130	Cover
8P80XPH	1116.050.105	1124.700.024	Oil supply
8P80XPH	1116.050.105	1124.700.028	Oil pan
8P80XPH	1116.050.105	1124.700.090	Parking lock magnet
8P80XPH	1116.050.105	1104.700.023	Centering plate
8P80XPH	1116.050.106	1116.700.231	Power Connection
8P80XPH	1116.050.106	1116.700.210	Power electronics
8P80XPH	1116.050.106	1124.700.036	Mechatronic
8P80XPH	1116.050.106	1124.700.024	Oil supply
8P80XPH	1116.050.106	1124.700.028	Oil pan
8P80XPH	1116.050.106	1124.700.090	Parking lock magnet
8P80XPH	1116.050.106	1104.700.023	Centering plate
8P80XPH	1116.050.107	1116.700.231	Power Connection
8P80XPH	1116.050.107	1116.700.210	Power electronics
8P80XPH	1116.050.107	1124.700.036	Mechatronic
8P80XPH	1116.050.107	1116.700.130	Cover
8P80XPH	1116.050.107	1124.700.024	Oil supply
8P80XPH	1116.050.107	1124.700.028	Oil pan
8P80XPH	1116.050.107	1124.700.090	Parking lock magnet
8P80XPH	1116.050.107	1104.700.023	Centering plate
8P80XPH	1116.050.108	1116.700.231	Power Connection
8P80XPH	1116.050.108	1116.700.147	Power electronics
8P80XPH	1116.050.108	1124.700.036	Mechatronic
8P80XPH	1116.050.108	1124.700.024	Oil supply
8P80XPH	1116.050.108	1124.700.028	Oil pan
8P80XPH	1116.050.108	1124.700.090	Parking lock magnet
8P80XPH	1116.050.108	1104.700.023	Centering plate

Tab. 36 Model 1116



ZF Aftermarket Service Information

22.13 Model 1122

Transmission type	Parts list (BoM)	Specification	Assembly
8P100XPH	1122.050.024	1116.700.231	Power connection
8P100XPH	1122.050.024	1116.700.232	Power connection
8P100XPH	1122.050.024	1116.700.210	Power electronics
8P100XPH	1122.050.024	1124.700.036	Mechatronic
8P100XPH	1122.050.024	1116.700.130	Cover
8P100XPH	1122.050.024	1124.700.024	Oil supply
8P100XPH	1122.050.024	1124.700.028	Oil pan
8P100XPH	1122.050.024	1124.700.090	Parking lock magnet
8P100XPH	1122.050.024	1104.700.023	Centering plate
8P100XPH	1122.050.025	1116.700.231	Power connection
8P100XPH	1122.050.025	1116.700.232	Power connection
8P100XPH	1122.050.025	1116.700.210	Power electronics
8P100XPH	1122.050.025	1124.700.036	Mechatronic
8P100XPH	1122.050.025	1116.700.130	Cover
8P100XPH	1122.050.025	1124.700.024	Oil supply
8P100XPH	1122.050.025	1124.700.028	Oil pan
8P100XPH	1122.050.025	1124.700.090	Parking lock magnet
8P100XPH	1122.050.025	1104.700.023	Centering plate
8P100XPH	1122.050.026	1116.700.231	Power connection
8P100XPH	1122.050.026	1116.700.232	Power connection
8P100XPH	1122.050.026	1116.700.210	Power electronics
8P100XPH	1122.050.026	1124.700.036	Mechatronic
8P100XPH	1122.050.026	1116.700.130	Cover
8P100XPH	1122.050.026	1124.700.024	Oil supply
8P100XPH	1122.050.026	1124.700.028	Oil pan
8P100XPH	1122.050.026	1124.700.090	Parking lock magnet
8P100XPH	1122.050.026	1104.700.023	Centering plate
8P100XPH	1122.050.027	1116.700.231	Power connection
8P100XPH	1122.050.027	1116.700.232	Power connection
8P100XPH	1122.050.027	1116.700.210	Power electronics
8P100XPH	1122.050.027	1124.700.036	Mechatronic
8P100XPH	1122.050.027	1116.700.130	Cover
8P100XPH	1122.050.027	1124.700.024	Oil supply
8P100XPH	1122.050.027	1124.700.028	Oil pan
8P100XPH	1122.050.027	1124.700.090	Parking lock magnet
8P100XPH	1122.050.027	1104.700.023	Centering plate
8P100XPH	1122.050.030	1116.700.231	Power connection
8P100XPH	1122.050.030	1116.700.232	Power connection
8P100XPH	1122.050.030	1116.700.210	Power electronics
8P100XPH	1122.050.030	1124.700.036	Mechatronic
8P100XPH	1122.050.030	1116.700.130	Cover
8P100XPH	1122.050.030	1124.700.024	Oil supply
8P100XPH	1122.050.030	1124.700.028	Oil pan
8P100XPH	1122.050.030	1124.700.090	Parking lock magnet
8P100XPH	1122.050.030	1104.700.023	Centering plate
8P100XPH	1122.050.031	1116.700.231	Power connection



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
283/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P100XPH	1122.050.031	1116.700.232	Power connection
8P100XPH	1122.050.031	1116.700.210	Power electronics
8P100XPH	1122.050.031	1124.700.036	Mechatronic
8P100XPH	1122.050.031	1116.700.130	Cover
8P100XPH	1122.050.031	1124.700.024	Oil supply
8P100XPH	1122.050.031	1124.700.028	Oil pan
8P100XPH	1122.050.031	1124.700.090	Parking lock magnet
8P100XPH	1122.050.031	1104.700.023	Centering plate
8P100XPH	1122.050.032	1116.700.231	Power connection
8P100XPH	1122.050.032	1116.700.232	Power connection
8P100XPH	1122.050.032	1116.700.210	Power electronics
8P100XPH	1122.050.032	1124.700.036	Mechatronic
8P100XPH	1122.050.032	1116.700.130	Cover
8P100XPH	1122.050.032	1124.700.024	Oil supply
8P100XPH	1122.050.032	1124.700.028	Oil pan
8P100XPH	1122.050.032	1124.700.090	Parking lock magnet
8P100XPH	1122.050.032	1104.700.023	Centering plate
8P100XPH	1122.050.033	1116.700.231	Power connection
8P100XPH	1122.050.033	1116.700.210	Power electronics
8P100XPH	1122.050.033	1124.700.036	Mechatronic
8P100XPH	1122.050.033	1116.700.130	Cover
8P100XPH	1122.050.033	1124.700.024	Oil supply
8P100XPH	1122.050.033	1124.700.028	Oil pan
8P100XPH	1122.050.033	1124.700.090	Parking lock magnet
8P100XPH	1122.050.033	1104.700.023	Centering plate
8P100XPH	1122.050.034	1116.700.231	Power connection
8P100XPH	1122.050.034	1124.700.036	Mechatronic
8P100XPH	1122.050.034	1116.700.130	Cover
8P100XPH	1122.050.034	1124.700.024	Oil supply
8P100XPH	1122.050.034	1124.700.028	Oil pan
8P100XPH	1122.050.034	1124.700.090	Parking lock magnet
8P100XPH	1122.050.034	1104.700.023	Centering plate
8P100XPH	1122.050.035	1116.700.231	Power connection
8P100XPH	1122.050.035	1116.700.210	Power electronics
8P100XPH	1122.050.035	1124.700.036	Mechatronic
8P100XPH	1122.050.035	1116.700.130	Cover
8P100XPH	1122.050.035	1124.700.024	Oil supply
8P100XPH	1122.050.035	1124.700.028	Oil pan
8P100XPH	1122.050.035	1124.700.090	Parking lock magnet
8P100XPH	1122.050.035	1104.700.023	Centering plate
8P100XPH	1122.050.036	1116.700.231	Power connection
8P100XPH	1122.050.036	1116.700.210	Power electronics
8P100XPH	1122.050.036	1124.700.036	Mechatronic
8P100XPH	1122.050.036	1116.700.130	Cover
8P100XPH	1122.050.036	1124.700.024	Oil supply
8P100XPH	1122.050.036	1124.700.028	Oil pan
8P100XPH	1122.050.036	1124.700.090	Parking lock magnet
8P100XPH	1122.050.036	1104.700.023	Centering plate
8P100XPH	1122.050.037	1116.700.231	Power connection



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
284/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P100XPH	1122.050.037	1116.700.210	Power electronics
8P100XPH	1122.050.037	1124.700.036	Mechatronic
8P100XPH	1122.050.037	1116.700.130	Cover
8P100XPH	1122.050.037	1124.700.024	Oil supply
8P100XPH	1122.050.037	1124.700.028	Oil pan
8P100XPH	1122.050.037	1124.700.090	Parking lock magnet
8P100XPH	1122.050.037	1104.700.023	Centering plate
8P100XPH	1122.050.038	1116.700.231	Power connection
8P100XPH	1122.050.038	1116.700.210	Power electronics
8P100XPH	1122.050.038	1124.700.036	Mechatronic
8P100XPH	1122.050.038	1116.700.130	Cover
8P100XPH	1122.050.038	1124.700.024	Oil supply
8P100XPH	1122.050.038	1124.700.028	Oil pan
8P100XPH	1122.050.038	1124.700.090	Parking lock magnet
8P100XPH	1122.050.038	1104.700.023	Centering plate
8P100XPH	1122.050.039	1116.700.231	Power connection
8P100XPH	1122.050.039	1116.700.232	Power connection
8P100XPH	1122.050.039	1116.700.210	Power electronics
8P100XPH	1122.050.039	1124.700.036	Mechatronic
8P100XPH	1122.050.039	1116.700.130	Cover
8P100XPH	1122.050.039	1124.700.024	Oil supply
8P100XPH	1122.050.039	1124.700.028	Oil pan
8P100XPH	1122.050.039	1124.700.090	Parking lock magnet
8P100XPH	1122.050.039	1104.700.023	Centering plate
8P100XPH	1122.050.040	1116.700.231	Power connection
8P100XPH	1122.050.040	1116.700.232	Power connection
8P100XPH	1122.050.040	1116.700.210	Power electronics
8P100XPH	1122.050.040	1124.700.036	Mechatronic
8P100XPH	1122.050.040	1116.700.130	Cover
8P100XPH	1122.050.040	1124.700.024	Oil supply
8P100XPH	1122.050.040	1124.700.028	Oil pan
8P100XPH	1122.050.040	1124.700.090	Parking lock magnet
8P100XPH	1122.050.040	1104.700.023	Centering plate
8P100XPH	1122.050.041	1116.700.231	Power connection
8P100XPH	1122.050.041	1116.700.210	Power electronics
8P100XPH	1122.050.041	1124.700.036	Mechatronic
8P100XPH	1122.050.041	1116.700.130	Cover
8P100XPH	1122.050.041	1124.700.024	Oil supply
8P100XPH	1122.050.041	1124.700.028	Oil pan
8P100XPH	1122.050.041	1124.700.090	Parking lock magnet
8P100XPH	1122.050.041	1104.700.023	Centering plate
8P100XPH	1122.050.042	1116.700.231	Power connection
8P100XPH	1122.050.042	1116.700.210	Power electronics
8P100XPH	1122.050.042	1124.700.036	Mechatronic
8P100XPH	1122.050.042	1116.700.130	Cover
8P100XPH	1122.050.042	1124.700.024	Oil supply



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
285/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8P100XPH	1122.050.042	1124.700.028	Oil pan
8P100XPH	1122.050.042	1124.700.090	Parking lock magnet
8P100XPH	1122.050.042	1104.700.023	Centering plate

Tab. 37 Model 1122



ZF Aftermarket Service Information

22.14 Model 1124

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60	1124.020.014	1124.700.036	Mechatronic
8HP60	1124.020.014	1116.700.130	Cover
8HP60	1124.020.014	1124.700.024	Oil supply
8HP60	1124.020.014	1124.700.028	Oil pan
8HP60	1124.020.014	1124.700.090	Parking lock magnet
8HP60	1124.020.014	1104.700.023	Centering plate
8HP60	1124.020.015	1124.700.036	Mechatronic
8HP60	1124.020.015	1116.700.130	Cover
8HP60	1124.020.015	1124.700.024	Oil supply
8HP60	1124.020.015	1124.700.028	Oil pan
8HP60	1124.020.015	1124.700.090	Parking lock magnet
8HP60	1124.020.015	1104.700.023	Centering plate
8HP60	1124.020.016	1124.700.036	Mechatronic
8HP60	1124.020.016	1116.700.130	Cover
8HP60	1124.020.016	1124.700.024	Oil supply
8HP60	1124.020.016	1124.700.028	Oil pan
8HP60	1124.020.016	1124.700.090	Parking lock magnet
8HP60	1124.020.016	1104.700.023	Centering plate
8HP60	1124.020.026	1124.700.036	Mechatronic
8HP60	1124.020.026	1116.700.130	Cover
8HP60	1124.020.026	1124.700.024	Oil supply
8HP60	1124.020.026	1124.700.028	Oil pan
8HP60	1124.020.026	1124.700.090	Parking lock magnet
8HP60	1124.020.026	1104.700.023	Centering plate
8HP60	1124.020.028	1124.700.036	Mechatronic
8HP60	1124.020.028	1116.700.130	Cover
8HP60	1124.020.028	1124.700.024	Oil supply
8HP60	1124.020.028	1124.700.028	Oil pan
8HP60	1124.020.028	1124.700.090	Parking lock magnet
8HP60	1124.020.028	1104.700.023	Centering plate
8HP60	1124.020.030	1124.700.036	Mechatronic
8HP60	1124.020.030	1124.700.024	Oil supply
8HP60	1124.020.030	1124.700.028	Oil pan
8HP60	1124.020.030	1124.700.090	Parking lock magnet
8HP60	1124.020.030	1104.700.023	Centering plate
8HP60	1124.020.032	1124.700.036	Mechatronic
8HP60	1124.020.032	1116.700.130	Cover
8HP60	1124.020.032	1124.700.024	Oil supply
8HP60	1124.020.032	1124.700.028	Oil pan
8HP60	1124.020.032	1124.700.090	Parking lock magnet
8HP60	1124.020.032	1104.700.023	Centering plate
8HP60	1124.020.033	1124.700.036	Mechatronic
8HP60	1124.020.033	1116.700.130	Cover
8HP60	1124.020.033	1124.700.024	Oil supply
8HP60	1124.020.033	1124.700.028	Oil pan
8HP60	1124.020.033	1124.700.090	Parking lock magnet



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
287/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60	1124.020.033	1104.700.023	Centering plate
8HP60	1124.020.034	1124.700.036	Mechatronic
8HP60	1124.020.034	1116.700.130	Cover
8HP60	1124.020.034	1124.700.024	Oil supply
8HP60	1124.020.034	1124.700.028	Oil pan
8HP60	1124.020.034	1124.700.090	Parking lock magnet
8HP60	1124.020.034	1104.700.023	Centering plate
8HP60	1124.020.035	1124.700.036	Mechatronic
8HP60	1124.020.035	1116.700.130	Cover
8HP60	1124.020.035	1124.700.024	Oil supply
8HP60	1124.020.035	1124.700.028	Oil pan
8HP60	1124.020.035	1124.700.090	Parking lock magnet
8HP60	1124.020.035	1104.700.023	Centering plate
8HP60	1124.020.036	1124.700.036	Mechatronic
8HP60	1124.020.036	1116.700.130	Cover
8HP60	1124.020.036	1124.700.024	Oil supply
8HP60	1124.020.036	1124.700.028	Oil pan
8HP60	1124.020.036	1124.700.090	Parking lock magnet
8HP60	1124.020.036	1104.700.023	Centering plate
8HP60	1124.020.038	1124.700.036	Mechatronic
8HP60	1124.020.038	1116.700.130	Cover
8HP60	1124.020.038	1124.700.024	Oil supply
8HP60	1124.020.038	1124.700.028	Oil pan
8HP60	1124.020.038	1124.700.090	Parking lock magnet
8HP60	1124.020.038	1104.700.023	Centering plate
8HP60	1124.020.039	1124.700.036	Mechatronic
8HP60	1124.020.039	1116.700.130	Cover
8HP60	1124.020.039	1124.700.024	Oil supply
8HP60	1124.020.039	1124.700.028	Oil pan
8HP60	1124.020.039	1124.700.090	Parking lock magnet
8HP60	1124.020.039	1104.700.023	Centering plate
8HP60	1124.020.040	1124.700.036	Mechatronic
8HP60	1124.020.040	1116.700.130	Cover
8HP60	1124.020.040	1124.700.024	Oil supply
8HP60	1124.020.040	1124.700.028	Oil pan
8HP60	1124.020.040	1124.700.090	Parking lock magnet
8HP60	1124.020.040	1104.700.023	Centering plate
8HP60	1124.020.041	1124.700.036	Mechatronic
8HP60	1124.020.041	1116.700.130	Cover
8HP60	1124.020.041	1124.700.024	Oil supply
8HP60	1124.020.041	1124.700.028	Oil pan
8HP60	1124.020.041	1124.700.090	Parking lock magnet
8HP60	1124.020.041	1104.700.023	Centering plate
8HP60	1124.020.042	1124.700.036	Mechatronic
8HP60	1124.020.042	1116.700.130	Cover
8HP60	1124.020.042	1124.700.024	Oil supply
8HP60	1124.020.042	1124.700.028	Oil pan
8HP60	1124.020.042	1124.700.090	Parking lock magnet
8HP60	1124.020.042	1104.700.023	Centering plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
288/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60	1124.020.043	1124.700.036	Mechatronic
8HP60	1124.020.043	1116.700.130	Cover
8HP60	1124.020.043	1124.700.024	Oil supply
8HP60	1124.020.043	1124.700.028	Oil pan
8HP60	1124.020.043	1124.700.090	Parking lock magnet
8HP60	1124.020.043	1104.700.023	Centering plate
8HP60	1124.020.044	1124.700.036	Mechatronic
8HP60	1124.020.044	1116.700.130	Cover
8HP60	1124.020.044	1124.700.024	Oil supply
8HP60	1124.020.044	1124.700.028	Oil pan
8HP60	1124.020.044	1124.700.090	Parking lock magnet
8HP60	1124.020.044	1104.700.023	Centering plate
8HP60	1124.020.045	1124.700.036	Mechatronic
8HP60	1124.020.045	1116.700.130	Cover
8HP60	1124.020.045	1124.700.024	Oil supply
8HP60	1124.020.045	1124.700.028	Oil pan
8HP60	1124.020.045	1124.700.090	Parking lock magnet
8HP60	1124.020.045	1104.700.023	Centering plate
8HP60MH	1124.030.001	1116.700.231	Power connection
8HP60MH	1124.030.001	1124.700.036	Mechatronic
8HP60MH	1124.030.001	1116.700.130	Cover
8HP60MH	1124.030.001	1124.700.196	Oil tray
8HP60MH	1124.030.001	1124.700.024	Oil supply
8HP60MH	1124.030.001	1124.700.028	Oil pan
8HP60MH	1124.030.001	1124.700.090	Parking lock magnet
8HP60MH	1124.030.001	1104.700.023	Centering plate
8HP60MH	1124.030.008	1116.700.231	Power connection
8HP60MH	1124.030.008	1116.700.232	Power connection
8HP60MH	1124.030.008	1116.700.210	Power electronics
8HP60MH	1124.030.008	1124.700.036	Mechatronic
8HP60MH	1124.030.008	1116.700.130	Cover
8HP60MH	1124.030.008	1124.700.196	Oil tray
8HP60MH	1124.030.008	1124.700.024	Oil supply
8HP60MH	1124.030.008	1124.700.028	Oil pan
8HP60MH	1124.030.008	1124.700.090	Parking lock magnet
8HP60MH	1124.030.008	1104.700.023	Centering plate
8HP60MH	1124.030.014	1116.700.231	Power connection
8HP60MH	1124.030.014	1116.700.232	Power connection
8HP60MH	1124.030.014	1116.700.210	Power electronics
8HP60MH	1124.030.014	1124.700.036	Mechatronic
8HP60MH	1124.030.014	1116.700.130	Cover
8HP60MH	1124.030.014	1124.700.196	Oil tray
8HP60MH	1124.030.014	1124.700.024	Oil supply
8HP60MH	1124.030.014	1124.700.028	Oil pan
8HP60MH	1124.030.014	1124.700.090	Parking lock magnet
8HP60MH	1124.030.014	1104.700.023	Centering plate
8HP60MH	1124.030.045	1116.700.231	Power connection
8HP60MH	1124.030.045	1116.700.232	Power connection
8HP60MH	1124.030.045	1116.700.210	Power electronics



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60MH	1124.030.045	1124.700.036	Mechatronic
8HP60MH	1124.030.045	1116.700.130	Cover
8HP60MH	1124.030.045	1124.700.196	Oil tray
8HP60MH	1124.030.045	1124.700.024	Oil supply
8HP60MH	1124.030.045	1124.700.028	Oil pan
8HP60MH	1124.030.045	1124.700.090	Parking lock magnet
8HP60MH	1124.030.045	1104.700.023	Centering plate
8HP60MH	1124.030.046	1116.700.231	Power connection
8HP60MH	1124.030.046	1116.700.232	Power connection
8HP60MH	1124.030.046	1116.700.210	Power electronics
8HP60MH	1124.030.046	1124.700.036	Mechatronic
8HP60MH	1124.030.046	1116.700.130	Cover
8HP60MH	1124.030.046	1124.700.196	Oil tray
8HP60MH	1124.030.046	1124.700.024	Oil supply
8HP60MH	1124.030.046	1124.700.028	Oil pan
8HP60MH	1124.030.046	1124.700.090	Parking lock magnet
8HP60MH	1124.030.046	1104.700.023	Centering plate
8HP60MH	1124.030.047	1116.700.231	Power connection
8HP60MH	1124.030.047	1116.700.232	Power connection
8HP60MH	1124.030.047	1116.700.210	Power electronics
8HP60MH	1124.030.047	1124.700.036	Mechatronic
8HP60MH	1124.030.047	1116.700.130	Cover
8HP60MH	1124.030.047	1124.700.196	Oil tray
8HP60MH	1124.030.047	1124.700.024	Oil supply
8HP60MH	1124.030.047	1124.700.028	Oil pan
8HP60MH	1124.030.047	1124.700.090	Parking lock magnet
8HP60MH	1124.030.047	1104.700.023	Centering plate
8HP60MH	1124.030.048	1116.700.231	Power connection
8HP60MH	1124.030.048	1116.700.232	Power connection
8HP60MH	1124.030.048	1116.700.210	Power electronics
8HP60MH	1124.030.048	1124.700.036	Mechatronic
8HP60MH	1124.030.048	1116.700.130	Cover
8HP60MH	1124.030.048	1124.700.196	Oil tray
8HP60MH	1124.030.048	1124.700.024	Oil supply
8HP60MH	1124.030.048	1124.700.028	Oil pan
8HP60MH	1124.030.048	1124.700.090	Parking lock magnet
8HP60MH	1124.030.048	1104.700.023	Centering plate
8HP60MH	1124.030.049	1116.700.231	Power connection
8HP60MH	1124.030.049	1116.700.232	Power connection
8HP60MH	1124.030.049	1116.700.210	Power electronics
8HP60MH	1124.030.049	1124.700.036	Mechatronic
8HP60MH	1124.030.049	1116.700.130	Cover
8HP60MH	1124.030.049	1124.700.196	Oil tray
8HP60MH	1124.030.049	1124.700.024	Oil supply
8HP60MH	1124.030.049	1124.700.028	Oil pan
8HP60MH	1124.030.049	1124.700.090	Parking lock magnet
8HP60MH	1124.030.049	1104.700.023	Centering plate
8HP60MH	1124.030.051	1116.700.231	Power connection
8HP60MH	1124.030.051	1116.700.232	Power connection



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
290/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60MH	1124.030.051	1116.700.210	Power electronics
8HP60MH	1124.030.051	1124.700.036	Mechatronic
8HP60MH	1124.030.051	1116.700.130	Cover
8HP60MH	1124.030.051	1124.700.196	Oil tray
8HP60MH	1124.030.051	1124.700.024	Oil supply
8HP60MH	1124.030.051	1124.700.028	Oil pan
8HP60MH	1124.030.051	1124.700.090	Parking lock magnet
8HP60MH	1124.030.051	1104.700.023	Centering plate
8HP60MH	1124.030.054	1116.700.231	Power connection
8HP60MH	1124.030.054	1116.700.232	Power connection
8HP60MH	1124.030.054	1116.700.210	Power electronics
8HP60MH	1124.030.054	1124.700.036	Mechatronic
8HP60MH	1124.030.054	1116.700.130	Cover
8HP60MH	1124.030.054	1124.700.196	Oil tray
8HP60MH	1124.030.054	1124.700.024	Oil supply
8HP60MH	1124.030.054	1124.700.028	Oil pan
8HP60MH	1124.030.054	1124.700.090	Parking lock magnet
8HP60MH	1124.030.054	1104.700.023	Centering plate
8HP60MH	1124.030.057	1116.700.231	Power connection
8HP60MH	1124.030.057	1116.700.232	Power connection
8HP60MH	1124.030.057	1116.700.210	Power electronics
8HP60MH	1124.030.057	1124.700.036	Mechatronic
8HP60MH	1124.030.057	1116.700.130	Cover
8HP60MH	1124.030.057	1124.700.196	Oil tray
8HP60MH	1124.030.057	1124.700.024	Oil supply
8HP60MH	1124.030.057	1124.700.028	Oil pan
8HP60MH	1124.030.057	1124.700.090	Parking lock magnet
8HP60MH	1124.030.057	1104.700.023	Centering plate
8HP60MH	1124.030.058	1116.700.231	Power connection
8HP60MH	1124.030.058	1116.700.232	Power connection
8HP60MH	1124.030.058	1116.700.210	Power electronics
8HP60MH	1124.030.058	1124.700.036	Mechatronic
8HP60MH	1124.030.058	1116.700.130	Cover
8HP60MH	1124.030.058	1124.700.196	Oil tray
8HP60MH	1124.030.058	1124.700.024	Oil supply
8HP60MH	1124.030.058	1124.700.028	Oil pan
8HP60MH	1124.030.058	1124.700.090	Parking lock magnet
8HP60MH	1124.030.058	1104.700.023	Centering plate
8HP60MH	1124.030.059	1116.700.231	Power connection
8HP60MH	1124.030.059	1116.700.232	Power connection
8HP60MH	1124.030.059	1116.700.210	Power electronics
8HP60MH	1124.030.059	1124.700.036	Mechatronic
8HP60MH	1124.030.059	1116.700.130	Cover
8HP60MH	1124.030.059	1124.700.196	Oil tray
8HP60MH	1124.030.059	1124.700.024	Oil supply
8HP60MH	1124.030.059	1124.700.028	Oil pan
8HP60MH	1124.030.059	1124.700.090	Parking lock magnet
8HP60MH	1124.030.059	1104.700.023	Centering plate
8HP60MH	1124.030.061	1116.700.231	Power connection



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
291/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60MH	1124.030.061	1124.700.036	Mechatronic
8HP60MH	1124.030.061	1116.700.130	Cover
8HP60MH	1124.030.061	1124.700.196	Oil tray
8HP60MH	1124.030.061	1124.700.024	Oil supply
8HP60MH	1124.030.061	1124.700.028	Oil pan
8HP60MH	1124.030.061	1124.700.090	Parking lock magnet
8HP60MH	1124.030.061	1104.700.023	Centering plate
8HP60MH	1124.030.062	1116.700.231	Power connection
8HP60MH	1124.030.062	1124.700.036	Mechatronic
8HP60MH	1124.030.062	1116.700.130	Cover
8HP60MH	1124.030.062	1124.700.196	Oil tray
8HP60MH	1124.030.062	1124.700.024	Oil supply
8HP60MH	1124.030.062	1124.700.028	Oil pan
8HP60MH	1124.030.062	1124.700.090	Parking lock magnet
8HP60MH	1124.030.062	1104.700.023	Centering plate
8HP60MH	1124.030.063	1116.700.231	Power connection
8HP60MH	1124.030.063	1124.700.036	Mechatronic
8HP60MH	1124.030.063	1116.700.130	Cover
8HP60MH	1124.030.063	1124.700.196	Oil tray
8HP60MH	1124.030.063	1124.700.024	Oil supply
8HP60MH	1124.030.063	1124.700.028	Oil pan
8HP60MH	1124.030.063	1124.700.090	Parking lock magnet
8HP60MH	1124.030.063	1104.700.023	Centering plate
8HP60MH	1124.030.064	1116.700.231	Power connection
8HP60MH	1124.030.064	1124.700.036	Mechatronic
8HP60MH	1124.030.064	1116.700.130	Cover
8HP60MH	1124.030.064	1124.700.196	Oil tray
8HP60MH	1124.030.064	1124.700.024	Oil supply
8HP60MH	1124.030.064	1124.700.028	Oil pan
8HP60MH	1124.030.064	1124.700.090	Parking lock magnet
8HP60MH	1124.030.064	1104.700.023	Centering plate
8HP60MH	1124.030.065	1116.700.231	Power connection
8HP60MH	1124.030.065	1124.700.036	Mechatronic
8HP60MH	1124.030.065	1116.700.130	Cover
8HP60MH	1124.030.065	1124.700.196	Oil tray
8HP60MH	1124.030.065	1124.700.024	Oil supply
8HP60MH	1124.030.065	1124.700.028	Oil pan
8HP60MH	1124.030.065	1124.700.090	Parking lock magnet
8HP60MH	1124.030.065	1104.700.023	Centering plate
8HP60MH	1124.030.066	1116.700.231	Power connection
8HP60MH	1124.030.066	1124.700.036	Mechatronic
8HP60MH	1124.030.066	1116.700.130	Cover
8HP60MH	1124.030.066	1124.700.196	Oil tray
8HP60MH	1124.030.066	1124.700.024	Oil supply
8HP60MH	1124.030.066	1124.700.028	Oil pan
8HP60MH	1124.030.066	1124.700.090	Parking lock magnet
8HP60MH	1124.030.066	1104.700.023	Centering plate
8HP60MH	1124.030.067	1116.700.231	Power connection
8HP60MH	1124.030.067	1124.700.036	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
292/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60MH	1124.030.067	1116.700.130	Cover
8HP60MH	1124.030.067	1124.700.196	Oil tray
8HP60MH	1124.030.067	1124.700.024	Oil supply
8HP60MH	1124.030.067	1124.700.028	Oil pan
8HP60MH	1124.030.067	1124.700.090	Parking lock magnet
8HP60MH	1124.030.067	1104.700.023	Centering plate
8HP60MH	1124.030.068	1116.700.231	Power connection
8HP60MH	1124.030.068	1124.700.036	Mechatronic
8HP60MH	1124.030.068	1116.700.130	Cover
8HP60MH	1124.030.068	1124.700.196	Oil tray
8HP60MH	1124.030.068	1124.700.024	Oil supply
8HP60MH	1124.030.068	1124.700.028	Oil pan
8HP60MH	1124.030.068	1124.700.090	Parking lock magnet
8HP60MH	1124.030.068	1104.700.023	Centering plate
8HP60MH	1124.030.069	1116.700.231	Power connection
8HP60MH	1124.030.069	1124.700.036	Mechatronic
8HP60MH	1124.030.069	1116.700.130	Cover
8HP60MH	1124.030.069	1124.700.196	Oil tray
8HP60MH	1124.030.069	1124.700.024	Oil supply
8HP60MH	1124.030.069	1124.700.028	Oil pan
8HP60MH	1124.030.069	1124.700.090	Parking lock magnet
8HP60MH	1124.030.069	1104.700.023	Centering plate
8HP60MH	1124.030.070	1116.700.231	Power connection
8HP60MH	1124.030.070	1124.700.036	Mechatronic
8HP60MH	1124.030.070	1116.700.130	Cover
8HP60MH	1124.030.070	1124.700.196	Oil tray
8HP60MH	1124.030.070	1124.700.024	Oil supply
8HP60MH	1124.030.070	1124.700.028	Oil pan
8HP60MH	1124.030.070	1124.700.090	Parking lock magnet
8HP60MH	1124.030.070	1104.700.023	Centering plate
8HP60MH	1124.030.071	1124.700.028	Oil pan
8HP60MH	1124.030.071	1124.700.090	Parking lock magnet
8HP60MH	1124.030.071	1104.700.023	Centering plate
8HP60X	1124.040.007	1124.700.036	Mechatronic
8HP60X	1124.040.007	1124.700.024	Oil supply
8HP60X	1124.040.007	1124.700.028	Oil pan
8HP60X	1124.040.007	1124.700.090	Parking lock magnet
8HP60X	1124.040.007	1104.700.023	Centering plate
8HP60X	1124.040.008	1124.700.036	Mechatronic
8HP60X	1124.040.008	1124.700.024	Oil supply
8HP60X	1124.040.008	1124.700.028	Oil pan
8HP60X	1124.040.008	1124.700.090	Parking lock magnet
8HP60X	1124.040.008	1104.700.023	Centering plate
8HP60X	1124.040.014	1124.700.036	Mechatronic
8HP60X	1124.040.014	1124.700.024	Oil supply
8HP60X	1124.040.014	1124.700.028	Oil pan
8HP60X	1124.040.014	1124.700.090	Parking lock magnet
8HP60X	1124.040.014	1104.700.023	Centering plate
8HP60X	1124.040.016	1124.700.036	Mechatronic



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
293/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60X	1124.040.016	1124.700.024	Oil supply
8HP60X	1124.040.016	1124.700.028	Oil pan
8HP60X	1124.040.016	1124.700.090	Parking lock magnet
8HP60X	1124.040.016	1104.700.023	Centering plate
8HP60X	1124.040.017	1124.700.036	Mechatronic
8HP60X	1124.040.017	1124.700.024	Oil supply
8HP60X	1124.040.017	1124.700.028	Oil pan
8HP60X	1124.040.017	1124.700.090	Parking lock magnet
8HP60X	1124.040.017	1104.700.023	Centering plate
8HP60X	1124.040.023	1124.700.036	Mechatronic
8HP60X	1124.040.023	1124.700.024	Oil supply
8HP60X	1124.040.023	1124.700.028	Oil pan
8HP60X	1124.040.023	1124.700.090	Parking lock magnet
8HP60X	1124.040.023	1104.700.023	Centering plate
8HP60X	1124.040.024	1124.700.036	Mechatronic
8HP60X	1124.040.024	1124.700.024	Oil supply
8HP60X	1124.040.024	1124.700.028	Oil pan
8HP60X	1124.040.024	1124.700.090	Parking lock magnet
8HP60X	1124.040.024	1104.700.023	Centering plate
8HP60X	1124.040.027	1124.700.036	Mechatronic
8HP60X	1124.040.027	1124.700.024	Oil supply
8HP60X	1124.040.027	1124.700.028	Oil pan
8HP60X	1124.040.027	1124.700.090	Parking lock magnet
8HP60X	1124.040.027	1104.700.023	Centering plate
8HP60X	1124.040.028	1124.700.036	Mechatronic
8HP60X	1124.040.028	1124.700.024	Oil supply
8HP60X	1124.040.028	1124.700.028	Oil pan
8HP60X	1124.040.028	1124.700.090	Parking lock magnet
8HP60X	1124.040.028	1104.700.023	Centering plate
8HP60X	1124.040.029	1124.700.036	Mechatronic
8HP60X	1124.040.029	1124.700.024	Oil supply
8HP60X	1124.040.029	1124.700.028	Oil pan
8HP60X	1124.040.029	1124.700.090	Parking lock magnet
8HP60X	1124.040.029	1104.700.023	Centering plate
8HP60X	1124.040.031	1124.700.036	Mechatronic
8HP60X	1124.040.031	1124.700.024	Oil supply
8HP60X	1124.040.031	1124.700.028	Oil pan
8HP60X	1124.040.031	1124.700.090	Parking lock magnet
8HP60X	1124.040.031	1104.700.023	Centering plate
8HP60X	1124.040.032	1124.700.036	Mechatronic
8HP60X	1124.040.032	1124.700.024	Oil supply
8HP60X	1124.040.032	1124.700.028	Oil pan
8HP60X	1124.040.032	1124.700.090	Parking lock magnet
8HP60X	1124.040.032	1104.700.023	Centering plate
8HP60X	1124.040.033	1124.700.036	Mechatronic
8HP60X	1124.040.033	1124.700.024	Oil supply
8HP60X	1124.040.033	1124.700.028	Oil pan
8HP60X	1124.040.033	1124.700.090	Parking lock magnet
8HP60X	1124.040.033	1104.700.023	Centering plate



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
294/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60X	1124.040.034	1124.700.036	Mechatronic
8HP60X	1124.040.034	1124.700.024	Oil supply
8HP60X	1124.040.034	1124.700.028	Oil pan
8HP60X	1124.040.034	1124.700.090	Parking lock magnet
8HP60X	1124.040.034	1104.700.023	Centering plate
8HP60X	1124.040.035	1124.700.036	Mechatronic
8HP60X	1124.040.035	1124.700.024	Oil supply
8HP60X	1124.040.035	1124.700.028	Oil pan
8HP60X	1124.040.035	1124.700.090	Parking lock magnet
8HP60X	1124.040.035	1104.700.023	Centering plate
8HP60X	1124.040.036	1124.700.036	Mechatronic
8HP60X	1124.040.036	1124.700.024	Oil supply
8HP60X	1124.040.036	1124.700.028	Oil pan
8HP60X	1124.040.036	1124.700.090	Parking lock magnet
8HP60X	1124.040.036	1104.700.023	Centering plate
8HP60X	1124.040.037	1124.700.036	Mechatronic
8HP60X	1124.040.037	1124.700.024	Oil supply
8HP60X	1124.040.037	1124.700.028	Oil pan
8HP60X	1124.040.037	1124.700.090	Parking lock magnet
8HP60X	1124.040.037	1104.700.023	Centering plate
8HP60X	1124.040.038	1124.700.036	Mechatronic
8HP60X	1124.040.038	1124.700.024	Oil supply
8HP60X	1124.040.038	1124.700.028	Oil pan
8HP60X	1124.040.038	1124.700.090	Parking lock magnet
8HP60X	1124.040.038	1104.700.023	Centering plate
8HP60X	1124.040.039	1124.700.036	Mechatronic
8HP60X	1124.040.039	1124.700.024	Oil supply
8HP60X	1124.040.039	1124.700.028	Oil pan
8HP60X	1124.040.039	1124.700.090	Parking lock magnet
8HP60X	1124.040.039	1104.700.023	Centering plate
8HP60X	1124.040.040	1124.700.036	Mechatronic
8HP60X	1124.040.040	1124.700.024	Oil supply
8HP60X	1124.040.040	1124.700.028	Oil pan
8HP60X	1124.040.040	1124.700.090	Parking lock magnet
8HP60X	1124.040.040	1104.700.023	Centering plate
8HP60XMH	1124.060.006	1116.700.231	Power connection
8HP60XMH	1124.060.006	1124.700.036	Mechatronic
8HP60XMH	1124.060.006	1116.700.130	Cover
8HP60XMH	1124.060.006	1124.700.196	Oil tray
8HP60XMH	1124.060.006	1124.700.024	Oil supply
8HP60XMH	1124.060.006	1124.700.028	Oil pan
8HP60XMH	1124.060.006	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.006	1104.700.023	Centering plate
8HP60XMH	1124.060.007	1116.700.231	Power connection
8HP60XMH	1124.060.007	1124.700.036	Mechatronic
8HP60XMH	1124.060.007	1116.700.130	Cover
8HP60XMH	1124.060.007	1124.700.196	Oil tray
8HP60XMH	1124.060.007	1124.700.024	Oil supply
8HP60XMH	1124.060.007	1124.700.028	Oil pan



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
295/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60XMH	1124.060.007	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.007	1104.700.023	Centering plate
8HP60XMH	1124.060.010	1116.700.231	Power connection
8HP60XMH	1124.060.010	1116.700.232	Power connection
8HP60XMH	1124.060.010	1116.700.210	Power electronics
8HP60XMH	1124.060.010	1124.700.036	Mechatronic
8HP60XMH	1124.060.010	1116.700.130	Cover
8HP60XMH	1124.060.010	1124.700.196	Oil tray
8HP60XMH	1124.060.010	1124.700.024	Oil supply
8HP60XMH	1124.060.010	1124.700.028	Oil pan
8HP60XMH	1124.060.010	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.010	1104.700.023	Centering plate
8HP60XMH	1124.060.026	1116.700.231	Power connection
8HP60XMH	1124.060.026	1116.700.232	Power connection
8HP60XMH	1124.060.026	1116.700.210	Power electronics
8HP60XMH	1124.060.026	1124.700.036	Mechatronic
8HP60XMH	1124.060.026	1116.700.130	Cover
8HP60XMH	1124.060.026	1124.700.196	Oil tray
8HP60XMH	1124.060.026	1124.700.024	Oil supply
8HP60XMH	1124.060.026	1124.700.028	Oil pan
8HP60XMH	1124.060.026	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.026	1104.700.023	Centering plate
8HP60XMH	1124.060.029	1116.700.231	Power connection
8HP60XMH	1124.060.029	1116.700.232	Power connection
8HP60XMH	1124.060.029	1116.700.210	Power electronics
8HP60XMH	1124.060.029	1124.700.036	Mechatronic
8HP60XMH	1124.060.029	1116.700.130	Cover
8HP60XMH	1124.060.029	1124.700.196	Oil tray
8HP60XMH	1124.060.029	1124.700.024	Oil supply
8HP60XMH	1124.060.029	1124.700.028	Oil pan
8HP60XMH	1124.060.029	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.029	1104.700.023	Centering plate
8HP60XMH	1124.060.030	1116.700.231	Power connection
8HP60XMH	1124.060.030	1116.700.232	Power connection
8HP60XMH	1124.060.030	1116.700.210	Power electronics
8HP60XMH	1124.060.030	1124.700.036	Mechatronic
8HP60XMH	1124.060.030	1116.700.130	Cover
8HP60XMH	1124.060.030	1124.700.196	Oil tray
8HP60XMH	1124.060.030	1124.700.024	Oil supply
8HP60XMH	1124.060.030	1124.700.028	Oil pan
8HP60XMH	1124.060.030	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.030	1104.700.023	Centering plate
8HP60XMH	1124.060.031	1116.700.231	Power connection
8HP60XMH	1124.060.031	1116.700.232	Power connection
8HP60XMH	1124.060.031	1116.700.210	Power electronics
8HP60XMH	1124.060.031	1124.700.036	Mechatronic
8HP60XMH	1124.060.031	1116.700.130	Cover
8HP60XMH	1124.060.031	1124.700.196	Oil tray
8HP60XMH	1124.060.031	1124.700.024	Oil supply



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60XMH	1124.060.031	1124.700.028	Oil pan
8HP60XMH	1124.060.031	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.031	1104.700.023	Centering plate
8HP60XMH	1124.060.032	1116.700.231	Power connection
8HP60XMH	1124.060.032	1116.700.232	Power connection
8HP60XMH	1124.060.032	1116.700.210	Power electronics
8HP60XMH	1124.060.032	1124.700.036	Mechatronic
8HP60XMH	1124.060.032	1116.700.130	Cover
8HP60XMH	1124.060.032	1124.700.196	Oil tray
8HP60XMH	1124.060.032	1124.700.024	Oil supply
8HP60XMH	1124.060.032	1124.700.028	Oil pan
8HP60XMH	1124.060.032	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.032	1104.700.023	Centering plate
8HP60XMH	1124.060.036	1116.700.231	Power connection
8HP60XMH	1124.060.036	1116.700.232	Power connection
8HP60XMH	1124.060.036	1116.700.210	Power electronics
8HP60XMH	1124.060.036	1124.700.036	Mechatronic
8HP60XMH	1124.060.036	1116.700.130	Cover
8HP60XMH	1124.060.036	1124.700.196	Oil tray
8HP60XMH	1124.060.036	1124.700.024	Oil supply
8HP60XMH	1124.060.036	1124.700.028	Oil pan
8HP60XMH	1124.060.036	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.036	1104.700.023	Centering plate
8HP60XMH	1124.060.040	1116.700.231	Power connection
8HP60XMH	1124.060.040	1116.700.232	Power connection
8HP60XMH	1124.060.040	1116.700.210	Power electronics
8HP60XMH	1124.060.040	1124.700.036	Mechatronic
8HP60XMH	1124.060.040	1116.700.130	Cover
8HP60XMH	1124.060.040	1124.700.196	Oil tray
8HP60XMH	1124.060.040	1124.700.024	Oil supply
8HP60XMH	1124.060.040	1124.700.028	Oil pan
8HP60XMH	1124.060.040	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.040	1104.700.023	Centering plate
8HP60XMH	1124.060.042	1116.700.231	Power connection
8HP60XMH	1124.060.042	1116.700.232	Power connection
8HP60XMH	1124.060.042	1116.700.210	Power electronics
8HP60XMH	1124.060.042	1124.700.036	Mechatronic
8HP60XMH	1124.060.042	1116.700.130	Cover
8HP60XMH	1124.060.042	1124.700.196	Oil tray
8HP60XMH	1124.060.042	1124.700.024	Oil supply
8HP60XMH	1124.060.042	1124.700.028	Oil pan
8HP60XMH	1124.060.042	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.042	1104.700.023	Centering plate
8HP60XMH	1124.060.044	1116.700.231	Power connection
8HP60XMH	1124.060.044	1116.700.232	Power connection
8HP60XMH	1124.060.044	1116.700.210	Power electronics
8HP60XMH	1124.060.044	1124.700.036	Mechatronic
8HP60XMH	1124.060.044	1116.700.130	Cover
8HP60XMH	1124.060.044	1124.700.196	Oil tray



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60XMH	1124.060.044	1124.700.024	Oil supply
8HP60XMH	1124.060.044	1124.700.028	Oil pan
8HP60XMH	1124.060.044	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.044	1104.700.023	Centering plate
8HP60XMH	1124.060.045	1116.700.231	Power connection
8HP60XMH	1124.060.045	1116.700.232	Power connection
8HP60XMH	1124.060.045	1116.700.210	Power electronics
8HP60XMH	1124.060.045	1124.700.036	Mechatronic
8HP60XMH	1124.060.045	1116.700.130	Cover
8HP60XMH	1124.060.045	1124.700.196	Oil tray
8HP60XMH	1124.060.045	1124.700.024	Oil supply
8HP60XMH	1124.060.045	1124.700.028	Oil pan
8HP60XMH	1124.060.045	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.045	1104.700.023	Centering plate
8HP60XMH	1124.060.046	1116.700.231	Power connection
8HP60XMH	1124.060.046	1116.700.232	Power connection
8HP60XMH	1124.060.046	1116.700.210	Power electronics
8HP60XMH	1124.060.046	1124.700.196	Oil tray
8HP60XMH	1124.060.046	1124.700.024	Oil supply
8HP60XMH	1124.060.046	1124.700.028	Oil pan
8HP60XMH	1124.060.046	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.046	1104.700.023	Centering plate
8HP60XMH	1124.060.047	1116.700.231	Power connection
8HP60XMH	1124.060.047	1124.700.036	Mechatronic
8HP60XMH	1124.060.047	1116.700.130	Cover
8HP60XMH	1124.060.047	1124.700.196	Oil tray
8HP60XMH	1124.060.047	1124.700.024	Oil supply
8HP60XMH	1124.060.047	1124.700.028	Oil pan
8HP60XMH	1124.060.047	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.047	1104.700.023	Centering plate
8HP60XMH	1124.060.048	1116.700.231	Power connection
8HP60XMH	1124.060.048	1124.700.036	Mechatronic
8HP60XMH	1124.060.048	1116.700.130	Cover
8HP60XMH	1124.060.048	1124.700.196	Oil tray
8HP60XMH	1124.060.048	1124.700.024	Oil supply
8HP60XMH	1124.060.048	1124.700.028	Oil pan
8HP60XMH	1124.060.048	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.048	1104.700.023	Centering plate
8HP60XMH	1124.060.049	1116.700.231	Power connection
8HP60XMH	1124.060.049	1124.700.036	Mechatronic
8HP60XMH	1124.060.049	1116.700.130	Cover
8HP60XMH	1124.060.049	1124.700.196	Oil tray
8HP60XMH	1124.060.049	1124.700.024	Oil supply
8HP60XMH	1124.060.049	1124.700.028	Oil pan
8HP60XMH	1124.060.049	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.049	1104.700.023	Centering plate
8HP60XMH	1124.060.050	1116.700.231	Power connection
8HP60XMH	1124.060.050	1124.700.036	Mechatronic
8HP60XMH	1124.060.050	1116.700.130	Cover



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP60XMH	1124.060.050	1124.700.196	Oil tray
8HP60XMH	1124.060.050	1124.700.024	Oil supply
8HP60XMH	1124.060.050	1124.700.028	Oil pan
8HP60XMH	1124.060.050	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.050	1104.700.023	Centering plate
8HP60XMH	1124.060.051	1116.700.231	Power connection
8HP60XMH	1124.060.051	1124.700.036	Mechatronic
8HP60XMH	1124.060.051	1116.700.130	Cover
8HP60XMH	1124.060.051	1124.700.196	Oil tray
8HP60XMH	1124.060.051	1124.700.024	Oil supply
8HP60XMH	1124.060.051	1124.700.028	Oil pan
8HP60XMH	1124.060.051	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.051	1104.700.023	Centering plate
8HP60XMH	1124.060.052	1116.700.231	Power connection
8HP60XMH	1124.060.052	1124.700.036	Mechatronic
8HP60XMH	1124.060.052	1116.700.130	Cover
8HP60XMH	1124.060.052	1124.700.196	Oil tray
8HP60XMH	1124.060.052	1124.700.024	Oil supply
8HP60XMH	1124.060.052	1124.700.028	Oil pan
8HP60XMH	1124.060.052	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.052	1104.700.023	Centering plate
8HP60XMH	1124.060.053	1116.700.231	Power connection
8HP60XMH	1124.060.053	1124.700.036	Mechatronic
8HP60XMH	1124.060.053	1116.700.130	Cover
8HP60XMH	1124.060.053	1124.700.196	Oil tray
8HP60XMH	1124.060.053	1124.700.024	Oil supply
8HP60XMH	1124.060.053	1124.700.028	Oil pan
8HP60XMH	1124.060.053	1124.700.090	Parking lock magnet
8HP60XMH	1124.060.053	1104.700.023	Centering plate

Tab. 38 Model 1124



ZF Aftermarket Service Information

22.15 Model 1126

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80	1126.020.001	1126.700.103	Oil pan
8HP80	1126.020.001	1124.700.090	Parking lock magnet
8HP80	1126.020.001	1104.700.023	Centering plate
8HP80	1126.020.002	1126.700.103	Oil pan
8HP80	1126.020.002	1124.700.090	Parking lock magnet
8HP80	1126.020.002	1104.700.023	Centering plate
8HP80	1126.020.005	1126.700.103	Oil pan
8HP80	1126.020.005	1124.700.090	Parking lock magnet
8HP80	1126.020.005	1104.700.023	Centering plate
8HP80	1126.020.006	1126.700.103	Oil pan
8HP80	1126.020.006	1124.700.090	Parking lock magnet
8HP80	1126.020.006	1104.700.023	Centering plate
8HP80	1126.020.007	1126.700.103	Oil pan
8HP80	1126.020.007	1124.700.090	Parking lock magnet
8HP80	1126.020.007	1104.700.023	Centering plate
8HP80	1126.020.008	1126.700.103	Oil pan
8HP80	1126.020.008	1124.700.090	Parking lock magnet
8HP80	1126.020.008	1104.700.023	Centering plate
8HP80	1126.020.009	1126.700.103	Oil pan
8HP80	1126.020.009	1124.700.090	Parking lock magnet
8HP80	1126.020.009	1104.700.023	Centering plate
8HP80	1126.020.010	1126.700.103	Oil pan
8HP80	1126.020.010	1124.700.090	Parking lock magnet
8HP80	1126.020.010	1104.700.023	Centering plate
8HP80	1126.020.011	1126.700.103	Oil pan
8HP80	1126.020.011	1124.700.090	Parking lock magnet
8HP80	1126.020.011	1104.700.023	Centering plate
8HP80	1126.020.012	1126.700.103	Oil pan
8HP80	1126.020.012	1124.700.090	Parking lock magnet
8HP80	1126.020.012	1104.700.023	Centering plate
8HP80	1126.020.013	1126.700.103	Oil pan
8HP80	1126.020.013	1124.700.090	Parking lock magnet
8HP80	1126.020.014	1126.700.103	Oil pan
8HP80	1126.020.014	1124.700.090	Parking lock magnet
8HP80	1126.020.014	1104.700.023	Centering plate
8HP80	1126.020.015	1126.700.103	Oil pan
8HP80	1126.020.015	1124.700.090	Parking lock magnet
8HP80	1126.020.015	1104.700.023	Centering plate
8HP80	1126.020.016	1126.700.103	Oil pan
8HP80	1126.020.016	1124.700.090	Parking lock magnet
8HP80	1126.020.016	1104.700.023	Centering plate
8HP80	1126.020.017	1126.700.103	Oil pan
8HP80	1126.020.017	1124.700.090	Parking lock magnet
8HP80	1126.020.017	1104.700.023	Centering plate
8HP80	1126.020.018	1126.700.103	Oil pan
8HP80	1126.020.018	1124.700.090	Parking lock magnet



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
300/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80	1126.020.018	1104.700.023	Centering plate
8HP80	1126.020.019	1126.700.103	Oil pan
8HP80	1126.020.019	1124.700.090	Parking lock magnet
8HP80	1126.020.019	1104.700.023	Centering plate
8HP80	1126.020.020	1126.700.103	Oil pan
8HP80	1126.020.020	1124.700.090	Parking lock magnet
8HP80	1126.020.020	1104.700.023	Centering plate
8HP80	1126.020.021	1126.700.103	Oil pan
8HP80	1126.020.021	1124.700.090	Parking lock magnet
8HP80	1126.020.021	1104.700.023	Centering plate
8HP80	1126.020.022	1126.700.103	Oil pan
8HP80	1126.020.022	1104.700.023	Centering plate
8HP80	1126.020.025	1126.700.103	Oil pan
8HP80	1126.020.025	1124.700.090	Parking lock magnet
8HP80	1126.020.025	1104.700.023	Centering plate
8HP80MH	1126.030.002	1116.700.231	Power connection
8HP80MH	1126.030.002	1116.700.232	Power connection
8HP80MH	1126.030.002	1116.700.210	Power electronics
8HP80MH	1126.030.002	1124.700.036	Mechatronic
8HP80MH	1126.030.002	1124.700.196	Oil tray
8HP80MH	1126.030.002	1124.700.024	Oil supply
8HP80MH	1126.030.002	1124.700.028	Oil pan
8HP80MH	1126.030.002	1124.700.090	Parking lock magnet
8HP80MH	1126.030.002	1104.700.023	Centering plate
8HP80MH	1126.030.009	1116.700.231	Power connection
8HP80MH	1126.030.009	1116.700.232	Power connection
8HP80MH	1126.030.009	1116.700.210	Power electronics
8HP80MH	1126.030.009	1124.700.036	Mechatronic
8HP80MH	1126.030.009	1116.700.130	Cover
8HP80MH	1126.030.009	1124.700.196	Oil tray
8HP80MH	1126.030.009	1124.700.024	Oil supply
8HP80MH	1126.030.009	1124.700.028	Oil pan
8HP80MH	1126.030.009	1124.700.090	Parking lock magnet
8HP80MH	1126.030.009	1104.700.023	Centering plate
8HP80MH	1126.030.010	1124.700.036	Mechatronic
8HP80MH	1126.030.010	1116.700.130	Cover
8HP80MH	1126.030.010	1124.700.196	Oil tray
8HP80MH	1126.030.010	1124.700.024	Oil supply
8HP80MH	1126.030.010	1124.700.028	Oil pan
8HP80MH	1126.030.010	1124.700.090	Parking lock magnet
8HP80MH	1126.030.010	1104.700.023	Centering plate
8HP80MH	1126.030.011	1116.700.130	Cover
8HP80MH	1126.030.011	1124.700.196	Oil tray
8HP80MH	1126.030.011	1124.700.024	Oil supply
8HP80MH	1126.030.011	1124.700.028	Oil pan
8HP80MH	1126.030.011	1124.700.090	Parking lock magnet
8HP80MH	1126.030.011	1104.700.023	Centering plate
8HP80X	1126.040.008	1126.700.103	Oil pan
8HP80X	1126.040.008	1124.700.090	Parking lock magnet



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
301/312

ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80X	1126.040.008	1104.700.023	Centering plate
8HP80X	1126.040.009	1126.700.103	Oil pan
8HP80X	1126.040.009	1124.700.090	Parking lock magnet
8HP80X	1126.040.009	1104.700.023	Centering plate
8HP80X	1126.040.010	1126.700.103	Oil pan
8HP80X	1126.040.010	1124.700.090	Parking lock magnet
8HP80X	1126.040.010	1104.700.023	Centering plate
8HP80X	1126.040.011	1124.700.036	Mechatronic
8HP80X	1126.040.011	1126.700.103	Oil pan
8HP80X	1126.040.011	1124.700.090	Parking lock magnet
8HP80X	1126.040.011	1104.700.023	Centering plate
8HP80X	1126.040.012	1126.700.103	Oil pan
8HP80X	1126.040.012	1124.700.090	Parking lock magnet
8HP80X	1126.040.012	1104.700.023	Centering plate
8HP80X	1126.040.013	1126.700.103	Oil pan
8HP80X	1126.040.013	1124.700.090	Parking lock magnet
8HP80X	1126.040.013	1104.700.023	Centering plate
8HP80X	1126.040.014	1126.700.103	Oil pan
8HP80X	1126.040.014	1124.700.090	Parking lock magnet
8HP80X	1126.040.014	1104.700.023	Centering plate
8HP80X	1126.040.015	1126.700.103	Oil pan
8HP80X	1126.040.015	1124.700.090	Parking lock magnet
8HP80X	1126.040.015	1104.700.023	Centering plate
8HP80X	1126.040.016	1126.700.103	Oil pan
8HP80X	1126.040.016	1124.700.090	Parking lock magnet
8HP80X	1126.040.016	1104.700.023	Centering plate
8HP80X	1126.040.017	1126.700.103	Oil pan
8HP80X	1126.040.017	1124.700.090	Parking lock magnet
8HP80X	1126.040.017	1104.700.023	Centering plate
8HP80X	1126.040.018	1126.700.103	Oil pan
8HP80X	1126.040.018	1124.700.090	Parking lock magnet
8HP80X	1126.040.018	1104.700.023	Centering plate
8HP80X	1126.040.019	1126.700.103	Oil pan
8HP80X	1126.040.019	1124.700.090	Parking lock magnet
8HP80X	1126.040.019	1104.700.023	Centering plate
8HP80X	1126.040.020	1126.700.103	Oil pan
8HP80X	1126.040.020	1124.700.090	Parking lock magnet
8HP80X	1126.040.020	1104.700.023	Centering plate
8HP80X	1126.040.021	1126.700.103	Oil pan
8HP80X	1126.040.021	1124.700.090	Parking lock magnet
8HP80X	1126.040.021	1104.700.023	Centering plate
8HP80X	1126.040.022	1126.700.103	Oil pan
8HP80X	1126.040.022	1124.700.090	Parking lock magnet
8HP80X	1126.040.022	1104.700.023	Centering plate
8HP80X	1126.040.023	1126.700.103	Oil pan
8HP80X	1126.040.023	1124.700.090	Parking lock magnet
8HP80X	1126.040.023	1104.700.023	Centering plate
8HP80X	1126.040.024	1126.700.103	Oil pan
8HP80X	1126.040.024	1124.700.090	Parking lock magnet



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
302/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80X	1126.040.024	1104.700.023	Centering plate
8HP80X	1126.040.025	1126.700.103	Oil pan
8HP80X	1126.040.025	1124.700.090	Parking lock magnet
8HP80X	1126.040.025	1104.700.023	Centering plate
8HP80X	1126.040.026	1126.700.103	Oil pan
8HP80X	1126.040.026	1124.700.090	Parking lock magnet
8HP80X	1126.040.026	1104.700.023	Centering plate
8HP80X	1126.040.027	1126.700.103	Oil pan
8HP80X	1126.040.027	1124.700.090	Parking lock magnet
8HP80X	1126.040.027	1104.700.023	Centering plate
8HP80X	1126.040.028	1126.700.103	Oil pan
8HP80X	1126.040.028	1104.700.023	Centering plate
8HP80X	1126.040.031	1126.700.103	Oil pan
8HP80X	1126.040.031	1124.700.090	Parking lock magnet
8HP80X	1126.040.031	1104.700.023	Centering plate
8HP80XPH	1126.050.005	1126.700.103	Oil pan
8HP80XPH	1126.050.005	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.005	1104.700.023	Centering plate
8HP80XPH	1126.050.007	1126.700.103	Oil pan
8HP80XPH	1126.050.007	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.007	1104.700.023	Centering plate
8HP80XPH	1126.050.009	1126.700.103	Oil pan
8HP80XPH	1126.050.009	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.012	1126.700.103	Oil pan
8HP80XPH	1126.050.012	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.012	1104.700.023	Centering plate
8HP80XPH	1126.050.013	1126.700.103	Oil pan
8HP80XPH	1126.050.013	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.013	1104.700.023	Centering plate
8HP80XPH	1126.050.014	1126.700.103	Oil pan
8HP80XPH	1126.050.014	1126.700.103	Oil pan
8HP80XPH	1126.050.014	1126.700.103	Oil pan
8HP80XPH	1126.050.014	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.014	1104.700.023	Centering plate
8HP80XPH	1126.050.015	1126.700.103	Oil pan
8HP80XPH	1126.050.015	1124.700.090	Parking lock magnet
8HP80XPH	1126.050.015	1104.700.023	Centering plate
8HP80XMH	1126.060.012	1124.700.036	Mechatronic
8HP80XMH	1126.060.012	1124.700.196	Oil tray
8HP80XMH	1126.060.012	1124.700.024	Oil supply
8HP80XMH	1126.060.012	1124.700.028	Oil pan
8HP80XMH	1126.060.012	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.012	1104.700.023	Centering plate
8HP80XMH	1126.060.013	1116.700.117	Power electronics
8HP80XMH	1126.060.013	1124.700.036	Mechatronic
8HP80XMH	1126.060.013	1124.700.196	Oil tray
8HP80XMH	1126.060.013	1124.700.024	Oil supply
8HP80XMH	1126.060.013	1124.700.028	Oil pan
8HP80XMH	1126.060.013	1124.700.090	Parking lock magnet



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
303/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.013	1104.700.023	Centering plate
8HP80XMH	1126.060.019	1124.700.036	Mechatronic
8HP80XMH	1126.060.019	1124.700.196	Oil tray
8HP80XMH	1126.060.019	1124.700.024	Oil supply
8HP80XMH	1126.060.019	1124.700.028	Oil pan
8HP80XMH	1126.060.019	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.019	1104.700.023	Centering plate
8HP80XMH	1126.060.020	1124.700.036	Mechatronic
8HP80XMH	1126.060.020	1124.700.196	Oil tray
8HP80XMH	1126.060.020	1124.700.024	Oil supply
8HP80XMH	1126.060.020	1124.700.028	Oil pan
8HP80XMH	1126.060.020	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.020	1104.700.023	Centering plate
8HP80XMH	1126.060.055	1116.700.231	Power connection
8HP80XMH	1126.060.055	1116.700.232	Power connection
8HP80XMH	1126.060.055	1116.700.210	Power electronics
8HP80XMH	1126.060.055	1124.700.036	Mechatronic
8HP80XMH	1126.060.055	1116.700.130	Cover
8HP80XMH	1126.060.055	1124.700.196	Oil tray
8HP80XMH	1126.060.055	1124.700.024	Oil supply
8HP80XMH	1126.060.055	1124.700.028	Oil pan
8HP80XMH	1126.060.055	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.055	1104.700.023	Centering plate
8HP80XMH	1126.060.062	1116.700.231	Power connection
8HP80XMH	1126.060.062	1116.700.232	Power connection
8HP80XMH	1126.060.062	1116.700.210	Power electronics
8HP80XMH	1126.060.062	1124.700.036	Mechatronic
8HP80XMH	1126.060.062	1116.700.130	Cover
8HP80XMH	1126.060.062	1124.700.196	Oil tray
8HP80XMH	1126.060.062	1124.700.024	Oil supply
8HP80XMH	1126.060.062	1124.700.028	Oil pan
8HP80XMH	1126.060.062	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.062	1104.700.023	Centering plate
8HP80XMH	1126.060.063	1116.700.231	Power connection
8HP80XMH	1126.060.063	1116.700.232	Power connection
8HP80XMH	1126.060.063	1116.700.210	Power electronics
8HP80XMH	1126.060.063	1124.700.036	Mechatronic
8HP80XMH	1126.060.063	1116.700.130	Cover
8HP80XMH	1126.060.063	1124.700.196	Oil tray
8HP80XMH	1126.060.063	1124.700.024	Oil supply
8HP80XMH	1126.060.063	1124.700.028	Oil pan
8HP80XMH	1126.060.063	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.063	1104.700.023	Centering plate
8HP80XMH	1126.060.064	1116.700.231	Power connection
8HP80XMH	1126.060.064	1116.700.232	Power connection
8HP80XMH	1126.060.064	1116.700.210	Power electronics
8HP80XMH	1126.060.064	1124.700.036	Mechatronic
8HP80XMH	1126.060.064	1116.700.130	Cover
8HP80XMH	1126.060.064	1124.700.196	Oil tray



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.064	1124.700.024	Oil supply
8HP80XMH	1126.060.064	1124.700.028	Oil pan
8HP80XMH	1126.060.064	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.064	1104.700.023	Centering plate
8HP80XMH	1126.060.067	1124.700.036	Mechatronic
8HP80XMH	1126.060.067	1124.700.196	Oil tray
8HP80XMH	1126.060.067	1124.700.024	Oil supply
8HP80XMH	1126.060.067	1124.700.028	Oil pan
8HP80XMH	1126.060.067	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.067	1104.700.023	Centering plate
8HP80XMH	1126.060.068	1116.700.231	Power connection
8HP80XMH	1126.060.068	1116.700.232	Power connection
8HP80XMH	1126.060.068	1116.700.210	Power electronics
8HP80XMH	1126.060.068	1124.700.036	Mechatronic
8HP80XMH	1126.060.068	1116.700.130	Cover
8HP80XMH	1126.060.068	1124.700.196	Oil tray
8HP80XMH	1126.060.068	1124.700.024	Oil supply
8HP80XMH	1126.060.068	1124.700.028	Oil pan
8HP80XMH	1126.060.068	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.068	1104.700.023	Centering plate
8HP80XMH	1126.060.069	1116.700.231	Power connection
8HP80XMH	1126.060.069	1116.700.232	Power connection
8HP80XMH	1126.060.069	1116.700.210	Power electronics
8HP80XMH	1126.060.069	1124.700.036	Mechatronic
8HP80XMH	1126.060.069	1116.700.130	Cover
8HP80XMH	1126.060.069	1124.700.196	Oil tray
8HP80XMH	1126.060.069	1124.700.024	Oil supply
8HP80XMH	1126.060.069	1124.700.028	Oil pan
8HP80XMH	1126.060.069	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.069	1104.700.023	Centering plate
8HP80XMH	1126.060.070	1116.700.231	Power connection
8HP80XMH	1126.060.070	1116.700.232	Power connection
8HP80XMH	1126.060.070	1116.700.210	Power electronics
8HP80XMH	1126.060.070	1124.700.036	Mechatronic
8HP80XMH	1126.060.070	1116.700.130	Cover
8HP80XMH	1126.060.070	1124.700.196	Oil tray
8HP80XMH	1126.060.070	1124.700.024	Oil supply
8HP80XMH	1126.060.070	1124.700.028	Oil pan
8HP80XMH	1126.060.070	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.070	1104.700.023	Centering plate
8HP80XMH	1126.060.071	1116.700.231	Power connection
8HP80XMH	1126.060.071	1116.700.232	Power connection
8HP80XMH	1126.060.071	1116.700.210	Power electronics
8HP80XMH	1126.060.071	1124.700.036	Mechatronic
8HP80XMH	1126.060.071	1116.700.130	Cover
8HP80XMH	1126.060.071	1124.700.196	Oil tray
8HP80XMH	1126.060.071	1124.700.024	Oil supply
8HP80XMH	1126.060.071	1124.700.028	Oil pan
8HP80XMH	1126.060.071	1124.700.090	Parking lock magnet



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.071	1104.700.023	Centering plate
8HP80XMH	1126.060.072	1116.700.231	Power connection
8HP80XMH	1126.060.072	1116.700.232	Power connection
8HP80XMH	1126.060.072	1116.700.210	Power electronics
8HP80XMH	1126.060.072	1124.700.036	Mechatronic
8HP80XMH	1126.060.072	1116.700.130	Cover
8HP80XMH	1126.060.072	1124.700.196	Oil tray
8HP80XMH	1126.060.072	1124.700.024	Oil supply
8HP80XMH	1126.060.072	1124.700.028	Oil pan
8HP80XMH	1126.060.072	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.072	1104.700.023	Centering plate
8HP80XMH	1126.060.077	1116.700.231	Power connection
8HP80XMH	1126.060.077	1116.700.232	Power connection
8HP80XMH	1126.060.077	1116.700.210	Power electronics
8HP80XMH	1126.060.077	1124.700.036	Mechatronic
8HP80XMH	1126.060.077	1116.700.130	Cover
8HP80XMH	1126.060.077	1124.700.196	Oil tray
8HP80XMH	1126.060.077	1124.700.024	Oil supply
8HP80XMH	1126.060.077	1124.700.028	Oil pan
8HP80XMH	1126.060.077	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.077	1104.700.023	Centering plate
8HP80XMH	1126.060.079	1116.700.231	Power connection
8HP80XMH	1126.060.079	1116.700.232	Power connection
8HP80XMH	1126.060.079	1116.700.210	Power electronics
8HP80XMH	1126.060.079	1124.700.036	Mechatronic
8HP80XMH	1126.060.079	1116.700.130	Cover
8HP80XMH	1126.060.079	1124.700.196	Oil tray
8HP80XMH	1126.060.079	1124.700.024	Oil supply
8HP80XMH	1126.060.079	1124.700.028	Oil pan
8HP80XMH	1126.060.079	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.079	1104.700.023	Centering plate
8HP80XMH	1126.060.080	1116.700.231	Power connection
8HP80XMH	1126.060.080	1116.700.232	Power connection
8HP80XMH	1126.060.080	1116.700.210	Power electronics
8HP80XMH	1126.060.080	1124.700.036	Mechatronic
8HP80XMH	1126.060.080	1116.700.130	Cover
8HP80XMH	1126.060.080	1124.700.196	Oil tray
8HP80XMH	1126.060.080	1124.700.024	Oil supply
8HP80XMH	1126.060.080	1124.700.028	Oil pan
8HP80XMH	1126.060.080	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.080	1104.700.023	Centering plate
8HP80XMH	1126.060.083	1116.700.231	Power connection
8HP80XMH	1126.060.083	1116.700.232	Power connection
8HP80XMH	1126.060.083	1116.700.210	Power electronics
8HP80XMH	1126.060.083	1124.700.036	Mechatronic
8HP80XMH	1126.060.083	1116.700.130	Cover
8HP80XMH	1126.060.083	1124.700.196	Oil tray
8HP80XMH	1126.060.083	1124.700.024	Oil supply
8HP80XMH	1126.060.083	1124.700.028	Oil pan



ZF Aftermarket Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.083	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.083	1104.700.023	Centering plate
8HP80XMH	1126.060.087	1116.700.231	Power connection
8HP80XMH	1126.060.087	1116.700.232	Power connection
8HP80XMH	1126.060.087	1116.700.210	Power electronics
8HP80XMH	1126.060.087	1124.700.036	Mechatronic
8HP80XMH	1126.060.087	1116.700.130	Cover
8HP80XMH	1126.060.087	1124.700.196	Oil tray
8HP80XMH	1126.060.087	1124.700.024	Oil supply
8HP80XMH	1126.060.087	1124.700.028	Oil pan
8HP80XMH	1126.060.087	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.087	1104.700.023	Centering plate
8HP80XMH	1126.060.089	1124.700.036	Mechatronic
8HP80XMH	1126.060.089	1124.700.196	Oil tray
8HP80XMH	1126.060.089	1124.700.024	Oil supply
8HP80XMH	1126.060.089	1124.700.028	Oil pan
8HP80XMH	1126.060.089	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.089	1104.700.023	Centering plate
8HP80XMH	1126.060.090	1124.700.036	Mechatronic
8HP80XMH	1126.060.090	1124.700.196	Oil tray
8HP80XMH	1126.060.090	1124.700.024	Oil supply
8HP80XMH	1126.060.090	1124.700.028	Oil pan
8HP80XMH	1126.060.090	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.090	1104.700.023	Centering plate
8HP80XMH	1126.060.095	1116.700.231	Power connection
8HP80XMH	1126.060.095	1116.700.232	Power connection
8HP80XMH	1126.060.095	1116.700.210	Power electronics
8HP80XMH	1126.060.095	1124.700.036	Mechatronic
8HP80XMH	1126.060.095	1116.700.130	Cover
8HP80XMH	1126.060.095	1124.700.196	Oil tray
8HP80XMH	1126.060.095	1124.700.024	Oil supply
8HP80XMH	1126.060.095	1124.700.028	Oil pan
8HP80XMH	1126.060.095	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.095	1104.700.023	Centering plate
8HP80XMH	1126.060.097	1124.700.036	Mechatronic
8HP80XMH	1126.060.097	1124.700.196	Oil tray
8HP80XMH	1126.060.097	1124.700.024	Oil supply
8HP80XMH	1126.060.097	1124.700.028	Oil pan
8HP80XMH	1126.060.097	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.097	1104.700.023	Centering plate
8HP80XMH	1126.060.098	1116.700.231	Power connection
8HP80XMH	1126.060.098	1116.700.232	Power connection
8HP80XMH	1126.060.098	1116.700.210	Power electronics
8HP80XMH	1126.060.098	1124.700.036	Mechatronic
8HP80XMH	1126.060.098	1116.700.130	Cover
8HP80XMH	1126.060.098	1124.700.196	Oil tray
8HP80XMH	1126.060.098	1124.700.024	Oil supply
8HP80XMH	1126.060.098	1124.700.028	Oil pan
8HP80XMH	1126.060.098	1124.700.090	Parking lock magnet



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.098	1104.700.023	Centering plate
8HP80XMH	1126.060.099	1116.700.231	Power connection
8HP80XMH	1126.060.099	1116.700.232	Power connection
8HP80XMH	1126.060.099	1116.700.210	Power electronics
8HP80XMH	1126.060.099	1124.700.036	Mechatronic
8HP80XMH	1126.060.099	1116.700.130	Cover
8HP80XMH	1126.060.099	1124.700.196	Oil tray
8HP80XMH	1126.060.099	1124.700.024	Oil supply
8HP80XMH	1126.060.099	1124.700.028	Oil pan
8HP80XMH	1126.060.099	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.099	1104.700.023	Centering plate
8HP80XMH	1126.060.100	1124.700.036	Mechatronic
8HP80XMH	1126.060.100	1124.700.196	Oil tray
8HP80XMH	1126.060.100	1124.700.024	Oil supply
8HP80XMH	1126.060.100	1124.700.028	Oil pan
8HP80XMH	1126.060.100	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.100	1104.700.023	Centering plate
8HP80XMH	1126.060.105	1124.700.036	Mechatronic
8HP80XMH	1126.060.105	1124.700.196	Oil tray
8HP80XMH	1126.060.105	1124.700.024	Oil supply
8HP80XMH	1126.060.105	1124.700.028	Oil pan
8HP80XMH	1126.060.105	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.105	1104.700.023	Centering plate
8HP80XMH	1126.060.106	1124.700.036	Mechatronic
8HP80XMH	1126.060.106	1124.700.196	Oil tray
8HP80XMH	1126.060.106	1124.700.024	Oil supply
8HP80XMH	1126.060.106	1124.700.028	Oil pan
8HP80XMH	1126.060.106	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.106	1104.700.023	Centering plate
8HP80XMH	1126.060.107	1124.700.036	Mechatronic
8HP80XMH	1126.060.107	1124.700.196	Oil tray
8HP80XMH	1126.060.107	1124.700.024	Oil supply
8HP80XMH	1126.060.107	1124.700.028	Oil pan
8HP80XMH	1126.060.107	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.107	1104.700.023	Centering plate
8HP80XMH	1126.060.108	1124.700.036	Mechatronic
8HP80XMH	1126.060.108	1124.700.196	Oil tray
8HP80XMH	1126.060.108	1124.700.024	Oil supply
8HP80XMH	1126.060.108	1124.700.028	Oil pan
8HP80XMH	1126.060.108	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.108	1104.700.023	Centering plate
8HP80XMH	1126.060.112	1124.700.036	Mechatronic
8HP80XMH	1126.060.112	1124.700.196	Oil tray
8HP80XMH	1126.060.112	1124.700.024	Oil supply
8HP80XMH	1126.060.112	1124.700.028	Oil pan
8HP80XMH	1126.060.112	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.112	1104.700.023	Centering plate
8HP80XMH	1126.060.113	1124.700.036	Mechatronic
8HP80XMH	1126.060.113	1124.700.196	Oil tray



AFTERMARKET

ZF Friedrichshafen AG
ZF Aftermarket
Metzer Straße 160
66117 Saarbrücken

Technical support
Telefon/Phone: +49 681 920-0
www.zf.com/contact

© ZF Friedrichshafen AG
1087.754.106c

18.03.2026
308/312

ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.113	1124.700.024	Oil supply
8HP80XMH	1126.060.113	1124.700.028	Oil pan
8HP80XMH	1126.060.113	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.113	1104.700.023	Centering plate
8HP80XMH	1126.060.114	1124.700.036	Mechatronic
8HP80XMH	1126.060.114	1124.700.196	Oil tray
8HP80XMH	1126.060.114	1124.700.024	Oil supply
8HP80XMH	1126.060.114	1124.700.028	Oil pan
8HP80XMH	1126.060.114	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.114	1104.700.023	Centering plate
8HP80XMH	1126.060.115	1116.700.231	Power connection
8HP80XMH	1126.060.115	1116.700.232	Power connection
8HP80XMH	1126.060.115	1116.700.210	Power electronics
8HP80XMH	1126.060.115	1124.700.036	Mechatronic
8HP80XMH	1126.060.115	1116.700.130	Cover
8HP80XMH	1126.060.115	1124.700.196	Oil tray
8HP80XMH	1126.060.115	1124.700.024	Oil supply
8HP80XMH	1126.060.115	1124.700.028	Oil pan
8HP80XMH	1126.060.115	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.115	1104.700.023	Centering plate
8HP80XMH	1126.060.116	1124.700.036	Mechatronic
8HP80XMH	1126.060.116	1124.700.196	Oil tray
8HP80XMH	1126.060.116	1124.700.024	Oil supply
8HP80XMH	1126.060.116	1124.700.028	Oil pan
8HP80XMH	1126.060.116	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.116	1104.700.023	Centering plate
8HP80XMH	1126.060.117	1124.700.036	Mechatronic
8HP80XMH	1126.060.117	1124.700.196	Oil tray
8HP80XMH	1126.060.117	1124.700.024	Oil supply
8HP80XMH	1126.060.117	1124.700.028	Oil pan
8HP80XMH	1126.060.117	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.117	1104.700.023	Centering plate
8HP80XMH	1126.060.118	1124.700.036	Mechatronic
8HP80XMH	1126.060.118	1124.700.196	Oil tray
8HP80XMH	1126.060.118	1124.700.024	Oil supply
8HP80XMH	1126.060.118	1124.700.028	Oil pan
8HP80XMH	1126.060.118	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.118	1104.700.023	Centering plate
8HP80XMH	1126.060.119	1124.700.036	Mechatronic
8HP80XMH	1126.060.119	1124.700.196	Oil tray
8HP80XMH	1126.060.119	1124.700.024	Oil supply
8HP80XMH	1126.060.119	1124.700.028	Oil pan
8HP80XMH	1126.060.119	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.119	1104.700.023	Centering plate
8HP80XMH	1126.060.120	1124.700.036	Mechatronic
8HP80XMH	1126.060.120	1124.700.196	Oil tray
8HP80XMH	1126.060.120	1124.700.024	Oil supply
8HP80XMH	1126.060.120	1124.700.028	Oil pan
8HP80XMH	1126.060.120	1124.700.090	Parking lock magnet



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.120	1104.700.023	Centering plate
8HP80XMH	1126.060.121	1124.700.036	Mechatronic
8HP80XMH	1126.060.121	1124.700.196	Oil tray
8HP80XMH	1126.060.121	1124.700.024	Oil supply
8HP80XMH	1126.060.121	1124.700.028	Oil pan
8HP80XMH	1126.060.121	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.121	1104.700.023	Centering plate
8HP80XMH	1126.060.122	1124.700.036	Mechatronic
8HP80XMH	1126.060.122	1116.700.130	Cover
8HP80XMH	1126.060.122	1124.700.196	Oil tray
8HP80XMH	1126.060.122	1124.700.024	Oil supply
8HP80XMH	1126.060.122	1124.700.028	Oil pan
8HP80XMH	1126.060.122	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.122	1104.700.023	Centering plate
8HP80XMH	1126.060.123	1124.700.036	Mechatronic
8HP80XMH	1126.060.123	1116.700.130	Cover
8HP80XMH	1126.060.123	1124.700.196	Oil tray
8HP80XMH	1126.060.123	1124.700.024	Oil supply
8HP80XMH	1126.060.123	1124.700.028	Oil pan
8HP80XMH	1126.060.123	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.123	1104.700.023	Centering plate
8HP80XMH	1126.060.124	1124.700.036	Mechatronic
8HP80XMH	1126.060.124	1116.700.130	Cover
8HP80XMH	1126.060.124	1124.700.196	Oil tray
8HP80XMH	1126.060.124	1124.700.024	Oil supply
8HP80XMH	1126.060.124	1124.700.028	Oil pan
8HP80XMH	1126.060.124	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.124	1104.700.023	Centering plate
8HP80XMH	1126.060.125	1124.700.036	Mechatronic
8HP80XMH	1126.060.125	1116.700.130	Cover
8HP80XMH	1126.060.125	1124.700.196	Oil tray
8HP80XMH	1126.060.125	1124.700.024	Oil supply
8HP80XMH	1126.060.125	1124.700.028	Oil pan
8HP80XMH	1126.060.125	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.125	1104.700.023	Centering plate
8HP80XMH	1126.060.126	1124.700.036	Mechatronic
8HP80XMH	1126.060.126	1116.700.130	Cover
8HP80XMH	1126.060.126	1124.700.196	Oil tray
8HP80XMH	1126.060.126	1124.700.024	Oil supply
8HP80XMH	1126.060.126	1124.700.028	Oil pan
8HP80XMH	1126.060.126	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.126	1104.700.023	Centering plate
8HP80XMH	1126.060.127	1124.700.036	Mechatronic
8HP80XMH	1126.060.127	1116.700.130	Cover
8HP80XMH	1126.060.127	1124.700.196	Oil tray
8HP80XMH	1126.060.127	1124.700.024	Oil supply
8HP80XMH	1126.060.127	1124.700.028	Oil pan
8HP80XMH	1126.060.127	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.127	1104.700.023	Centering plate



ZF Aftermarket

Service Information

Transmission type	Parts list (BoM)	Specification	Assembly
8HP80XMH	1126.060.128	1124.700.036	Mechatronic
8HP80XMH	1126.060.128	1116.700.130	Cover
8HP80XMH	1126.060.128	1124.700.196	Oil tray
8HP80XMH	1126.060.128	1124.700.024	Oil supply
8HP80XMH	1126.060.128	1124.700.028	Oil pan
8HP80XMH	1126.060.128	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.128	1104.700.023	Centering plate
8HP80XMH	1126.060.129	1124.700.036	Mechatronic
8HP80XMH	1126.060.129	1116.700.130	Cover
8HP80XMH	1126.060.129	1124.700.196	Oil tray
8HP80XMH	1126.060.129	1124.700.024	Oil supply
8HP80XMH	1126.060.129	1124.700.028	Oil pan
8HP80XMH	1126.060.129	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.129	1104.700.023	Centering plate
8HP80XMH	1126.060.130	1124.700.036	Mechatronic
8HP80XMH	1126.060.130	1124.700.196	Oil tray
8HP80XMH	1126.060.130	1124.700.024	Oil supply
8HP80XMH	1126.060.130	1124.700.028	Oil pan
8HP80XMH	1126.060.130	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.130	1104.700.023	Centering plate
8HP80XMH	1126.060.131	1124.700.036	Mechatronic
8HP80XMH	1126.060.131	1124.700.196	Oil tray
8HP80XMH	1126.060.131	1124.700.024	Oil supply
8HP80XMH	1126.060.131	1124.700.028	Oil pan
8HP80XMH	1126.060.131	1124.700.090	Parking lock magnet
8HP80XMH	1126.060.131	1104.700.023	Centering plate

Tab. 39 Model 1126



ZF Aftermarket Service Information

23 Annex

23.1 Overview of revisions

Index	Date of issue	Comment
—	02023-12-08	First Issue
a	2025-01-15	Index a
b	2025-01-22	Index b

Tab. 40 Edition

Chapter/Section	Added	Changed	Removed	Comment
Safety			x	Index a
Notes on Repair and Assembly			x	Index a
Allocation	x			Index a
Duplicate entries Allocation			x	Index b
Allocation Model 1116, 1122, 1124, 1126	x			Index b

Tab. 41 Overview of revisions

